




PIONEER
The future of sound and vision.

Service Manual

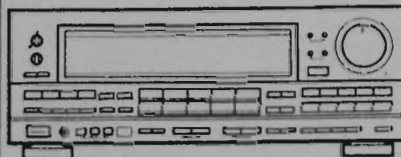

**ORDER NO.
ARP1596**

AUDIO/VIDEO STEREO RECEIVER

VSX-9300S

VSX-7300S

VSX-7300

VSX-9300S, VSX-7300S/KUC, SD/G AND VSX-7300/KUC HAVE TWO VERSIONS:

Type	Applicable model			Power requirement	Destination
	VSX-9300S	VSX-7300S	VSX-7300		
KUC	○	○	○	AC120V only	U.S.A. and Canada
SD/G	—	○	—	AC110V, 120V - 127V, 220V, 240V (Switchable)	U.S. Military

- This manual is applicable to the VSX-9300S/KUC, VSX-7300S/KUC, SD/G and VSX-7300/KUC types.
- As to the VSX-7300S/KUC, SD/G and VSX-7300/KUC types, please refer to pages 79 .
- For the VSX-7300/KUC type is attached to standard type remote control unit, while for the VSX-7300S/KUC type is attached to programable remote control unit.

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS SERVICE INC. P.O. Box 1760, Long Beach, California 90801 U.S.A.
PIONEER ELECTRONICS OF CANADA, INC. 505 Cochrane Drive, Markham, Ontario L3R 8E3 Canada
PIONEER ELECTRONIC [EUROPE] N.V. Keetberglaan 1, 2740 Beveren, Belgium
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911
© PIONEER ELECTRONIC CORPORATION 1988

YO JUNE.1988 Printed in Japan.

CONTENTS

1. SAFETY INFORMATION.....2

2. PACKING 3

3. EXPLODED VIEWS AND PARTS LIST 4

4. IMAGE DIAGRAM 7

4.1 VIDEO SECTION

4.2 AUDIO SECTION

5. SCHEMATIC DIAGRAMS AND P.C.BOARD PATTERNS 12

5.1 OVER ALL SCHEMATIC DIAGRAM

5.2 CONTROL A, CONTROL B AND METER AMP ASSEMBLY

5.3 AF, HEADPHONE, MOTOR-VOL TERMINAL ASSEMBLIES

5.4 PRO LOGIC ASSEMBLY

5.5 VIDEO/SURROUND/CONT (1/2) AND REAR AMP ASSEMBLY AUDIO SECTION VIDEO/SURROUND/CONT (2/2) VIDEO SECTION

5.6 TUNER ASSEMBLY

6. ELECTRICAL PARTS LIST 56

7. ADJUSTMENTS 62

8. REMOTE CONTROL UNIT 65

8.1 EXPLODED VIEWS AND PARTS LIST

8.2 ELECTRICAL PARTS LIST

8.3 SCHEMATIC DIAGRAM

8.4 P.C.BOARD PATTERNS

9. IC INFORMATIONS 70

10. CIRCUIT DESCRIPTIONS 75

11. FOR VSX-7300S/KUC, SD/G AND VSX-7300/KUC TYPES 79

12. PANEL FACILITIES 82

13. REMOTE CONTROL UNIT 89

LEARNING FUNCTION (Programmable remote control unit only)

14. SPECIFICATIONS 92


1. SAFETY INFORMATION

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

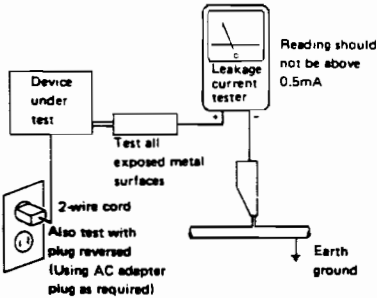

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.


The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

2. PACKING

Parts List of Packing

Mark	No.	Parts No.	Description
	1	AHA1164	Front rear pad
	2	AHD1437	Packing case
	3	AAK1438	Template
	4	AEA1007	Antenna set
	5	ARB1112	Operating instructions
	6	AXD1055	Remote control unit
101			Sheet

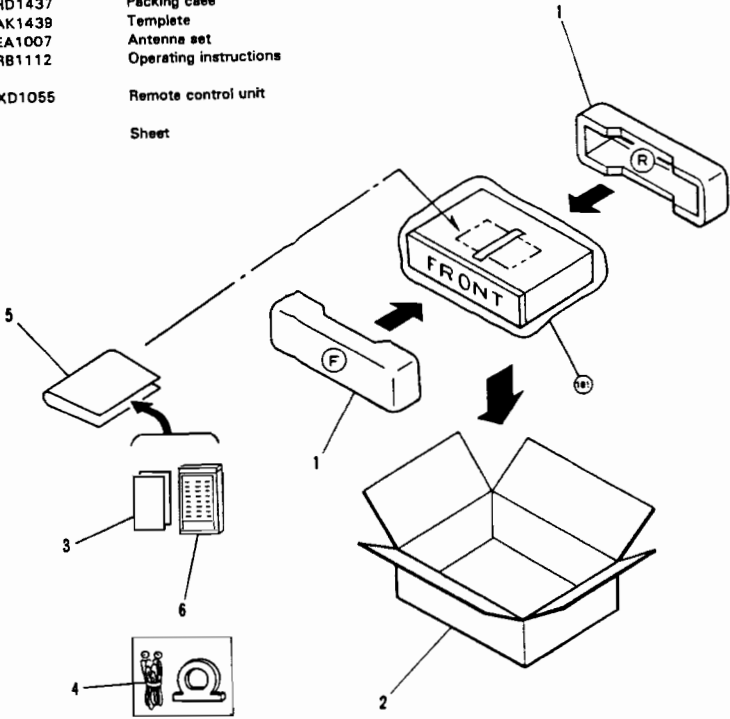


3. EXPLODED VIEWS AND PARTS LIST

NOTES:


- Parts without part number cannot be supplied.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your parts Stock Control, the fast moving items are indicated with the marks $\star\star$ and $\star$.
 $\star\star$ GENERALLY MOVES FASTER THAN $\star$
 This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.


Mark	No.	Parts No.	Description	Mark	No.	Parts No.	Description
	1	AWX1016	Pro logic assembly		32	AEC-818	Mica sheet
	2	AWZ1961	AF assembly			(AEC1140)	
	3	AWZ1965	VIDEO/SUR/CONTROL assembly		33	AEC1123	Mica sheet
	4	AWZ1966	Tuner assembly		34	ABA-297	Screw
	5	AWZ1967	Front control A assembly		35	ABA-298	Screw
$\Delta\star\star$	6	2SA1263N	Transistor (Q7,Q8)		36	ABA1009	Screw
$\Delta\star\star$	7	2SA1302	Transistor (Q3,Q4)		37	ABA1011	Screw
$\Delta\star\star$	8	2SC3180N	Transistor (Q5,Q8)		38	ABA1034	Screw
$\Delta\star\star$	9	2SC3281	Transistor (Q1,Q2)		39	ABA1048	Screw
$\Delta\star$	10	ATS1144	Power transformer (AC120V,T1)		40	ABA1063	Screw
Δ	11	AKP-515 (AKP-504)	AC socket (3P OUTLET)		41	FBT40P080FZK	Screw
$\Delta\star\star$	12	AKX1004	Speaker impedance selector		42	ABN-085	Nut
$\Delta\star\star$	13	AEK-109	Fuse (8A/125V,FU3,FU4)		43	NK90FUC	Nut
$\Delta\star\star$	14	AEK-310	Fuse (10A/125V,FU1)	$\Delta\star\star$	44	ADG1031 (ADG1001)	AC power cord
	15	AMR1434	Insulator assembly		45	AEK-120	Fuse (1.25A/125V, FU5, FU8)
	16	AMR1435	Insulator assembly		46	ABE-081	Washer
	17	AAB1056	Rotary knob (VOLUME)		47	AKM1019	Jumper Plug
	18	AA81078	Rotary knob S (SPLIT SCREEN, ENHANCER)		48	ADX1191	2P lead wire
	19	AAD1390	Function knob (VCR1, VCR2, VDP/CDV, TV, VIDEO ADAPTOR)		49	ABA1012	Screw
	20	AAD1391	Function knob (TAPE1/DAT1, TAPE2/DAT2 MONITOR, TUNER, PHONO)		50	VMZ28P040FZK	Screw
	21	AAD1394	Hinge knob (*1-#5)		101		Headphone assembly
	22	AAD1395	Hinge knob (*6-#0)		102		Motor-volume assembly
	23	AAD1396	Hinge knob (OFF, STADIUM, SIMULATED SURROUND, DOLBY SURROUND, PRO LOGIC)		103		Terminal assembly
	24	AAD1398	Tact knob (REAR LEVEL, BALANCE)		104		Front control B assembly
	25	AAK1323	Filter		105		Meter amp assembly
	28	AAK1513	PVC filter		106		Rear amp assembly
	27	AAK1519	Acrylic panel		107		Vol IND assembly
	28	AAM-030	Badge		108		Terminal (GND)
	29	AAM1349	Panel base		109		Chassis
	30	AN81205	Front panel		110		Rear panel
	31	AZN1804	Bonnet case		111		Panel stay
					112		Bottom plate
					113		Heat sink
					114		Sub heat sink
					115		Pin grommet
					116		P.C.B. suport
					117		P.C.B. holder
					118		Blind sheet

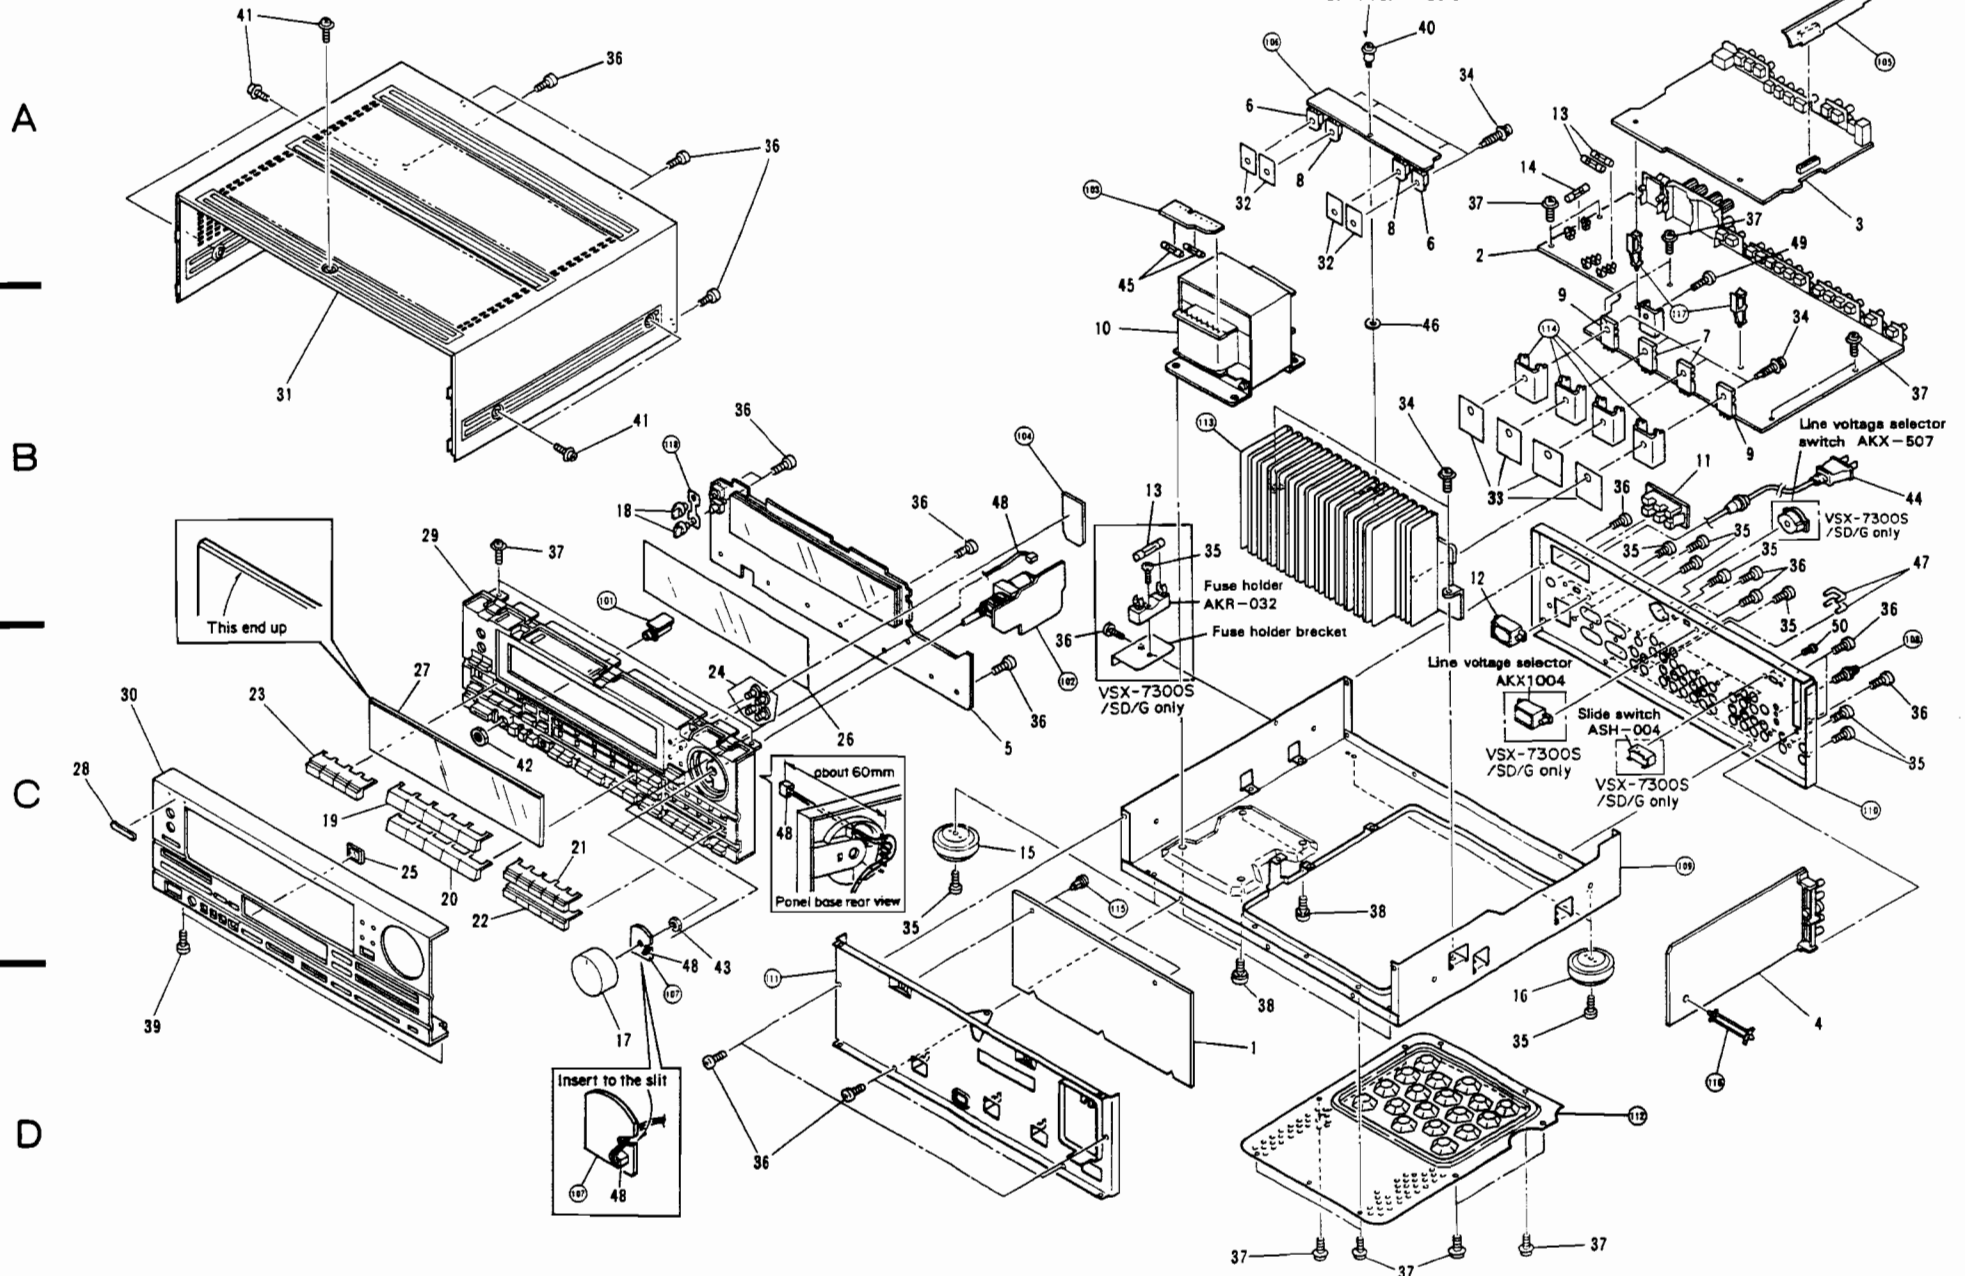


4. IMAGE DIAGRAM

4.1 VIDEO SECTION

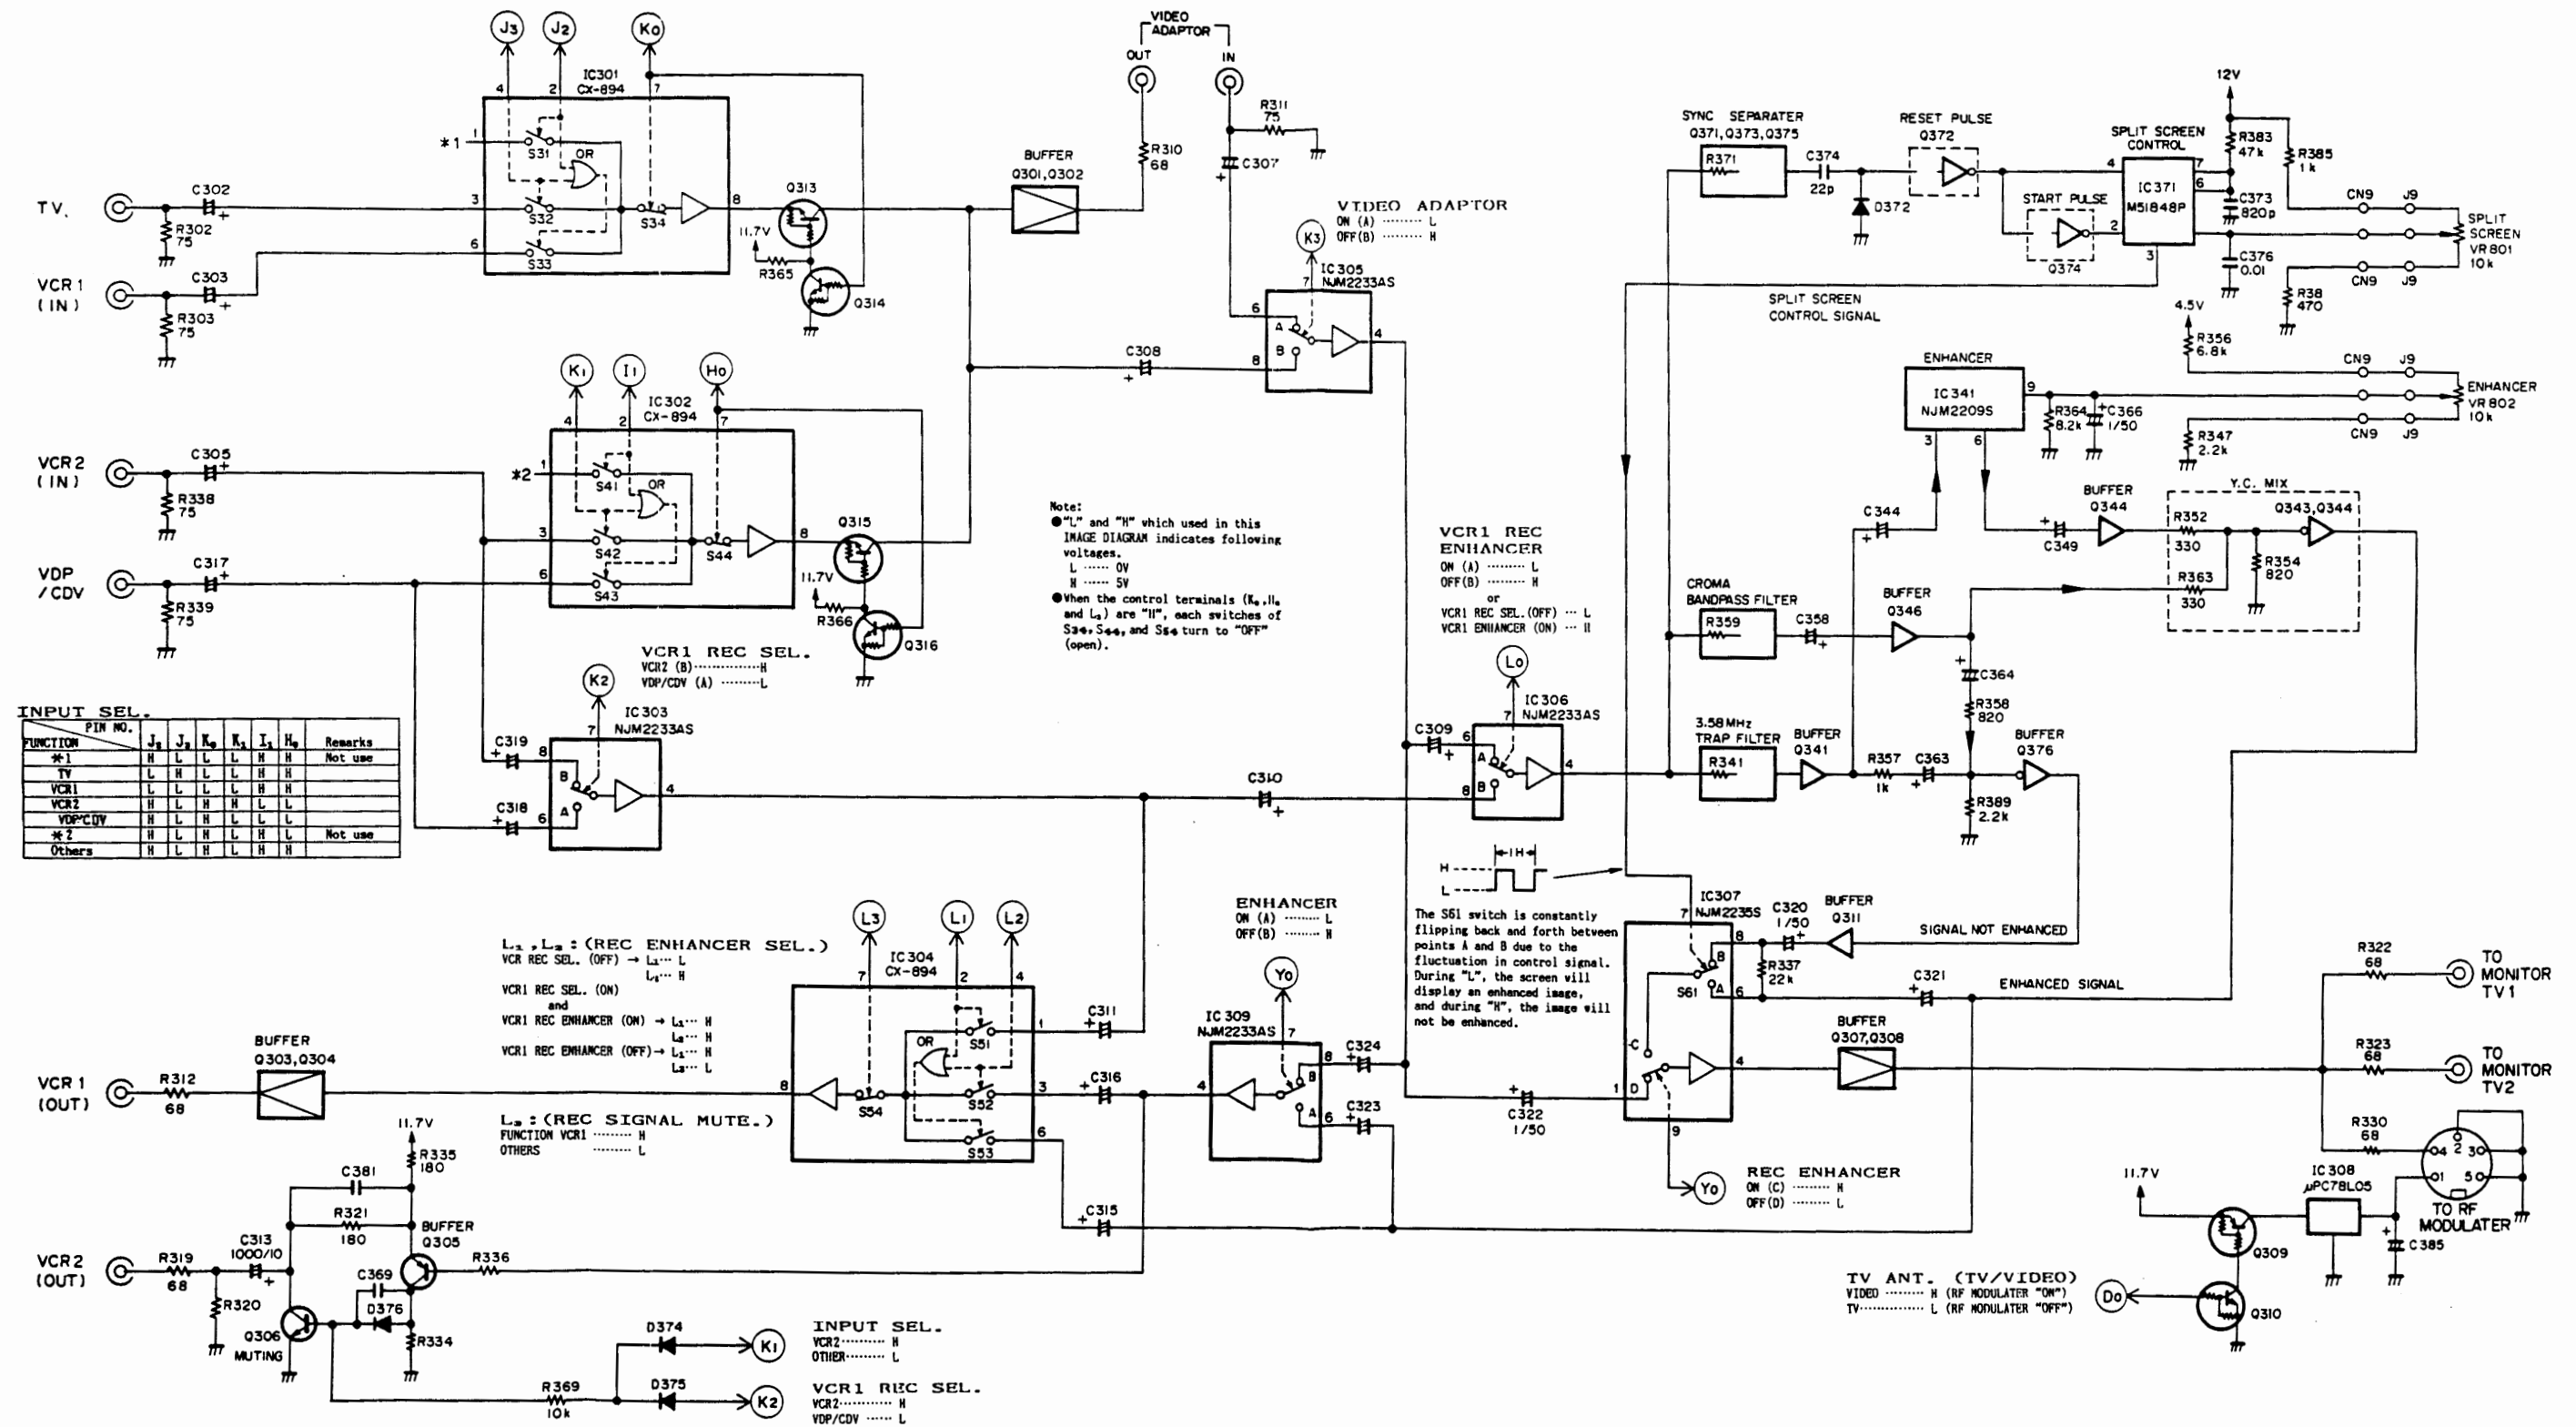


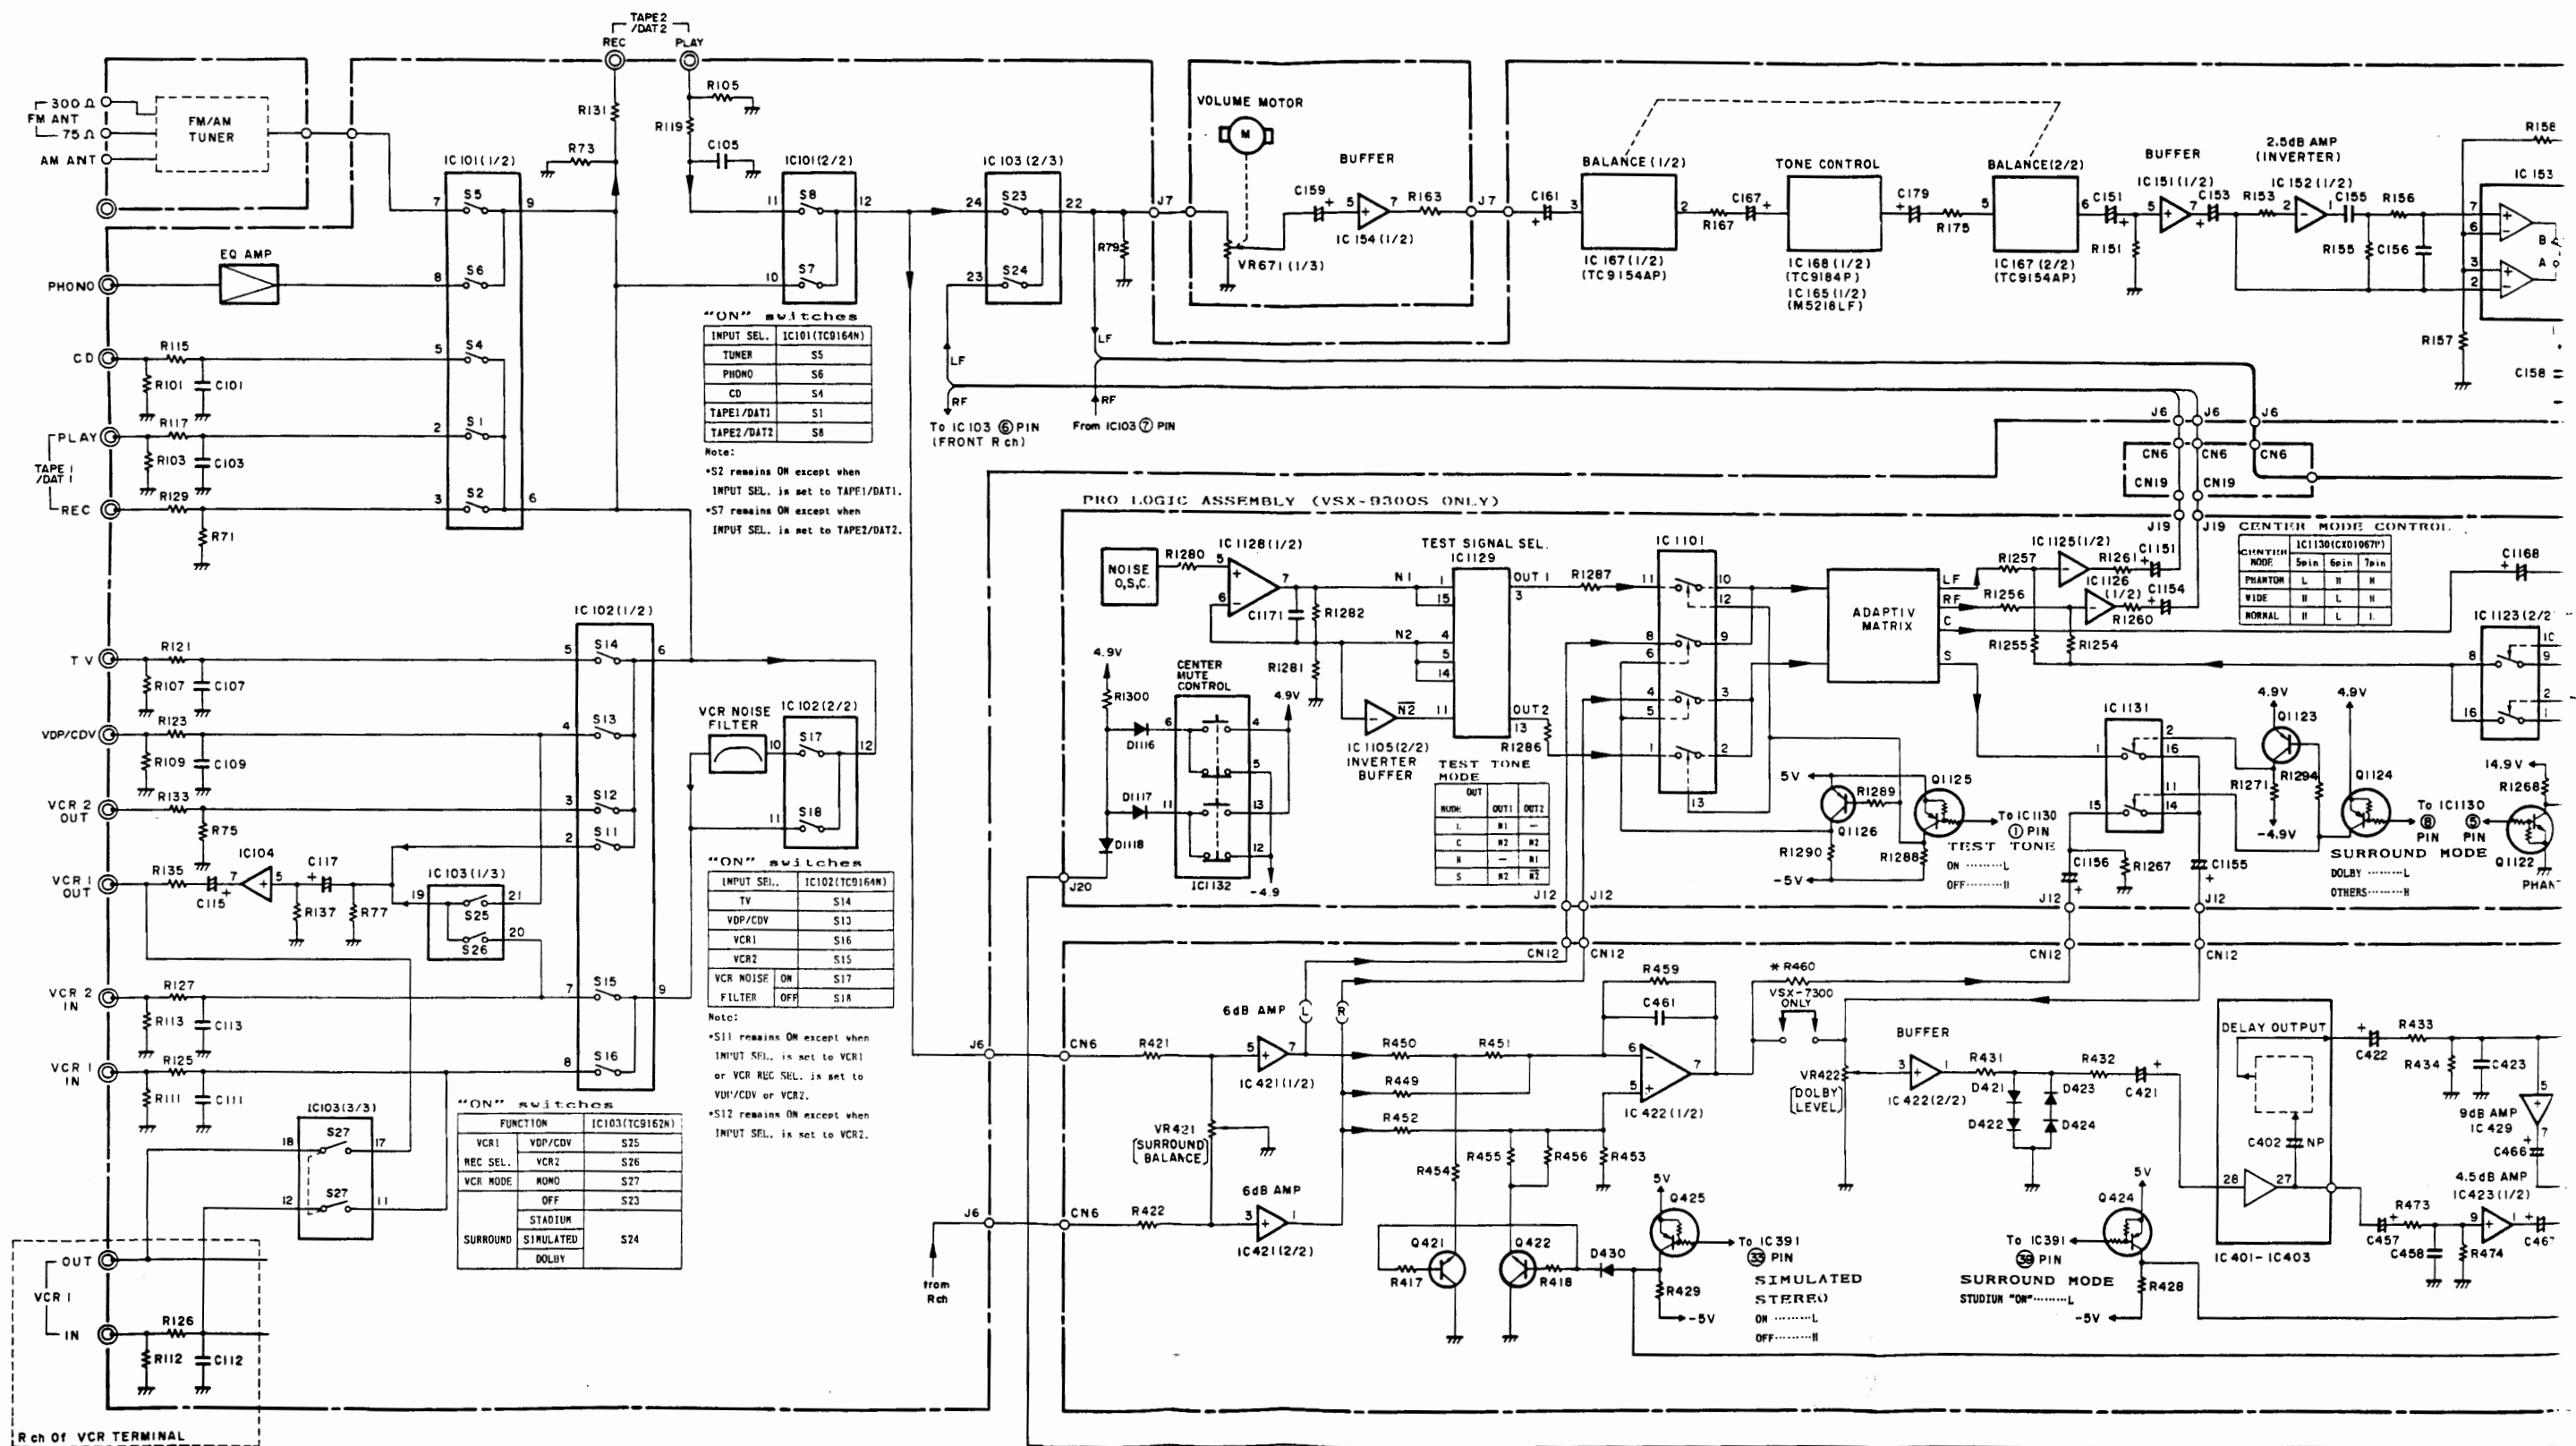

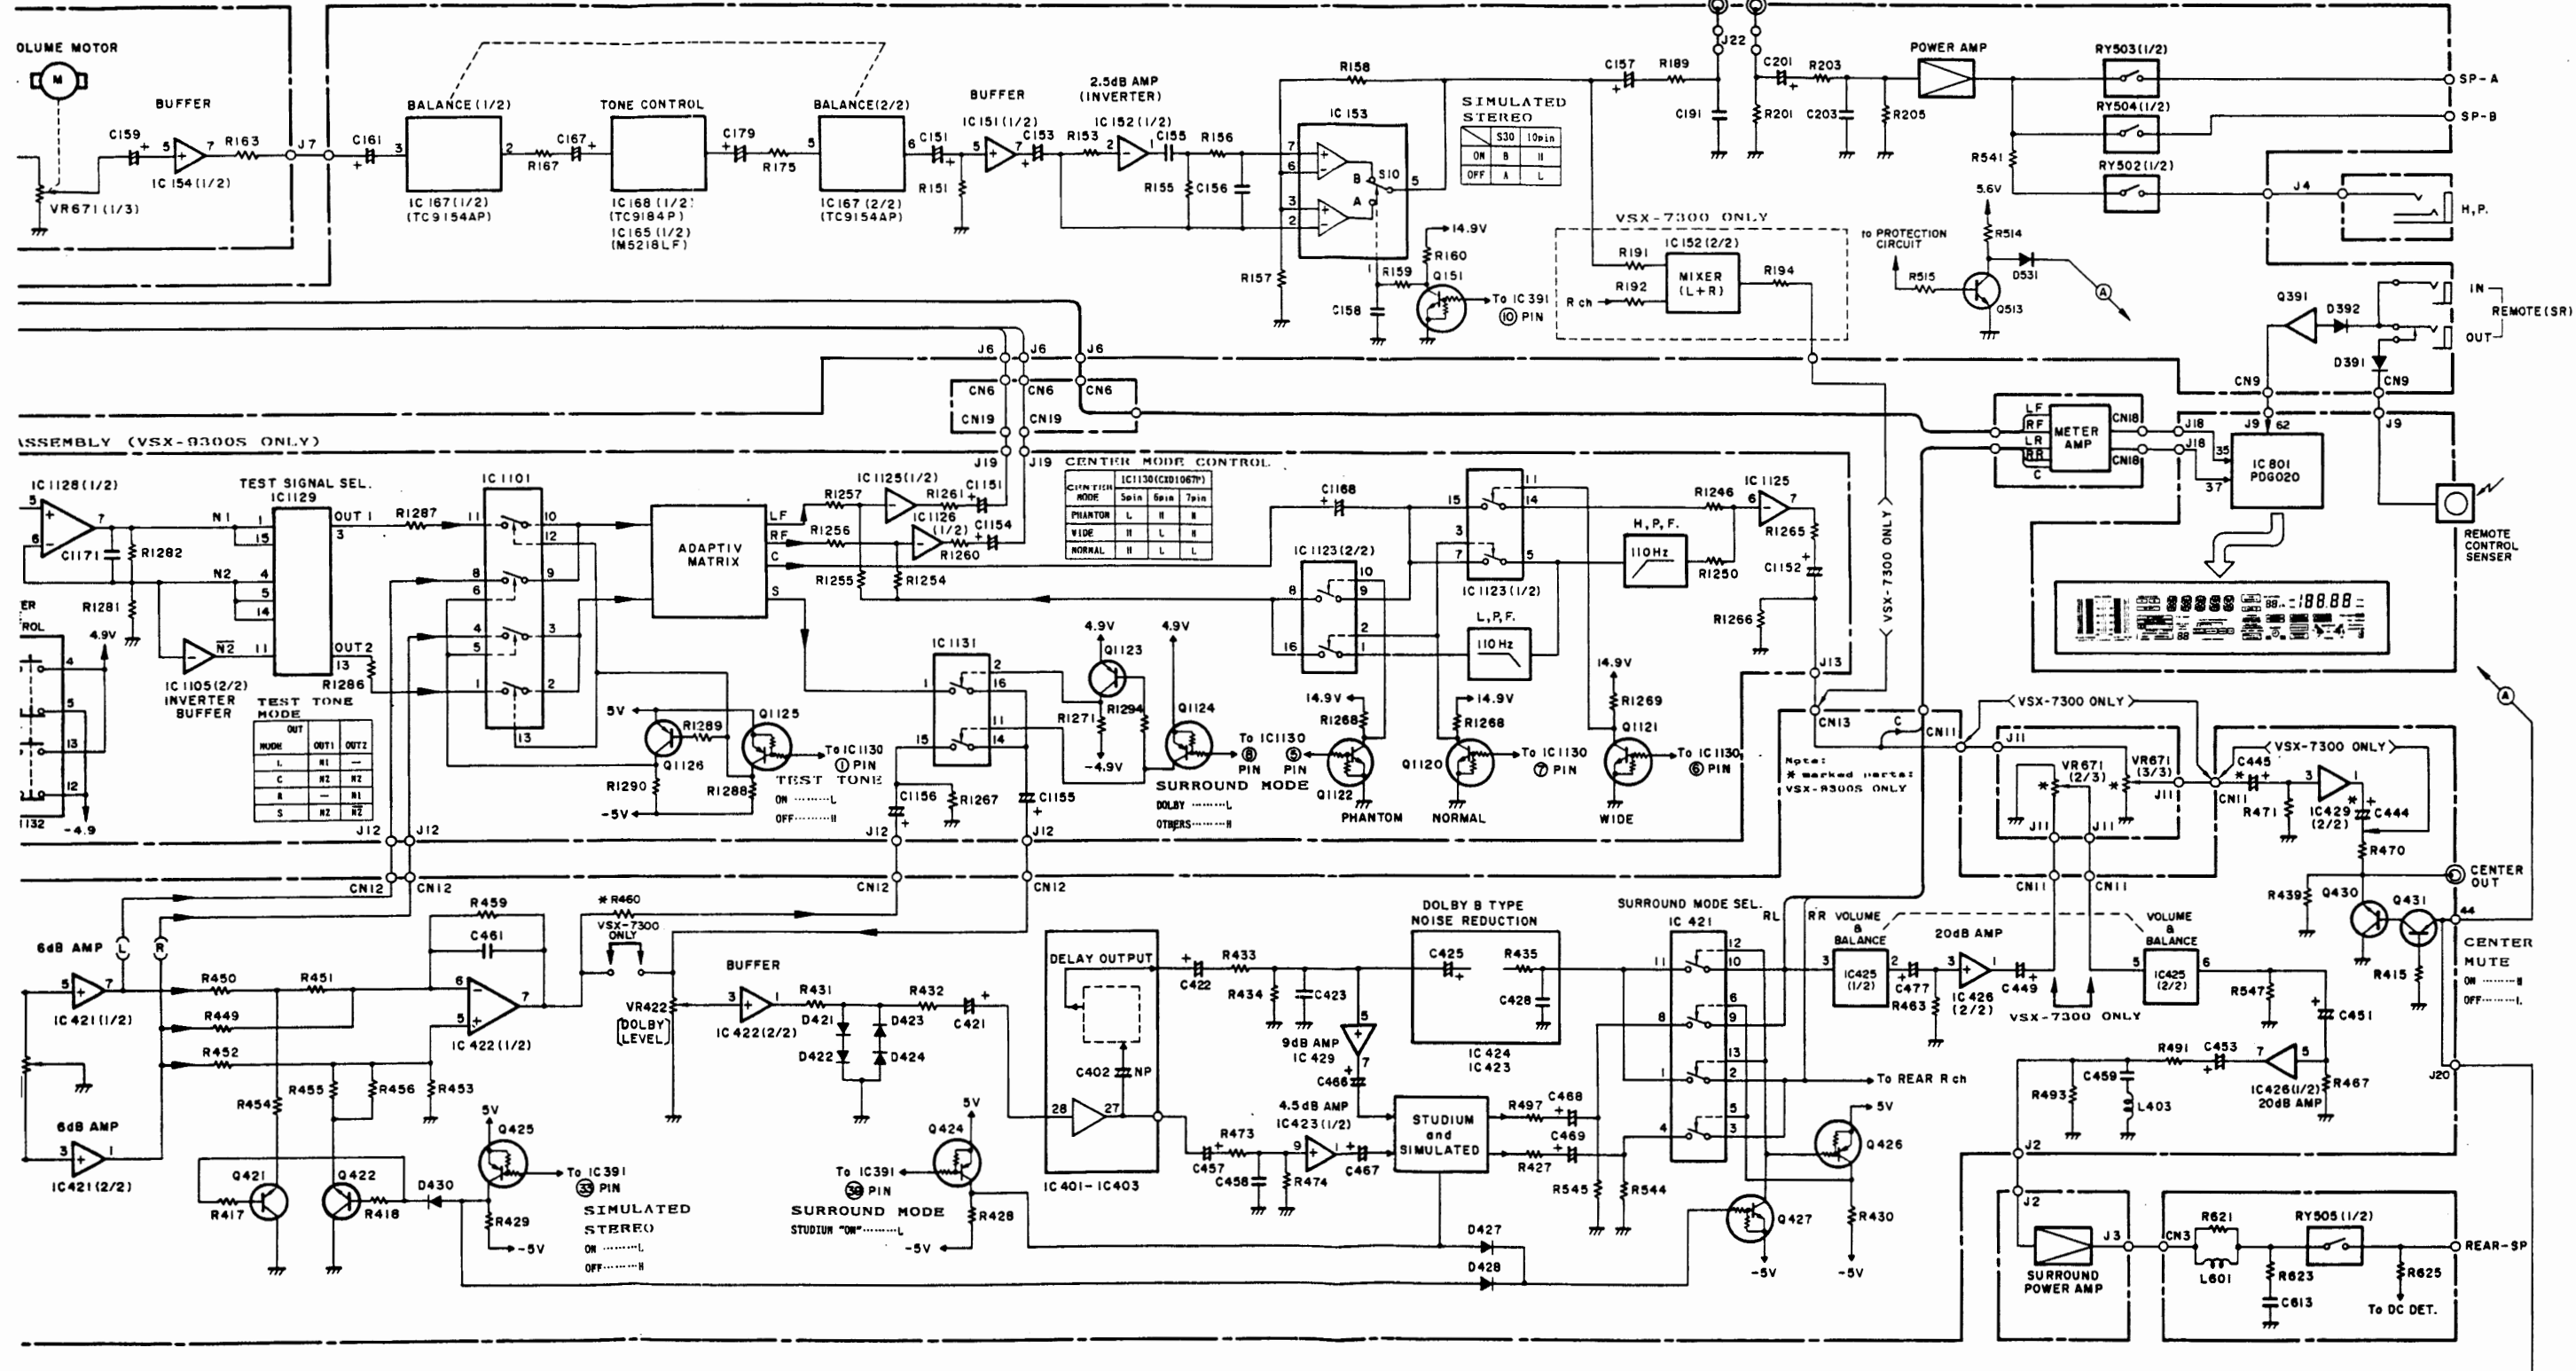

5. SCHEMATIC DIAGRAM AND P.C.BOARD PATTERNS

5.1 OVER ALL SCHEMATIC DIAGRAM

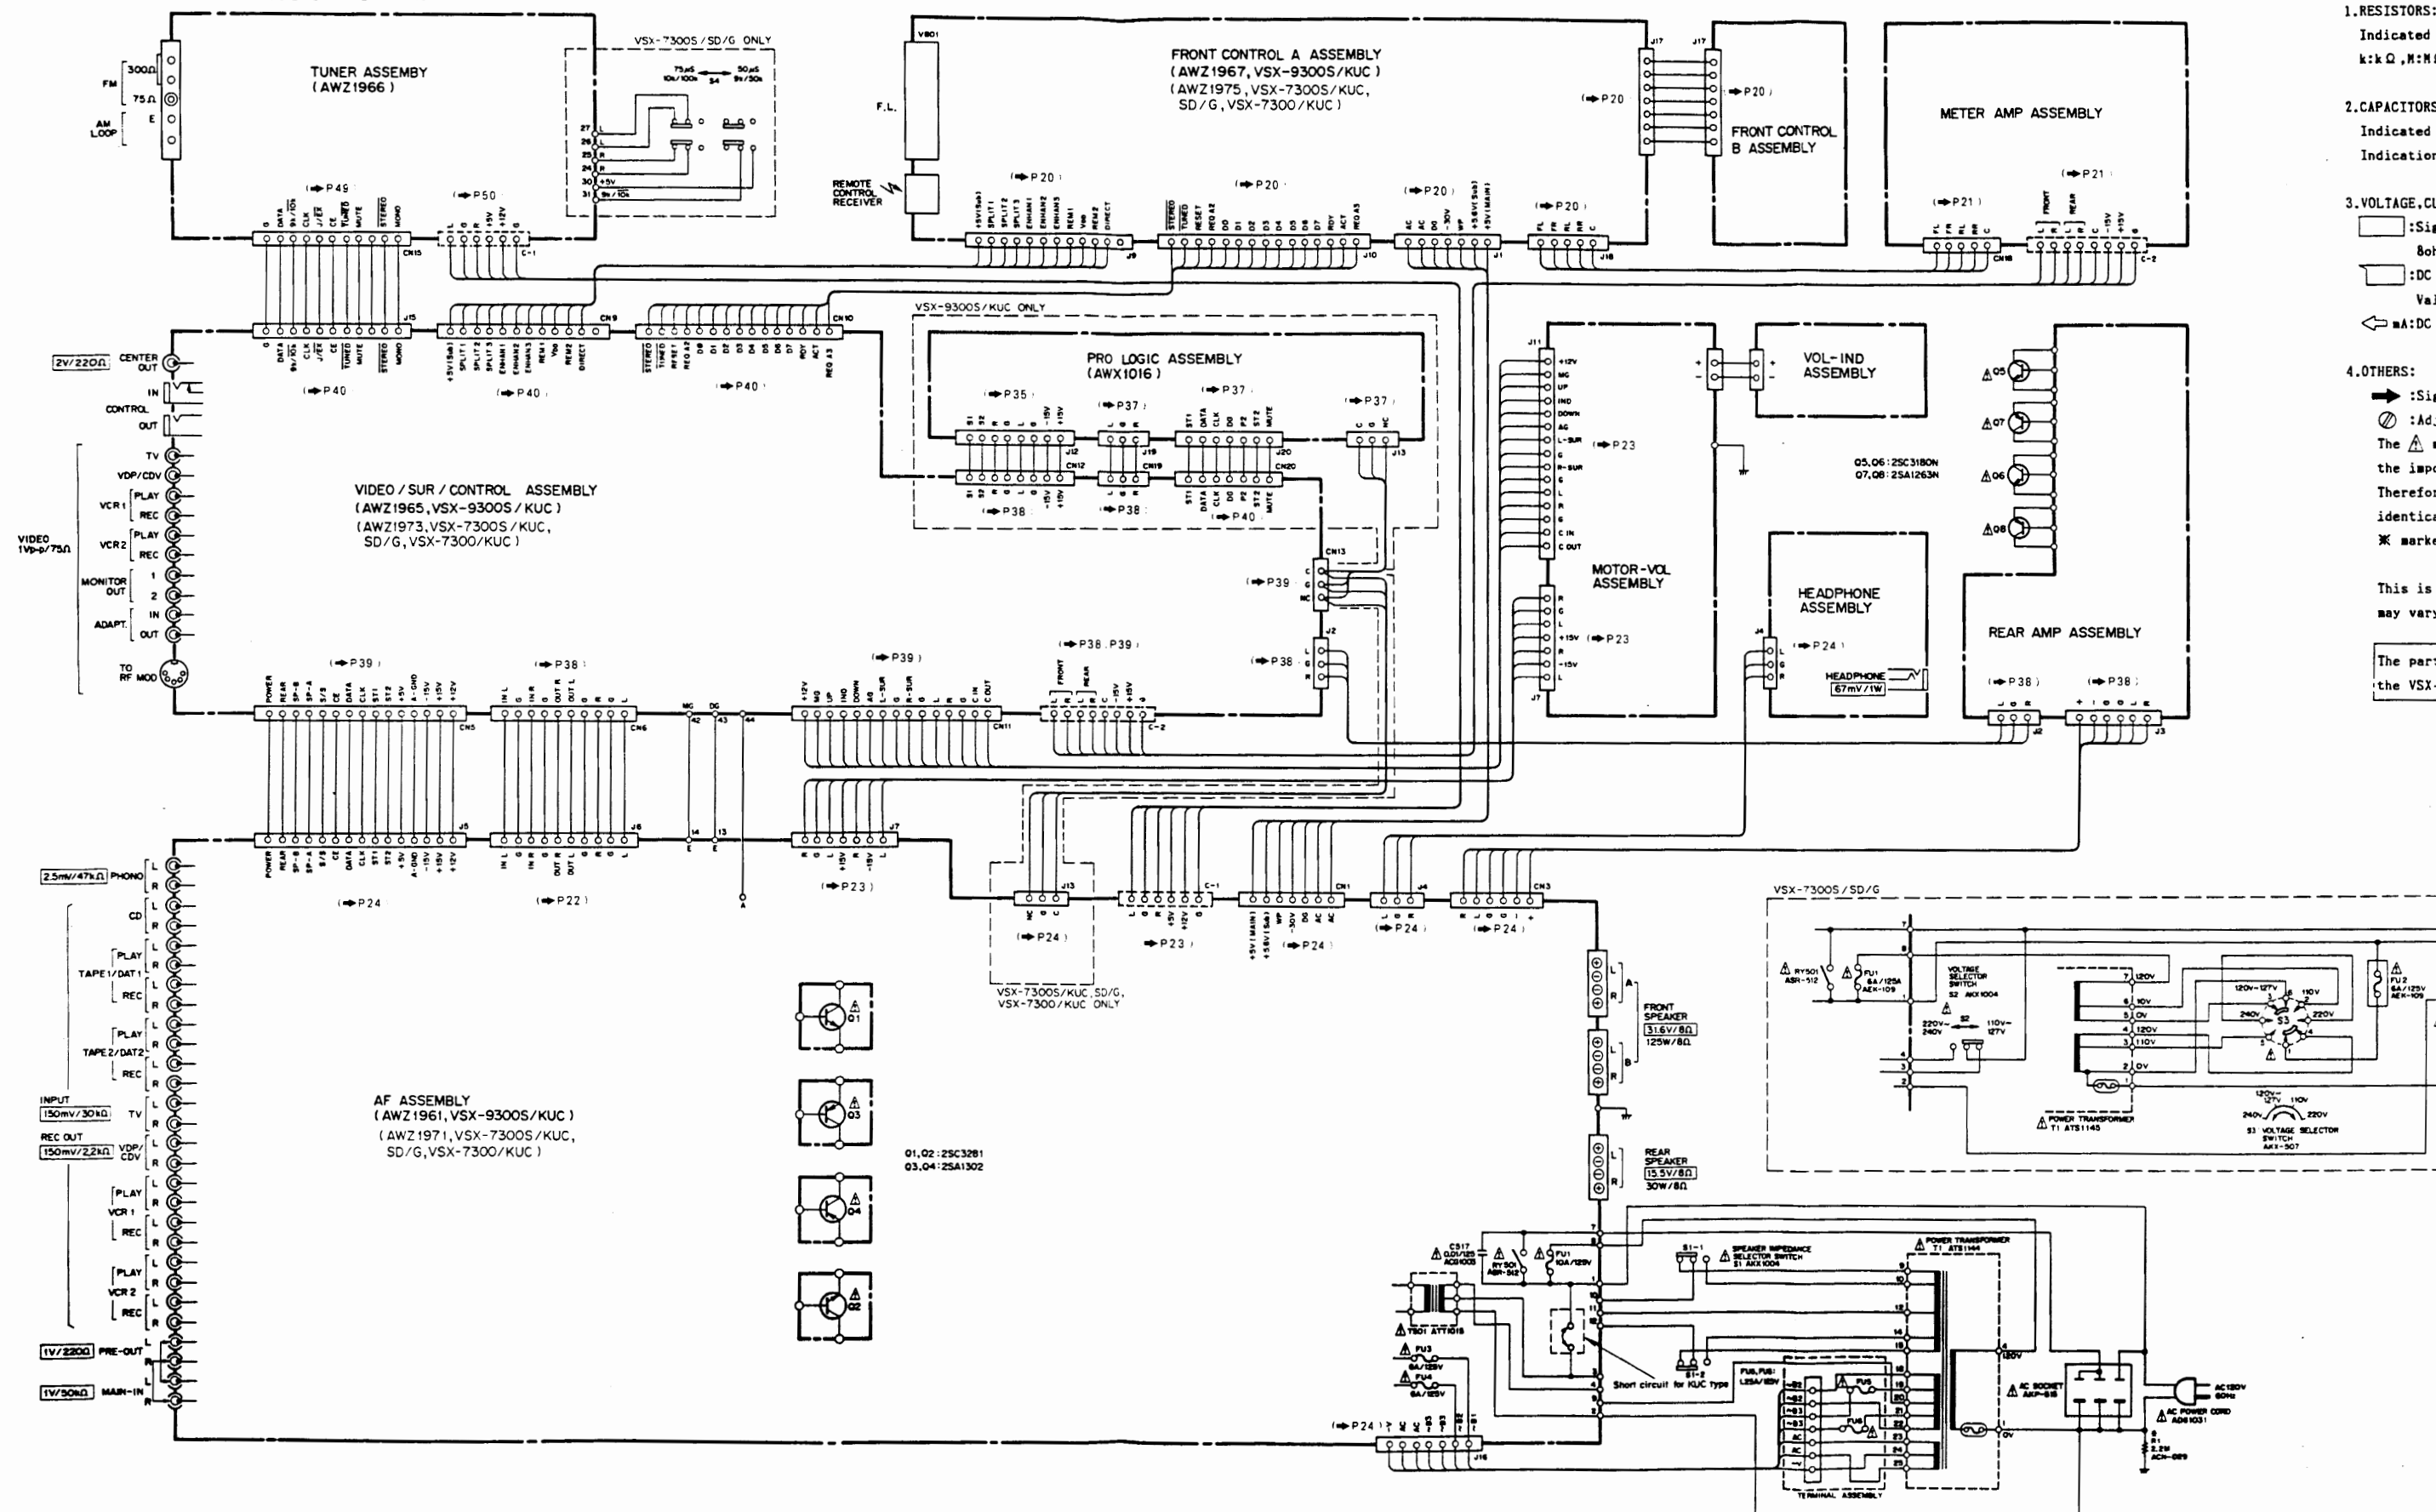

NOTE OF SCH

1. RESISTORS:
Indicated i
k:kΩ, M:MΩ


2. CAPACITORS:
Indicated i
Indication

3. VOLTAGE, CUR
:Sign
8ohm
:DC v
Valt
←A:DC c

4. OTHERS:
→:Sign
⊗:Adj
The Δ me
the impor
Therefore
identical
* marked

This is t
may vary

The part
the VSX-

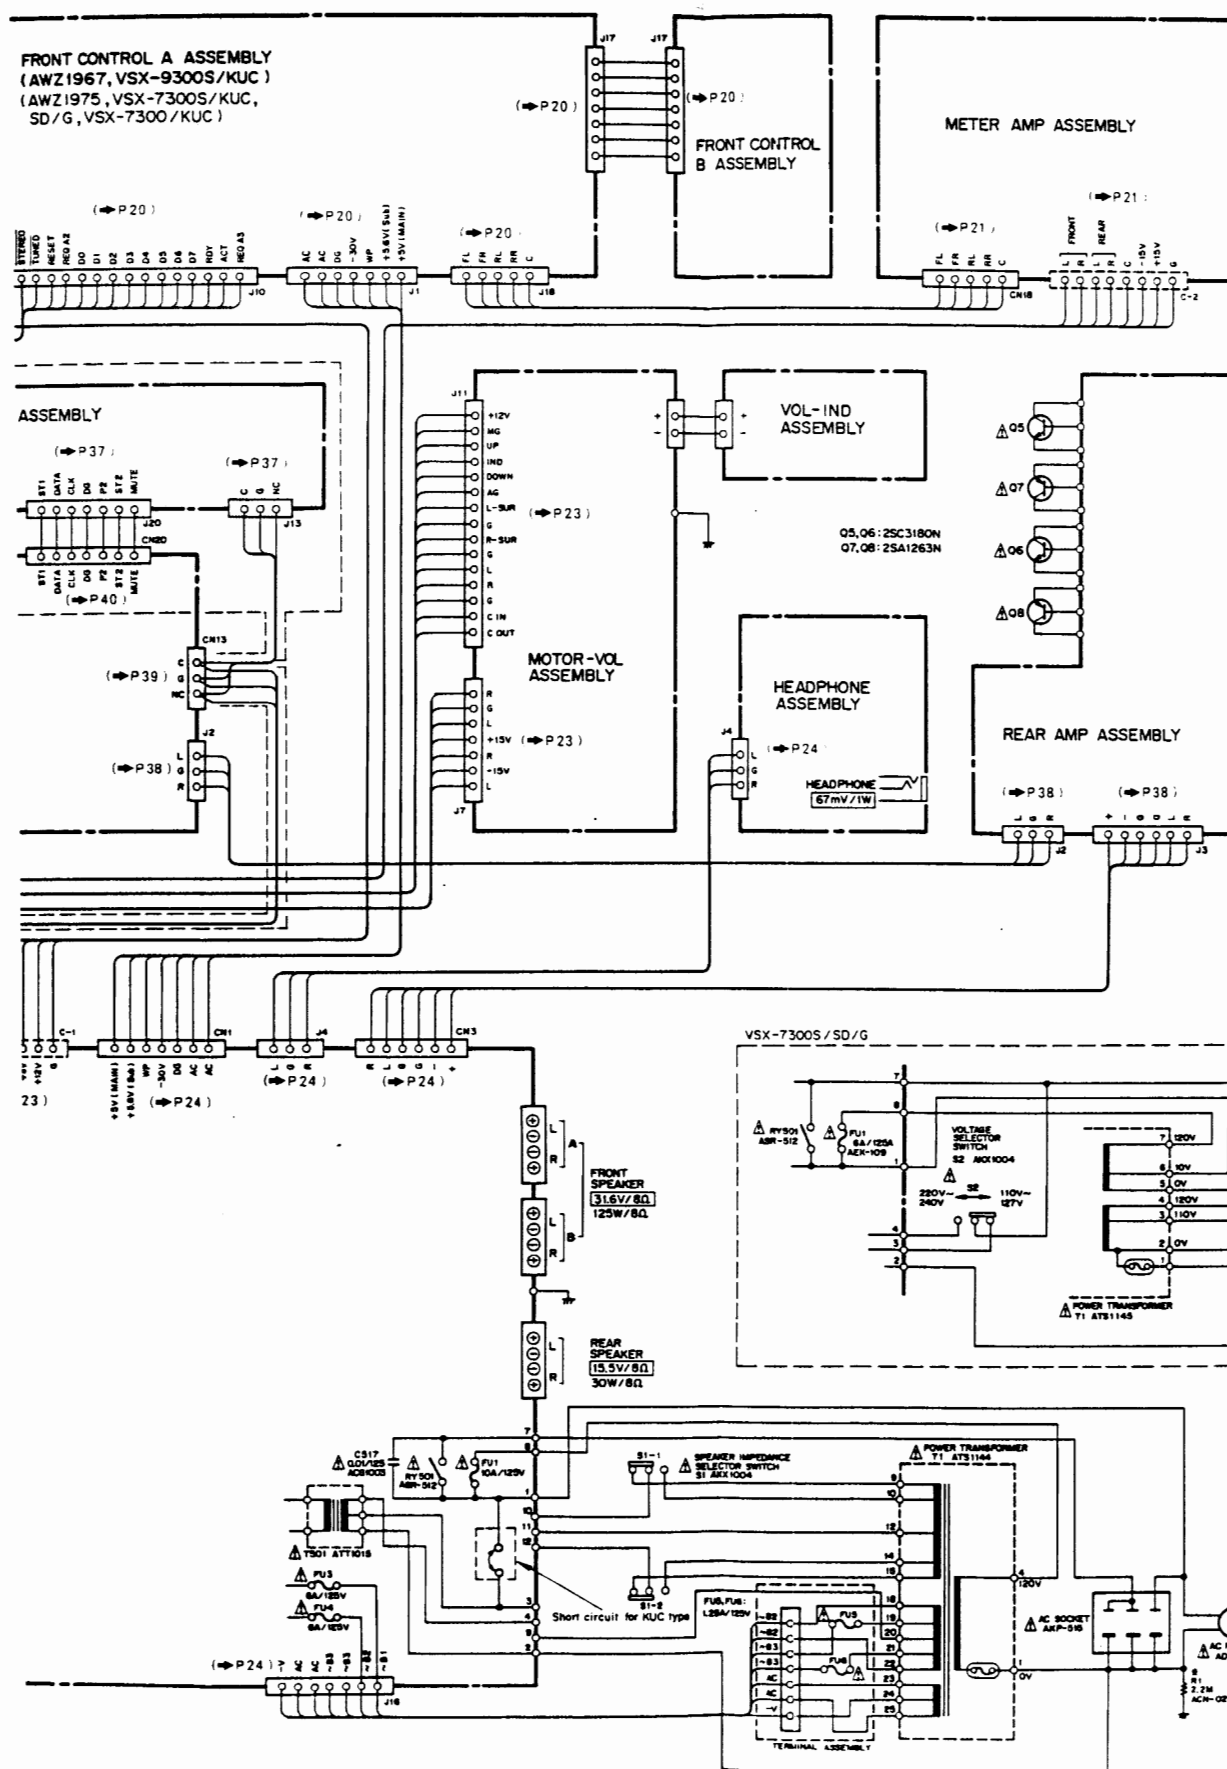

NOTE OF SCHEMATIC DIAGRAM

1. RESISTORS:

Indicated in Ω, 1/4W, 1/8W, ±5% tolerance unless otherwise noted
k:kΩ, M:MΩ, (F):±1%, (G):±2%, (K):±10%, ±20% tolerance

2. CAPACITORS:

Indicated in capacity (μF)/voltage(V) unless otherwise noted p:pF
Indication without voltage is 50V except electrolytic capacitor.

3. VOLTAGE, CURRENT:

□:Signal voltage at 125W+125W(Front), 30W+30W(Rear),
80Hz output (1kHz)
□:DC voltage (V) at no input signal
Value in () is DC voltage at rated power.
◀:DC current at no input signal

4. OTHERS:

→:Signal route.
⊙:Adjusting point.
The Δ mark found on some component parts indicates
the importance of the safety factor of the part.
Therefore, when replacing, be sure to use parts of
identical designation.
※ marked capacitors and resistors have parts numbers.

This is the basic schematic diagram, but the actual circuit
may vary due to improvements in design.

The parts specified as "VSX-7300 TYPE" are required for:
the VSX-7300S/KUC, SD/G and VSX-7300/KUC.

5. SWITCH

S1:SPEAKER IMPEDANCE SELECTOR

8Ω or more⇒4Ω to less than 8Ω

S2:Voltage Selector (SD/G model only)

220-240V⇒110-127V

S3:Voltage Selector (SD/G model only)

110V, 120-127V, 220V, 240V

S4:CHANNEL STEP/FM DE-EMPHASIS (SD/G model only)

75μS⇒50μS

10kHz/100kHz⇒9kHz/50kHz

S801:TUNING UP

S837:TUNER

S802:TUNING DOWN

S838:PHONO

S803:ST 1

S839:TREBLE UP

S804:ST 2

S840:TREBLE DOWN

S805:ST 3

S841:ACOUSTIC MEMORY

S806:ST 4

S842:ACOUSTIC SELECT

S807:ST 5

S843:DELAY TIME

S808:FM

S844:DOLBY SURROUND

S809:AM

S845:STADIUM

S810:ST 6

S846:SIMULATED

S811:ST 7

S847:BASS UP

S812:ST 8

S848:BASS DOWN

S813:ST 9

S849:VCR NOISE FILTER

S814:ST10

S850:ENHANCER

S815:TUNING MODE

S851:SURROUND OFF

S816:DIRECT ACCESS TUNING

S852:TV ANT

S817:FM MODE

S853:POWER STANDBY

S818:MEMORY

S819:MEMORY SCAN

S855:SURROUND TEST TONE (VSX-9300S ONLY)

S820:STATION NAME

S856:CENTER MODE (VSX-9300S ONLY)

S822:HITS (Hyper Intelligent
Tuning System)

S857:SP-A

S823:REAR UP

S858:SP-B

S824:REAR DOWN

S859:VCR 1 REC SELECTOR

S825:SIMULATED STEREO

S860:VIDEO ADAPTOR

S826:VIDEO SIGNAL SELECTOR

S861:VCR 1 MODE

S827:VCR 1

S862:VCR 1 REC ENHANCER

S828:VCR 2

S863:SP-REAR

S829:VDP/CDV

S830:TV

S831:L

S832:R

S833:MUTE

S834:TAPE2/DAT2


S835:TAPE1/DAT1

S836:CD

THE UNDERLINED INDICATES THE SWITCH POSITION

2.5 FRONT CONTROL A, FRONT CONTROL B AND METER AMP ASSEMBLY

NOTE:
This picture shows the foil side of the printed circuit.

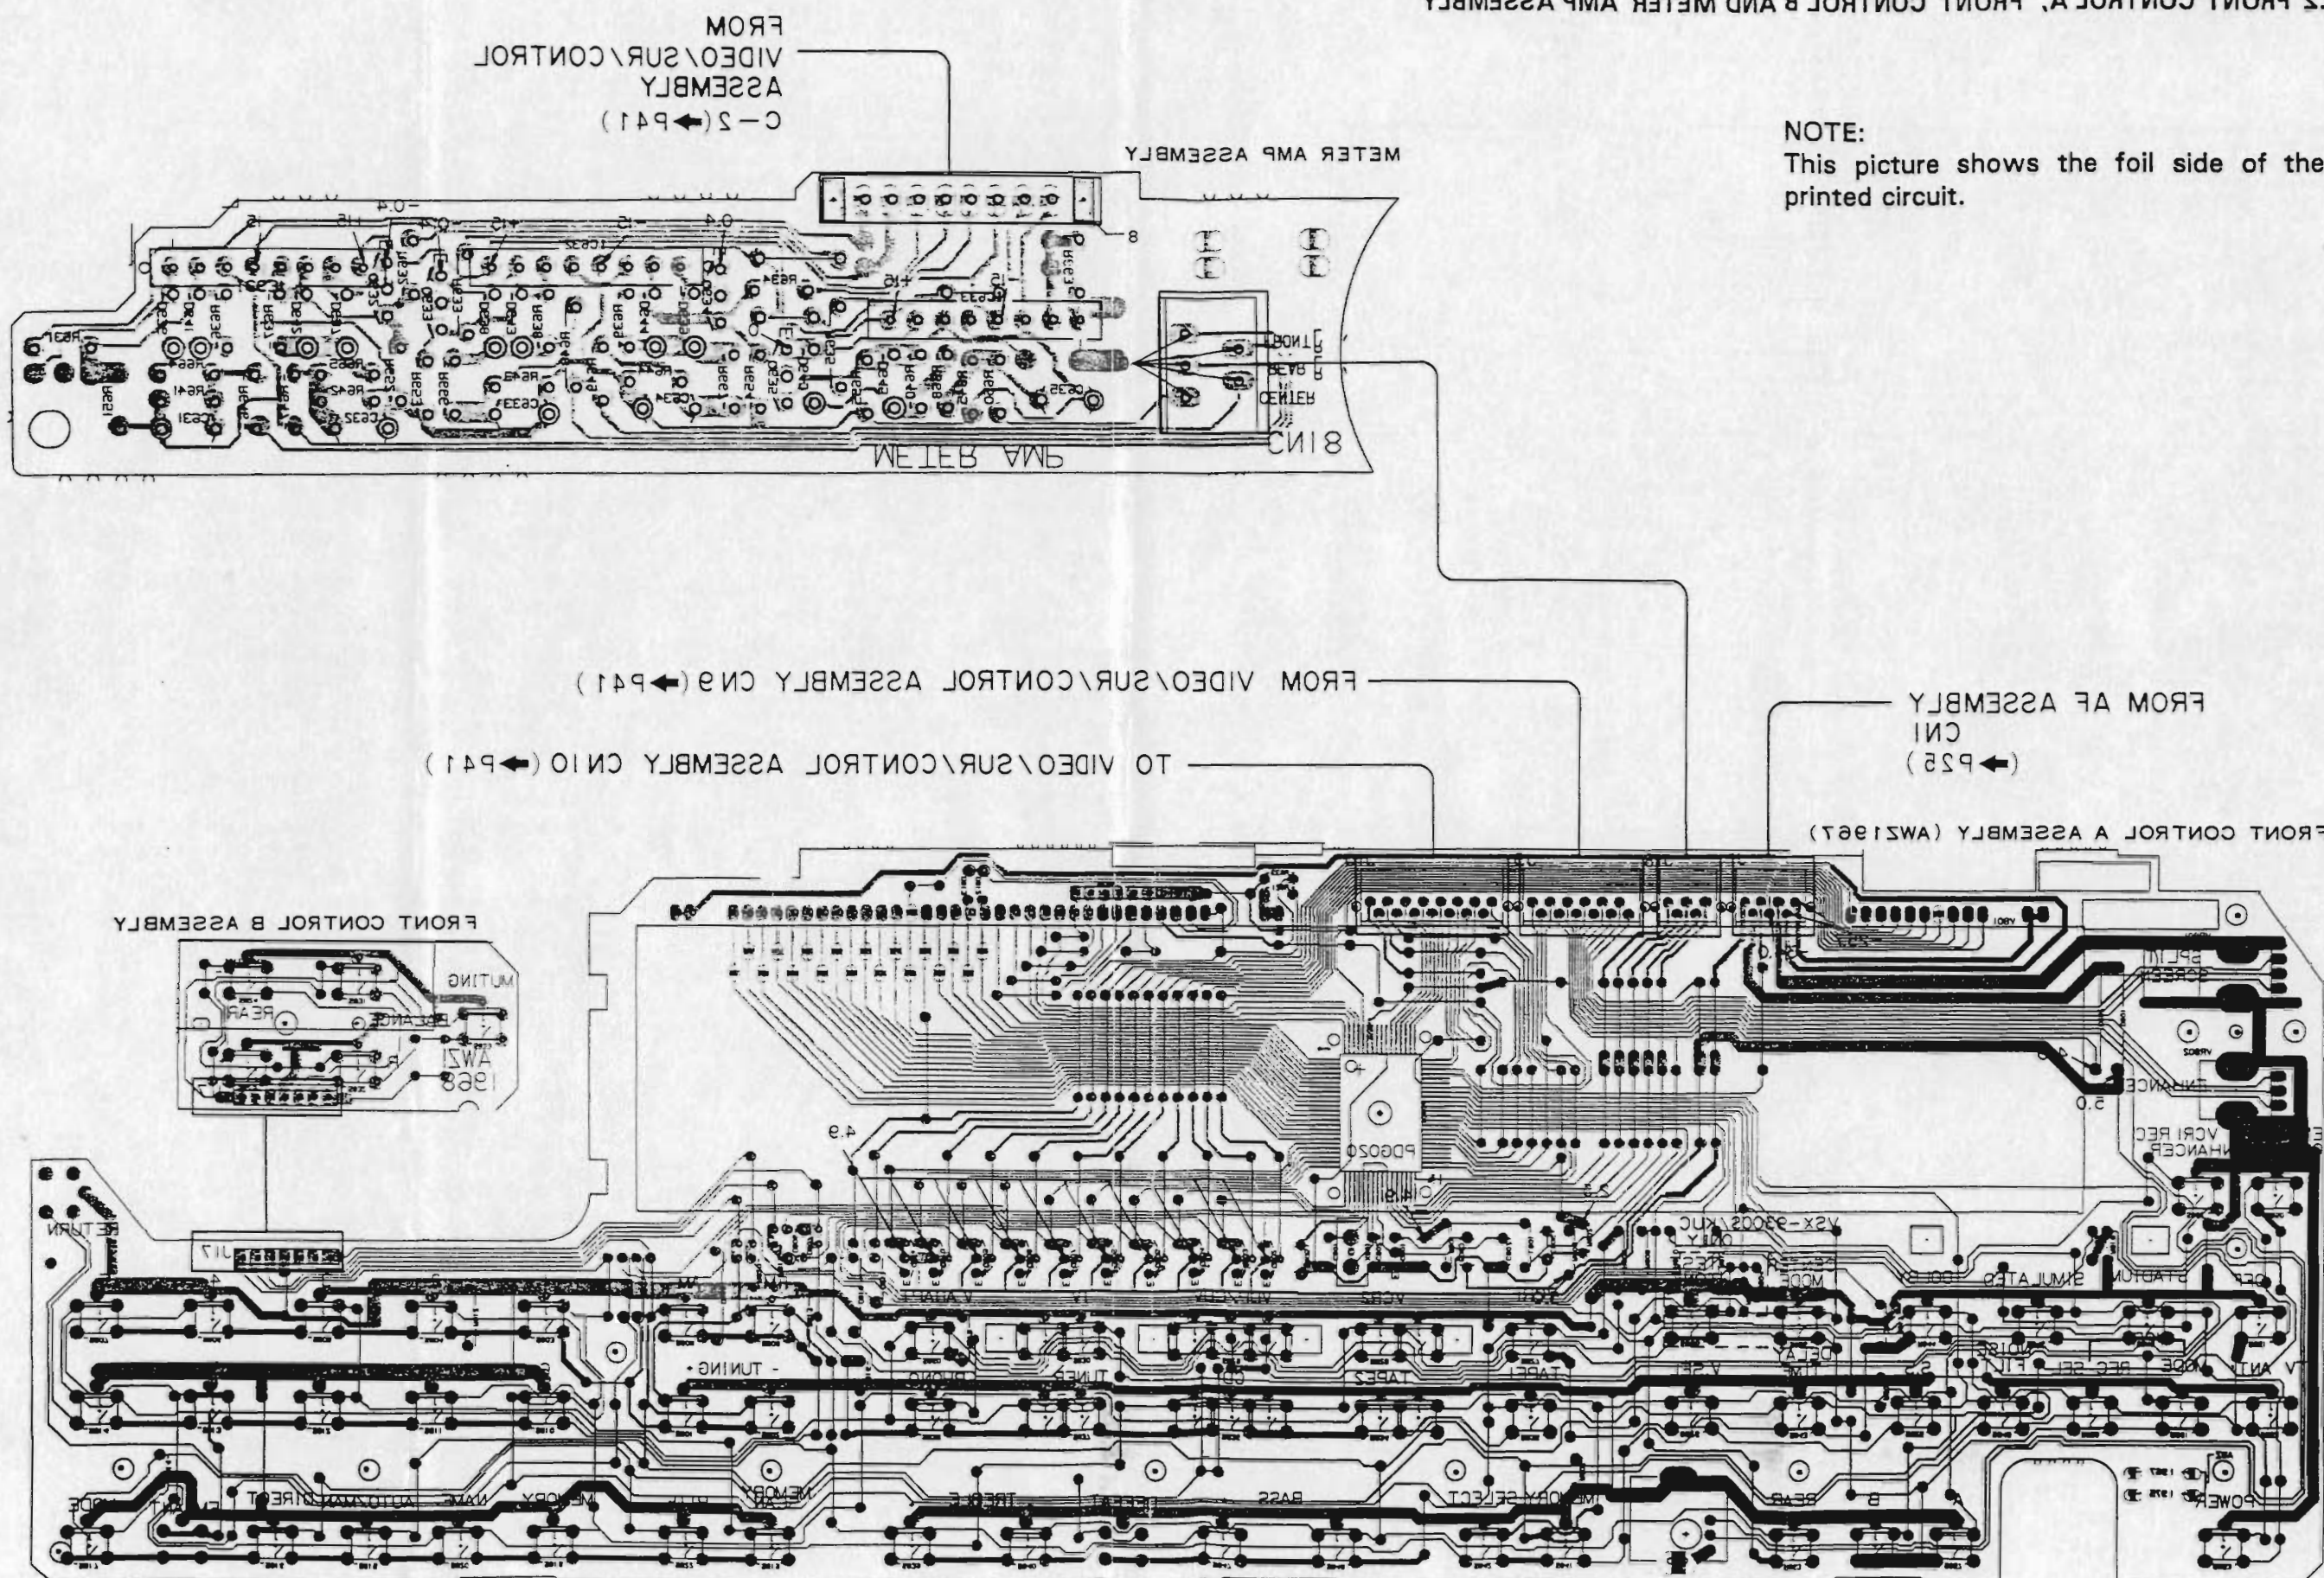

5.2 FRONT CONTROL A, FRONT CONTROL B AND METER AMP ASSEMBLY

NOTE

1. This P.C.B. connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the following Table.

P.C.B. pattern diagram indication	Corresponding part symbol	Part Name
Q204		Transistor
Q215		Radiator type transistor
Q203		Diode
R237		Resistor
C513		Capacitor (Polarity)
C518		Capacitor (Non-polarity)


Others

P.C.B. pattern diagram indication	Part Name
IC	IC
S	Switch
RY	Relay
L	Coil
F	Filter
VR	Variable resistor or Semi-fixed resistor

3. The capacitor terminal marked with @ (double circles) shows negative terminal.
4. The diode terminal marked with @ (double circles) shows cathode side.
5. The transistor terminal to which E is affixed shows the emitter.

METER AMP ASSEMBLY

FROM
VIDEO/SUR/CONTROL
ASSEMBLY
C-2 (→ P41)

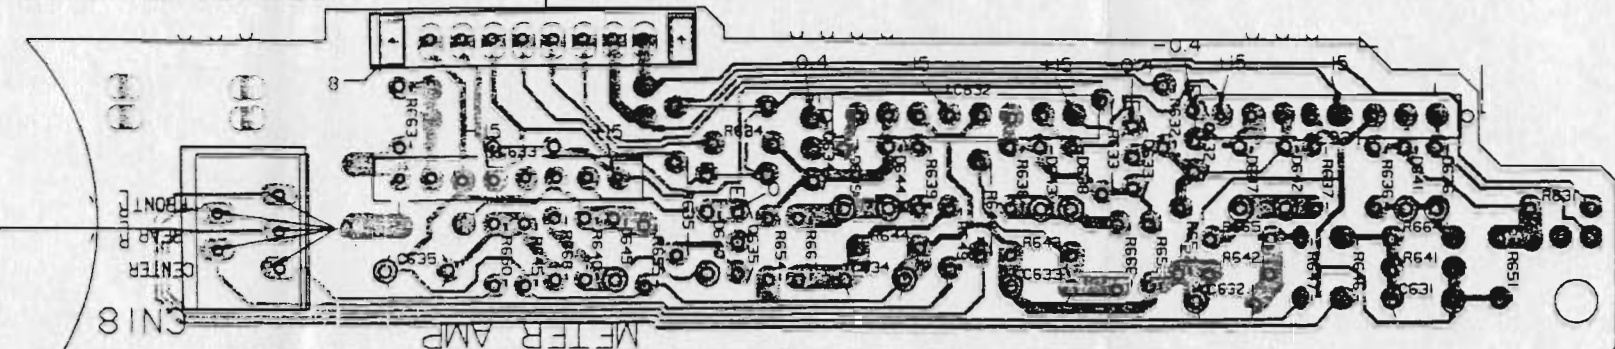


FROM AF ASSEMBLY
CNI
(→ P25)


FROM VIDEO/SUR/CONTROL ASSEMBLY CN9 (→ P41)

TO VIDEO/SUR/CONTROL ASSEMBLY CN10 (→ P41)

FRONT CONTROL A ASSEMBLY (AWZ1967)

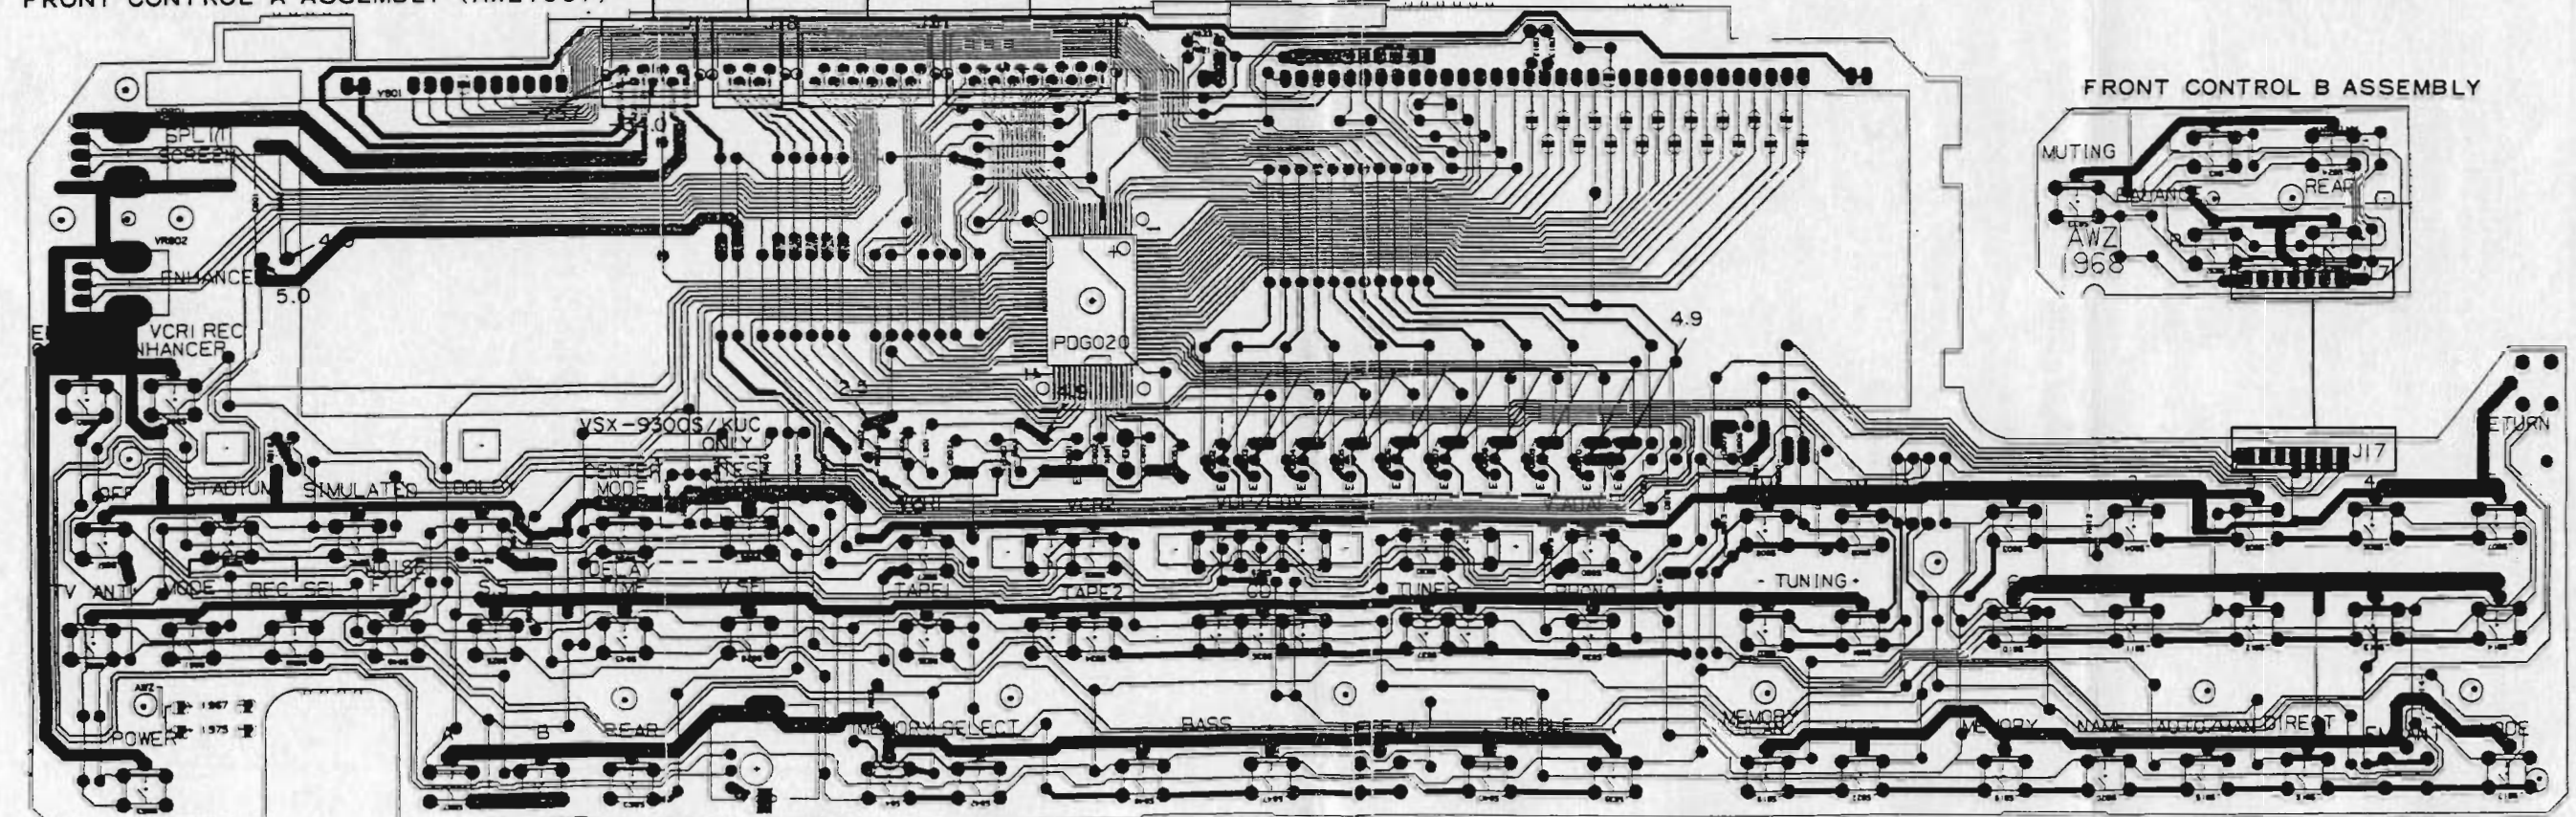

FRONT CONTROL B ASSEMBLY


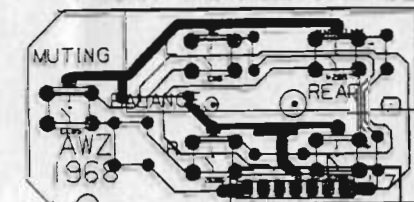


FRONT CONTROL A, FRONT CONTROL B AND METER AMP ASSEMBLY

FRONT CONTROL A ASSEMBLY (AWZ1967, VSX-9300S/KUC) (AWZ1975, VSX-7300 TYPE)

from AF ASSEMBLY CN1 (P24) to VIDEO/SUR/CONTROL CN9 (P40) to VIDEO/SUR/CONTROL CN10 (P40)

Note:
The parts spec
VSX-7300S/K

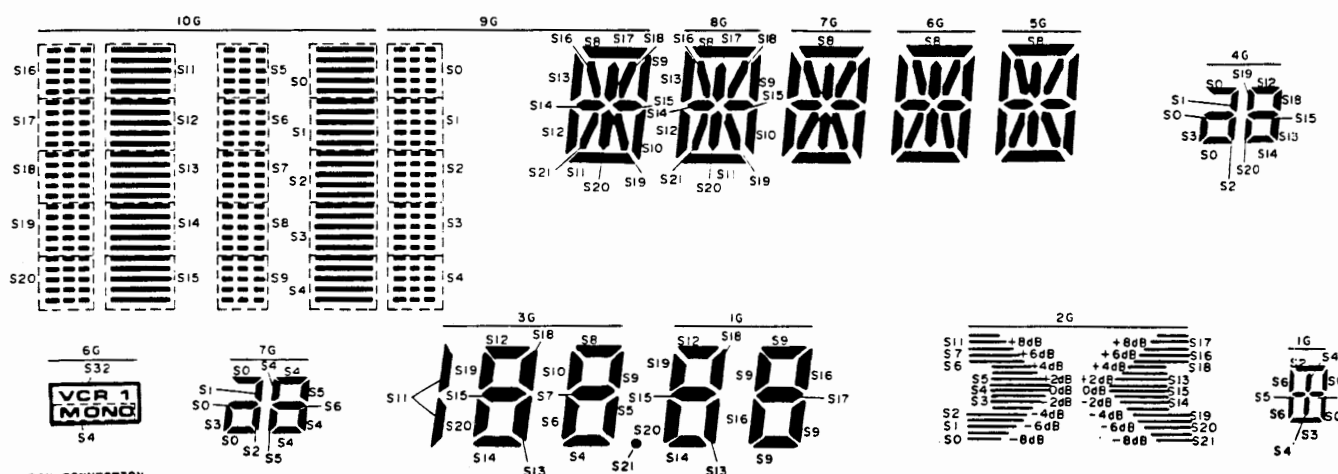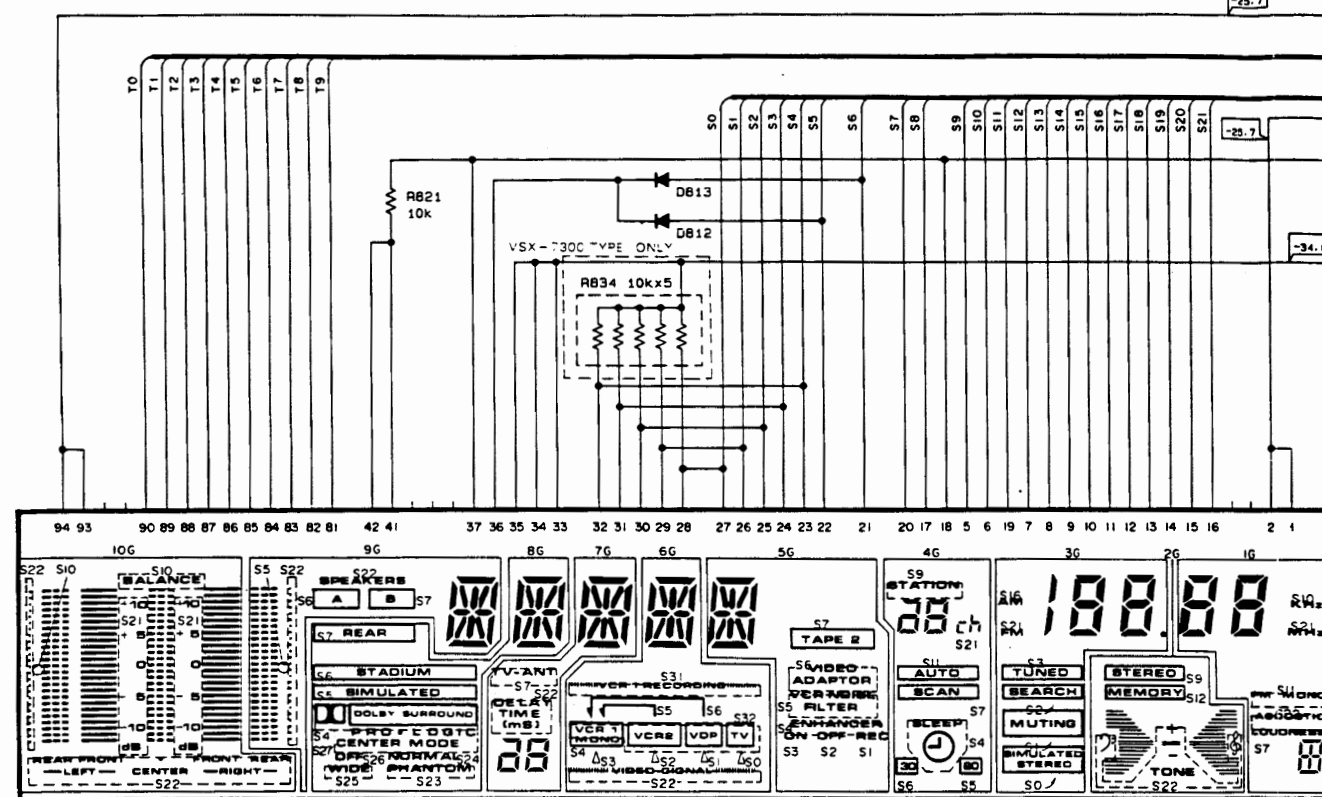


PIN CONNECTION


PIN NO.	50	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
CONNECTION	N	N	N	N	N	N	N	N	N	Fd	Fd	N	N	N	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	N	N	F	F	1	1


PIN NO.	94	93	92	91	90	89	88	87	86	85	84	83	82	81	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61	60	59	58	57	56	55	54	53	52	51		
CONNECTION	F	F	N	N	10	9	8	7	6	5	4	3	2	1	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N
	2	2	P	P	G	G	G	G	G	G	G	G	G	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	

NOTE: Fd=Filament duoper

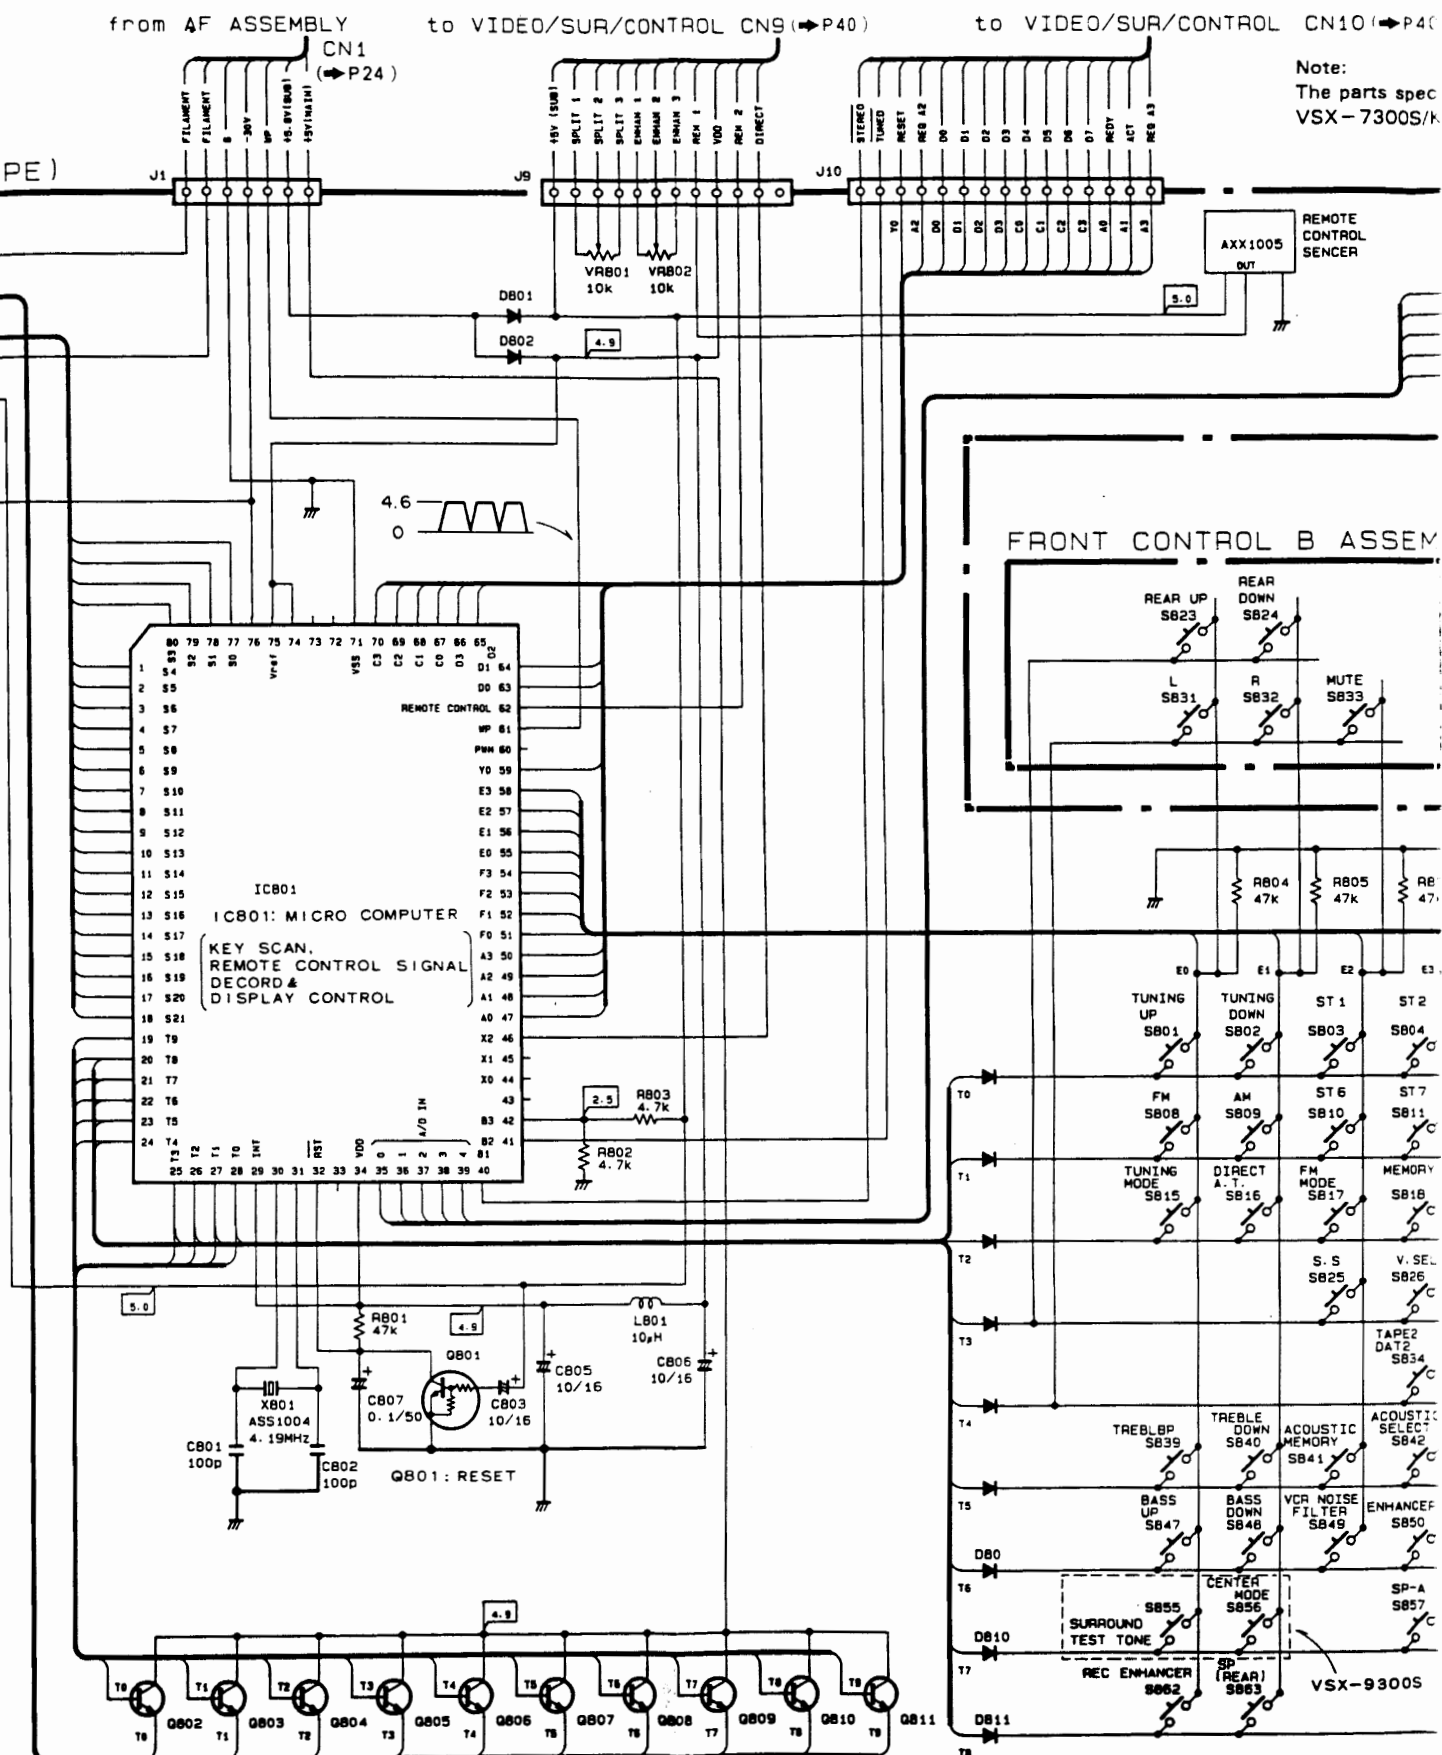



FRONT CONTROL B ASSEMBLY

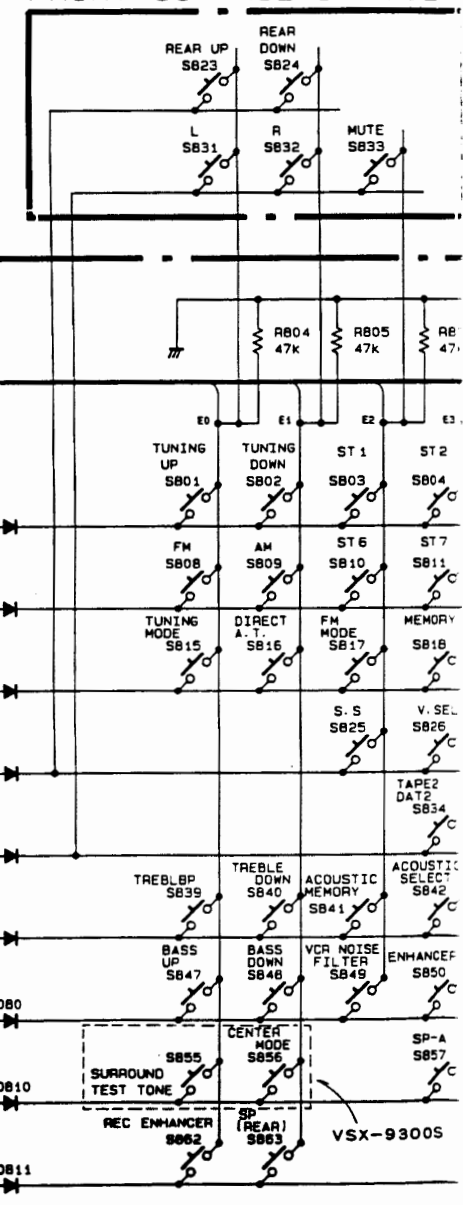

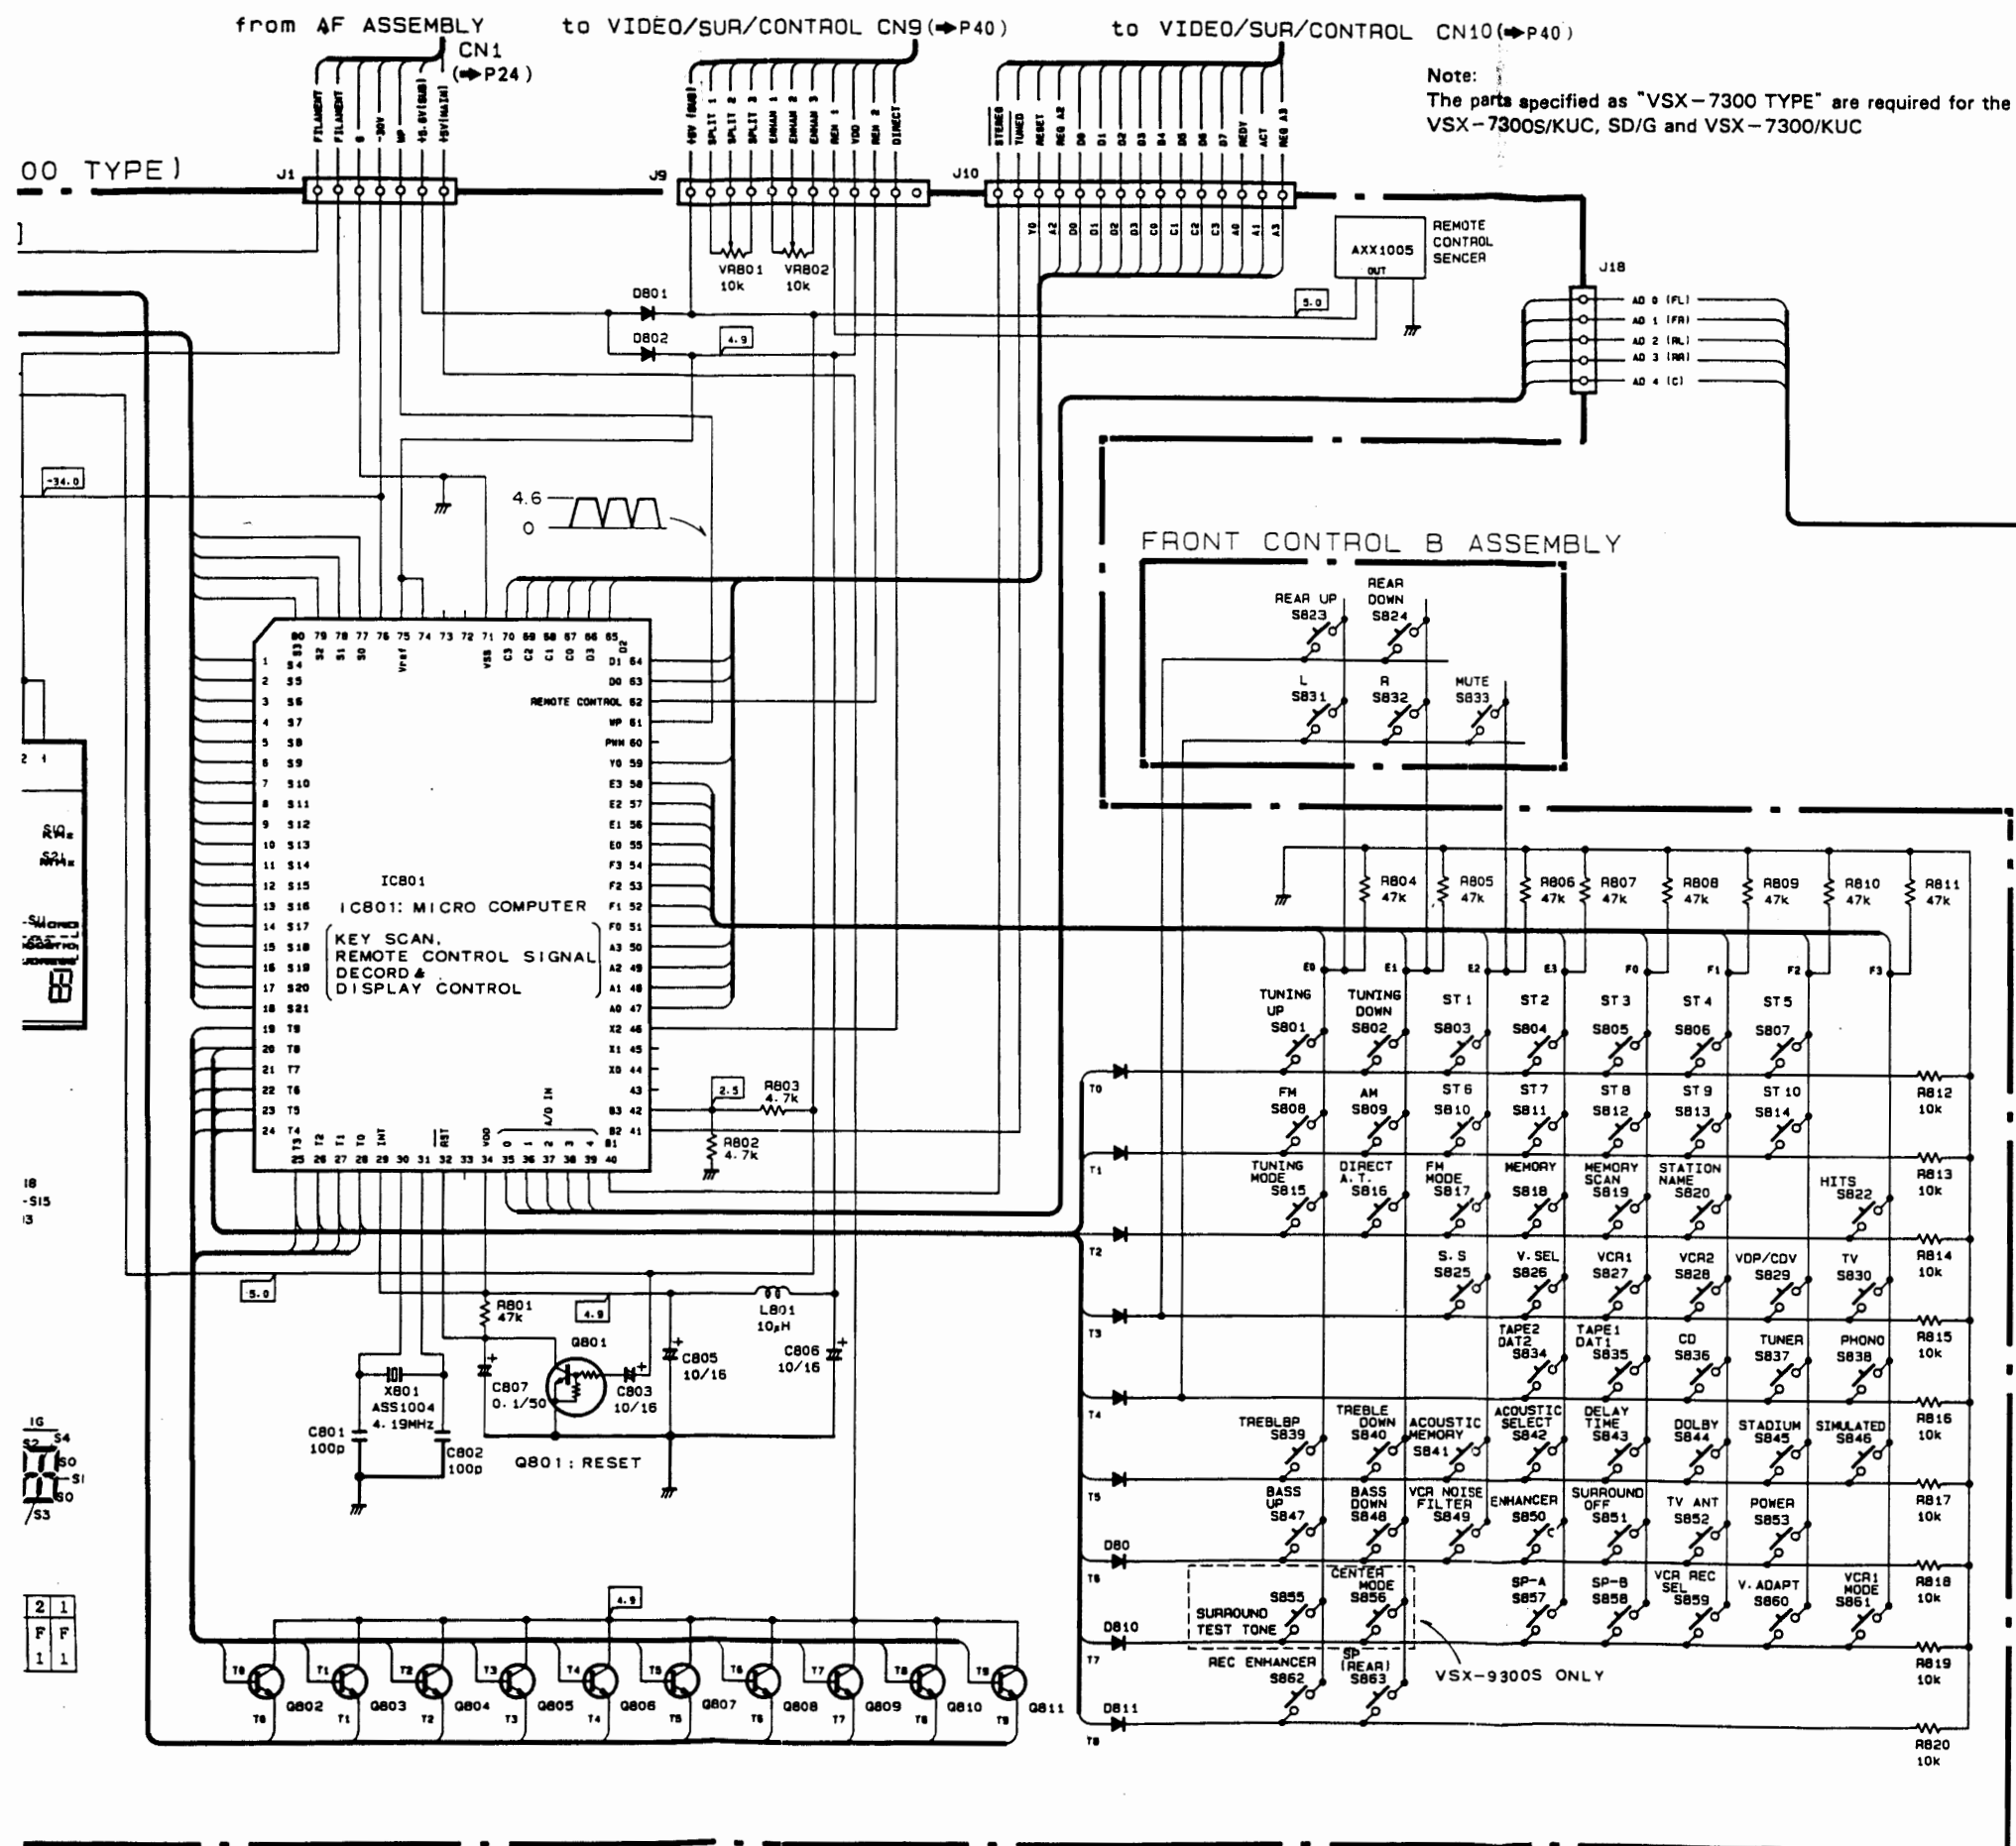

IC801	PDG020-A	IC831-IC833	M5218LF
Q801	RN1203	Q631-Q635	2SC2458
Q802-Q811	2SC2458	D841-D845	RD5.6ESB3
D801-D813	1SS252	D836-D840	1SS252

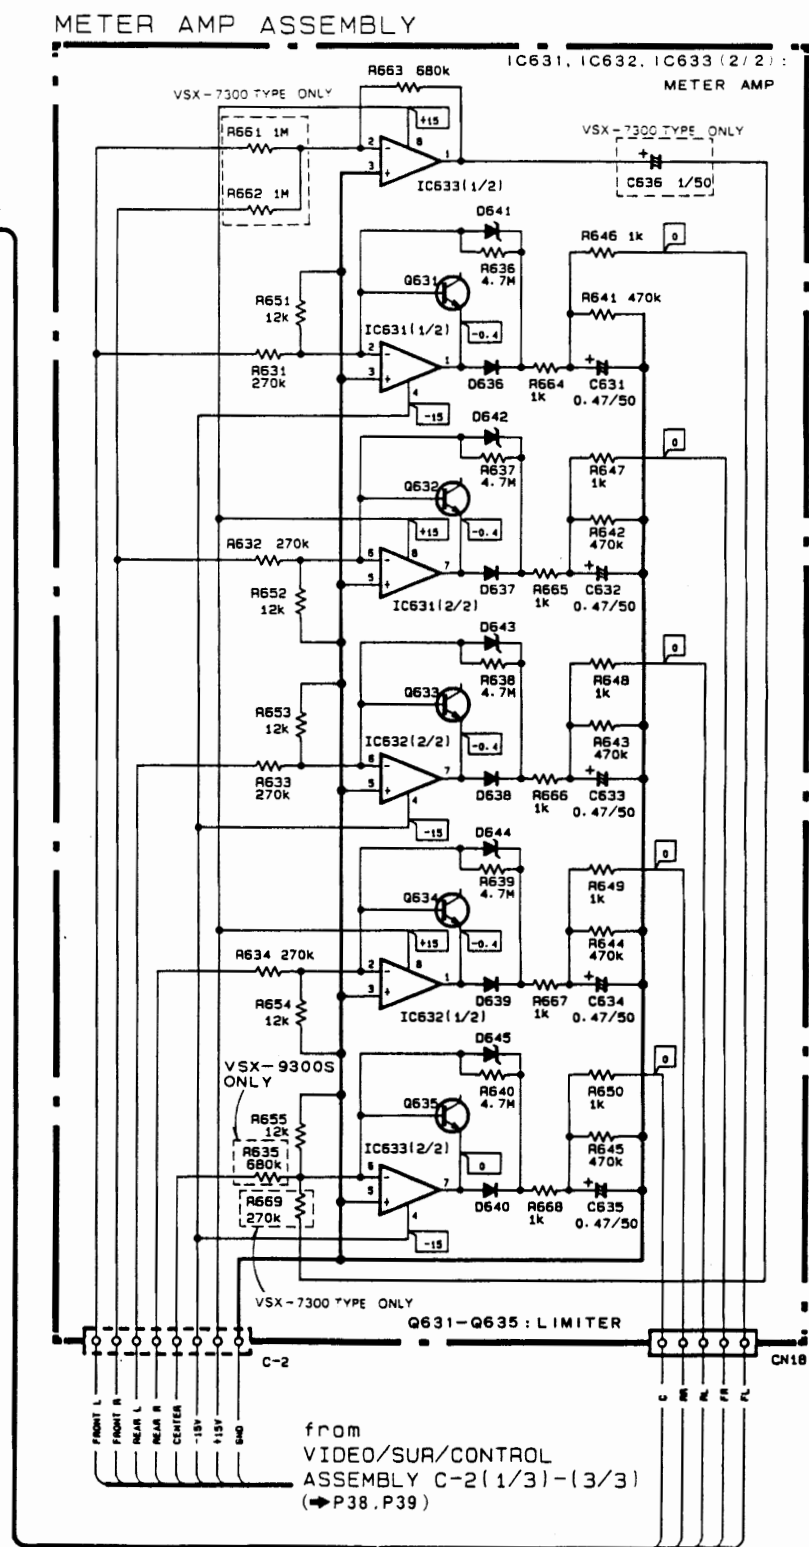

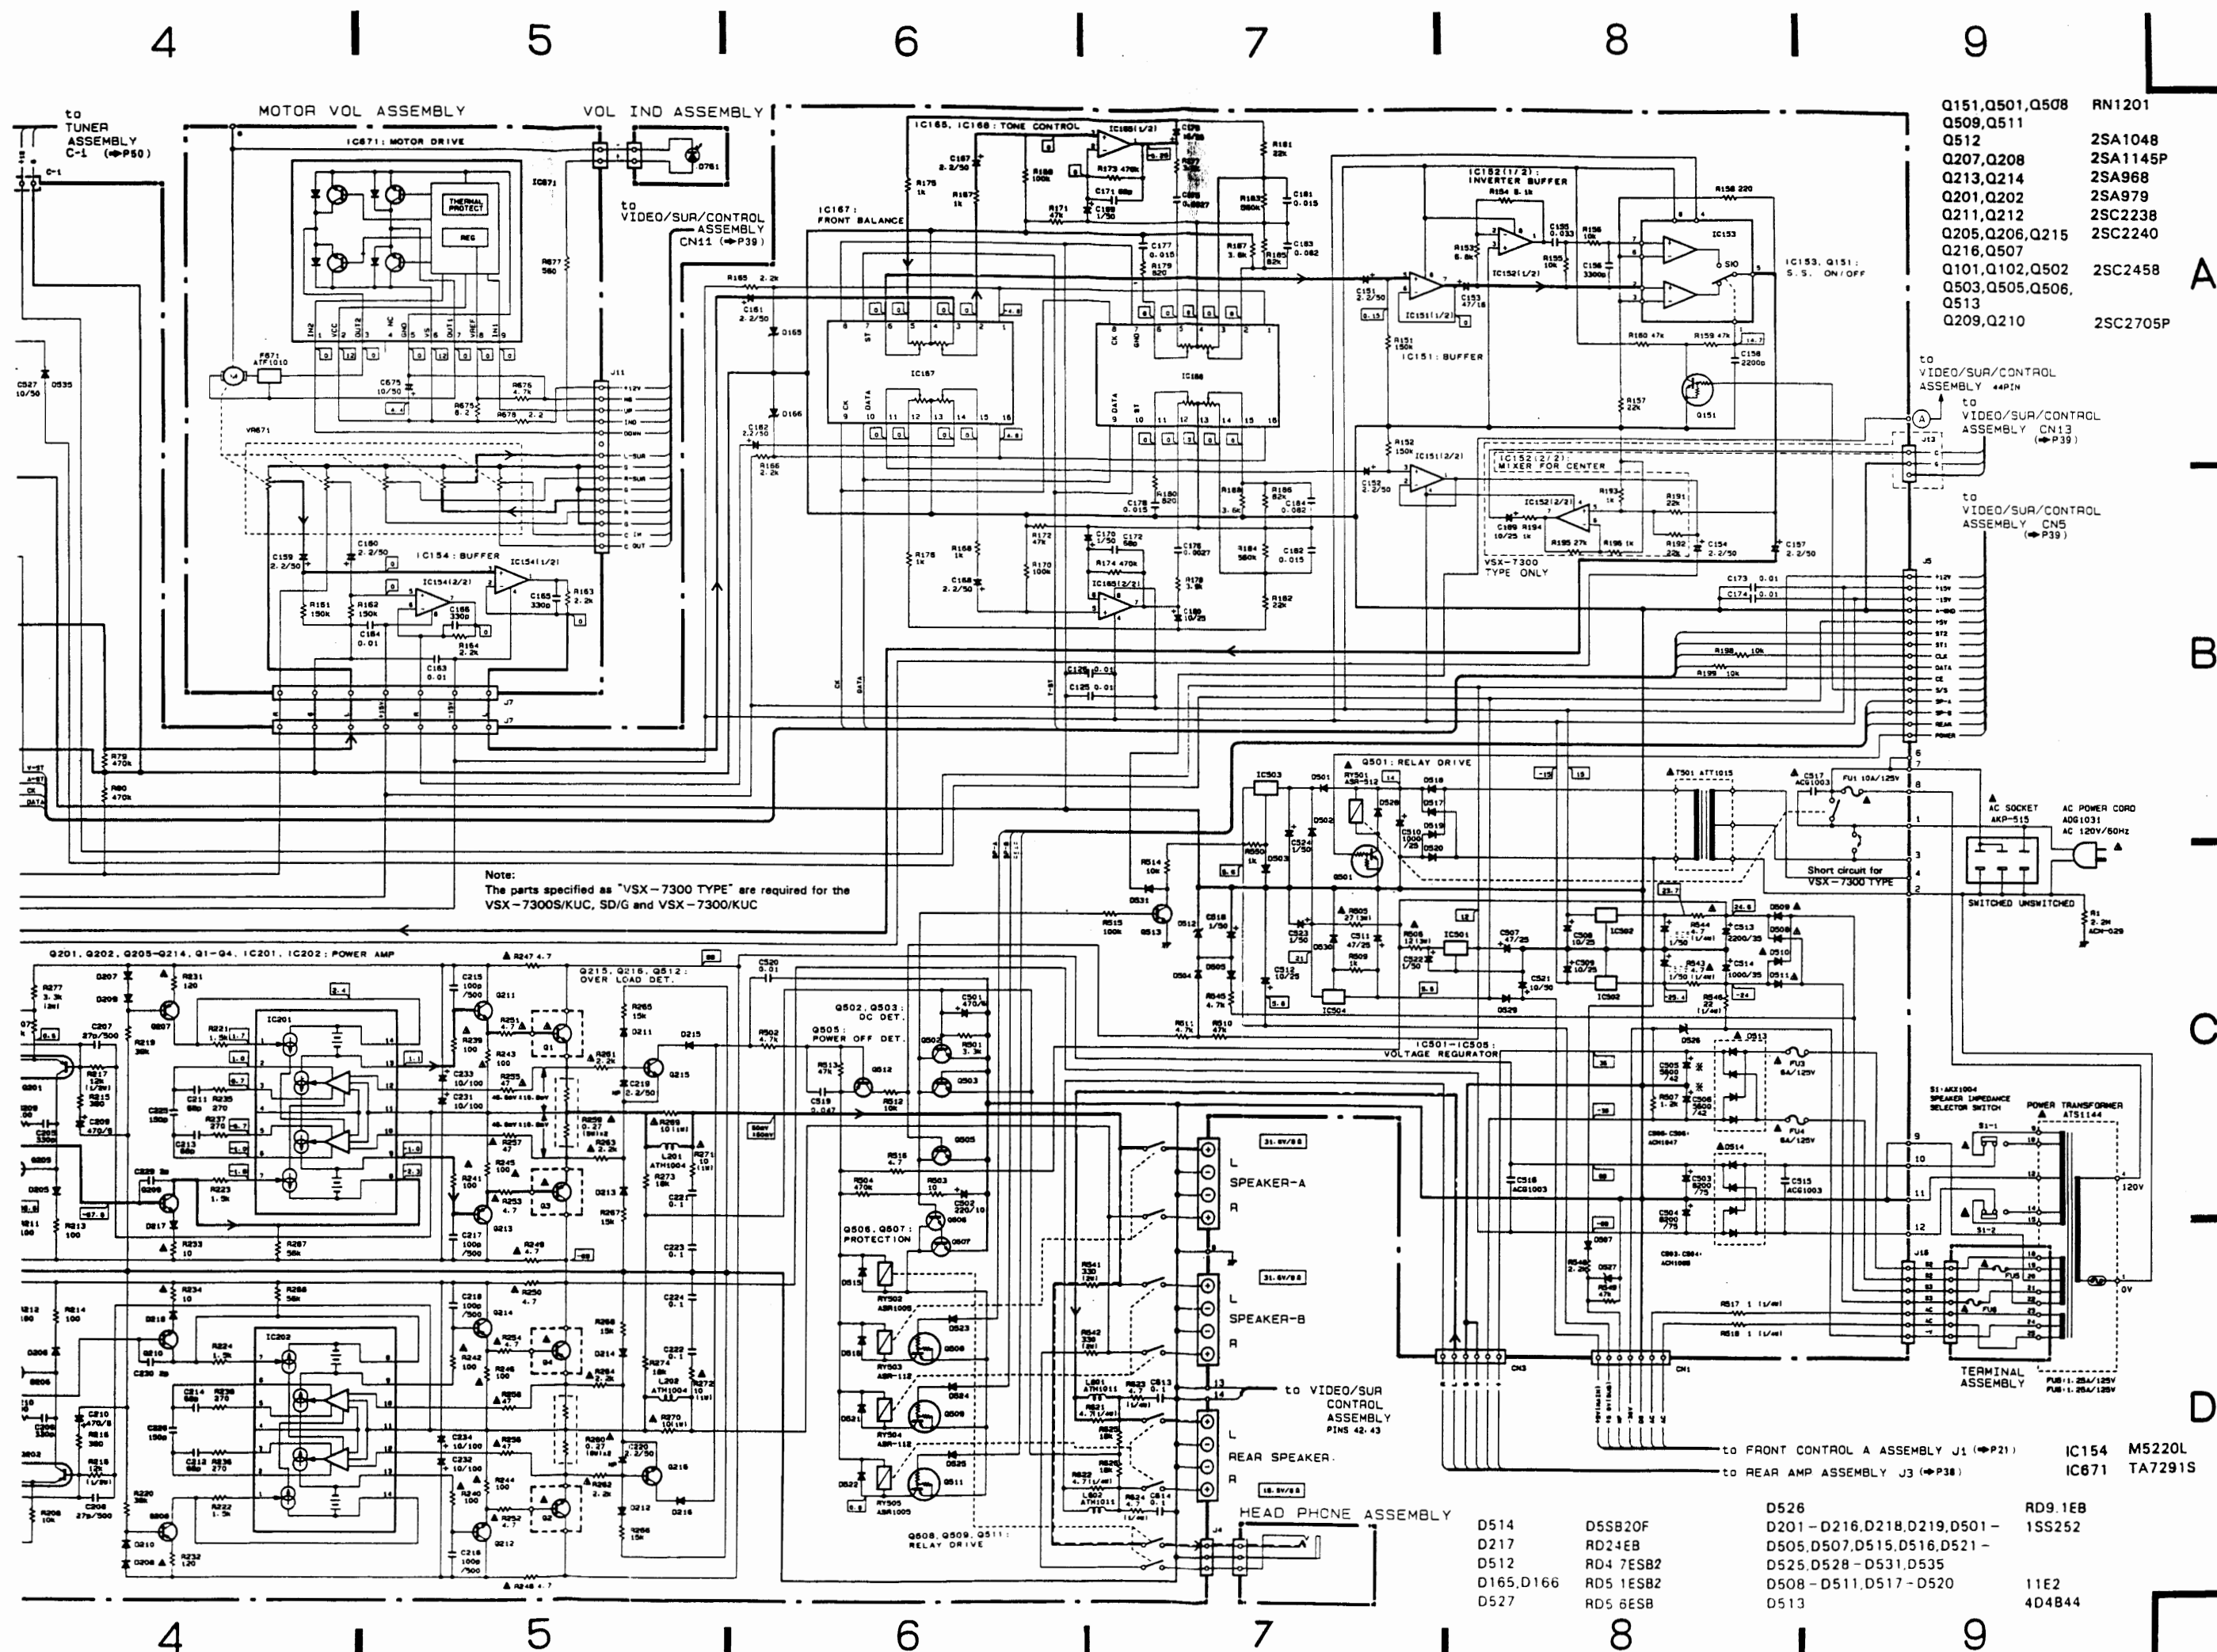

5.3 AF, HEADPHONE, MOTOR-VOL TERMINAL ASSEMBLIES

NOTE

1. This P.C.B. connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the following Table.


P.C.B. pattern diagram indication	Corresponding part symbol	Part Name
Q504		Transistor
Q215		Radiator type transistor
D203		Diode
R237		Resistor
C513		Capacitor (Polarity)
C518		Capacitor (Non-polarity)

Others


P.C.B. pattern diagram indication	Part Name
IC	IC
S	Switch
RY	Relay
L	Coil
F	Filter
VR	Variable resistor or Semi-fixed resistor

3. The capacitor terminal marked with ⊕ (double circles) shows negative terminal.
4. The diode terminal marked with ⊕ (double circles) shows cathode side.
5. The transistor terminal to which E is affixed shows the emitter.

MOTOR VOLUME ASSEMBLY

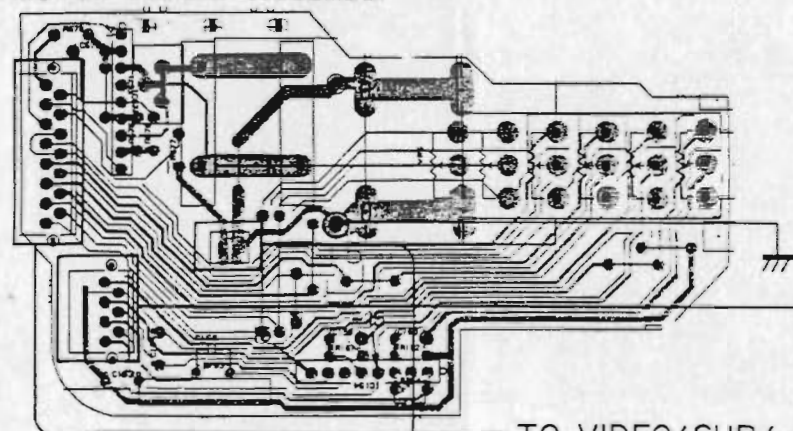


TO VIDEO/SUR/
CONTROL ASSEMBLY
CN11 (→ P41)

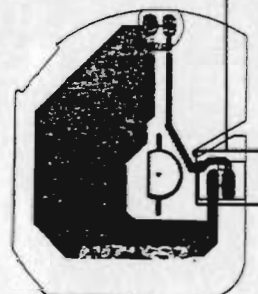

VOL IND ASSEMBLY

AF ASSEMBLY (AWZ1961)

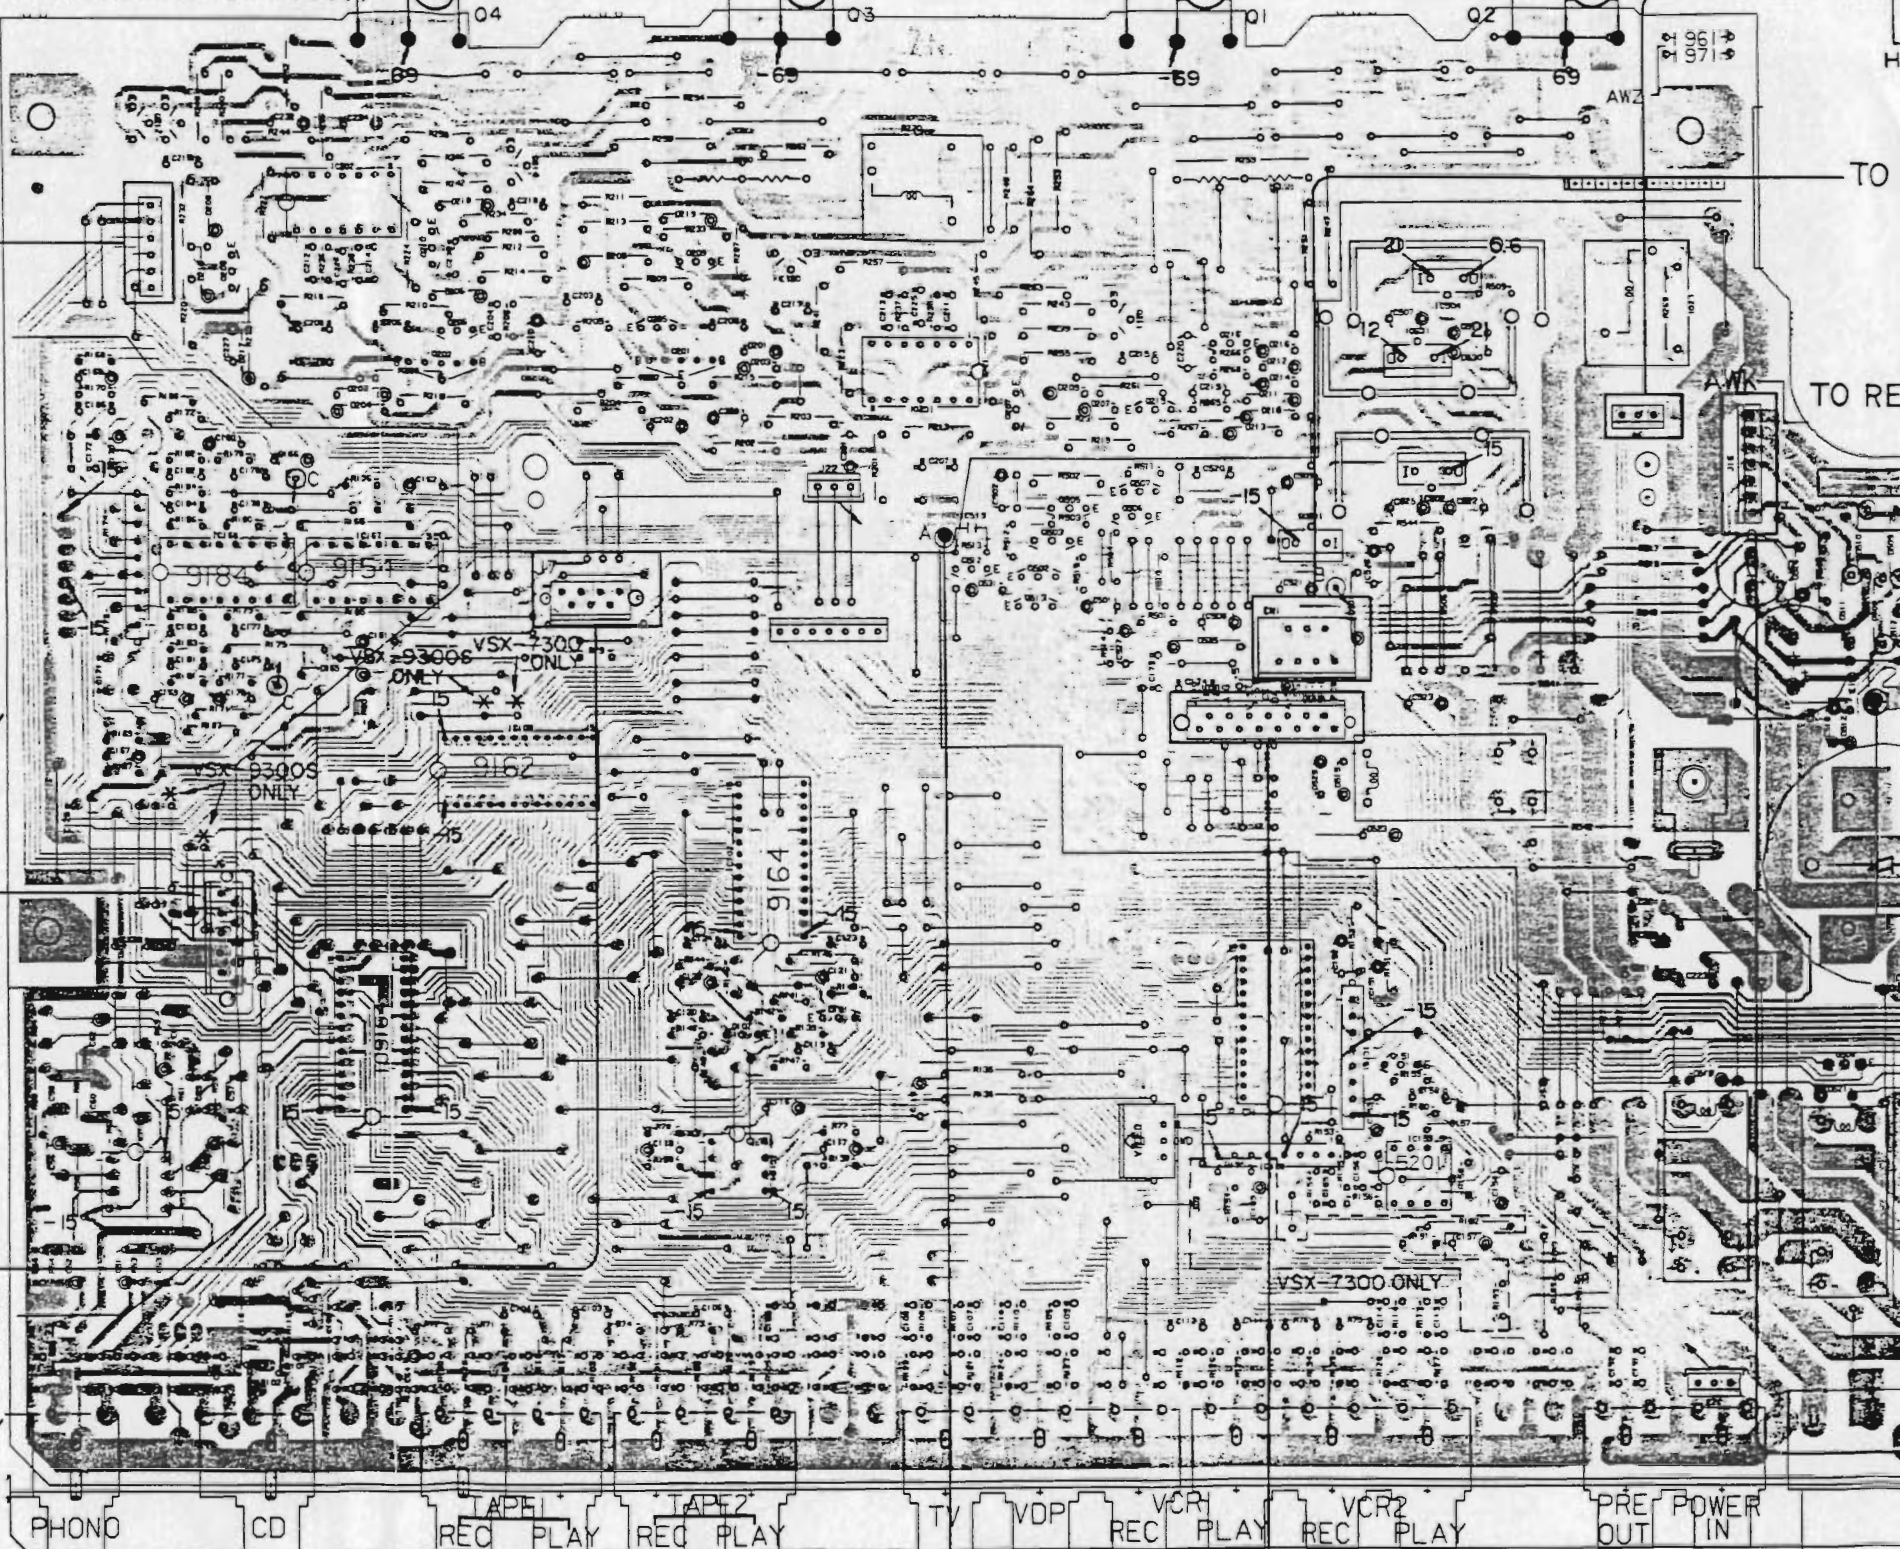

TO
TUNER
ASSEMBLY
C-1 (→ P51)


TO VIDEO/SUR/
CONTROL ASSEMBLY
CN6 (→ P41)


TO VIDEO/SUR/CONTROL
ASSEMBLY 44 (→ P41)

TO VIDEO/SUR/CONTROL
ASSEMBLY CN5 (→ P41)

Q212 Q208 IC202 Q210 Q206 Q202 Q214 Q209 Q205 Q201 IC201 Q207 Q512 Q505 Q507 Q215 Q513 Q502 Q503 Q506 IC152 IC151 Q151 IC153 Q508




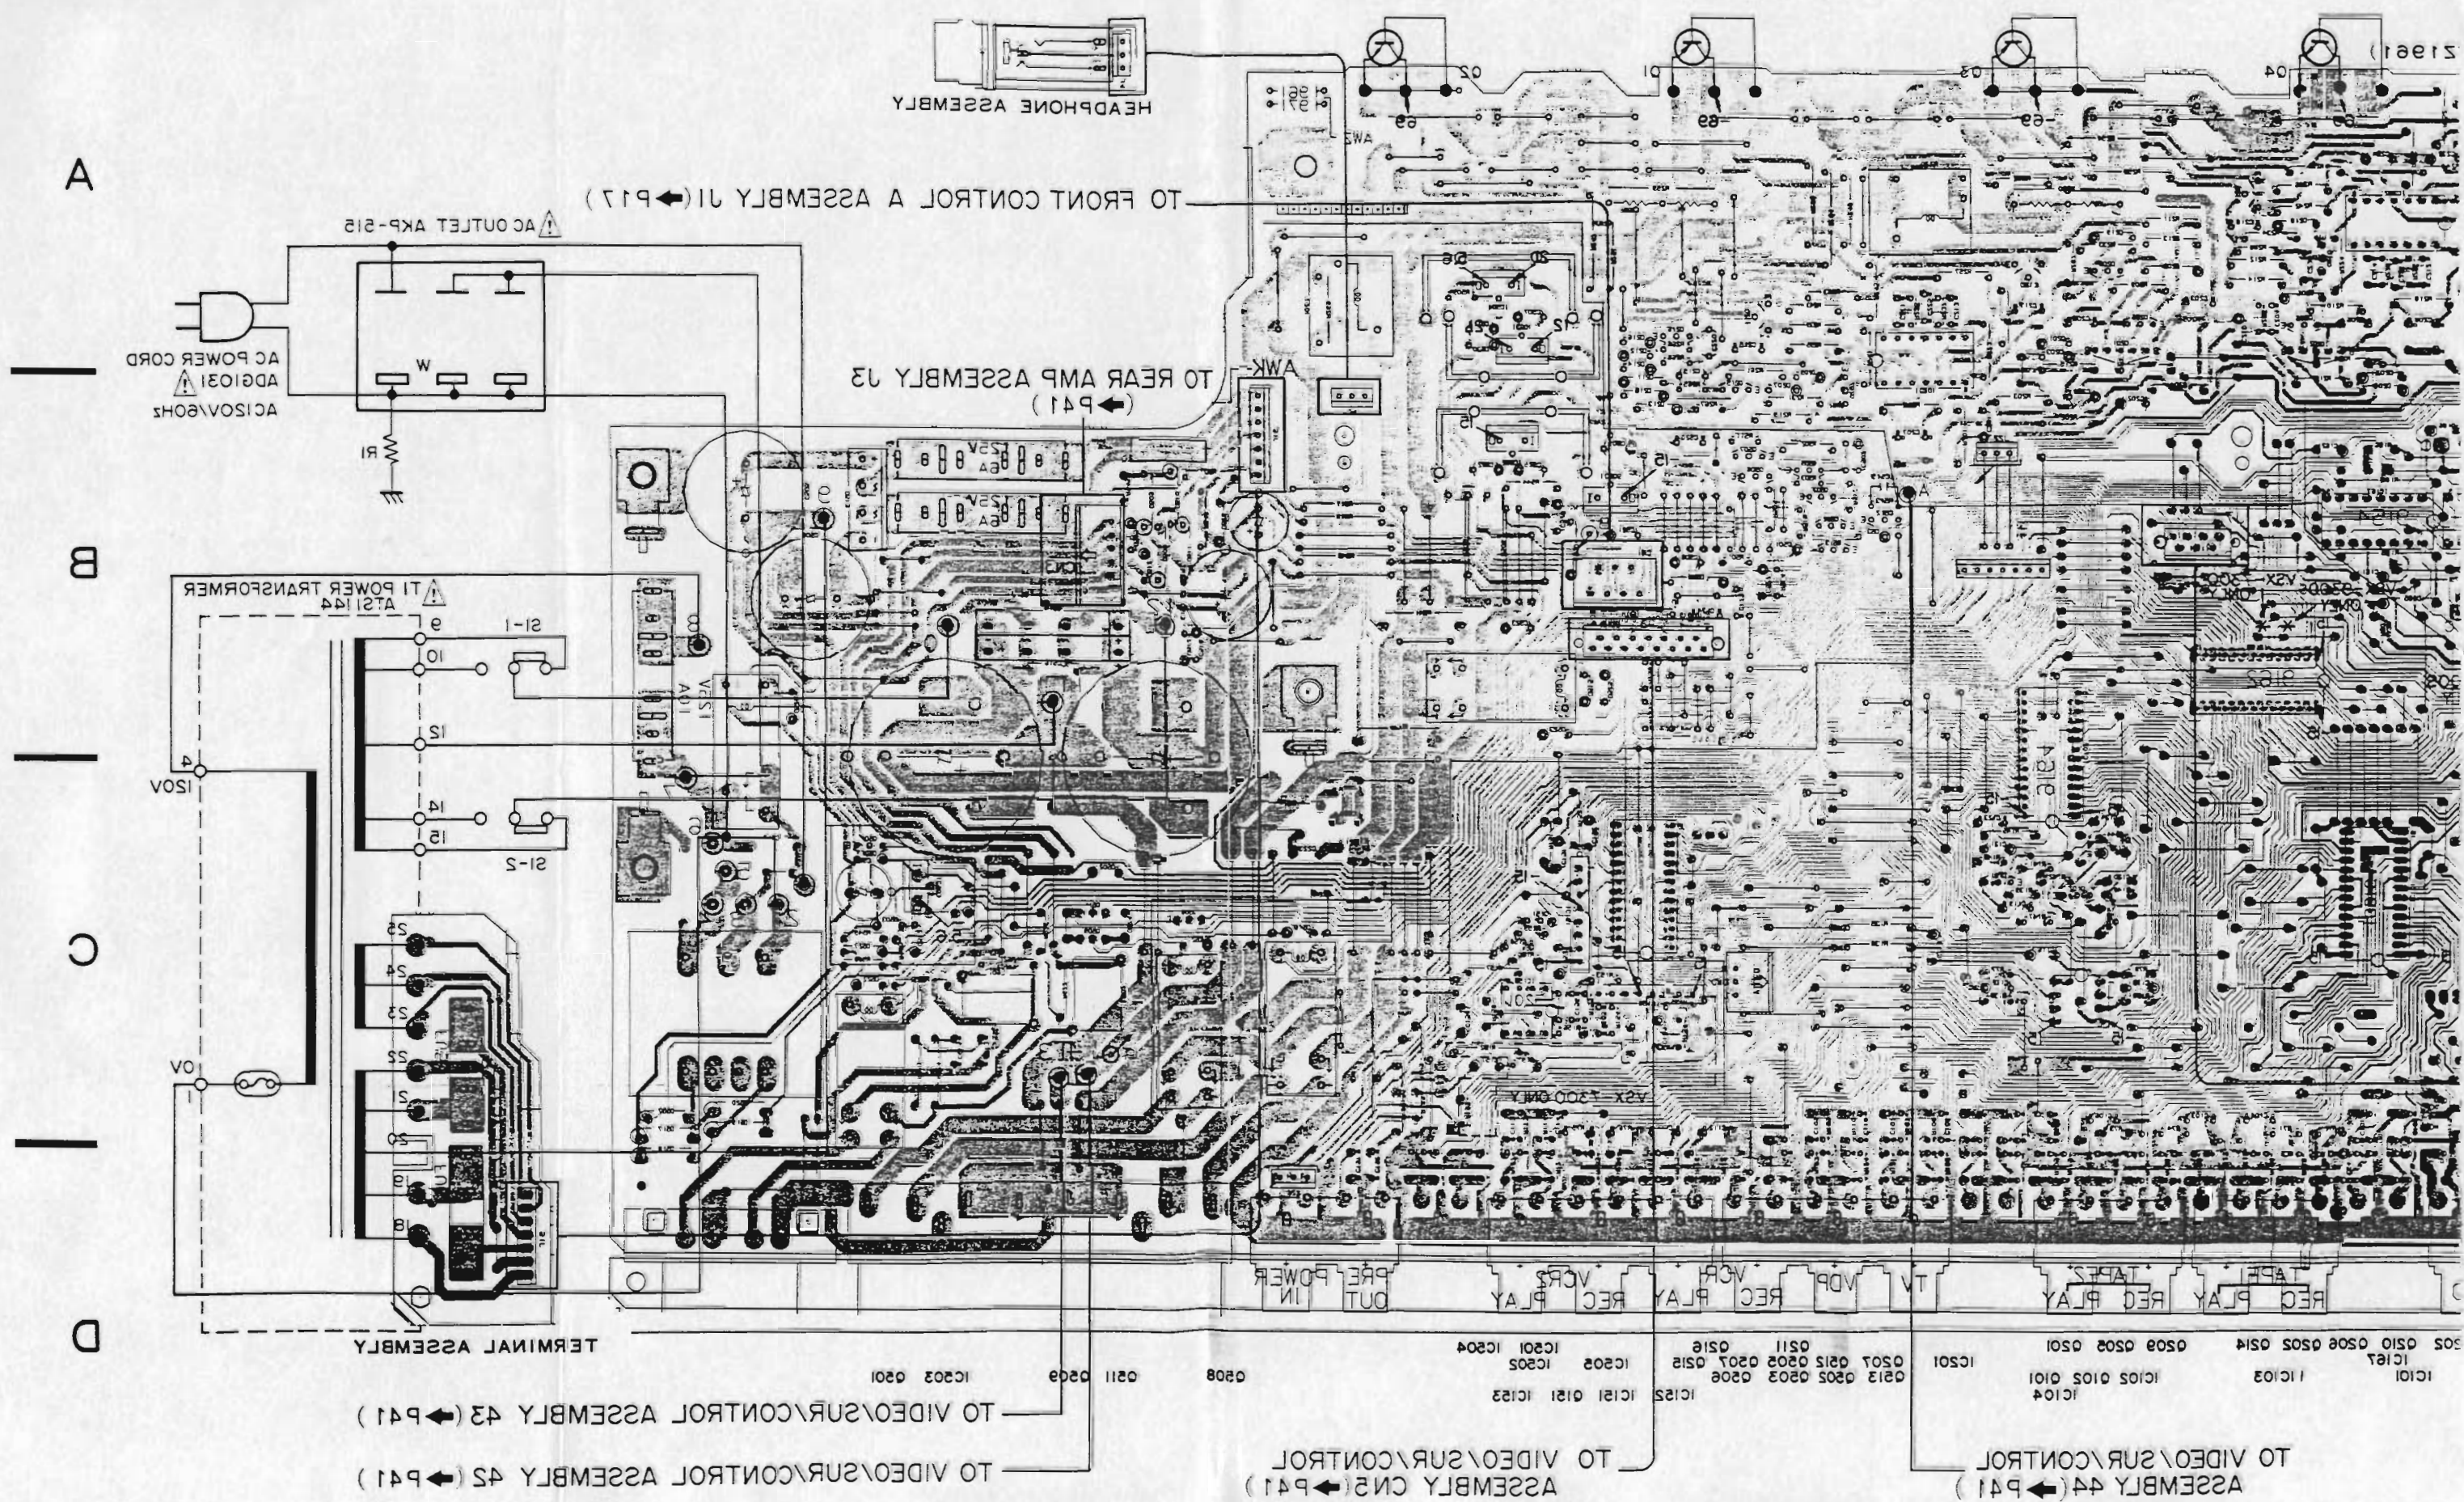

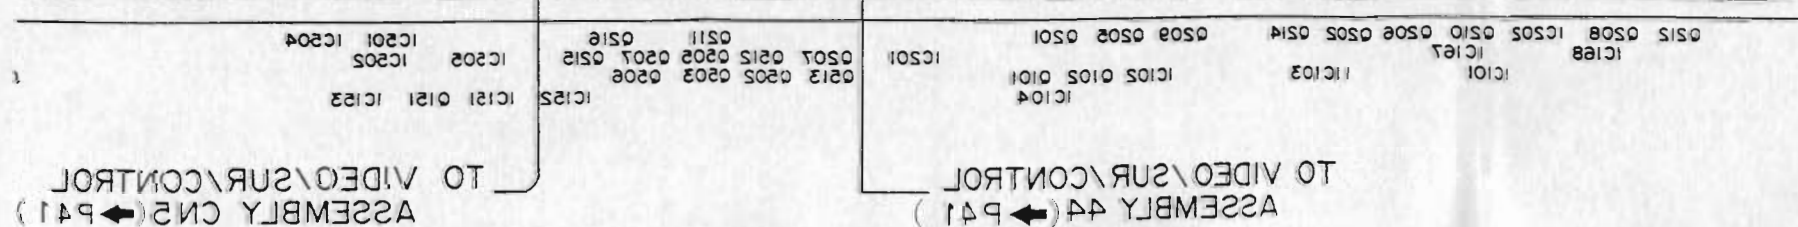


NOTE:
This picture shows the foil side of the printed circuit.

TO VIDEO SURV
CONTROL ASSEMBLY
(CNE ← P41)

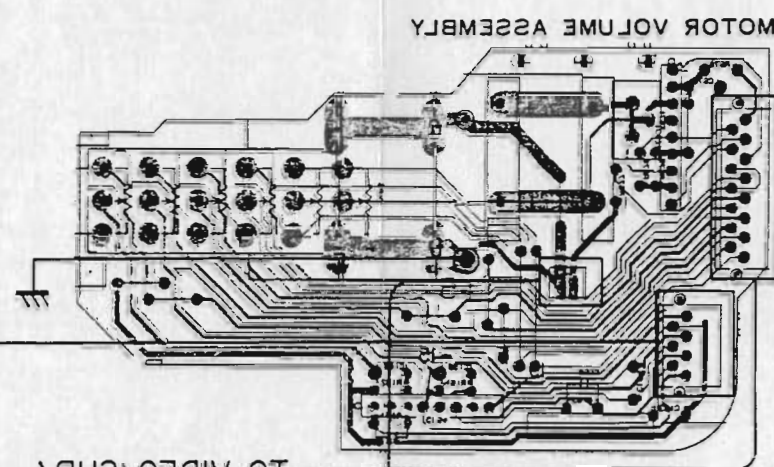

TO VIDEO SURV
CONTROL ASSEMBLY
(CIII) (P41)

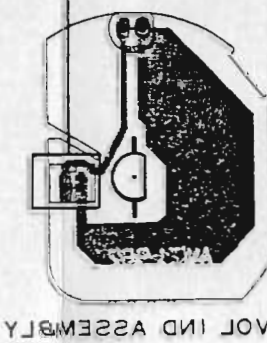


A

B

C

D

NOTE:
This picture shows the foil side of the
printed circuit.

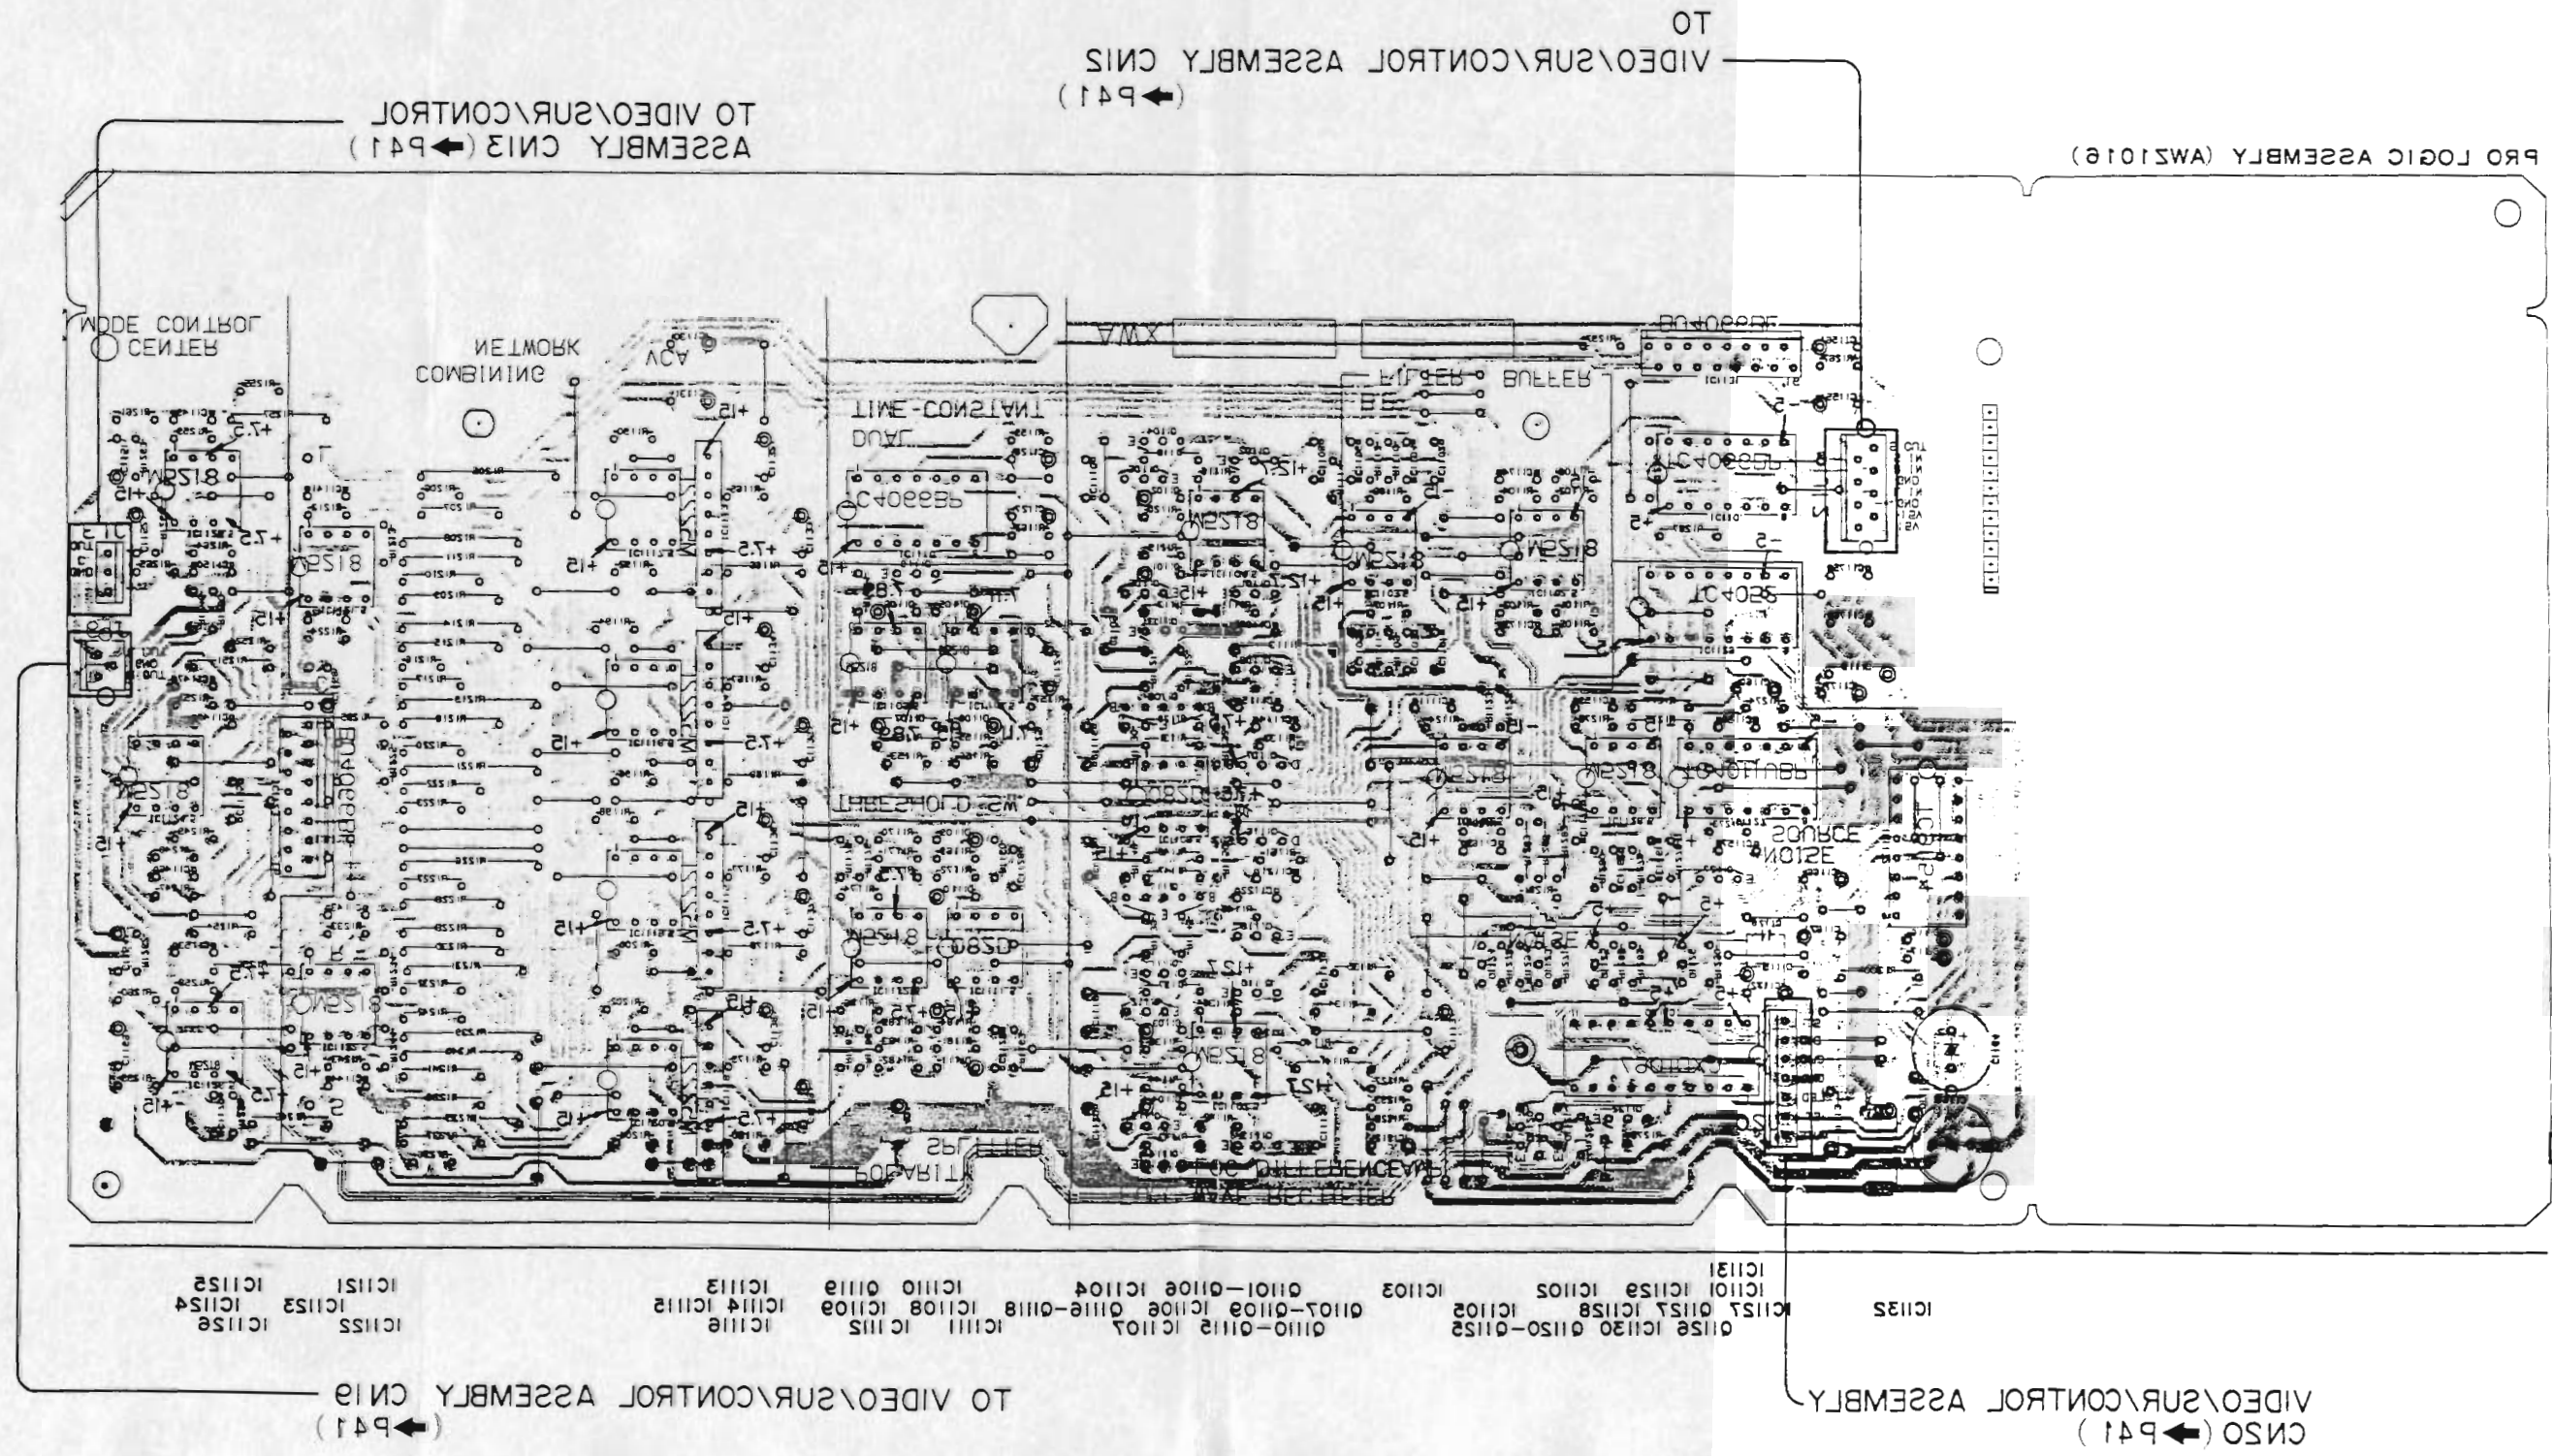

5.4 PRO LOGIC ASSEMBLY VSX-9300S ONLY

NOTE


1. This P.C.B. connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the following Table.

P.C.B. pattern diagram indication	Corresponding part symbol	Part Name
		Transistor
		Radiator type transistor
		Diode
		Resistor
		Capacitor (Polarity)
		Capacitor (Non-polarity)


Others


P.C.B. pattern diagram indication	Part Name
	IC
	Switch
	Relay
	Coil
	Filter
	Variable resistor or Semi-fixed resistor

3. The capacitor terminal marked with @ (double circles) shows negative terminal.
4. The diode terminal marked with @ (double circles) shows cathode side.
5. The transistor terminal to which E is affixed shows the emitter.

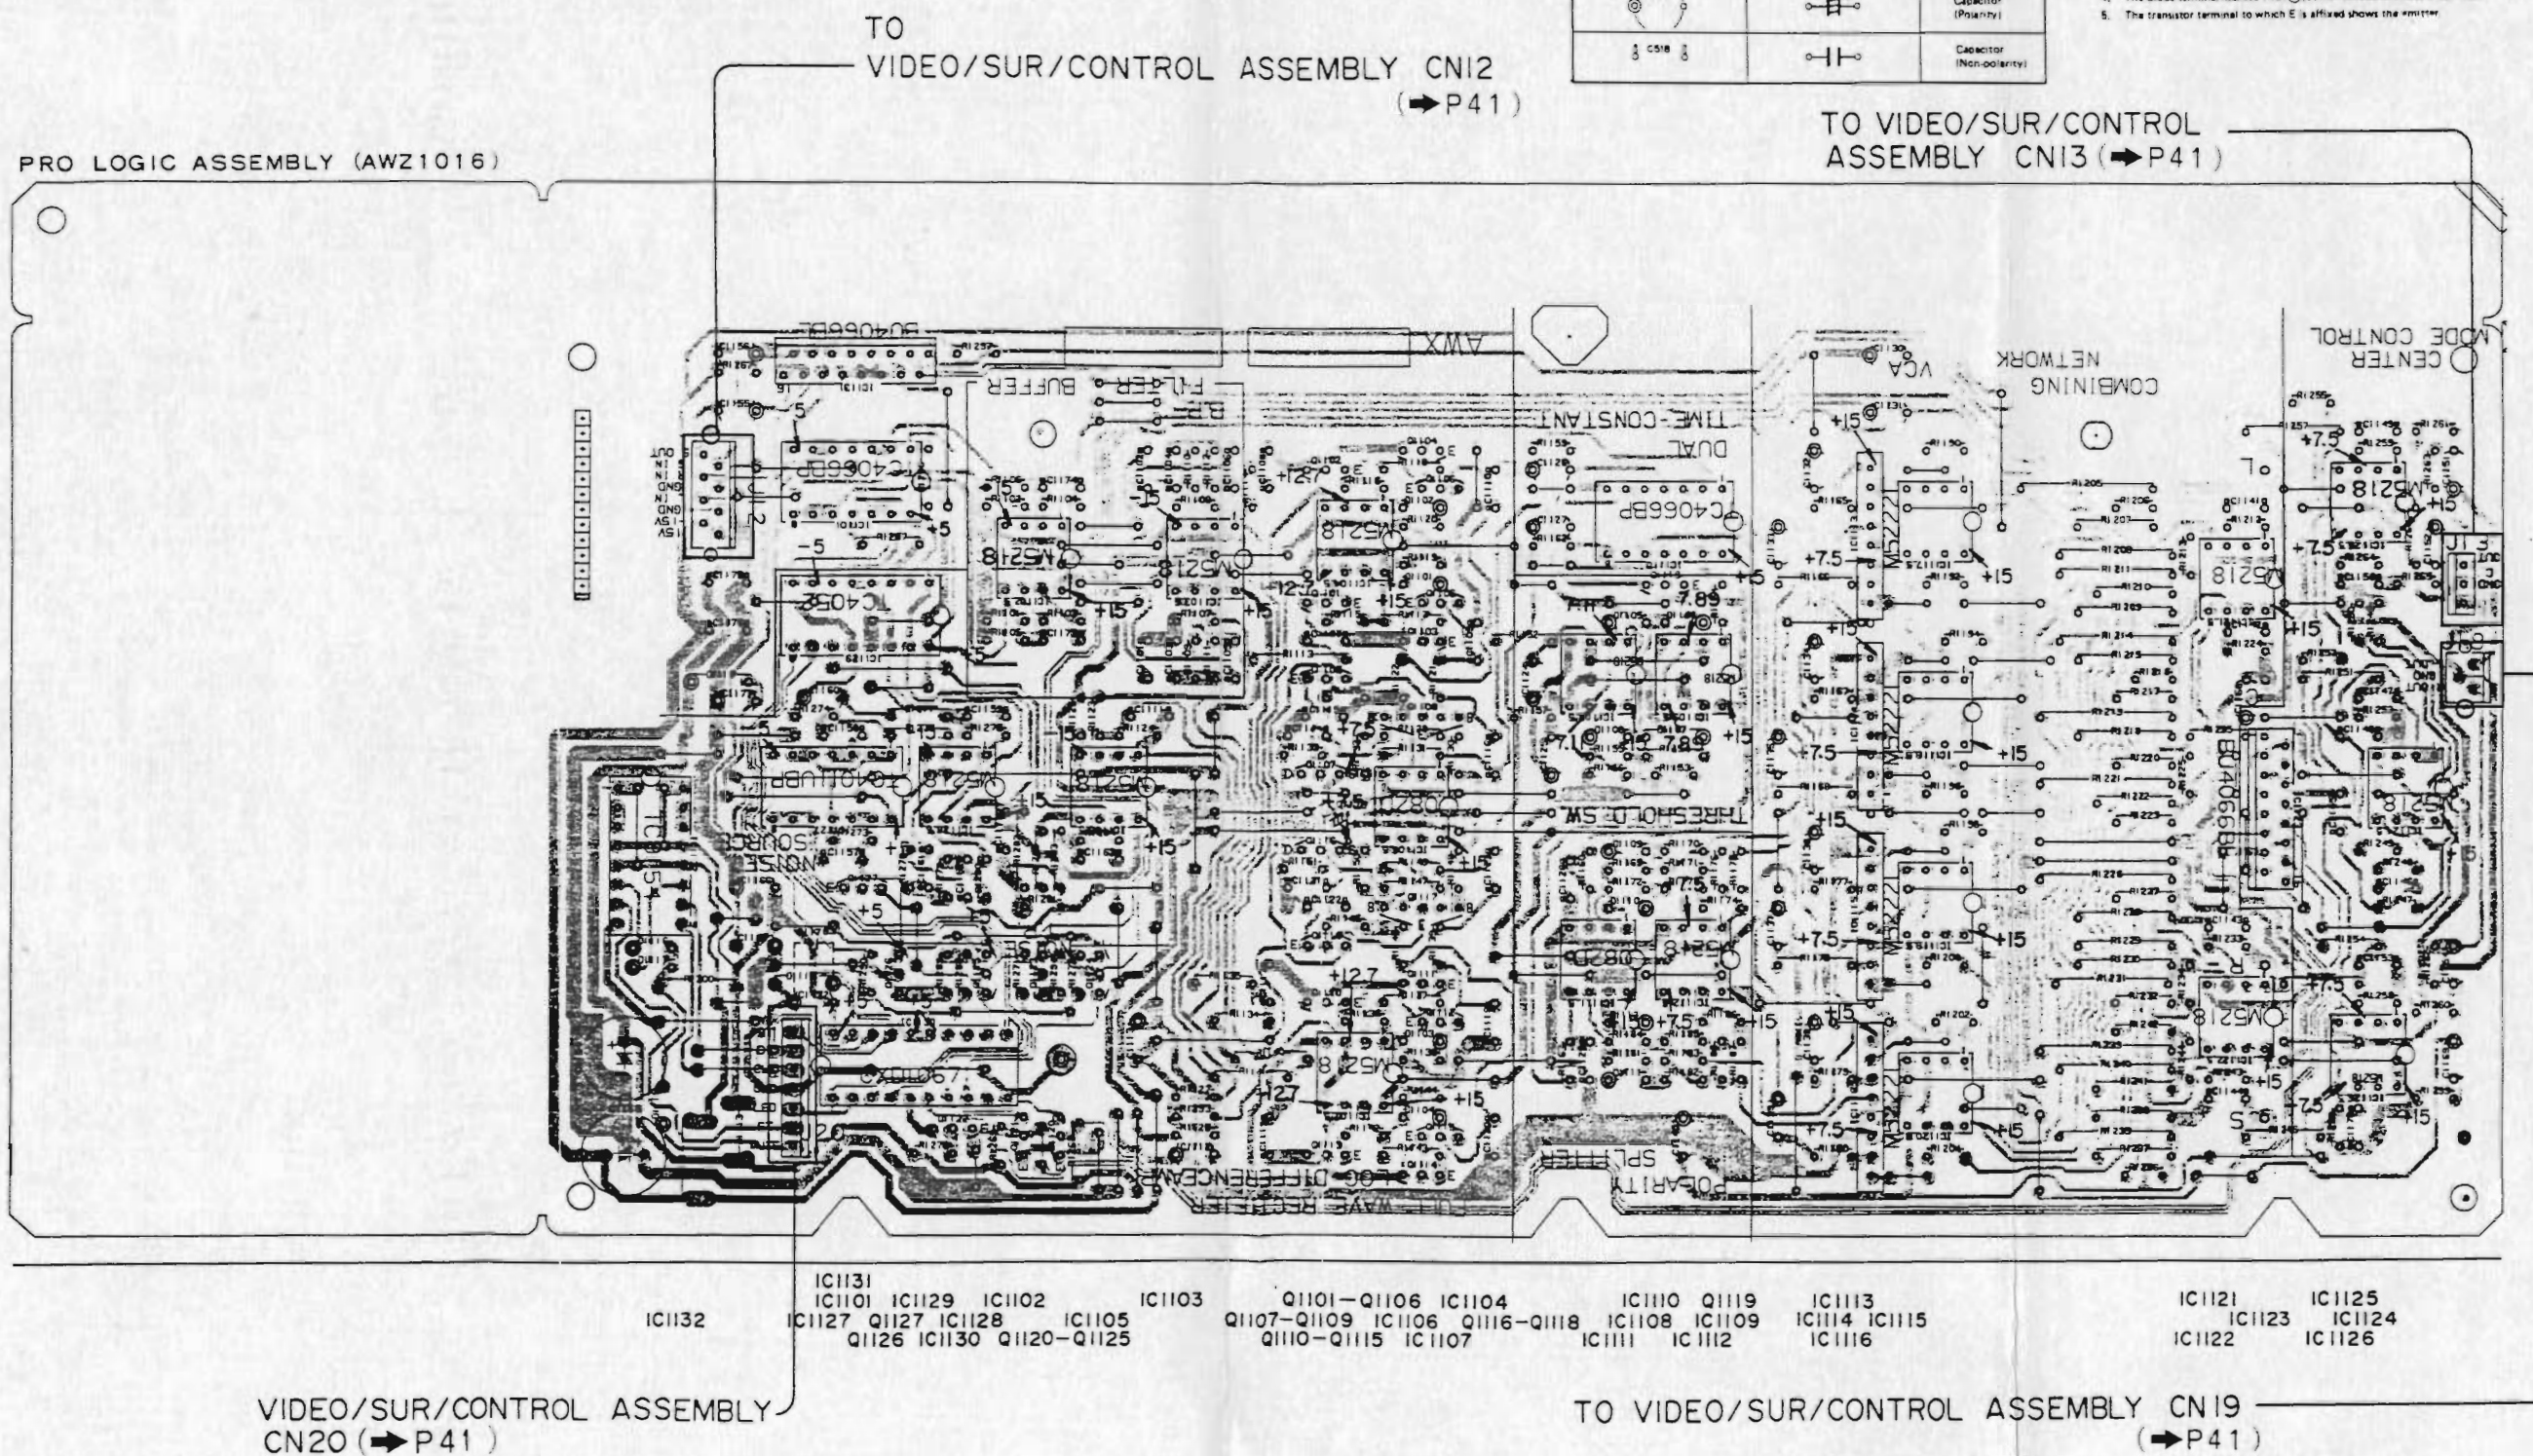

5.4 PRO LOGIC ASSEMBLY VSX-9300S ONLY

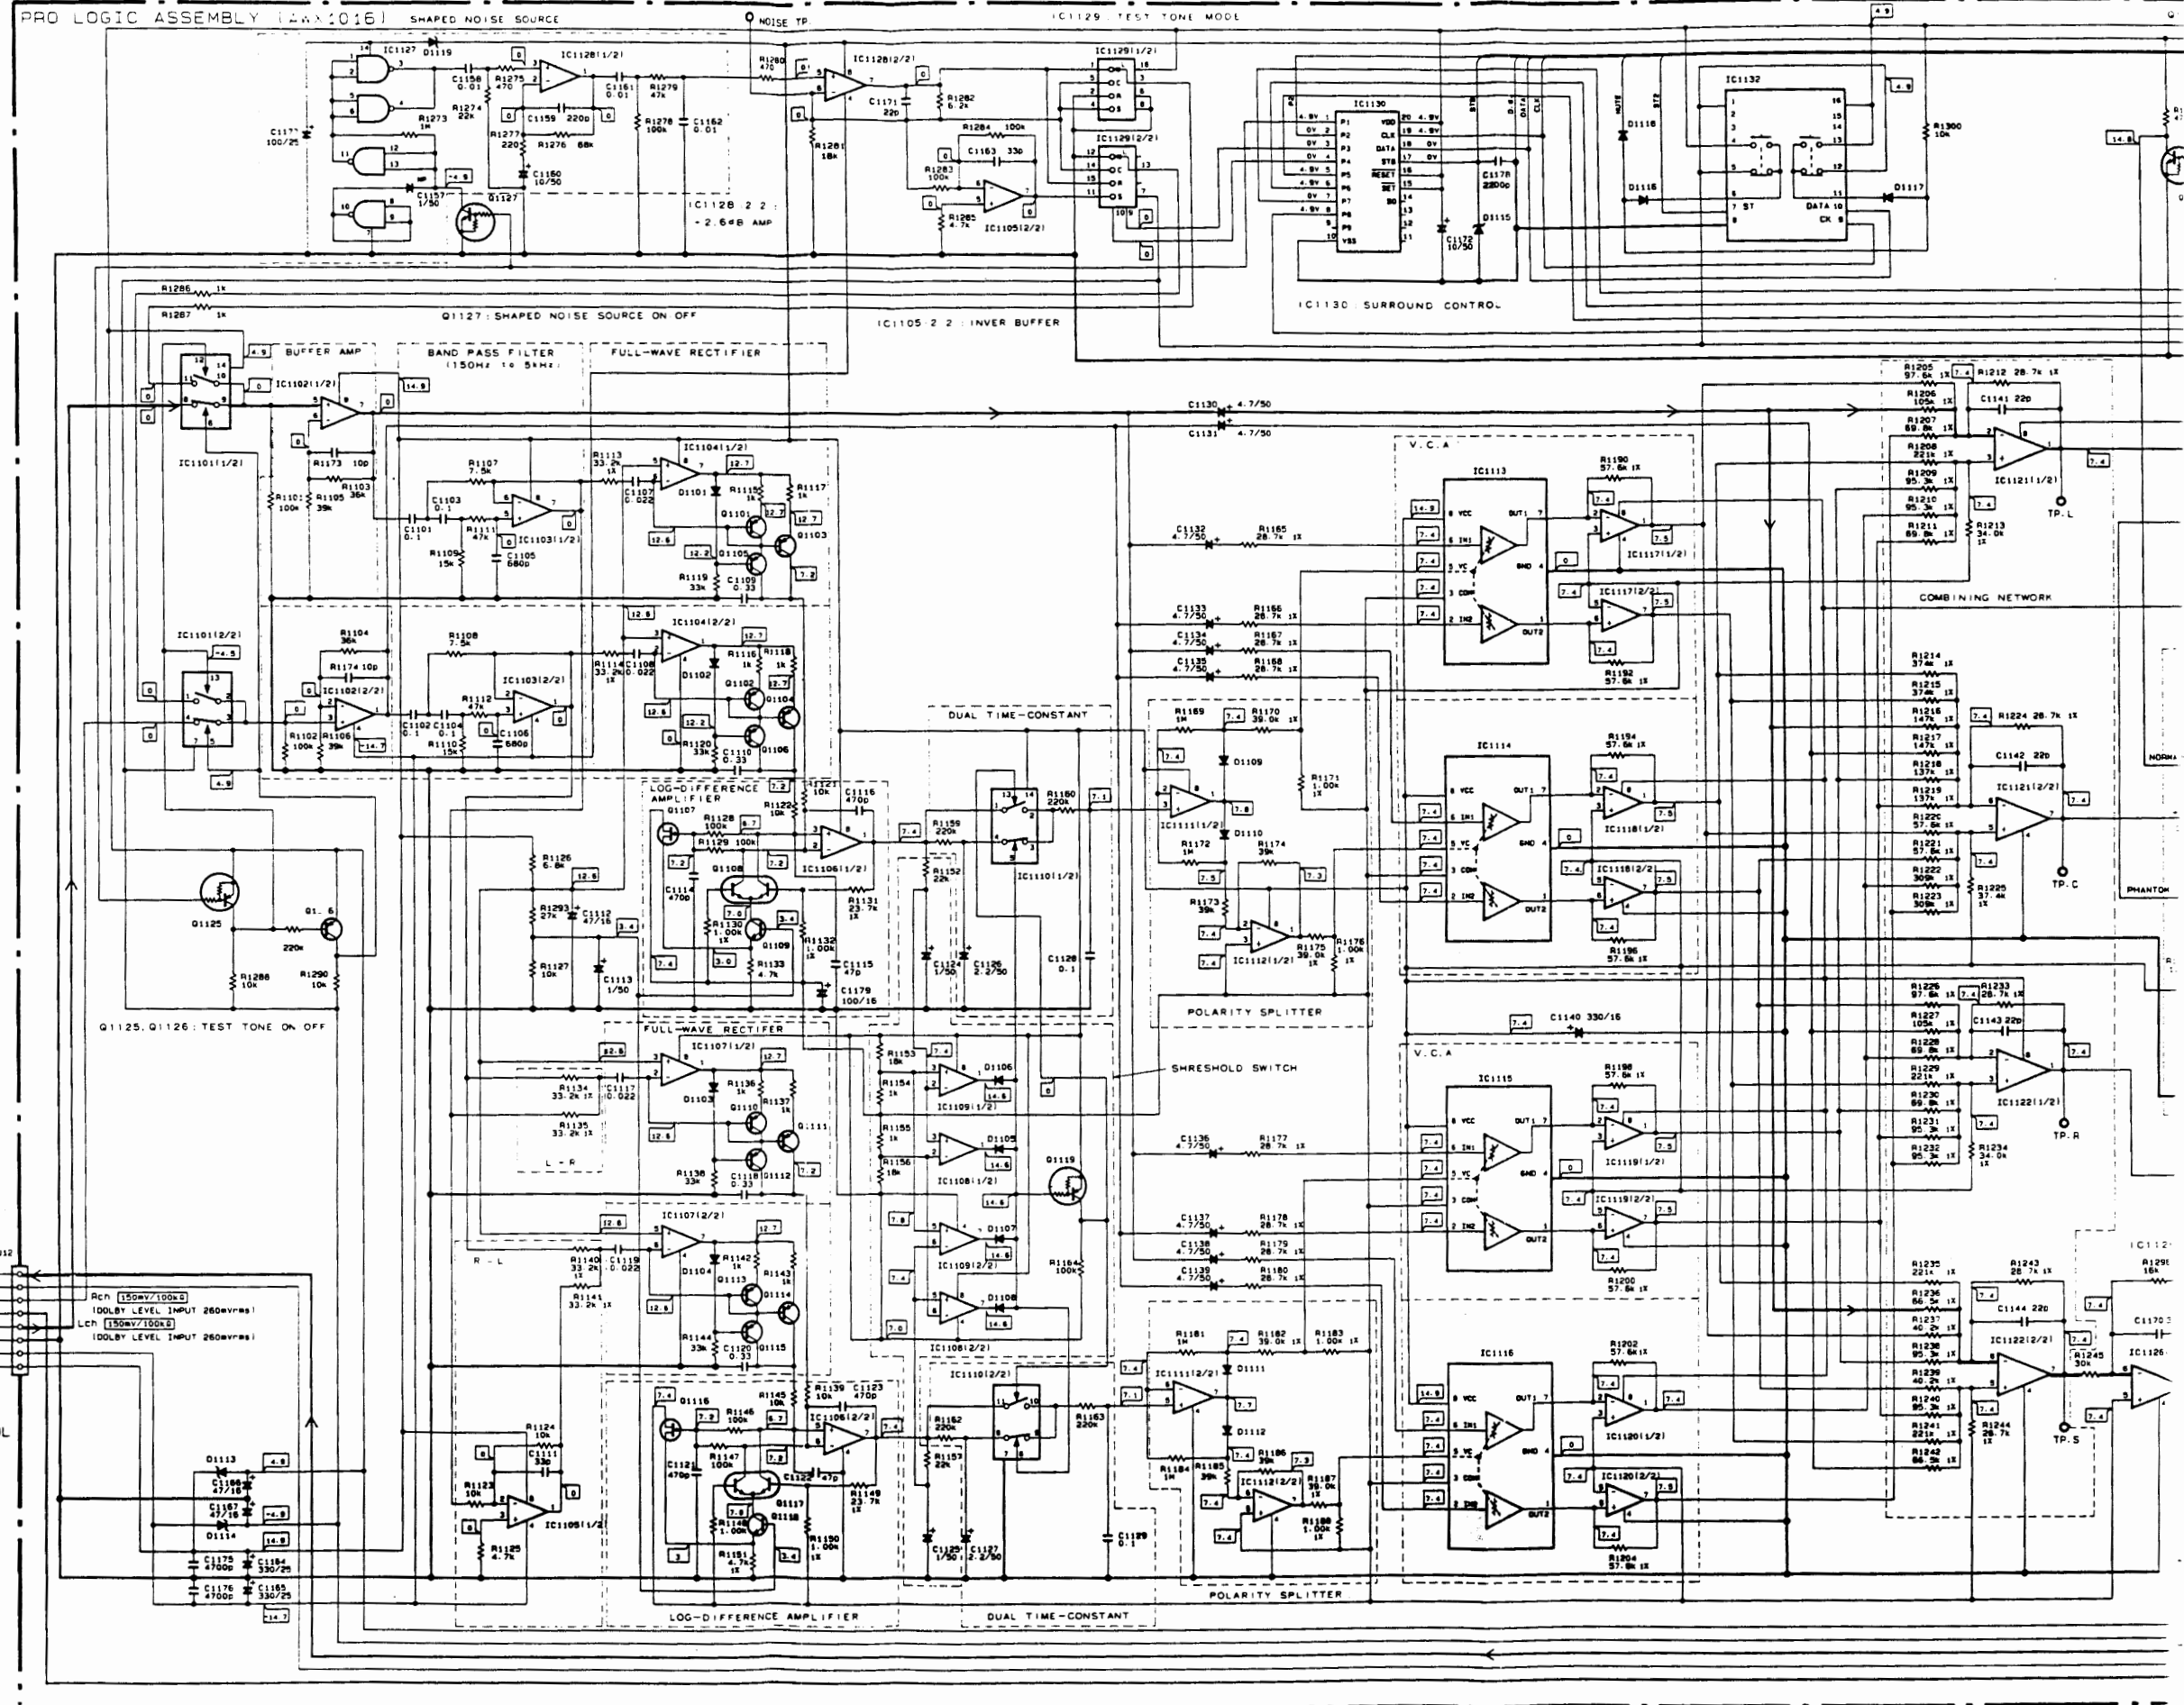

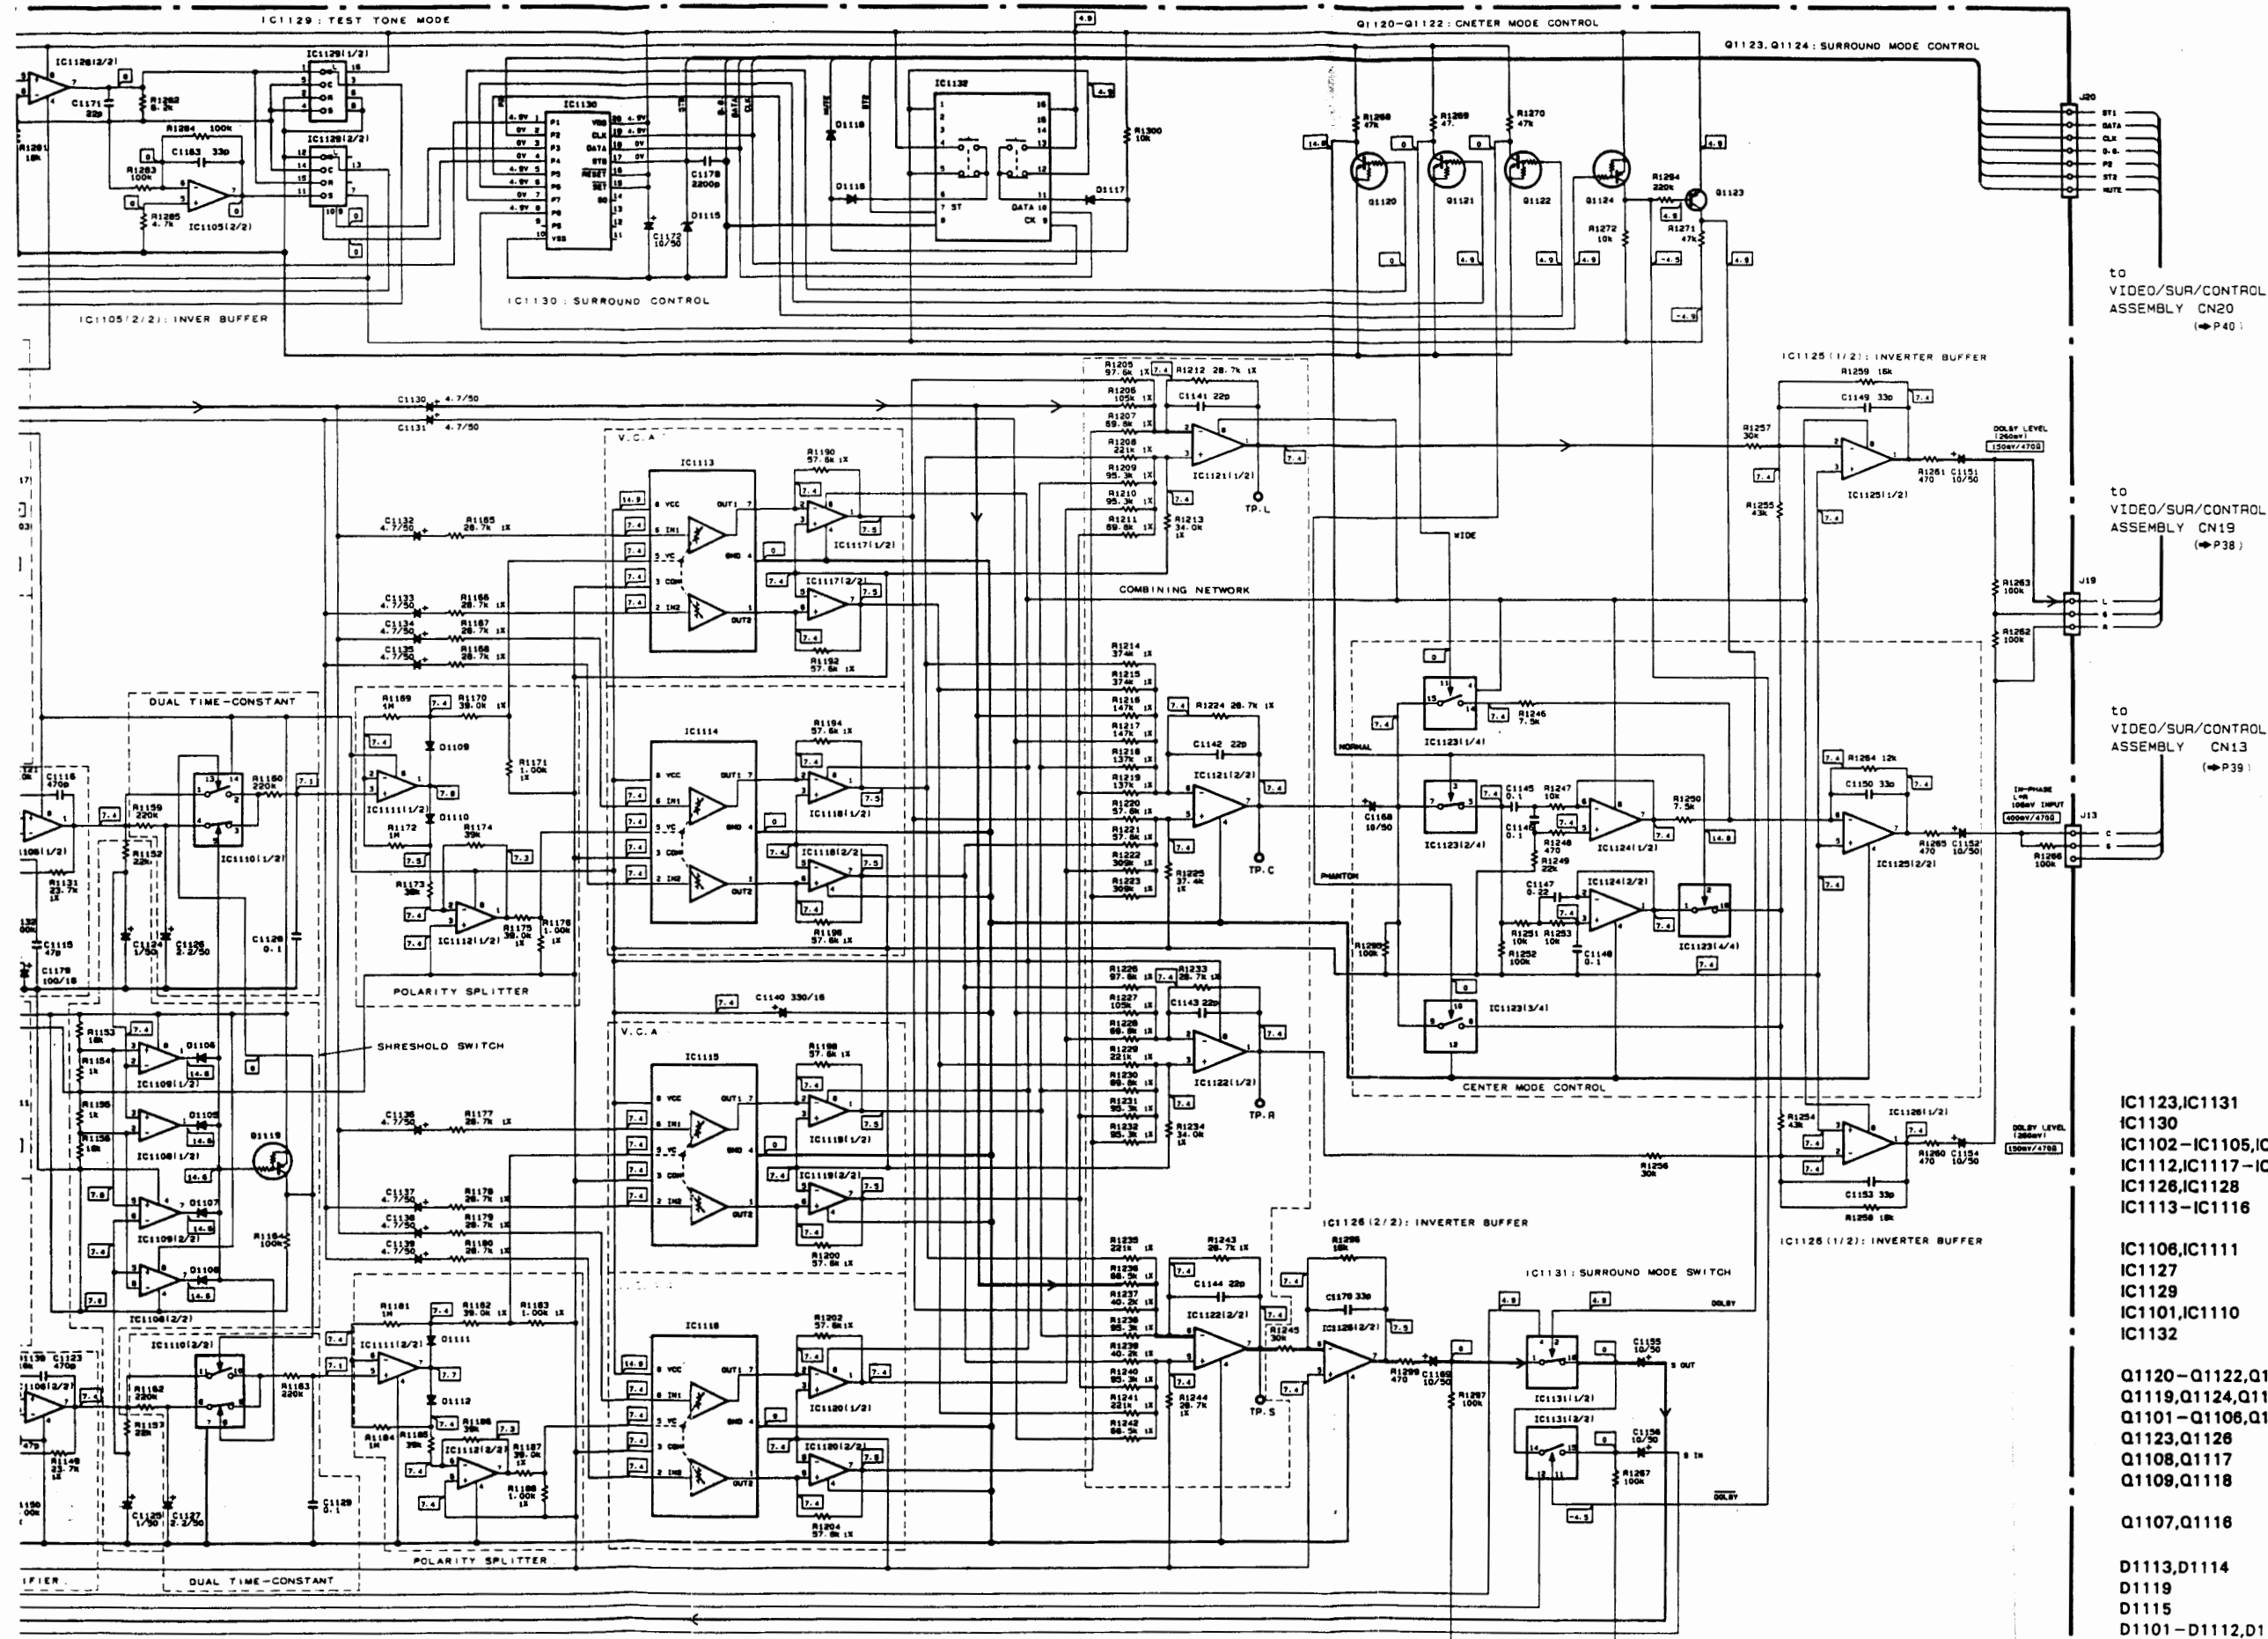

IC1123,IC1131	BU4066BL
IC1130	CXD1067P
IC1102-IC1105,IC1107-IC1109,	M5218PF
IC1112,IC1117-IC1122,IC1124-	
IC1126,IC1128	
IC1113-IC1116	M5222L

IC1106,IC1111	NJM082D
IC1127	TC4011UBP
IC1129	TC4052BP
IC1101,IC1110	TC4066BP
IC1132	TC9154AP

Q1120-Q1122,Q1127	RN1203
Q1119,Q1124,Q1125	RN2203
Q1101-Q1106,Q1110-Q1115,	2SA1048
Q1123,Q1126	
Q1108,Q1117	2SC2259
Q1109,Q1118	2SC2458

Q1107,Q1116 2SJ74

D1113,D1114	RD10ESB2
D1119	RD5.1ESB
D1115	RD5.6ESB
D1101-D1112,D1116-D1118	1SS252

VIDEO/SURROUND/CONT AND REAR AMP ASSEMBLY

TO PRO LOGIC ASSEMBLY J19
(→P33)

TO PRO LOGIC ASSEMBLY J12
(→P33)

VIDEO/ SUR/ CONTROL ASSEMBLY (AWZ1965)

TO
AF, HEADPHONE
MOTOR-VOL
TERMINAL
ASSEMBLIES (A)
(→P25)

FRONT CONTROL A
ASSEMBLY J9
(→P17)

TO
FRONT CONTROL A
ASSEMBLY J10
(→P17)

TO AF ASSEMBLY
J5
(→P25)


TO AF ASSEMBLY J3
(→P25)

NOTE

1. This P.C.B connection diagram
2. The parts which have been n

with the corresponding wiring

P.C.B. pattern diagram indication

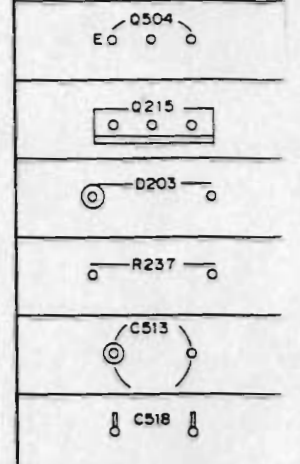


TO
AF A

TO TUN

TO AF ASSEMBLY J4
(→P25)

REAR AMP ASSEMBLY

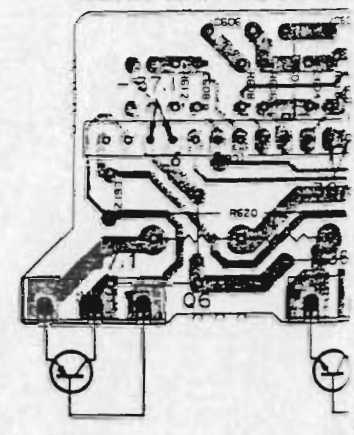

Q341 IC341 IC308 Q309 Q301-Q308 Q430 IC430 Q431 IC421 Q421
Q346 Q342-Q344 Q310 IC301-IC307 IC309 Q424-Q429 IC427 IC422 IC423 Q422
IC371 Q371-Q376 Q311 IC391 Q391 Q313-Q316 IC425 IC426 Q425 IC429 IC424 IC402 IC401
Q394 Q393 IC428 IC403


VR421 VR422

DELAY

Q341 IC341 IC308 Q309 Q301-Q308 Q430 IC430 Q431 IC421 Q421
Q346 Q342-Q344 Q310 IC301-IC307 IC309 Q424-Q429 IC427 IC422 IC423 Q422
IC371 Q371-Q376 Q311 IC391 Q391 Q313-Q316 IC425 IC426 Q425 IC429 IC424 IC402 IC401
Q394 Q393 IC428 IC403

3 LOGIC ASSEMBLY J19
(→P33)

ASSEMBLY J12
(➡ P33)








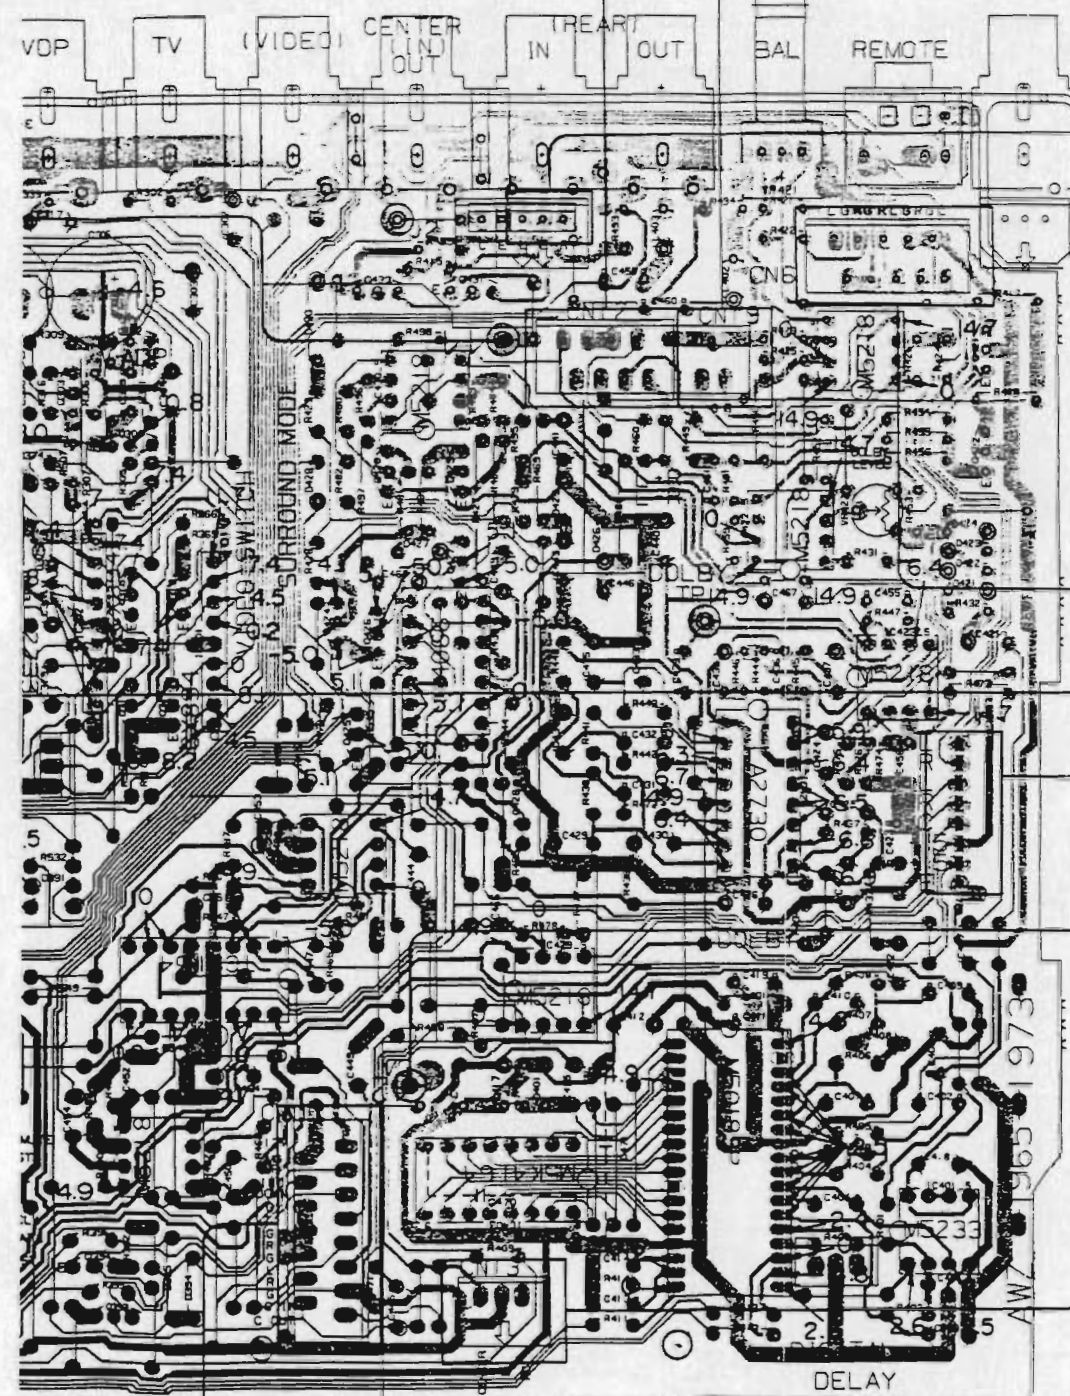


313-Q316	Q430 IC430 Q431
IC425	Q424-Q429 IC427
Q394 Q393	IC426 Q425 IC429
	IC428 IC403

VR421	VR422
IC421	Q421
IC422	IC423
IC424	Q422
IC402	IC401

NOTE

        1. This P.C.B connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the following Table.

P.C.B. pattern diagram indication	Corresponding part symbol	Part Name
		Transistor
		Radiator type transistor
		Diode
		Resistor
		Capacitor (Polarity)
		Capacitor (Non-polarity)

Others

P.C.B. pattern diagram indication	Part Name
IC	IC
S	Switch
RY	Relay
L	Coil
F	Filter
VR	Variable resistor or Semi-fixed resistor

3. The capacitor terminal marked with $\odot$ (double circles) shows negative terminal.
4. The diode terminal marked with $\odot$ (double circles) shows cathode side.
5. The transistor terminal to which E is affixed shows the emitter.


TO
AF ASSEMBLY J6 (➡ P25)

TO TUNER ASSEMBLY CN15 (→P51)

- TO METER AMP ASSEMBLY
C-2 (→ P17)

- TO AF ASSEMBLY 14
(➡P25)

— TO AF ASSEMBLY
CN3
(→ P25)

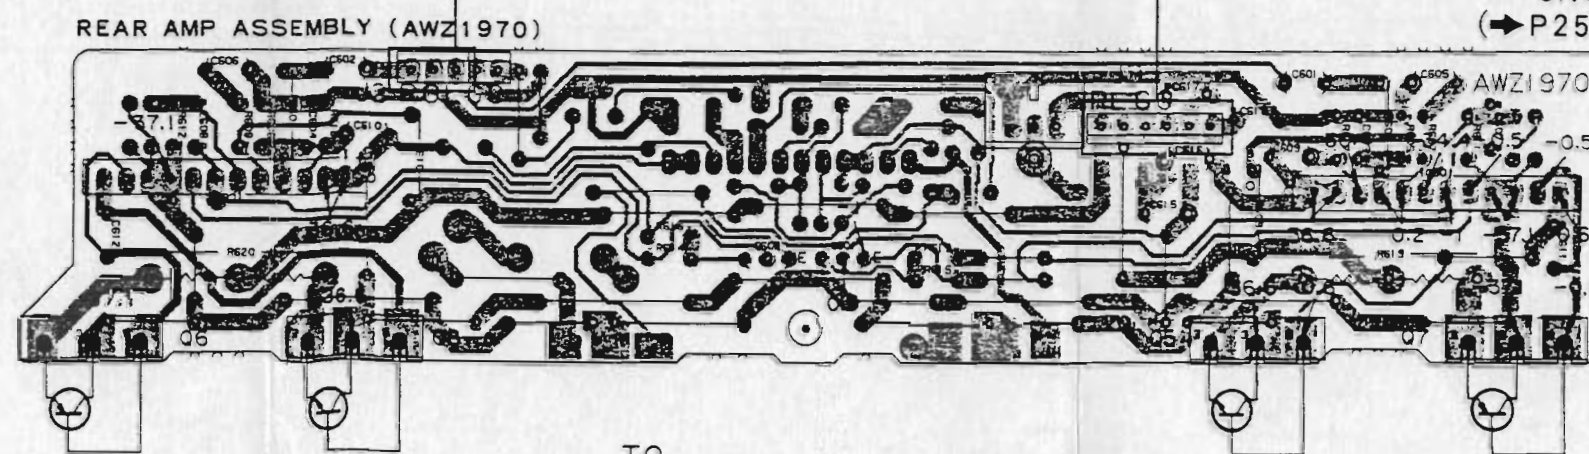

TO
PRO LOGIC ASSEMBLY J13 (→ P33)

- TO MOTOR-VOL ASSEMBLY J11 (→ P25)

NOTE:


This picture shows the foil side of the printed circuit.

A

B

C

D

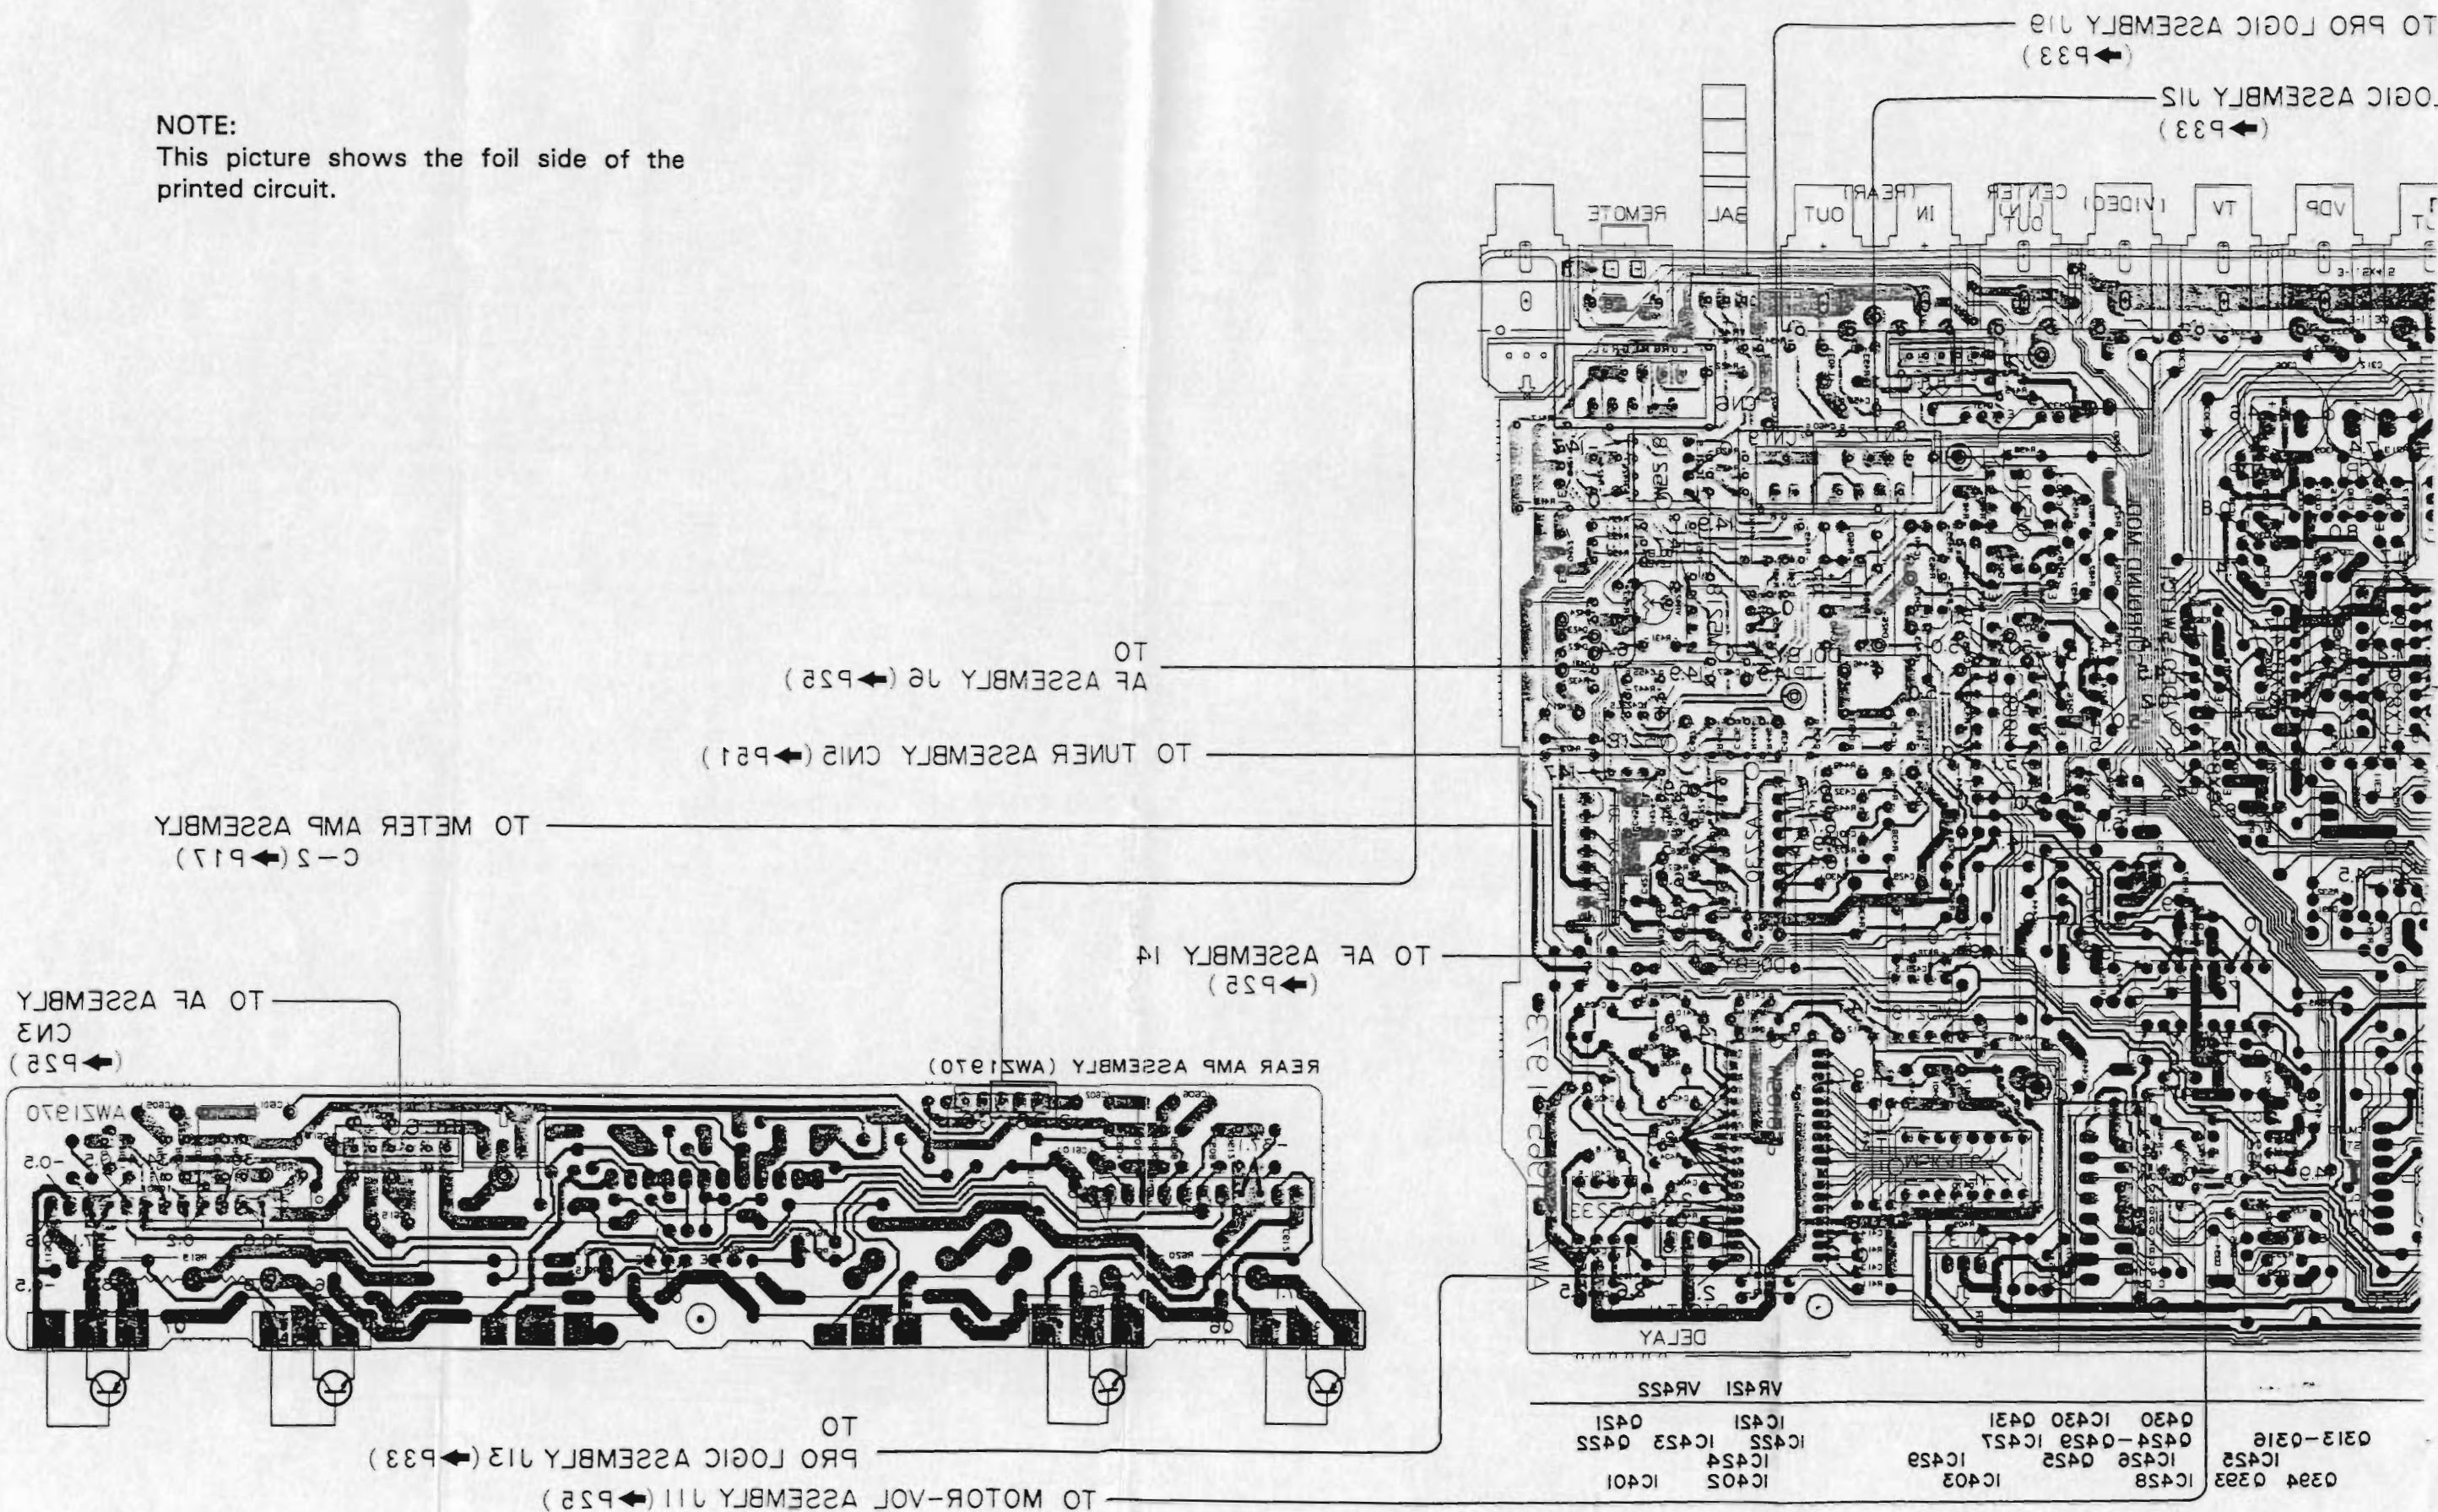

VIDEO/SUR/CONTROL ASSEMBLY (AWZ1965) 2/2




(→ P40)


Q302, Q303, Q306, Q307, Q311, 2SC2458
Q341 - Q344, Q346, Q371, Q372,
Q374, Q376

5.6 TUNER ASSEMBLY

TUNER ASSEMBLY (AWZ1966)

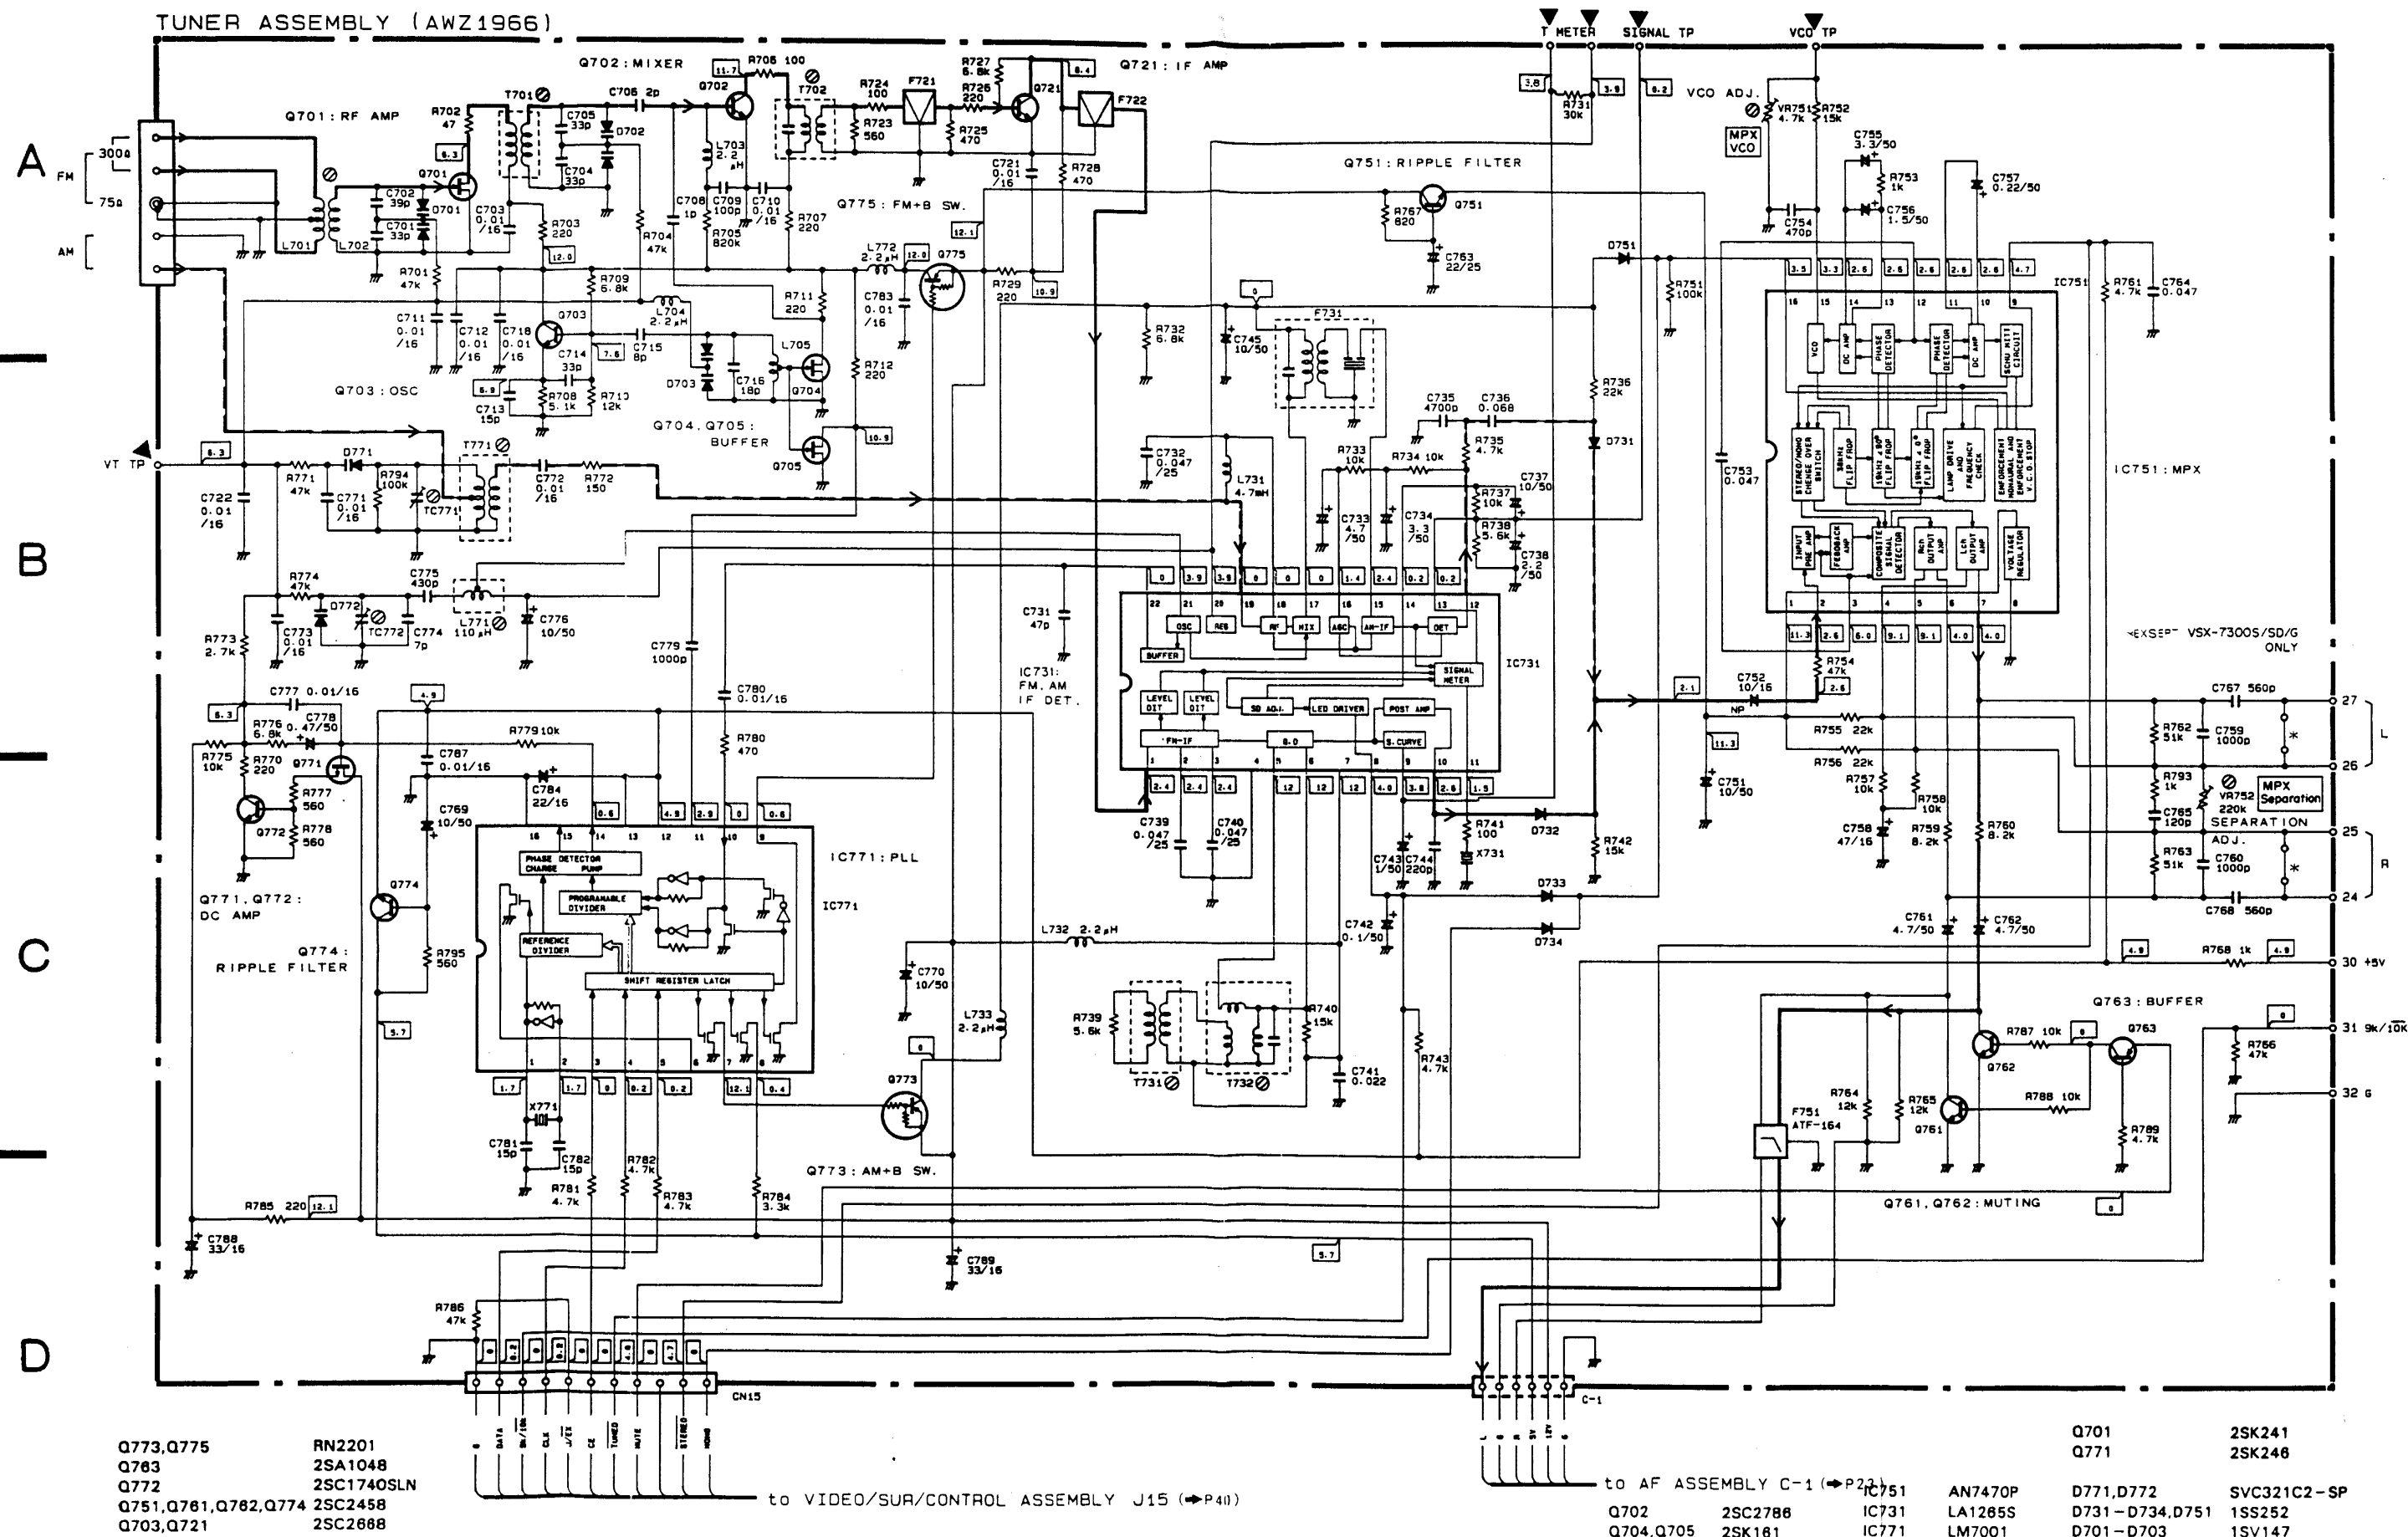

TUNER ASSEMBLY

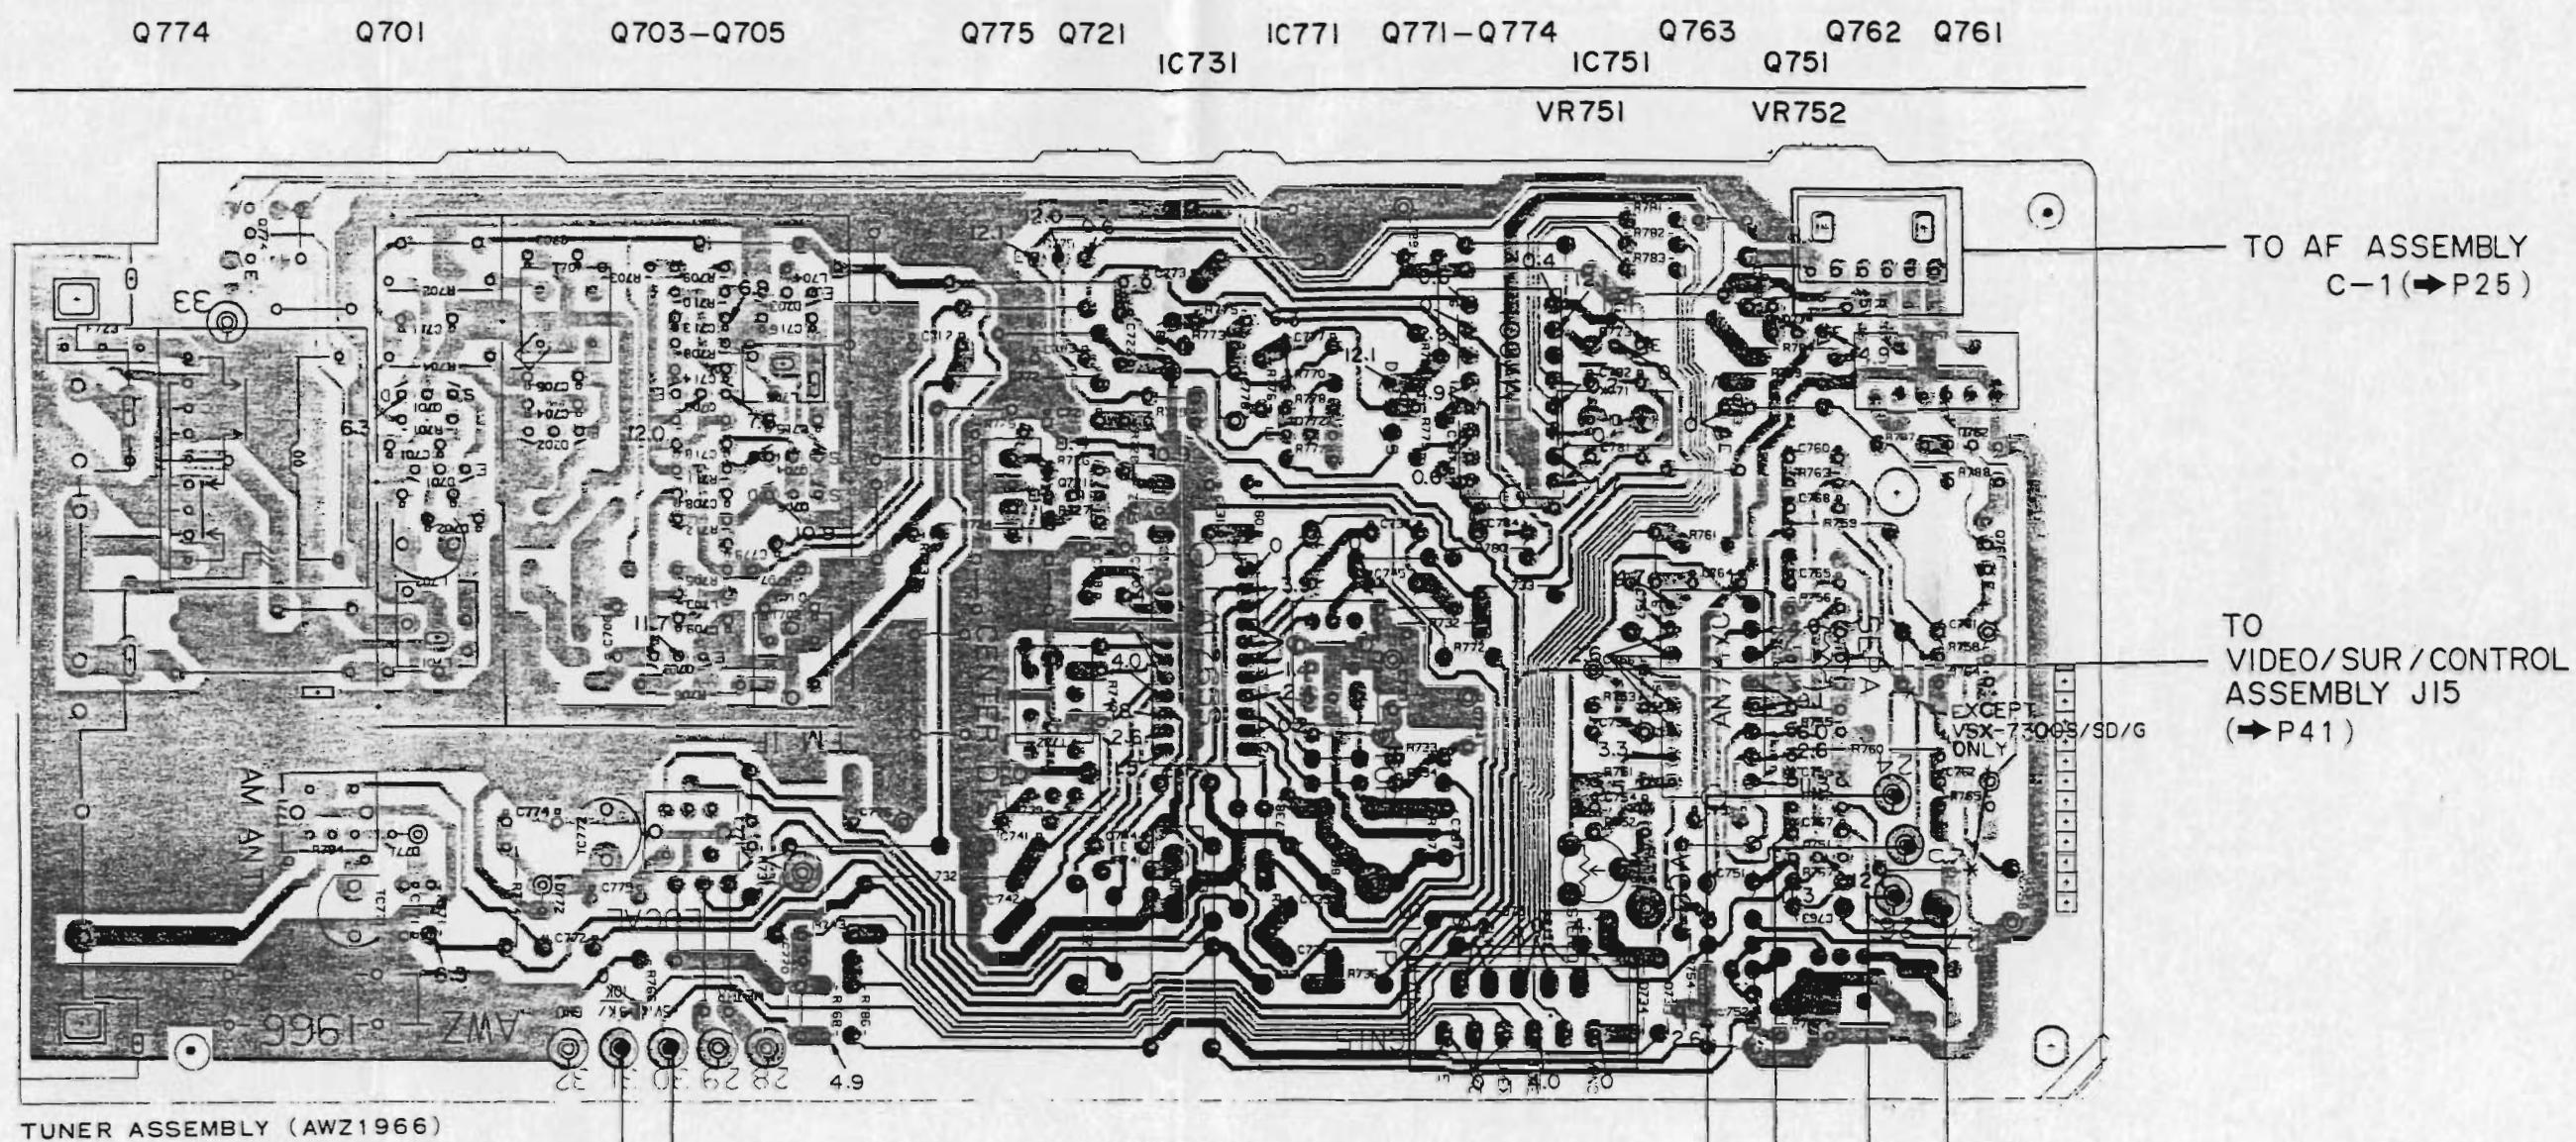

NOTE


1. This P.C.B. connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the following Table.

P.C.B. pattern diagram indication	Corresponding part symbol	Part Name
		Transistor
		Resistor type transistor
		Diode
		Resistor
		Capacitor (Polarity)
		Capacitor (Non-polarity)

Others

P.C.B. pattern diagram indication	Part Name
IC	IC
S	Switch
RY	Relay
L	Coil
F	Filter
VR	Variable resistor or Semi-fixed resistor

3. The transistor terminal marked with @ (double circles) shows negative terminal.
4. The diode terminal marked with @ (double circles) shows cathode side.
5. The transistor terminal to which E is affixed shows the emitter.

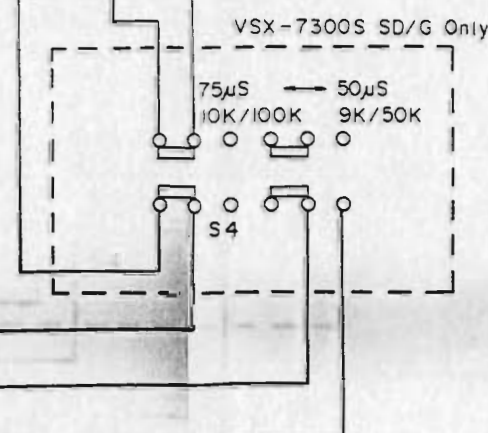

0754	0701	0503-0505	0525 0521	10231	10271	0571-0574	0569	0570	0561
			VR751	VR752					

TO
VIDEO SURVEILLANCE CONTROL
ASSEMBLY 715
(P41) ←

TUNER ASSEMBLY (AW21966)

NOTE:
This picture shows the foil side of the
printed circuit.

V2X-73002 2D\G Only

2402 — 2425
KOK\100K KOK\250K


42

External Appearance of Transistors and ICs

2SA1263N




2SA1302

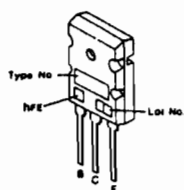


M5218PF
M5220P
M51848P
M5233P



 
M5222L
M5220L
M5218LF



NJM082D

 

TC4052BP
TC9154AP
AN7470P
TC9184P
TC4011UBP

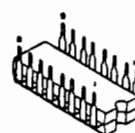


2SC3180N




BU4066BL
TC4066BP
PA0016
LA2730



 
RN1203
RN2203
RN1201
RN2201



2SA1048
2SC2458

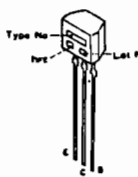


2SC2259
2SA979

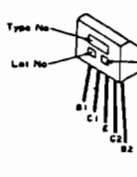


M5201P



 
TC9162N
TC9164N
PDG021




NJM79M15A

 


CXD1067
CXD1067P

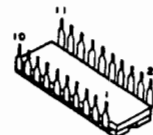


μ PC78M05H
 μ PC78M15H

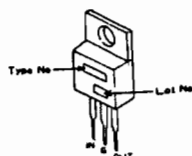


2SA1145P

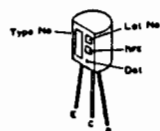


2SA968
2SC2238

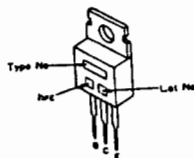


2SC2240
2SC2705P
2SC2878

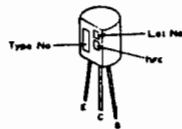

 
CX-894
TA7291S
NJM2209S
NJM2233AS
NJM2235S




M5K4164AP

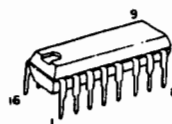


μ PC78L05

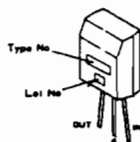


LA1265S

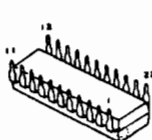


2SC2668

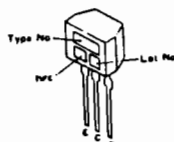


2SC2786

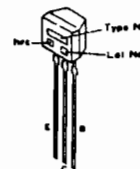


2SC1740SLN

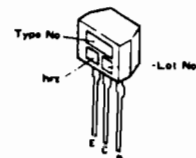


2SK161
2SK241

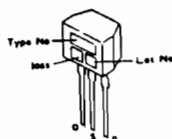


2SK246

 

M50199P

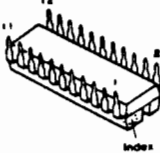


2SC2181

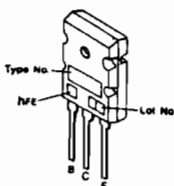


TC9154AP




2SC3281

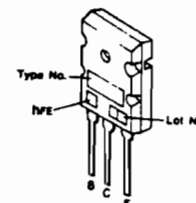


2SJ74

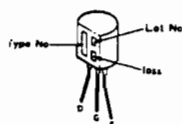

PDG020

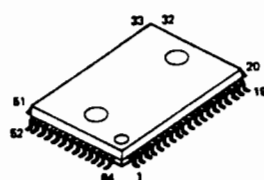

μ PC1270H

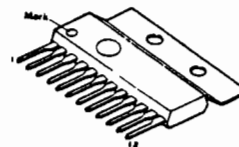

6. ELECTRICAL PARTS LIST

NOTES:

- Parts without part number cannot be supplied.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your parts Stock Control, the fast moving items are indicated with the marks ** and *.
- ** GENERALLY MOVES FASTER THAN *
- This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

560Ω	56 × 10 ¹	561.....	RD14PS	□	□	J
47kΩ	47 × 10 ³	473.....	RD14PS	□	□	J
0.5Ω	0R5.....		RN2H	□	□	K
1Ω	010.....		RS1P	□	□	K

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62kΩ	562 × 10 ¹	5621.....	RN14SR	□	□	□	F
--------	-----------------------	-----------	--------	---	---	---	---

Miscellaneous Parts

P.C. BOARD ASSEMBLIES

Mark	Symbol & Description	Part No.
	Pro logic assembly	AWX1016
	AF assembly	AWZ1961
	VIDEO/SUR/CONTROL assembly	AWZ1965
	Tuner assembly	AWZ1966
	Front control A assembly	AWZ1967
	Headphone assembly	
	Motor - volume assembly	
	Terminal assembly	
	Front control B assembly	
	Meter amp assembly	
	Rear amp assembly	
	Vol IND assembly	

OTHERS

Mark	Symbol & Description	Part No.
▲★★	Q7, Q8 transistor	2SA1263N
▲★★	Q3, Q4 transistor	2SA1302
▲★★	Q5, Q6 transistor	2SC3180N
▲★★	Q1, Q2 transistor	2SC3281
▲★	T1 Power transformer (AC120V)	ATS1144
▲	AC socket (3P OUTLET)	AKP-515 (AKP-504)
▲★★	S1 Speaker impedance selector	AKX1004
▲★★	FU3, FU4 Fuse (6A/125V)	AEK-109
▲★★	FU1 Fuse (10A/125V)	AEK-310
▲★★	FU5, FU6 Fuse (1.25A/125V)	AEK-120
▲	AC power cord	ADG1031 (ADG1001)
▲	R1 2.2MΩ	ACN-209

Pro logic assembly (AWX1016)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★★	IC1123, IC1131	8U4066BL
★★	IC1130	CXD1067P
★★	IC1102 - IC1105, IC1107 - IC1109, IC1112, IC1117 - IC1122, IC1124 - IC1126, IC1128	M5218PF
★★	IC1113 - IC1116	M5222L
★★	IC1106, IC1111	NJM082D
★★	IC1127	TC4011UBP
★★	IC1129	TC4052BP
★★	IC1101, IC1110	TC4066BP
★★	IC1132	TC9154AP
★★	Q1120 - Q1122, Q1127	RN1203
★★	Q1118, Q1124, Q1125	RN2203
★★	Q1101 - Q1106, Q1110 - Q1115, Q1123, Q1126	2SA1048
★★	Q1108, Q1117	2SC2259
★★	Q1109, Q1118	2SC2458
★★	Q1107, Q1116	2SJ74
★	D1113, D1114	RD10ESB2
★	D1119	RD5.1ESB
★	D1115	RD5.6ESB
★	D1101 - D1112, D1116 - D1118	1SS252

CAPACITORS

Mark	Symbol & Description	Part No.
	C1173, C1174	CCMSL100D50
	C1141 - C1144, C1171	CCMSL220J50
	C1111, C1149, C1150, C1163, C1163, C1170	CCMSL330J50
	C1115, C1122	CCMSL470J50
	C1157	CEANP010M50

Mark	Symbol & Description	Part No.
	C1113, C1124, C1125	CEAS010M50
	C1151, C1152, C1154 - C1156, C1160, C1168, C1169, C1172	CEAS100M50
	C1179	CEAS101M16
	C1177	CEAS101M25
	C1126, C1127	CEAS2R2M50
	C1140	CEAS331M16
	C1164, C1165	CEAS331M25
	C1130 - C1139	CEAS4R7M50
	C1112, C1166, C1167	CEAS470M16
	C1158, C1161, C1162	CFTXA103J50
	C1101 - C1104, C1128, C1129, C1145, C1146, C1148	CFTXA104J50
	C1107, C1108, C1117, C1119	CFTXA223J50
	C1147	CFTXA224J50
	C1109, C1110, C1118, C1120	CFTXA334J50
	C1178	CKDYB222K50
	C1159	CKMYB221K50
	C1114, C1116, C1121, C1123	CKMYB471K50
	C1105, C1106	CKMYB881K50
	C1175, C1176	CKMYF472Z50

RESISTORS

Mark	Symbol & Description	Part No.
	R1113, R1114, R1130 - R1132, R1134, R1135, R1140, R1141, R1148 - R1150, R1165 - R1168, R1170, R1171, R1175 - R1180, R1182, R1183, R1190, R1192, R1194, R1196, R1198, R1200, R1202, R1204 - R1244	RN1/4PC□□□□F
	Other resistors	RD1/8PM□□□J

AF assembly (AWZ1961)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★★	IC153	M5201P
★★	IC151, IC152	M5218LF
★★	IC104	M5218PF
★★	IC165	M5220L
★★	IC51	M5220P
★★	IC505	NJM79M15A
★★	IC201, IC202	PA0016
★★	IC167	TC9154AP
★★	IC103	TC9162N
★★	IC101, IC102	TC9164N
★★	IC168	TC9184P
★★	IC503, IC504	μPC78M05H
★★	IC502	μPC78M15H
★★	IC501	μPC7812H
★★	Q151, Q501, Q508, Q509, Q511	RN1201
★★	Q512	2SA1048
★★	Q207, Q208	2SA1145P
★★	Q213, Q214	2SA968
★★	Q201, Q202	2SA979

Mark	Symbol & Description	Part No.
★★	Q211, Q212	2SC2238
★★	Q205, Q206, Q215, Q216, Q507	2SC2240
★★	Q101, Q102, Q502, Q503, Q505, Q506, Q513	2SC2458
★★	Q209, Q210	2SC2705P
★	D514	D5SB20F
★	D217	RD24EB
★	D512	RD4.7ESB
★	D165, D166	RD5.1ESB2
★	D527	RD5.6ESB2
★	D526	RD9.1EB
★	D201 - D216, D218, D219, D501 - D505, D507, D515, D516, D521 - D525, D528 - D531, D535	1SS252
★	D508 - D511, D517 - D520	11E2
★	D513	4D4844

RELIES

Mark	Symbol & Description	Part No.
★★	RY503, RY504	ASR-112
★★	RY501	ASR-612
★★	RY502, RY505	ASR1005

COILS & TRANSFORMERS

Mark	Symbol & Description	Part No.
	L201, L202 AF choke coil (0.7μH)	ATH1004
	L601, L602 AF choke coil (0.7μH)	ATH1011
★	T501 Power transformer	ATT1015

CAPACITORS

Mark	Symbol & Description	Part No.
	C515 - C517 (0.01μF/125V)	ACG1003
	C505, C508 (5600μF/42V)	ACH1047
	C503, C504 (8200μF/75V)	ACH1085
	C215, C216 Ceramic capacitor	CCCSL101K500
	C207, C208 Ceramic capacitor	CCCSL270K500
	C217, C218	CCDSL101K500
	C53, C54	CCCSL221J50
	C225, C226	CCCSL151J50
	C101 - C114	CCMSL101J50
	C171, C172, C211 - C214	CCMSL680J50
	C219, C220	CEANP2R2M50
	C64, C169, C170, C518, C523, C524, C526	CEAS010M50
	C51, C52, C179, C180, C508, C509, C512	CEAS100M25
	C521, C527	CEAS100M50
	C510	CEAS102M25
	C514	CEAS102M35
	C61, C62, C115 - C118, C121, C122, C151, C152, C154, C157, C159, C160 - C162, C167, C168, C201, C202, C227	CEAS2R2M50
	C502	CEAS220M50
	C229, C230	CEAS221M10
		CCDSL020C500

Mark	Symbol & Description	Part No.
	C231 - C234	CEAS100M100
	C513	CEAS222M35
	C153	CEAS470M16
	C522, C525	CEHAQ010M50
	C507, C511	CEHAQ470M25
	C55, C56, C209, C210, C501	CEAS471M6
	C221 - C224, C813, C814	CFTXA104J50
	C123, C124, C177, C178, C181, C182	CFTXA153J50
	C57, C58	CFTXA243J50
	C155	CFTXA333J50
	C59, C60, C183, C184	CFTXA823J50
	C191, C192	CKDYB472K50
	C125, C126, C173, C174, C520	CKDYF103Z50
	C63	CKDYX104M25
	C205, C206	CKMYB331K50
	C203, C204	CKMYB152K50
	C158	CKMYF222Z50
	C185, C186	CQMA152J50
	C175, C176	CQMA272J50
	C156	CQMA332J50
	C119, C120	CQMA392K50
	C519	CKDYF473Z50

RESISTORS

Mark	Symbol & Description	Part No.
	R259, R260	ACN1018
	R269 - R272	RS1LMF100J
	R277, R541, R542	RS2LMF□□□J
	R505, R506	RS3LMF□□□J
	R217, R218	RDR1/2PM□□□J
	R201 - R204	RDR1/4PM□□□J
	R211 - R216	RD1/4PMF□□□J
	R239 - R246, R251 - R258, R281 - R284, R516 - R518, R543, R544, R546, R621 - R624	
	R231 - R234, R247 - R250	RFA1/4PS□□□J
	R207 - R210, R219 - R224	RD1/4PM□□□J
	Other resistors	RD1/BPM□□□J

OTHERS

Mark	Symbol & Description	Part No.
	4P Pin jack	AKB1007
	8P Pin jack	AKB1008
	2P Pin jack	AKB1039
	2P Pin jack	AKB1059
	4P Speaker terminal	AKE1007
	4P Speaker terminal	AKE1011
	Screw	ABA1012

VIDEO/SUR/CONTROL assembly (AWZ1965)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★★	IC301, IC302, IC304	CX - B94
★★	IC424	LA2730
★★	IC403	M5K4164AP - 15
★★	IC402	M50199P
★★	IC371	M51848P
★★	IC421 - IC423, IC426, IC428 - IC430	M5218PF
★★	IC401	M5233P
★★	IC341	NJM2209S
★★	IC303, IC305, IC306, IC309	NJM2233BS
★★	IC307	NJM2235S
★★	IC391	PDG021 - A
★★	IC427	TC4066BP
★★	IC425	TC9154AP
★★	IC308	μPC78L05
★★	Q393	RN1201
★★	Q310, Q313 - Q316, Q316, Q427	RN1203
★★	Q309	RN2201
★★	Q424 - Q426	RN2203
★★	Q301, Q304, Q305, Q308, Q373, Q375, Q431	2SA1048
★★	Q302, Q303, Q306, Q307, Q311, Q341 - Q344, Q346, Q371, Q372, Q374, Q376, Q391, Q394	2SC2458
★★	Q421, Q422, Q428 - Q430	2SC2878
★	D425, D426	RD5.1ESB
★	D371, D372, D374 - D376, D391 - D396, D401, D421 - D424, D427, D428, D430	1SS252

COILS & TRANSFORMERS

Mark	Symbol & Description	Part No.
	L371 Axial inductor (10μH)	LAU100K
	L344, L349, L391, L401	LAU101K
	Axial inductor (100μH)	
	L341, L345, L346 Axial inductor (220μH)	LAU221K
	L342, L347 Axial inductor (27μH)	LAU270K
	L343, L348 Axial inductor (39μH)	LAU390K
	L372 Axial inductor (47μH)	LAU470K
	L402, L403 Inductor (8.2μH)	LTA822J

CAPACITORS

Mark	Symbol & Description	Part No.
	C392 (47000μF/5.5V)	ACH1011
	C348	CCCSL151J50
	C345	CCCSL221J50
	C374	CCMCH220J50
	C352, C362	CCMSL030C50

Mark	Symbol & Description	Part No.
	C357, C361	CCMSL050C50
	C354	CCMSL080D50
	C341	CCMSL070D50
	C367	CCMSL100D50
	C375, C382	CCMSL101J50
	C365	CCMSL120J50
	C356	CCMSL150J50
	C348, C461	CCMSL220J50
	C343, C355, C371, C379 - C381, C455	CCMSL470J50
	C342, C353	CCMSL680J50
	C408	CEANP100M16
	C402	CEANP4R7M35
	C435	CEASR33M50
	C320 - C322, C358, C366, C424 - C426, C434, C437	CEAS010M50
	C438, C457	
	C344, C349, C350, C383, C385, C393, C422, C427	CEAS100M50
	C351, C363, C391, C412, C418, C429, C443, C446	CEAS101M10
	C373, C378, C440, C441	CEAS101M16
	C306, C312 - C314	CEAS102M10
	C444, C445, C451 - C454	CEAS2R2M50
	C430, C467	CEAS220M16
	C447 - C450, C466, C468, C469	CEAS4R7M50
	C302, C303, C305, C307 - C311, C315 - C319, C323, C324, C359, C364, C368, C370, C384, C403, C415	CEAS470M16
	C421	CEJA100M16
	C417	CEAS471M10
	C401	CFTXA103J50
	C404, C407, C433	CFTXA104J50
	C459, C480	CFTXA183J50
	C432, C439	CFTXA333J50
	C413, C414	CFTXA823J50
	C369, C394	CGMYX103M16
	C376, C411, C419	CKCYB103K50
	C347	CKCYB472K50
	C372	CKCYX104M25
	C416, C471	CKDYB103K50
	C436	CKMYB471K50
	C470	CKDYX223M25
	C431	CQMA472K50
	C406, C409, C458	CQMA562K50
	C423, C428	CQMA682K50
	C405, C410	CQSA581J50
	C377	CQSA821J50

RESISTORS

Mark	Symbol & Description	Part No.
	VR421 Variable resistor (100kΩ)	ACS1020
	VR422 Semi-fixed resistor (22kΩ)	VRTB8VS223
	Other resistors	RD1/BPM□□□J

OTHERS

Mark	Symbol & Description	Part No.
	1P Pin jack	AKB1010
	1P Pin jack	AKB1011
	3P Pin jack	AKB1050
	8P Pin jack	AKB1058
	2P Mini jack	AKN1006
	5P DIN socket	AKP - 081
	X401 Ceramic resonator (3.27MHz)	ASS1016
	X391 Ceramic resonator (4.19MHz)	ASS1022

Tuner assembly (AWZ1966)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★★	IC751	AN7470P
★★	IC731	LA1285S
★★	IC771	LM7001
★★	Q773, Q775	RN2201
★★	Q763	2SA1048
★★	Q772	2SC1740SLN
★★	Q751, Q761, Q762, Q774	2SC2458
★★	Q703, Q721	2SC2668
★★	Q702	2SC2786
★★	Q704, Q705	2SK161
★★	Q701	2SK241
★★	Q771	2SK246
★	D771, D772	SVC321C2 - SP
★	D731 - D734, D751	1SS252
★	D701 - D703	1SV147

COILS & TRANSFORMERS

Mark	Symbol & Description	Part No.
★	T771 AM antenna transformer	ATB - 085
	L771 AM OSC coil	ATB - 100
★	T701 FM RF transformer	ATC - 194
	L701 FM coil	ATC1001
	L702 FM coil	ATC1002
	L705 FM coil	ATC1003
★	T702 FM coupling transformer	ATE - 083
★	T732 FM detector transformer	ATE1001
★	T731 FM detector transformer	ATE1002
	F722 FM Ceramic filter	ATF - 107
	F721 FM Ceramic filter	ATF - 119
	F751 Low pass filter	ATF - 184
	F731 AM Ceramic filter	ATF - 208
	L703, L704, L732, L733, L772	LAU2R2M
	Axial inductor (2.2μH)	
	L731 Inductor (4.7M)	LTA472J

CAPACITORS

Mark	Symbol & Description	Part No.
	TC771, TC772 Ceramic trimmer	ACM - 015
	C708	CCDCH010C50
	C708	CCDCH020C50
	C701, C704, C705	CCDRH330J50
	C702	CCDRH390J50

Mark	Symbol & Description	Part No.
C744		CCDSL221J50
C716		CCDTH180J50
C774		CCMCH070D50
C715		CCMCH080D50
C713, C781, C782		CCMCH150J50
C714		CCMCH330J50
C709		CCMSL101J50
C765		CCMSL121J50
C731		CCMSL470J50
C752		CEANP100M16
C757		CEASR22M50
C778		CEASR47M50
C742		CEASOR1M50
C743		CEAS010M50
C756		CEAS1R5M50
C737, C745, C751, C769, C770, C776		CEAS100M50
C738		CEAS2R2M50
C784		CEAS220M16
C763		CEAS220M25
C734, C755		CEAS3R3M50
C788, C789		CEAS330M16
C733, C761, C762		CEAS4R7M50
C758		CEAS470M16
C736		CFTXA683J50
C703, C710 - C712, C718, C721, C722, C771 - C773, C777, C780, C783, C787		CGMYX103M16
C735		CKCY8472K50
C753, C764		CKCYF473Z50
C732, C739, C740		CKCYX473M25
C741		CKDYF223Z50
C779		CKMYB102K50
C759, C780		CQMA102J50
C767, C768		CQMA561K50
C775		CQSA431J50
C754		CQSA471J50

RESISTORS

Mark	Symbol & Description	Part No.
VR752	Semi - fixed resistor	VRTB6VS224
VR751	Semi - fixed resistor	VRTB6VS472
R752		RN1/4PC1502F
Other resistors		RD1/8PM□□□J

OTHERS

Mark	Symbol & Description	Part No.
4P	Antenna terminal	AKA1003
X771	Crystal resonator (7.2MHz)	ASS1006
X731	Ceramic filter	ATF-125

Front control A assembly (AWZ1967)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★★	IC801	PDG020-A
★★	Q801	RN1203
★★	Q802 - Q811	2SC2458
★	D801 - D813	1SS252

SWITCHES

Mark	Symbol & Description	Part No.
★★	S801 - S820, S822, S825 - S830, S834 - S853, S855 - S863 Tact switch	ASG-711

COIL & TRANSFORMER

Mark	Symbol & Description	Part No.
	L801 Axial inductor (10μH)	LAU100K

CAPACITORS

Mark	Symbol & Description	Part No.
	C801, C802	CCDCH101J50
	C807	CEJAOR1M50
	C803, C805, C806	CEJA100M16

RESISTORS

Mark	Symbol & Description	Part No.
	VR802 Variable resistor	ACS1021
	VR801 Variable resistor	ACS1022
	Other resistors	RD1/8PM□□□J

OTHERS

Mark	Symbol & Description	Part No.
	REMOCON SENSOR assembly	AXX1005
	V801 Fluorescent indicator tube	AAV1054
	X801 Ceramic resonator (503kHz)	ASS1004

Headphone assembly

Mark	Symbol & Description	Part No.
	Headphone jack	AKN1002

Motor - volume assembly

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★★	IC154	M5220L
★★	IC671	TA7291S

COIL & TRANSFORMER

Mark	Symbol & Description	Part No.
	F671 EMI filter	ATF1010

CAPACITOR

Mark	Symbol & Description	Part No.
	C675	CEJA100M50
	C163, C164	CKDYF103Z50
	C165, C166	CKMY8331K50

RESISTORS

Mark	Symbol & Description	Part No.
	VR671 Variable resistor with motor (100kΩ × 2 20kΩ × 3)	ACX1016
	Other resistors	RD1/8PM□□□J

Terminal assembly

Mark	Symbol & Description	Part No.
------	----------------------	----------

No parts are supplied with the Terminal assembly.

Front control B assembly

SWITCHES

Mark	Symbol & Description	Part No.
★★	S823, S824, S831, S832, S833	ASG-711

Meter amp assembly
SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★★	IC631 - IC633	M5218LF
★★	Q631 - Q635	2SC2458
★	D641 - D645	RD5.6ESB3
★	D636 - D640	1SS252

CAPACITORS

Mark	Symbol & Description	Part No.
	C631 - C635	CEASR47M50

RESISTORS

Mark	Symbol & Description	Part No.
	All resistors	RD1/8PM□□□J

Rear assembly
SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★★	IC601, IC602	μPC1270H
★★	Q601, Q602	2SC2458

CAPACITORS

Mark	Symbol & Description	Part No.
	C607, C608	CCMSL150J50
	C615, C616	CEAS100M50
	C605, C606, C609, C610	CEAS101M10
	C601, C602	CEAS2R2M50
	C611, C612	CFTXA333J50

	C603, C604	CKMYB102K50
	C617, C618	CKMYB471K50

RESISTORS

Mark	Symbol & Description	Part No.
	R619, R620	ACN-131
	Other resistors	RD1/8PM□□□J

Vol IND assembly

SEMICONDUCTOR

Mark	Symbol & Description	Part No.
★	D761	AEL1053

OTHER

Mark	Symbol & Description	Part No.
	Terminal strip	AKF1006

7. ADJUSTMENTS

7.1 TUNER SECTION

FM Tuner section

- Connect the FM signal generator (FM SG) to the FM ANTENNA 300Ω terminal through a 300Ω dummy antenna.
- Set the AUT/MANUAL switch to the MANUAL position and the FUNCTION switch to the FM.

FM MONO ADJUSTMENT

Step	FM SG (1kHz ± 75kHz dev.)		Frequency display	Adjustment point	Adjustment procedure
	Frequency	Level			
1	No signal		87.5MHz	—	Check TP-VT (3.4 ± 1.5V) of tuner assembly. Check TP-VT (8.7 ± 2.5V) of tuner assembly.
2			108MHz		
3	98MHz	20~30dB	98MHz	T701, L702, T702	Set the output from TP-SIGNAL of assembly to maximum level.
4	98MHz	60dB	98MHz	T732	Adjust voltage across pins 28 and 29 of assembly to T meter center.
5	98MHz	60dB	98MHz	T731	Minimize distortion.
6	Repeat steps 4 and 5 until both specification ratings are satisfied.				

FM MPX ADJUSTMENT

7	98MHz	80dB	98MHz	VR751	Adjust the frequency at pin TP—VCO of tuner assembly to 78.0kHz (±100Hz)
	No modulation				
8	98MHz	80dB	98MHz	T702	Minimize distortion in both left and right channel outputs (adjust T702 to within ±90°)
	Stereo modulation*				
9	98MHz	80dB	98MHz	VR752	Maximize separation.
	Stereo modulation*				
10	98MHz	10dB	98MHz	—	Confirm that TUNED IND and STEREO IND are extinguished.
	Stereo modulation*				

* Stereo modulation:Main 1kHz L+R±88.25kHz dev. Pilot 19kHz±8.75kHz dev.




* Stereo modulation: Main 1kHz L+R ± 88.25kHz dev. Pilot 19kHz ± 8.75kHz dev.

AM (MW) Tuner section

- Connect loop antenna to the AM signal generator (AM SG) and connect the LOOP antenna (of the set) to AM ANTENNA terminal.
- Set the FUNCTION switch to the AM (MW).

Step	AM SG (400Hz, 30% MOD)		Frequency display	Adjustment point	Adjustment procedure
	Frequency	Level			
1	No signal		530kHz	L771	Set TP-VT of tuner assembly to 1.2V ($\pm 0.05V$)
2			1700kHz	TC772	Set TP-VT of tuner assembly to 10.0V ($\pm 0.1V$)
3	Repeat steps 1 and 2 until both specification ratings are satisfied.				
4	800kHz	40dB	800kHz	T771	Set the output from TP-SIGNAL of tuner assembly to maximum level.
5	1400kHz	40dB	1400kHz	TC771	
6	Repeat steps 4 and 5 until both specification ratings are satisfied.				
7	1000kHz	60dB	1000kHz		Confirm that TUNED IND becomes lit.

- The distance between AM SG side loop antenna A and the receiver side (VSX-9300 or VSX-7300) loop antenna B, that is, from the center of A side loop antenna to that of B side loop antenna should be 60cm.

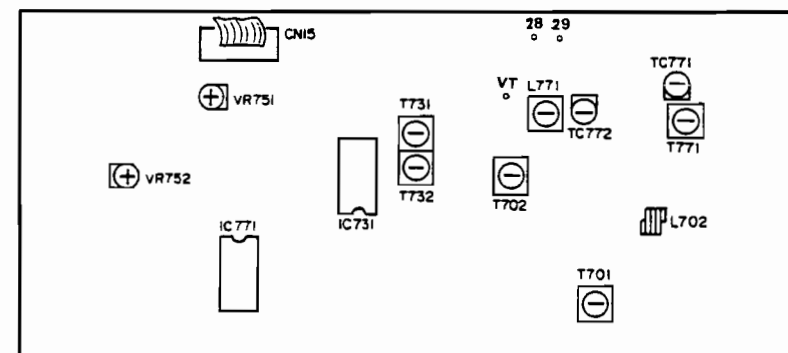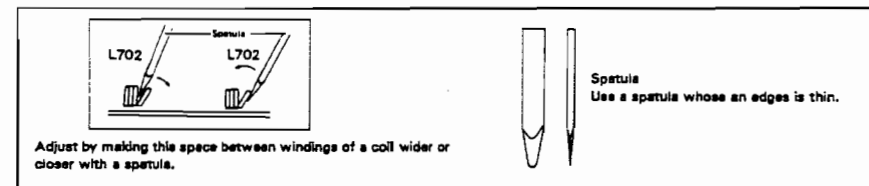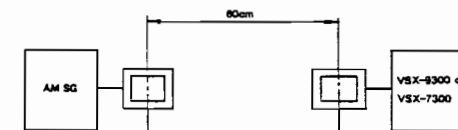


TUNER ASSEMBLY (AWZ1966)

7.2 SURROUND AMP SECTION

•SURROUND LEVEL ADJUSTMENT Preparation

 
- 1) Adjust the SURROUND BALANCE VR (VR421) on the rear side to center clicking position.
 - 2) Set the SURROUND MODE to the DOLBY SURROUND (VSX-7300 type)
 - 3) Input sine wave signal of 1kHz, 260mV to the VDP/CDV input. Lch (or Rch) only. (Be sure that the small signal assembly is operating normally.)
- * Set the SURROUND MODE to the STADIUM (VSX-9300 type)



Connection diagram

Adjusting method

- 1) Adjust with VR422 (LEVEL) so that the output of TP DOLBY TP of the SURROUND assembly becomes $100\text{mV} \pm 5\text{mV}$.

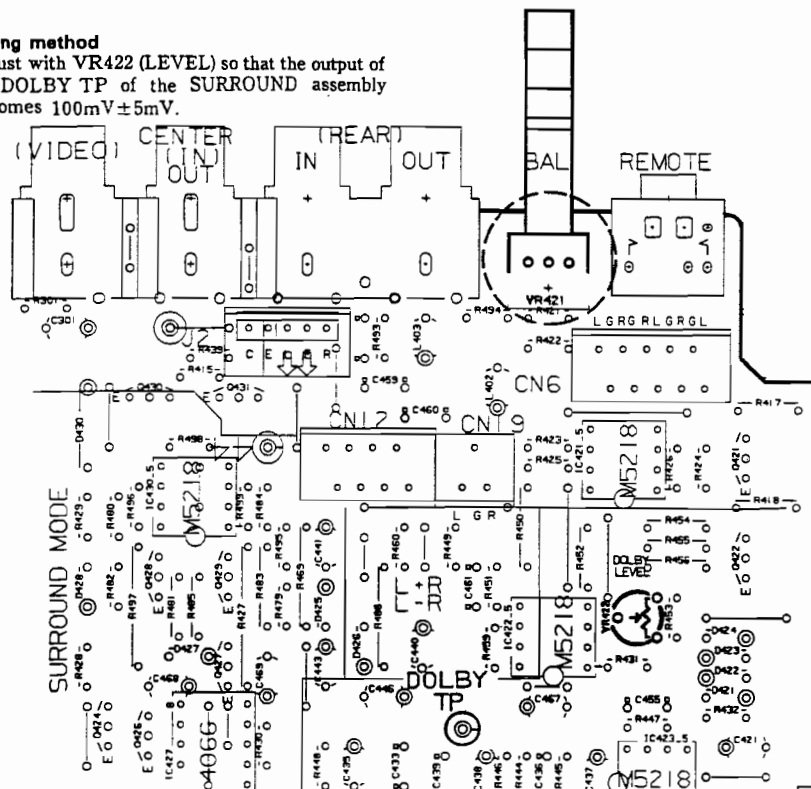


8. REMOTE CONTROL UNIT (AXD105.5)

8.1 EXPLODED VIEWS AND PARTS LIST

PARTS LIST OF EXPLODED VIEWS

Mark	No.	Parts No.	Description
	1	AZH1033	Case (A)
	2	AZH1034	Case (B)
	3	AZH1035	Case (C)
	4	AZN1400	Filter
	5	AZA1086	Rubber switch
	6	AZS1042	Knob (AUDIO/VIDEO /AUX, USE/LEARN, DAT/TAPE)
	7	AZA1123	Name plate
	8	AZB1124	Screw
	9	AZN1401	Foot
	101		Rear name plate

※ When replacing the case No.2 (B) (AZH1034) by a new one, remove all electrode springs and install them into the new case (B).

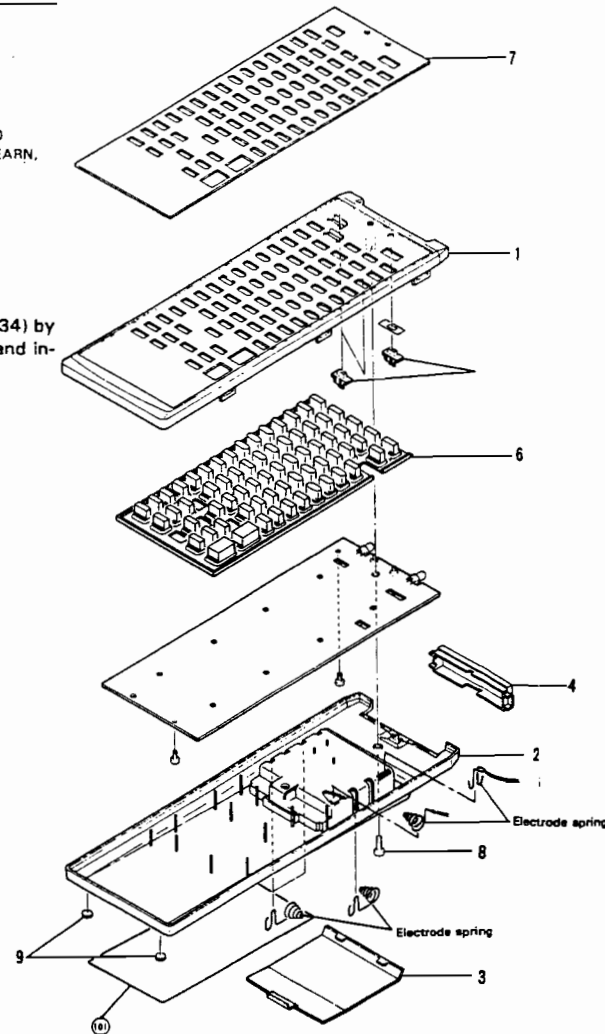

8.2 ELECTRICAL PARTS LIST

NOTES:

- Parts without part number cannot be supplied.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.
 - Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

560Ω	56 × 10 ¹	561.....	RD1/4PS □ □ □ J
47kΩ	47 × 10 ³	473.....	RD1/4PS □ □ □ J
0.5Ω	0R5.....		RN2H □ □ □ K
1Ω	010.....		RS1P □ □ □ K
 - Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62kΩ	562 × 10 ²	562.....	RN1/4SR □ □ □ F
--------	-----------------------	----------	-----------------

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★★	IC01	PD508B - A
★★	IC02	AZC1045
★★	IC03	AZC1048
★★	IC04	AZC1047
★★	IC05	AZC1048
★★	Q01, Q02	AZC1050
★★	Q03, Q04	AZC1051
★★	Q05	AZC1052
★	D01, D02, D07 - D14	AZC1056
★	D03 - D06	AZC1049
★	PHD01	AZC1055
★	LED01, LED02	AZC1054
★	IED02, IED02	AZC1053

SWITCH

Mark	Symbol & Description	Part No.
★★	S01 Side switch (AUDIO/VIDEO/AUX)	AZC1079
★★	S02, S03 Side switch (USE/LEARN, DAT/TAPE)	AZC1080
★★	S04 Tact switch (RESET)	AZC1081

CAPACITORS

Mark	Symbol & Description	Part No.
	C01 (200P)	AZC1058
	C02 (33P)	AZC1059
	C03, C04 (0.001μF)	AZC1082
	C05, C06 (20P)	AZC1080
	C07 Electrolytic capacitor (4.7/6V)	CEAS4R7M8
	C08 (0.01)	AZC1081
	C09 Electrolytic capacitor (100/6V)	CEAS101M6
	C10 Electrolytic capacitor (100/6V)	CEAS101M6
	C11 (0.01)	AZC1083

RESISTORS

Mark	Symbol & Description	Part No.
	R01 (8.2K)	AZC1084
	R02 (4.7K)	AZC1085
	R03, R08 (33K)	AZC1086
	R04 (220K)	AZC1087
	R05, R17, R39 (10K)	AZC1088
	R06 (82K)	AZC1089
	R07, R11, R30 - R38 (100K)	AZC1073
	R09 (8.8K)	AZC1070
	R10 (56K)	AZC1071
	R12 (1M)	AZC1072
	R13, R16 (880Ω)	AZC1075
	R14 (3.9Ω)	AZC1078
	R15 (10Ω)	AZC1076
	R18, R22 - R29 (47K)	AZC1077
	R19 - R21 (2.2K)	AZC1074


OTHERS

Mark	Symbol & Description	Part No.
	X1 Resonator (8MHz)	AZC1057



8.3 SCHEMATIC DIAGRAM

External Appearance of Transistors and ICs.



PD5068-A

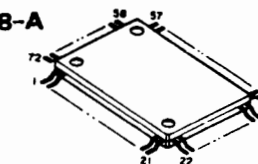



AZC1045

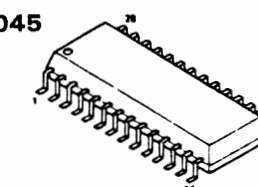 AZC1046
AZC1047

AZC1048

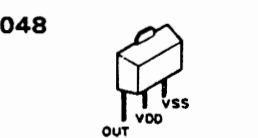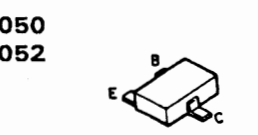AZC1050
AZC1052



AZC1051

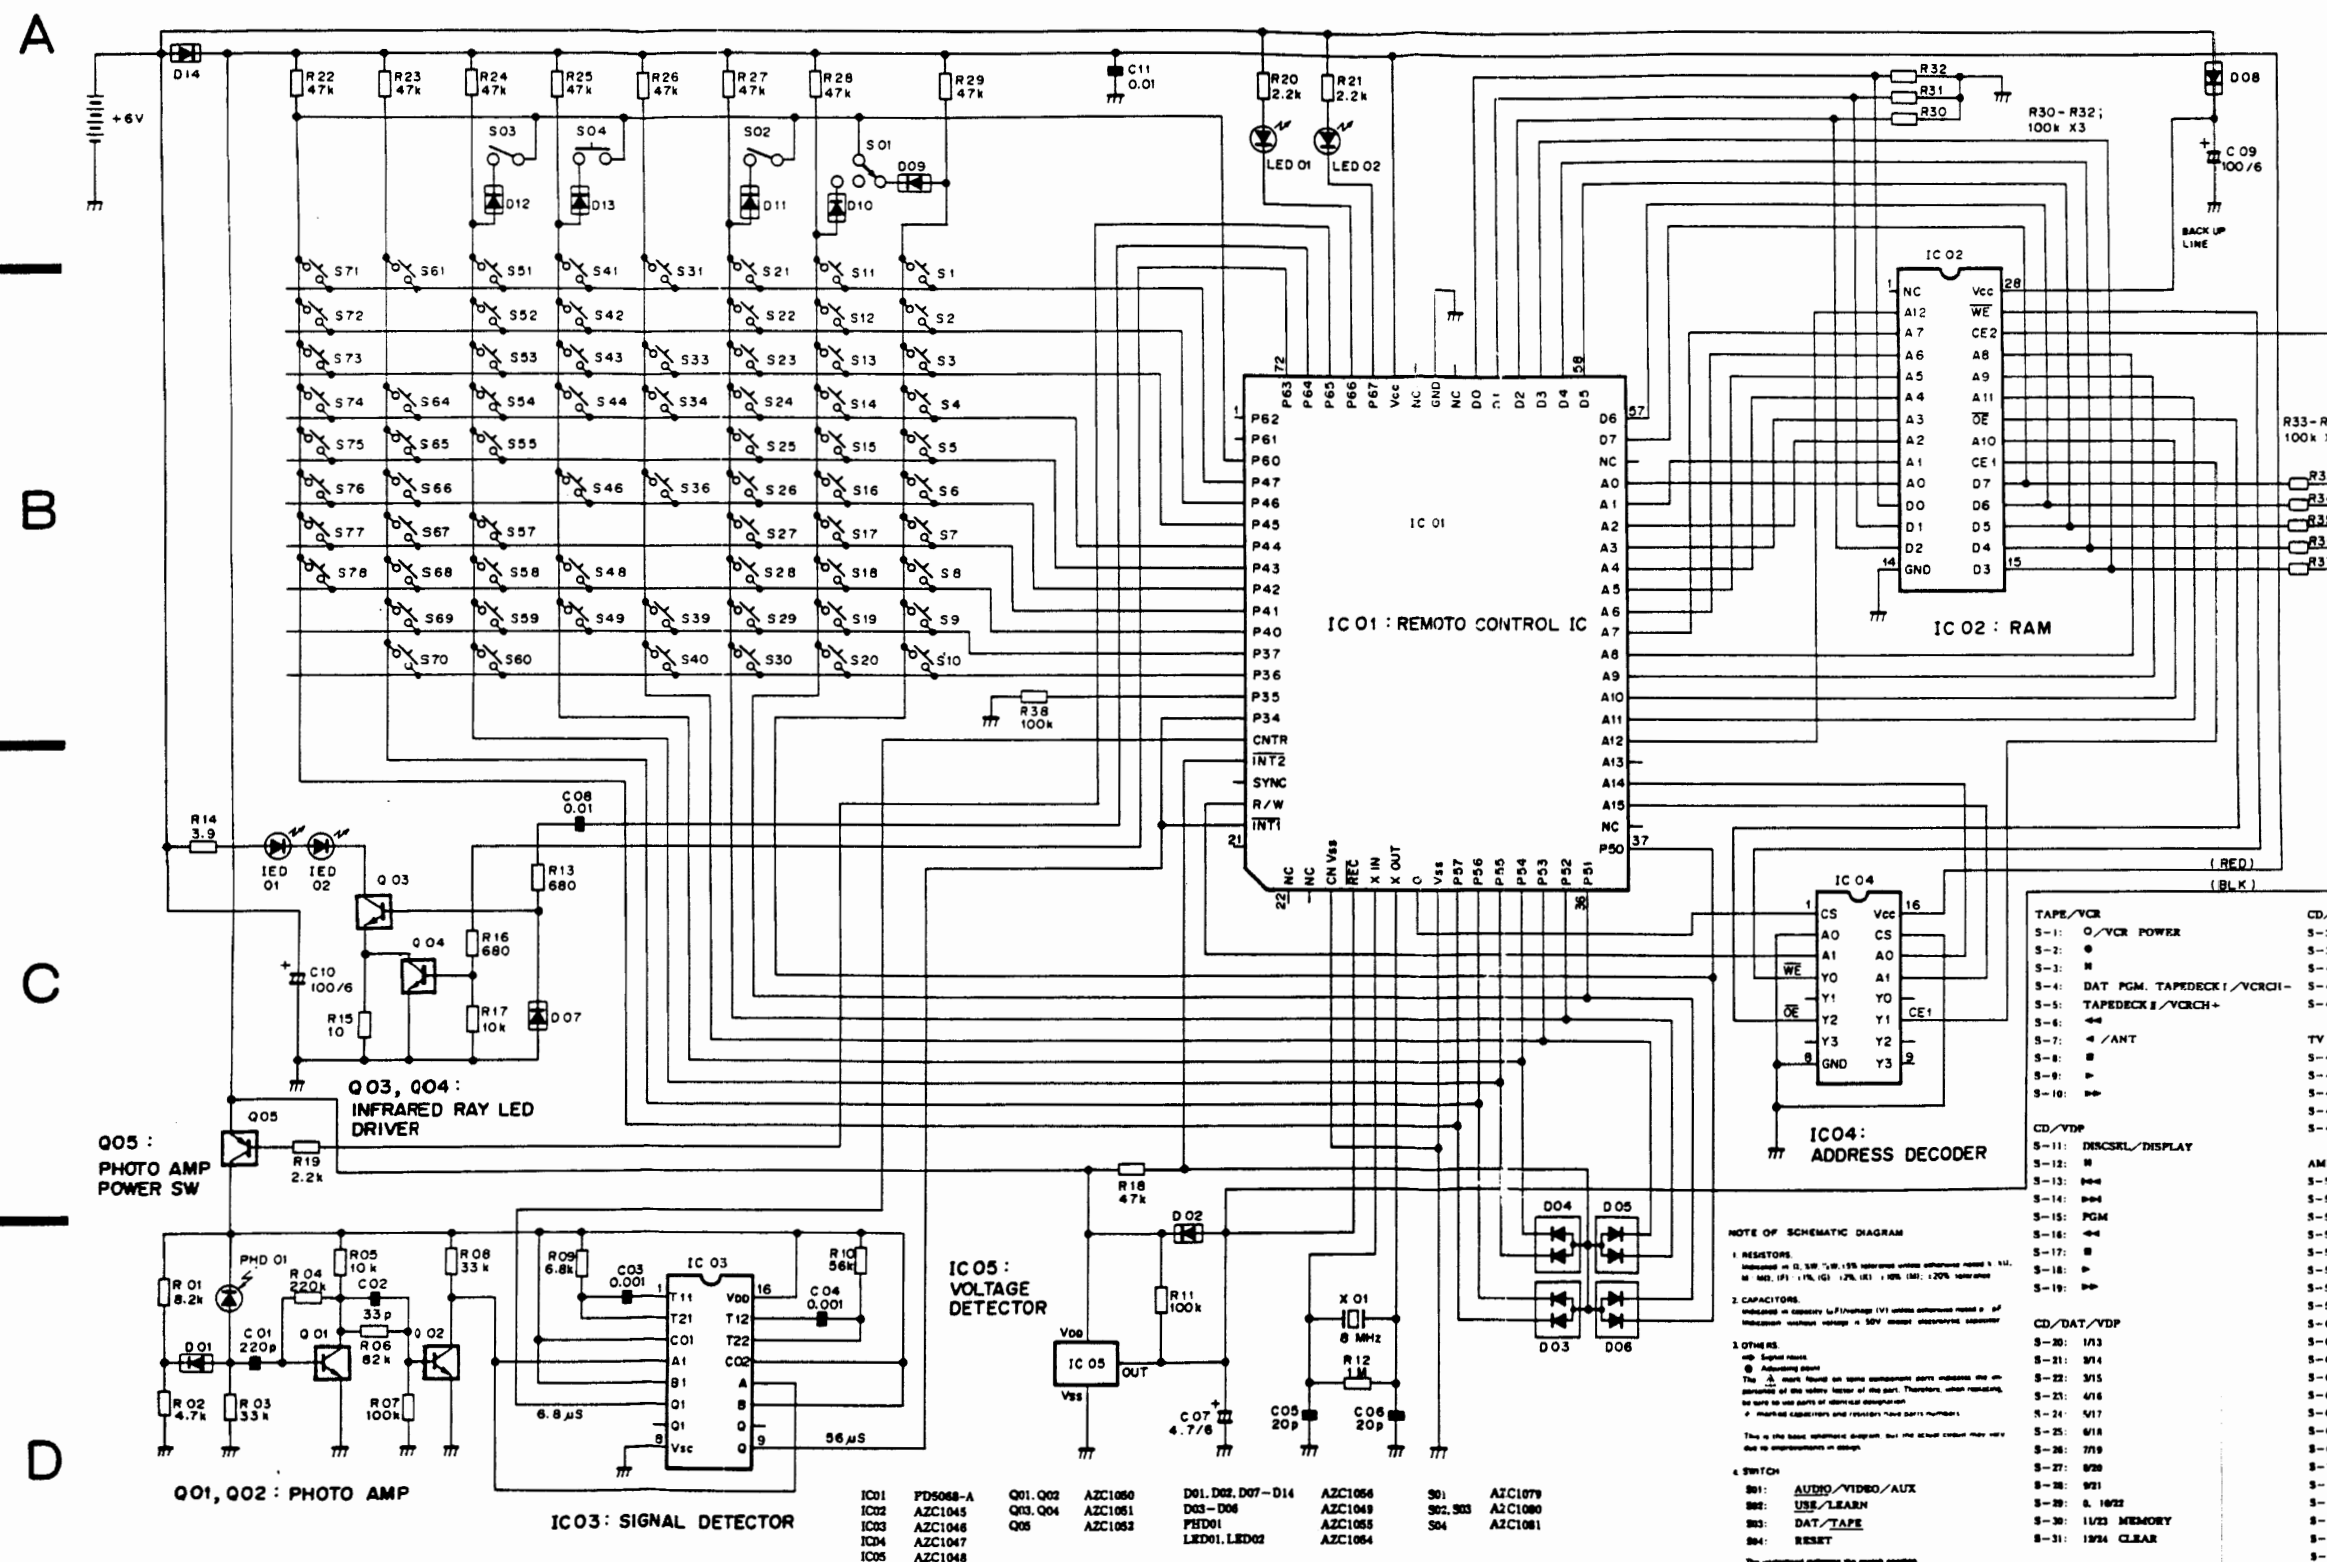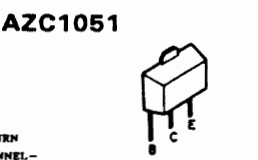

8.4 P.C.BOARD PATTERNS

NOTE :

-  : Indicates a chip resistor.
-  : Indicates a chip capacitor.
-  : Indicates a chip transistor.
-  : Indicates a chip diode.

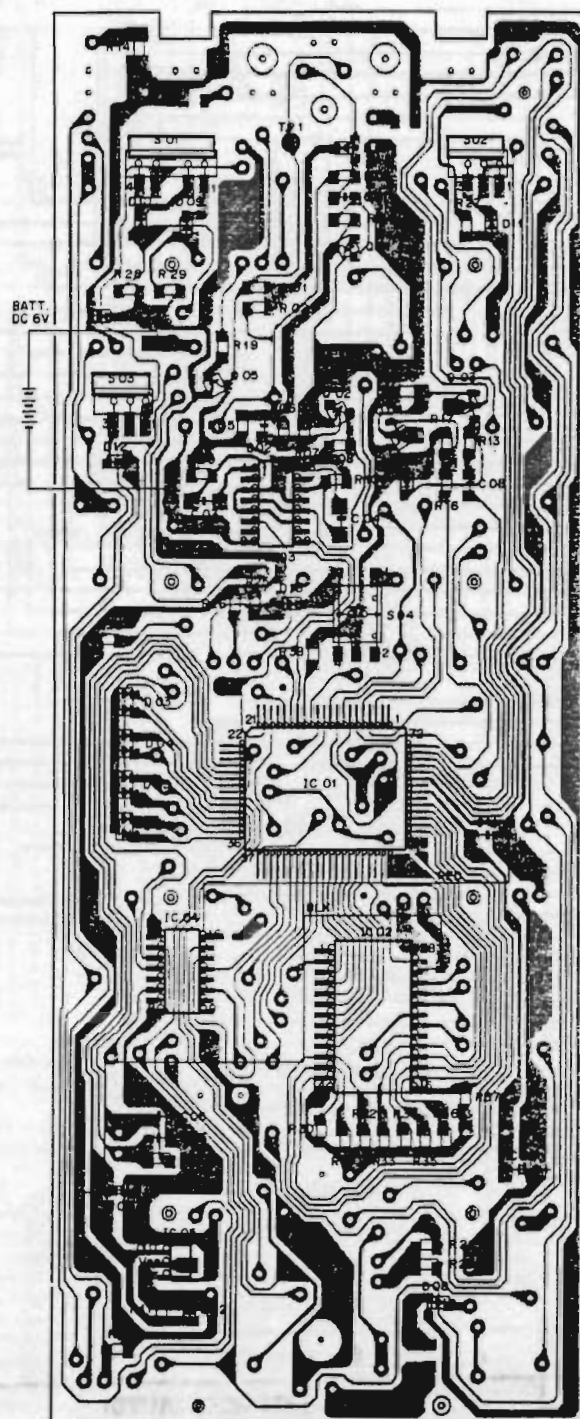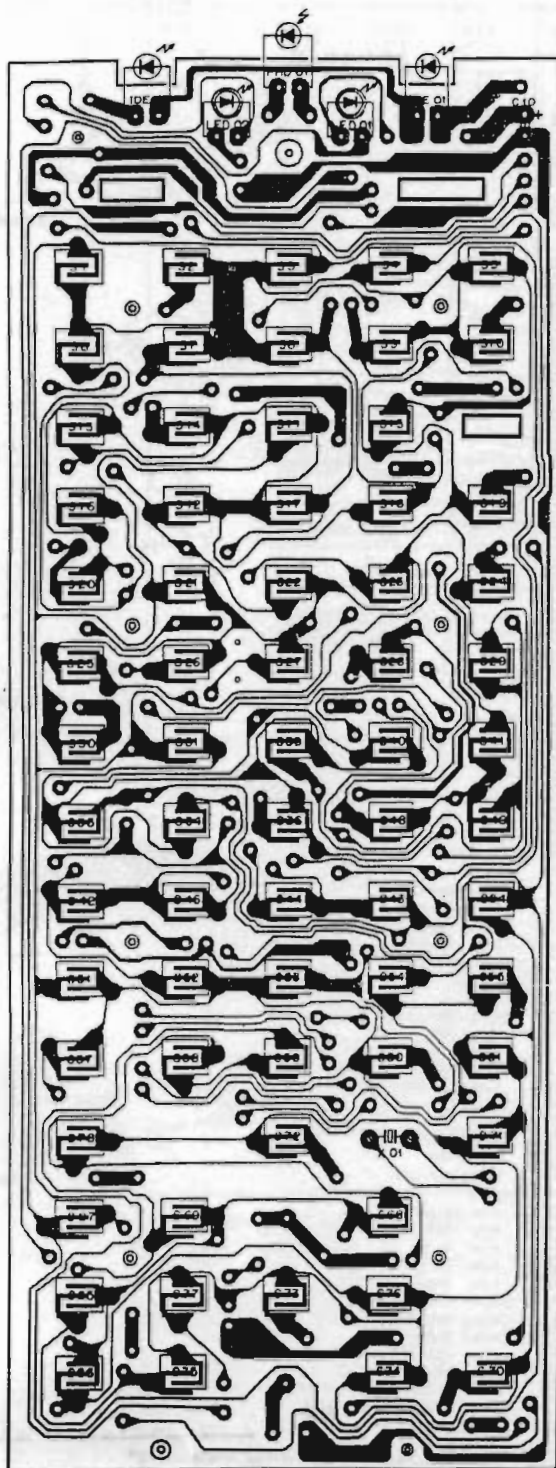

9. IC INFORMATION

PDG021

Terminal Functions

Terminal No.	Terminal name	I/O	Conditions	Terminal status	Remarks
1	WP	I	When requested	H	Sets the model to "H" when receiving order from IC801 (PDG020)
2	RMCEC	I	(Set to "H" in advance.)	H	Switches the model NOW... "H" NEXT... "L"
3	CLK	O	When data is output		Serial clock output
4	DATA	O	When data is output		Serial data output
5	SOA	I	When VSX-9300S is used	L	When the terminal for model selection is VSX-7300 series, sets the model to "H"
6	SI	I	VSX-9300S and VSX-7300 series	L	Switches the tuner mode (J/Ex)
7	RF MODU	O	TV ANT... "VIDEO"	H	Switches the RF modulator power supply ON
8	ST	O	When data transfer is completed (BALANCE or TONE)		"STROB" output for IC167 (TC9154AP) and IC168 (TC9184P)
9	CE	O	When data transfer is completed		"STROB" output for IC101 (TC9164N)
10	SS	O	SIMULATED STEREO... "ON"	L	
11	POWER	O	POWER "ON"	H	POWER RELAY (RY-501) ... "ON"
12	REAR	O	REAR output relay is switched "ON"	H	REAR SP RELAY (RY-505) ... "ON"
13	SP-A	O	FRONT SP-A relay is switched "ON"	H	FRONT SP RELAY (RY-503) ... "ON"
14	SP-B	O	FRONT SP-B relay is switched "ON"	H	FRONT SP RELAY (RY-504) ... "ON"
15	D ₀	I/O	When READY is set to "L"		Data terminal when transferring data mutually with IC801 (PDG020)
16	D ₁				
17	D ₂				
18	D ₃				
19	D ₄				
20	D ₅				
21	D ₆				
22	D ₇				
23	READY	I/O	When REQ is set to "H"	L	The mode is set to "L" until finishing to read the data
24	ACT	I/O	When data transfer is completed		REQ will become "L"
25	REQ	O	During data transfer	H	Processing to send data
26	TUNED	I	When a broadcast is received		TUNER STOP signal input
27	A ₀	I	Channel step AM9kHz FM50kHz	H	Channel step AM10kHz FM100kHz ... "L"
28	A ₁	O			Not used
29	A ₂	O	FM MODE (AUTO)	L	FM MODE (MONO) ... "H"
30	A ₃	O	During data transfer	H	"CE" output for IC771 (LM7001)
31	NC	—			Not used

Terminal No.	Terminal name	I/O	Conditions	Terminal status	Remarks												
32	V _{as}		GND														
33	G ₀	O	When data transfer is completed		"STROB" output for IC425 (IC9154AP)												
34	G ₁	O	DELAY TIME 15ms	H	DELAY TIME CONTROL												
35	G ₂	O	DELAY TIME 20ms	H													
36	G ₃	O	DELAY TIME 30ms	H													
37	H ₀	O	VCR2, VDP/CDV	L	VIDEO INPUT SELECTOR												
38	H ₁	O	SIMULATED	L	SURROUND MODE												
39	H ₂	O	STADIUM	L													
40	H ₃	O	When data transfer is completed		"STROB" output for IC1130 (CXD1067P)												
41	I ₀	O	During TUNER output MUTE	H													
42	I ₁	O	VCR2, VDP/CDV	L	VIDEO INPUT SELECTOR												
43	I ₂	O	VR IND (D761) light up	H													
44	I ₃	O	When data transfer is completed		"STROB" output IC101, IC102 (TC9164N) and IC103 (TC9162N)												
45	UP	O	When VR MOTOR is operated		<table><tr><td>VR</td><td>IC801</td><td>40Pin</td><td>40Pin</td></tr><tr><td>VR UP</td><td>H</td><td>L</td><td></td></tr><tr><td>VR DOWN</td><td>L</td><td>H</td><td></td></tr></table>	VR	IC801	40Pin	40Pin	VR UP	H	L		VR DOWN	L	H	
VR	IC801				40Pin	40Pin											
VR UP	H	L															
VR DOWN	L	H															
46	DOWN																
47	J ₂	O	VIDEO signal control		Refer to Image diagram (VIDEO)												
48	J ₃																
49	K ₀																
50	K ₁																
51	K ₂																
52	K ₃																
53	L ₀																
54	L ₁																
55	L ₂																
56	L ₃																
57	V _L	—			Set GND in advance												
58	INT	I			Set GND in advance												
59	XTAL	—	Connect ceramic resonator of 4.19MHz														
60	EXTAL	I															
61	RST	I	When Power is switched "ON"														
62	Y ₀	O	REC ENHANCER "ON"	H													
63	Y ₁	O			Not used (open)												
64	V _{DD}				+5V												

PDG020

Terminal Functions

Terminal No.	Terminal name	I/O	Conditions	Terminal status	Remarks
1	S ₄	O	Power "ON" or "STAND-BY"		Control of FL indicator segments (S ₄ to S ₂₁)
2	S ₅				
3	S ₆				
4	S ₇				
5	S ₈				
6	S ₉				
7	S ₁₀				
8	S ₁₁				
9	S ₁₂				
10	S ₁₃				
11	S ₁₄				
12	S ₁₅				
13	S ₁₆				
14	S ₁₇				
15	S ₁₈				
16	S ₁₉				
17	S ₂₀				
18	S ₂₁				
19	T ₉	O	Power "ON" or "STAND-BY"		Control of FL indicator grid (T ₀ - T ₉)
20	T ₈				
21	T ₇				
22	T ₆				
23	T ₅				
24	T ₄				
25	T ₃				
26	T ₂				
27	T ₁				
28	T ₀				
29	INT	I	GND		Not used
30	XTAL	—	Ceramic oscillator (4.19MHz) connection		

Terminal No.	Terminal name	I/O	Conditions	Terminal status	Remarks
31	EXTAL	I	Ceramic resonator (4.19MHz)		
32	RST	I	Power "OFF" to "ON"	L	RESET
33	NC	—	(Open)	—	Not used
34	V _{DD}		Power "ON" or "STAND-BY"	5V	Pin for application of 5V power
35	AD0	I	Analog voltage input for driving level meter		Level indicator control
36	AD1				
37	AD2				
38	AD3				
39	AD4				
40	B ₁	I	During FM stereo reception	L	
41	B ₂	I	When tuner section is receiving in auto tuning mode		Reception at frequency when goes to "L" during searching in auto tuning mode
42	B ₃	I	Memory number 30 stations	H	Number of memory channels for tuner sections is set to 30 or 10 stations
			Memory number 10 stations	L	
43	NC	—	(Open)	—	Not used
44	SC	O	Not used		CLOCK output
45	SO	O			DATA output
46	SI	I	GND	L	"SURROUND" can not be turned ON/OFF
			+5V	H	
47	READY	I/O	When REQ is set to "H"	L	The mode is set to "L" until finishing to read the data
48	ACT	I/O	When data transfer is completed		REQ will become "L"
49	REQ OUT	O	During data transfer	H	Processing to send data
50	REQ IN	I	When requested	H	Sets the mode to "H" when receiving order from IC391 (PDG021).
51	F ₀	I	During control key operation		Key matrix input
52	F ₁				
53	F ₂				
54	F ₃				
55	E ₀				
56	E ₁				
57	E ₂				
58	E ₃				
59	PY0	O	When the IC391 (PDG021) is reset		
60	PWM	O	(Open)		Not used

Terminal No.	Terminal name	I/O	Conditions	Terminal status	Remarks
61	WP	I	AC pulse (50/60Hz) input		Back-up state when no AC pulse input
62	RMC	I	During remote control reception		Input terminal for remote control signal
63	D ₀	I/O	When READY is set to "L"		Data terminal when transferring data mutually with IC391 (PDG021)
64	D ₁				
65	D ₂				
66	D ₃				
67	D ₄				
68	D ₅				
69	D ₆				
70	D ₇				
71	V _{SS}		GND	—	
72	TX	—	(Open)	—	Not used
73	NC	—	(Open)	—	Not used
74	TEX	I	5V		Application of STAND-BY power (5V)
75	V _{RFF}		Back-up		Application of STAND-BY power (5V)
76	V _{FDP}		Power "ON"	-30V	Power supply for FL indicator control
77	S ₀	O	Power "ON" or "STAND-BY"		S ₀
78	S ₁				S ₁
79	S ₂				S ₂
80	S ₃				S ₃

10. CIRCUIT DESCRIPTIONS

• DOLBY SURROUND PRO-LOGIC

In a conventional Dolby surround circuit, FRONT signals (LEFT and RIGHT) are output only by adjusting both BALANCE as shown in Figure 10-1. Therefore, only REAR signal (SURROUND) performed DOLBY SURROUND processing.

A detailed sound field was not easy to reproduce, because the L (R) signal passes the SURROUND circuit.

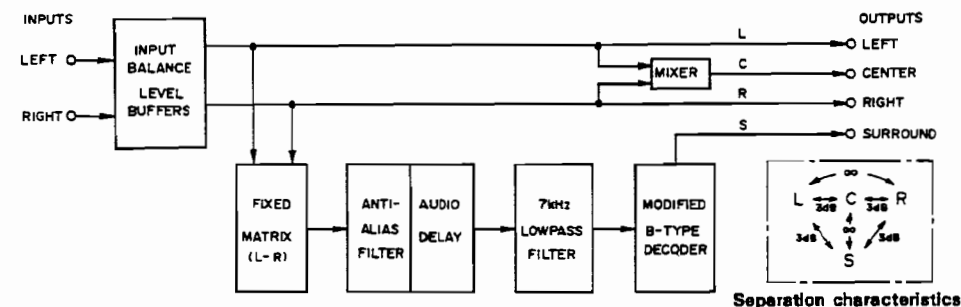


Figure 10-1. Block diagram of conventional Dolby surround circuit

The DOLBY SURROUND PRO-LOGIC controls the FRONT and REAR signals together by adding ADAPTIVE MATRIX and CENTER MODE CONTROL CIRCUIT to the conventional Dolby surround circuit as shown in Figure 10-2.

The ADAPTIVE MATRIX circuit improved separation between LEFT, CENTER, RIGHT and SURROUND.

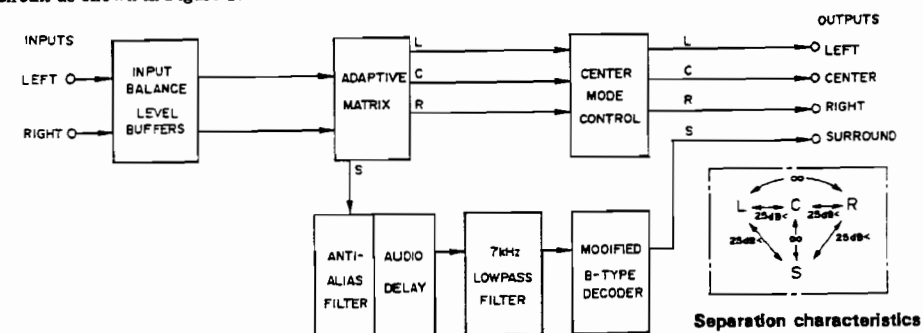


Figure 10-2. Block diagram of DOLBY SURROUND PRO-LOGIC circuit

• ADAPTIVE MATRIX

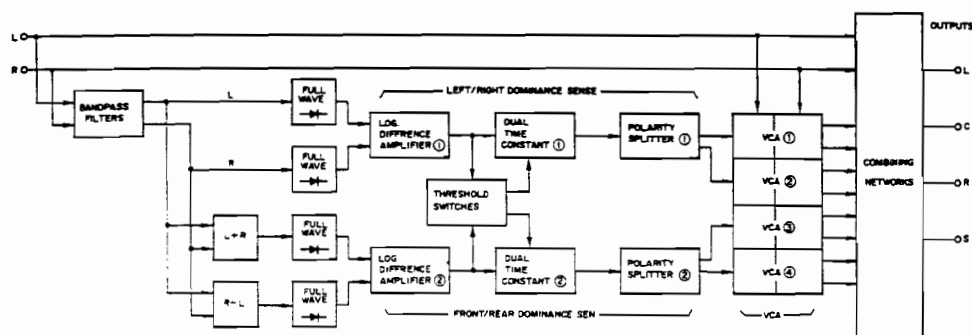


Figure 10-3. Block diagram of adaptive matrix

The configuration is as shown in Figure 10-3.

This circuit works to convert 2 CH AUDIO signal (L CH and R CH) which has been processed by Dolby encoding into a 4 CH signal (L, R and Center CHs of FRONT and Surround CH of REAR).

1. Picks up only signals from 150Hz to 5kHz from the band-pass filter.
2. Performs full-wave rectification for the sound signal picked up from the band-pass filter with the full-wave rectifier.

3. The signals that undergo full-wave rectification are processed by logarithmic compression and comparison with the LOG-difference amplifier.

4. Observes DC voltage of ① and ② of the LOG-difference amplifier output at the points ③ and ④ of the threshold switch (see Figure 10-4). When the DC voltage value becomes 7.8V and larger or 7.0V and less, ③ of the threshold switch will be set to "L" (approx. 0.6V) and ④ will be set to "H" (approx. 14V).

The threshold voltage 7.8V and 7.0V which set ③ to "L" and ④ to "H" are decided by the reference voltage indicated in ⑤ and ⑥ of Figure 10-4.

5. The dual time-constant switches the variable speed of output voltage of the LOG-difference amplifier which becomes the control voltage of VCA.

This is performed for natural reproduction of sound field.

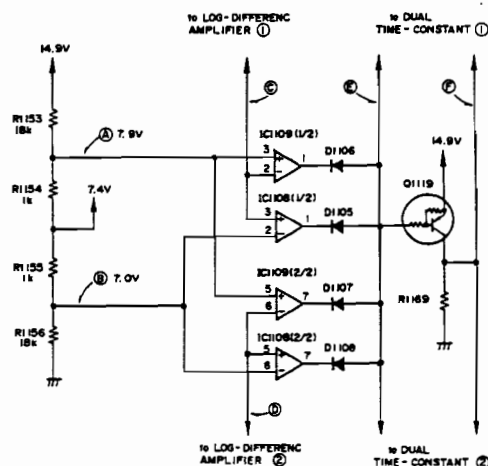


Figure 10-4. Threshold switch

Gain of VCA (dB)

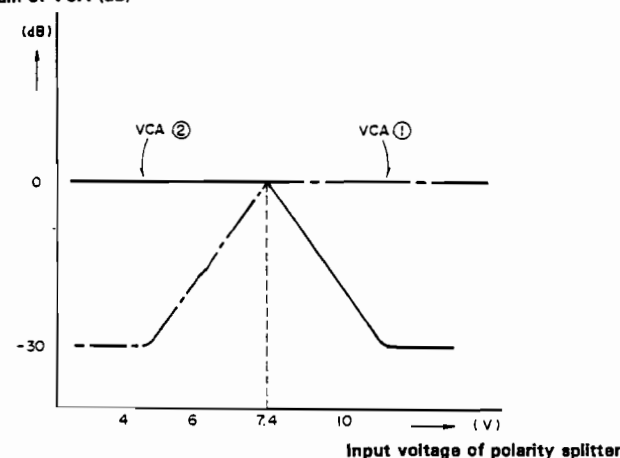


Figure 10-5. VCA (1) and (2) characteristics

6. The polarity splitter controls VCA ① and VCA ② to achieve opposite characteristics as shown in Figure 10-5.

The voltage (7.4V) where the gains of both VCA ① and VCA ② become 0dB indicates that at this point the voltage value is the same as the reference voltage (7.4V) which is output from Pin3 (COM terminal) of VCA.

7. Control the signal level to be input to the combining network for deciding respective CHs (L, R, Center and Surround CHs) level with VCA ① to VCA ④.

8. The combining network produces the output of respective CHs (L, R, Center and Surround CHs) by adding or subtracting the signals passed through VCA ① to VCA ④ and the signals input directly to the combining network.

9. Selects the positions of WIDE, NORMAL and PHANTOM by the center mode control.

In NORMAL position, the signals being cut the range than 110Hz are output to the Center CH through the high-pass filter (HPF) provided at IC1124-1/2 (M5218).

Simultaneously, the frequencies lower than 110Hz are picked up from the low-pass filter (LPF) provided at IC1124-1/2 (M5218) and mixed into FRONT L and R CHs.

In PHANTOM position, the signals for Center CH are mixed into FRONT L and R CHs in a form specifying the level to -3dB.

In WIDE position, the signals are output to the Center CH output as they are.

10. NOISE SEQUENCER

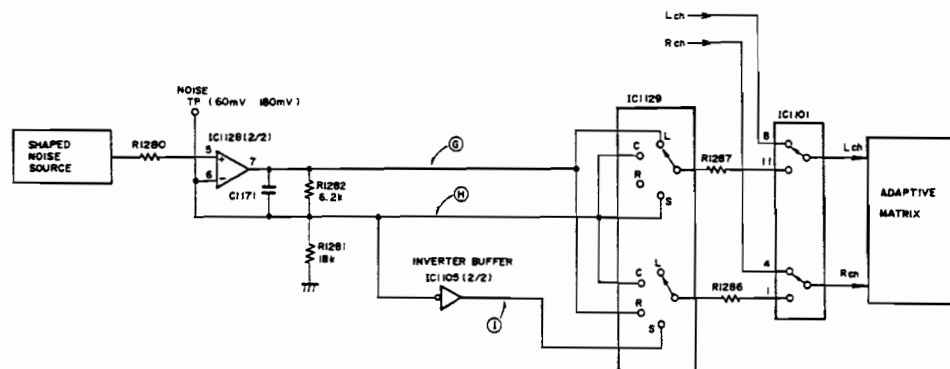


Figure 10-6. Block diagram of NOISE SEQUENCER

The NOISE TP terminal has a noise output from 60mV to 180mV.

In Figure 10-6, when setting the level of ③ to 0dB, the level of ④ will become -3dB.

The noise output at point ① is -3dB, same as at point ④, however, with reverse phase than ④. The output is switched in intervals of approx. 2seconds in sequence of L → C → R → S by IC129 (TC4052). This operation will be repeated while the test tone switch is ON.

11. FOR VSX-7300S/KUC, SD/G AND VSX-7300/KUC TYPES.

NOTES:

- Parts without part number cannot be supplied.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your parts Stock Control, the fast moving items are indicated with the marks $\star\star$ and $\star$.
- $\star\star$ GENERALLY MOVES FASTER THAN $\star$
This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

CONTRAST OF MISCELLANEOUS PARTS.

The VSX-7300S/KUC SD/G and VSX-7300/KUC types are the same as the VSX-9300S/KUC type with the exception of the following sections.

Mark	Symbol & Description	Part No.				Remarks
		VSX-9300S/ KUC type	VSX-7300S/ KUC type	VSX-7300S/ SD/G type	VSX-7300/ KUC type	
	Pro logic assembly	AWX1016				
	AF assembly	AWZ1961	AWZ1971	AWZ1971	AWZ1971	
	VIDEO/SUR/CONTROL assembly	AWZ1965	AWZ1973	AWZ1973	AWZ1973	
	Tuner assembly	AWZ1966	AWZ1966	AWZ1966	AWZ1966	
	Front control A assembly	AWZ1967	AWZ1976	AWZ1976	AWZ1976	
	Headphone assembly	Non supply	Non supply	Non supply	Non supply	
	Motor-volume assembly	Non supply	Non supply	Non supply	Non supply	
	Terminal assembly	Non supply	Non supply	Non supply	Non supply	
	Front control B assembly	Non supply	Non supply	Non supply	Non supply	
	Meter amp assembly	Non supply	Non supply	Non supply	Non supply	
	Rear amp assembly	Non supply	Non supply	Non supply	Non supply	
	Vol IND assembly	Non supply	Non supply	Non supply	Non supply	
Δ $\star$	Power transformer (AC120V,T1)	ATS1144	ATS1144		ATS1144	
Δ $\star$	Power transformer (AC110V,120V-127V,220V, 240V,T1)			ATS1145		
Δ $\star\star$	Fuse (10A/125V,FU1)	AEK-310	AEK-310		AEK-310	
Δ $\star\star$	Fuse (6A/125V,FU1,FU2)			AEK-109		
Δ $\star\star$	Line voltage selector switch (AC110V,120V-127V,220V, 240V,S3)			AKX-507		
Δ $\star\star$	Slide switch (S4)			ASH-004		
Δ $\star\star$	Line voltage selector switch (S2)			AKX1004		
Δ	Fuse holder			AKR-032		
	Power cord	ADG1031	ADG1031	ADG1015	ADG1031	
	Hinge knob (#1-#6)	AAD1394	AAD1406	AAD1406	AAD1406	
	Hinge knob (#6-#0)	AAD1396	AAD1406	AAD1406	AAD1406	
	Hinge knob (OFF,STADIUM, SIMULATED-SURROUND,DOLBY SURROUND)	AAD1398	AAD1397	AAD1397	AAD1397	

Mark	Symbol & Description	Part No.				Remarks
		VSX-9300S/ KUC type	VSX-7300S/ KUC type	VSX-7300S/ SD/G type	VSX-7300/ KUC type	
	Insulator assembly	AMR1434	AMR1350	AMR1350	AMR1350	
	Insulator assembly	AMR1435	AMR1353	AMR1353	AMR1353	
	Front panel	ANB1205	ANB1208	ANB1208	ANB1208	
	Packing case	AHD1437	AHD1440	AHD1439	AHD1438	
	Operating Instruction (English)	ARB1112	ARB1115	ARB1115	ARB1112	
	Operating Instruction (Spanish)			ARC1089		
	Screw			VMZ28P040FZK		
	Remote control unit	AXD1055	AXD1055	AXD1055	AXD1055	
	Spacer			AHB1006		
	Template	AAK1439	AAK1439	AAK1439		

NOTES:

- Parts without part number cannot be supplied.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- The △ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your parts Stock Control, the fast moving items are indicated with the marks ★★ and *.
- ★★ **GENERALLY MOVES FASTER THAN ***
- This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.

AF assembly

The AF assembly (AWZ1971) is the same as the AF assembly (AWZ1961) with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		AWZ1961 (VSX-9300S/KUC)	AWZ1971 (VSX- 7300S/KUC,SD/G, VSX-7300/KUC)	
	C189		CEAS100M25	
	R191,R192		RD1/8PM223J	
	R193,R194,R198		RD1/8PM102J	
	R195		RD1/8PM273J	

VIDEO/SUR/CONTROL assembly

The VIDEO/SUR/CONTROL assembly (AWZ1973) is the same as the VIDEO/SUR/CONTROL assembly (AWZ1965) with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		AWZ1965 (VSX-9300S/KUC)	AWZ1973 (VSX- 7300S/KUC,SD/G, VSX-7300/KUC)	
	C444,C445	CEAS2R2M50		
	R458	RD1/8PM392J		
	R460	RD1/8PM102J		
	R515	RD1/8PM223J		

Front control A assembly

The Front control A assembly (AWZ1975) is the same as the Front control A assembly (AWZ1967) with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		AWZ1967 (VSX-9300S/KUC)	AWZ1975 (VSX- 7300S/KUC,SD/G, VSX-7300/KUC)	
★★	S855,S858	ASG-711		
	R834		RA5S103J	

Motor-volume assembly

The Motor-volume assembly (VSX-7300S/KUC,SD/G,VSX-7300/KUC) are the same as the Motor-volume assembly (VSX-9300S/KUC) with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		VSX-9300S/ KUC type	VSX-7300S/KUC, SD/G,VSX-7300/ KUC types	
★	VR671 Variable resistor with motor	ACX1018	ACX1015	


Meter amp assembly

The Meter amp assembly (VSX-7300S/KUC,SD/G,VSX-7300/KUC) are the same as the Meter assembly (VSX-9300S/KUC) with the exception of the following sections.


Mark	Symbol & Description	Part No.		Remarks
		VSX-9300S/ KUC type	VSX-7300S/KUC, SD/G,VSX-7300/ KUC types	
	C636		CEAS010M50	
	R835	RD1/8PM684J		
	R661,R662		RD1/8PM105J	
	R669		RD1/8PM274J	

12. PANEL FACILITIES

(VSX-9300S) ⑥, ⑦... VSX-9300S only

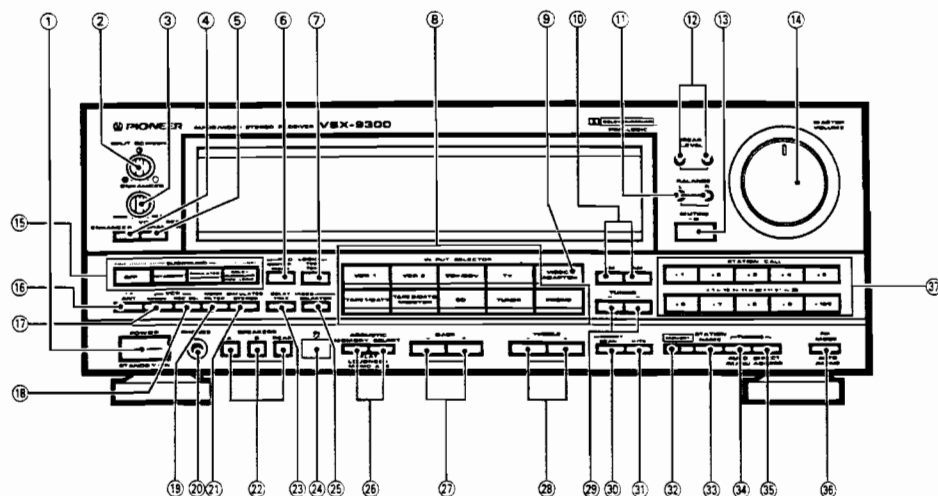

(VSX-7300)

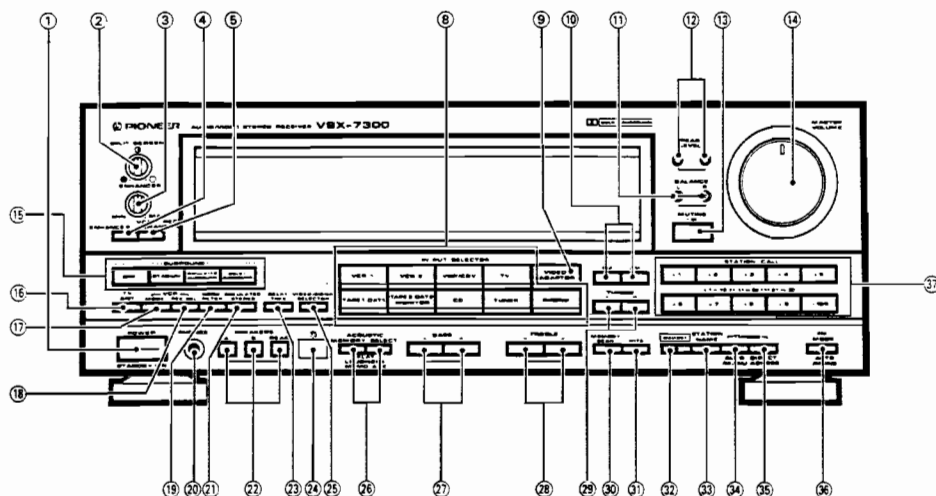

① POWER STANDBY/ON switch

When this switch is pressed, power is supplied to the unit. Press the switch again to turn power off.

[Timer ON/OFF possible]

When the unit is switched ON, ON/OFF control can be performed by means of the optional timer.


NOTE:

When the power is initially turned ON, muting will be applied to prevent sound from being output for about 5 seconds.

② SPLIT SCREEN control

This split screen function can be used when the ENHANCER switch is on.

This control allows you to freely control the area of enhanced picture (on right side of screen) and original picture (non-enhanced, on left side of screen) by means of a vertical line dividing the screen into two sections.

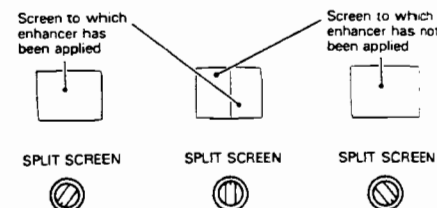

NOTE:

This line is not output from the VCR (VCR1 and VCR2) VIDEO OUT jacks. As a result, the split screen image is not recorded; the recorded image will be entirely that produced by the enhancer function.

③ ENHANCER control

When performing tape copying with a VCR, some deterioration in image quality occurs normally. This control allows compensation for this deterioration in image quality by emphasizing image detail.

NOTE:

The ENHANCER control functions to suppress image deterioration, but will not improve image quality beyond its original state.

④ ENHANCER switch

Press when performing video copying with added video enhancer effects. When the switch is pressed, the monitored video image will be the split screen picture.

Using the SPLIT SCREEN function will enable you to compare the enhanced and original (unenhanced) images.

⑤ VCR1 REC ENHANCER switch

Turn this switch ON to record on the VCR connected to the VCR 1 jacks the video image from VCR 2 or VDP with enhancement applied using the ENHANCER control knob. At this time, the enhancer is turned off for the monitor and VCR2 REC OUT.

NOTE:

The VCR1 REC SELECTOR must be on for the VCR1 REC ENHANCER switch to operate.

⑥ PRO LOGIC CENTER MODE switch (VSX-9300S)

Switches between the four DOLBY SURROUND PRO LOGIC center channel settings. The setting changes in the order listed below each time you press the switch.

NORMAL — Use this setting when a small enclosure center channel speaker incapable of reproducing frequencies below 100Hz is connected.

WIDE — Use this setting when a large enclosure center channel speaker capable of reproducing frequencies below 100Hz is connected.

PHANTOM — Use this setting when no center channel speaker is connected.

OFF — Select this setting before adjusting surround balance. Use a mono [AM radio, etc.] signal and adjust the surround balance control so that volume is minimized from the left, right and rear [surround] speakers.

NOTE:

If no center speaker is used, then mono signals and center channel signal components will not be reproduced at positions other than the PHANTOM position.

⑦ PRO LOGIC TEST TONE switch (VSX-9300S)

Only operates when the DOLBY SURROUND PRO LOGIC surround mode is selected. When the switch is turned ON, "TEST" appears on the central display and a test tone approximately two seconds in duration is generated in the left, center, right and surround speaker channels in succession. Adjust the speaker level controls so that all speakers sound equally loud from the listening position for the optimum surround effect.

NOTE:

Set the center speaker volume level using the amplifier used to drive the center speaker.

⑧ Audio/Video INPUT SELECTOR switches

VCR1: Press when performing playback on a VCR unit.

VCR2: Press when performing playback on a second VCR unit.

VDP/CDV: Press when performing playback on a video disc player (VDP) or CDV player.

TV: Press to watch TV broadcasts from the TV tuner connected to the rear panel TV terminals.

TAPE 1/DAT 1: Press when performing playback on a DAT or tape deck.

TAPE 2/DAT 2 MONITOR: Press when performing playback on a second tape deck and when monitoring recording.

CD: Press when playing compact discs on a CD player.

TUNER: Press when listening to radio broadcasts.

PHONO: Press when playing records on turntable.

⑨ VIDEO ADAPTOR switch

Press when using a video adaptor component connected to the rear panel VIDEO ADAPTOR terminals. An indicator on the display section lights when this switch is set to ON.

⑩ BAND selector switches

FM: Press for FM reception.

AM: Press for AM reception.

⑪ BALANCE switches

Use to adjust the sound volume balance between left and right speakers.

L: Press to decrease the sound on the right side.


R: Press to decrease the sound on the left side.

Press L and R together to bring the volume balance back to center.

NOTE:

The left-right sound volume balance cannot be adjusted independently on the front and surround rear speakers.

Example: If press and keep the "R" switch.

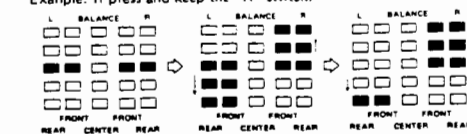

⑫ REAR LEVEL (-, +) switches

Operate only when the surround mode is on.


These switches are used to preset the sound level difference between the front and surround speakers. In this way, after presetting the difference, the overall volume of the front and surround rear speakers can be changed using the MASTER VOLUME control, while still maintaining the sound volume differential.

- : Surround rear speaker volume is reduced.

+ : Surround rear speaker volume is increased.

To reset press — and + together to restore front and surround to the default volume balance setting.

Example: If press and keep the "+" switch.

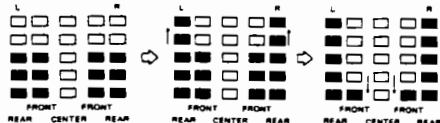

⑪ MUTING switch

Press to temporarily cut off the sound volume. The display section MUTING indicator will flash. When pressed again, the sound will return to its previous level.

⑫ MASTER VOLUME control

Use to simultaneously adjust the sound volume from the front and surround speakers.

⑬ SURROUND Mode Selector Switches

OFF:

To cancel the surround function.

STADIUM:

Ideal for sports broadcasts, etc.

SIMULATED SURROUND:

Gives concert-hall presence to monaural sound (AM, TV, etc.).

DOLBY SURROUND PRO LOGIC (VSX-9300S)

DOLBY SURROUND (VSX-7300)

Select this setting when watching video tapes or video discs bearing the DOLBY STEREO or DOLBY SURROUND mark.

⑭ TV ANT (VIDEO/TV) selector switch

This switch can be used in place of the TV ANT switch on the RF Modulator JA-RF5 (sold separately). This is effective only when the JA-RF5's TV ANT switch is set to the VIDEO position. For example:

In VIDEO mode (TV-ANT indicator in the display section goes out): Allows you to use video components connected to the receiver.

In TV mode (TV-ANT indicator in the display section lights): Connects the TV antenna, thus allowing you to view normal TV broadcasts. The TV mode is selected when the receiver's power is off.

NOTE:

 
- When in the VIDEO mode, no sound will be produced from the TV set's speakers. Listen using the speakers connected to the receiver.
- Noise may be produced if the TV set's volume control is turned up. Turn down the set's volume control when listening.
- This switch functions only when the TV ANT selector switch on the RF Modulator is set to "VIDEO".
- This is set to VIDEO when the power is turned on.

⑮ VCR MODE switch

Toggles the VCR 1 signal between mono and stereo. It operates both during playback and during recording.

⑯ VCR1 REC SELECTOR switch

Use this switch to select the VCR 1 copy mode independent of the INPUT SELECTOR switch setting. Each time you press it the unit switches between the following three settings. The current setting is shown on the central display section.



NOTE:

At the OFF position, the video source selected by the INPUT SELECTOR is output at the REC terminal.

⑰ VCR NOISE FILTER switch

If tape hiss is noticeable while performing playback of video cassette tapes, press this switch to reduce the noise. After pressing this switch, "VCR NOISE FILTER" will appear on the display panel.

NOTE:

- This switch can be used when either VCR1 or VCR2 function switches is selected.
- The effectiveness in reducing high-frequency hiss noise varies depending on the type of tape used, the recording level, and other conditions.

⑱ PHONES jack

Connect the plug on your headphones to this jack. To listen to a program through the headphones, set all SPEAKERS A, B and REAR switches to the OFF position.

⑲ SIMULATED STEREO switch

Press to produce a simulated stereo effect when listening to monaural sources (for example AM or TV broadcasts). "SIMULATED STEREO" appears on the display section.

NOTE:

This effect is not produced through the surround rear speakers.

 
⑳ SPEAKER switches (A, B, REAR)

ON/OFF switches for the A, B and rear surround speaker systems. An indicator on the display section lights when any of these switches is set to ON.

㉑ DELAY TIME switch

Operates only when the surround mode is ON.


Switches the surround delay time in three steps. For DOLBY SURROUND PRO LOGIC (VSX-9300S) DOLBY SURROUND (VSX-7300), 20ms is standard.



㉒ Remote signal sensor

㉓ VIDEO SIGNAL SELECTOR switch

 When or recording simulcast programs, the recorded image can be selected from among VCR1, VCR2, VDP and TV.



The current setting is shown by an indicator on the display section.

NOTE:

When using a VCR for sound recording only, follow the operating instructions of the VCR.

 
㉔ ACOUSTIC Switch

MEMORY:

Pressing this switch will result in the memorization of the sound quality (tone control condition). Press again to cancel this mode.

SELECT

- This switch is used to preset the five acoustic memories (A—E).
- This switch is also used to recall previously set sound quality settings. Each time you press the switch, the sound quality setting advances in the order shown below.



FLAT: For flat (normal) frequency response.

LOUDNESS: Emphasizes the low- and high- frequency ranges. Produces a fuller sense of sound, particularly when listening at low volume.

A—E: Memorized acoustic memory settings.

Presetting the acoustic memory

- ① Adjust the sound quality as desired using the BASS and TREBLE control switches.

■ Settings are shown by the TONE indicator on the display section.

- ② Press the ACOUSTIC MEMORY switch.

■ The TONE indicator on the display section blinks on and off.

- ③ Press the ACOUSTIC SELECT switch and select the sign to which you wish to assign the setting (A — E).

- The sound quality setting is memorized approximately two seconds after you last press the ACOUSTIC SELECT switch. In this way, the desired tone will be preset in one of the five acoustic memory positions. To preset four other desired tone settings, perform the same operations.

To recall the memorized tone settings, press the ACOUSTIC SELECT switch to select the desired memory position. In this way, five different tone settings can be preset and recalled in the five positions of the acoustic memory.

㉕ BASS control switches

Use to adjust the low-frequency level. Press the + switch to increase low-frequency level, and the — switch to decrease it.

The TONE indicator appears on the display section.

When both sides (+, —) of the BASS control are pressed simultaneously, the base response will be set to the flat (normal) condition.

㉖ TREBLE control switches

Use to adjust the high-frequency level. Press the + switch to increase high-frequency level, and the — switch to decrease it.

The TONE indicator appears on the display section.

When both sides (+, —) of the TREBLE control are pressed simultaneously, the treble response will be set to the flat (normal) condition.

㉗ TUNING switches

+ : Performs tuning from the currently displayed station frequency in ascending frequency order.

— : Performs tuning in order to descending frequencies.

㉘ MEMORY SCAN switch

Operates when the INPUT SELECTOR is set to TUNER. Station frequencies assigned to the STATION CALL switches are tuned in, one after another, beginning with the current station no., for approximately 5 seconds each.

The display section SCAN indicator will light. Press the switch again and the tuner remains tuned in to the station playing when the switch was pressed the second time.

Station frequencies not assigned station numbers in the memory are skipped.

㉙ HITS (Hyper Intelligent Tuning System) switch

- If the HITS switch is pressed at the currently displayed station frequency, the receiver searches up and down the frequency for the next station (The SEARCH indicator in the display section lights at this time.) and stops at the first one it finds.

- If the HITS switch is pressed during STATION NAME input (see page 25), the receiver performs a memory search in order of ascending station number for memorized stations whose names begin with the same letter as the station just input.

- If the HITS switch is pressed during input of numbers for DIRECT ACCESS tuning, the receiver sets the remaining digits which have not yet been input to "0", searches for the corresponding frequencies, and stops on the first station it finds.

NOTE:

- The system searches within successive 1MHz ranges for stations which can be tuned in. During DIRECT ACCESS tuning, it searches up and down for a station until it reaches the edges of the band. If no receivable station is found within the band range, the receiver returns to the state it was in before the HITS switch was pressed.
- If the upper (or lower) frequency limit of the receiver is encountered during HITS operation, the receiver stops searching in that direction but continues to search in the other.

㉚ MEMORY switch

When the unit is in the frequency display mode, pressing this switch will result in the memorization of the current broadcast band, reception frequency ACOUSTIC MEMORY position, and FM AUTO/MONO mode.

This switch is also used to input station names (see page 25).

㉛ STATION NAME switch

This switch is used when inputting station names (see page 25).

⑭ AUTO/MANUAL TUNING selector switch

This switch is used to select the tuning mode. The AUTO tuning mode has been selected when the TUNING AUTO indicator lights.

AUTO tuning

When the — or + TUNING switch is pressed, the receiver automatically scans the broadcast station frequencies. When a broadcast is detected, the scanning stops at that frequency.

NOTE:

Pressing the TUNING switch (— or +) while scanning is taking place causes scanning to stop.

MANUAL tuning

This is the usual tuning method. Each time the — or + TUNING switch is pressed, the reception frequency is changed by one tuning step. When pressed continuously, the receiver scans the broadcast frequencies continuously.

⑮ DIRECT ACCESS TUNING switch

When this switch is pressed, the STATION CALL switches function as ten-key number switches for direct input of the desired reception frequency.

If the input station falls outside of the receiver's tuning range, the display section will display a message: "UPPER" if the frequency is too high and "LOWER" if it is too low.

⑯ FM MODE AUTO/MONO selector switch

Use to select the auto stereo mode or monaural mode when listening to FM broadcasts. The monaural mode has been selected when the FM MONO indicator in the display section is lit.

Auto stereo mode:

Normally, leave in this mode for reception. When a stereo FM broadcast is received, it will be automatically reproduced in stereo.

Monaural mode:

When receiving distant stations or stations with weak broadcast signals, the input signal may be weak, thus resulting in increased noise during FM stereo broadcasts. In this event, setting the receiver to the monaural mode will reduce the noise. In this case, however, FM stereo broadcasts will be reproduced in monaural sound.

NOTE:

This switch has no effect on reception of AM broadcasts.

⑰ STATION CALL RANDOM 30 CH switches

- These switches are used to preset and recall desired broadcasting stations, FM AUTO/MONO mode and ACOUSTIC MEMORY mode. Station call operation example:

If you press the key:


- One time — station 2 is selected.
- Two times — station 12 is selected.
- Three times — station 22 is selected.

NOTE:

Pressing the STATION CALL switches when a component other than TUNER is selected causes the INPUT SELECTOR setting to switch to TUNER.

- They are also used when performing direct access tuning.

[DISPLAY SECTION]

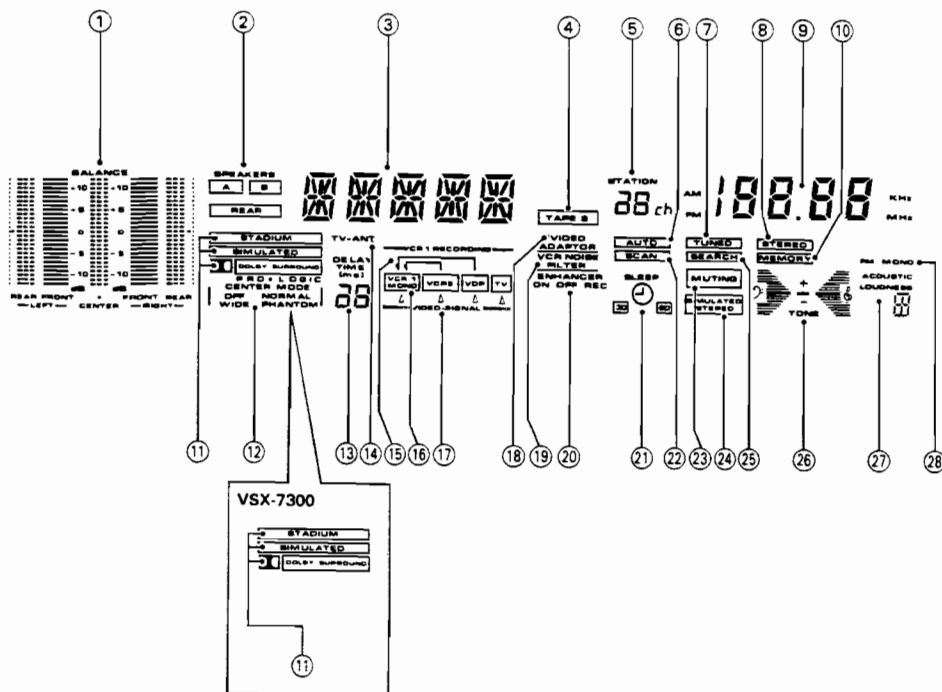

[DISPLAY SECTION]

- ① **BALANCE/LEVEL meters**
- ② **SPEAKERS A, B, REAR indicators**
Shows which speaker system (or systems) are switched ON.
- ③ **Alphanumeric display**
- ④ **TAPE 2 indicator**
Lights when the INPUT SELECTOR is set to TAPE 2 MONITOR ON.
- ⑤ **STATION display**
Shows the channel selected with the STATION CALL switch.
- ⑥ **AUTO indicator**
Lights when the FM MODE is auto stereo.
- ⑦ **TUNED indicator**
Lights when a station is tuned.
- ⑧ **STEREO indicator**
Lights when a stereo FM broadcast is being received.
- ⑨ **Frequency display**
- ⑩ **MEMORY indicator**
- ⑪ **Surround mode indicators**
- ⑫ **DOLBY SURROUND PRO LOGIC CENTER MODE indicators**
(VSX-9300 only)
- ⑬ **DELAY TIME display**
Shows the delay time during surround operation.
- ⑭ **TV-ANT indicator**
Lights when TV mode is selected with the TV ANT switch.
- ⑮ **VCR1 RECORDING display**
Displays a "V" symbol to indicate the copy mode selected with the VCR1 REC SELECTOR switch.

- ⑯ **VCR1 MONO indicator**
- ⑰ **VIDEO SIGNAL SELECTOR indicators**
Shows the video component selected with the V-SIGNAL SELECTOR switch.
- ⑱ **VIDEO ADAPTOR indicator**
Lights when the VIDEO ADAPTOR switch is in the ON position.
- ⑲ **VCR NOISE FILTER indicator**
Lights when the VCR NOISE FILTER switch is in the ON position.
- ⑳ **ENHANCER ON, OFF, REC indicators**
Shows the current VIDEO enhancer setting.
- ㉑ **SLEEP timer indicators**
Shows the SLEEP timer setting (the length of time from the set time to the point at which power will switch off) only remote control.
- ㉒ **SCAN indicator**
Lights during memory scan operation.
- ㉓ **MUTING indicator**
- ㉔ **SIMULATED STEREO indicator**
- ㉕ **SEARCH indicator**
Lights during HITS operation.
- ㉖ **TONE level meter**
Shows the settings of the BASS and TREBLE level.
- ㉗ **ACOUSTIC display**
Shows the setting of the ACOUSTIC SELECT switch.
- ㉘ **FM MONO indicator**
Lights when the FM MONO mode is selected with the FM MODE switch.

① FM/AM ANTENNA terminals

Use these antenna terminals for reception of normal FM and AM broadcasts.

- For details regarding antenna connection, see the section "Hints for Better Reception".

② GND terminal

Connect the turntable ground lead to this terminal.

③ SURROUND BALANCE control (DOLBY SURROUND) [VSX-7300]

Use to adjust the surround effect from the surround rear speakers. Normally leave in the center position. When inputting a monaural signal and front speakers are OFF position, adjust so that the surround rear output is minimum.

Set the front panel PRO LOGIC CENTER MODE switch to the OFF position. Then adjust balance so that you hear minimum volume from the other channels.

④ SURROUND CENTER OUT jack

This is the Dolby surround center channel signal output jack. With the VSX-7300, it can also be used as a 3D (single subwoofer) system MONO output.

NOTE FOR VSX-9300S

A signal is output from the CENTER OUT jack only when the SURROUND MODE is set to DOLBY SURROUND.

⑤ VIDEO ADAPTOR jacks

Use to connect a video adaptor component such as a video enhancer or color corrector.

⑥ VIDEO OUT jacks

Use to connect a TV set for watching program materials from a VCR or VDP connected to this unit.

[TO MONITOR TV jacks]

Connect to monitor TV or to TV sets with video input terminals.

[TO RF MODULATOR jack]

Use to connect a conventional TV set. When performing connections, the RF MODULATOR JA-RF5 (sold separately) is required. By connecting an RF modulator, video signal can be converted to VHF signal (U.S. channel 3 or 4), thus allowing this unit to be used to view the selected source on a conventional television set.

NOTE

- A "conventional TV set" has an antenna input terminals only.
- Do not allow any of the cord's conductors to protrude from the terminals or touch any other conductors. Malfunctioning or breakdowns may occur when conductors come into contact with each other.

⑦ FRONT SPEAKERS terminals

 
A: Connect to a first set of speakers.

B: Connect to a second set of speakers.

Please refer to item 8. Front speakers impedance selector switch.

⑧ Front speakers impedance selector switch

Set this switch to match the impedance of your speakers.



- When using a pair of speakers:

Impedance of a speaker	Selector position
4Ω to less than 8Ω	①
8Ω or more	②

- When using two pairs of speakers:

Select ① as the selector switch position and use speakers having impedance of 8 ohms or more.

NOTE:

Turn off the receiver's power before changing the impedance selector switch setting.

⑨ AC OUTLETS

(SWITCHED) TOTAL 300W MAX

Power supplied through these outlets is turned on and off by the receiver's POWER switch. Total electrical power consumption of connected equipment should not exceed 300W.

(UNSWITCHED) 200W MAX

Power flows continually to this outlet, regardless of whether the receiver is switched ON or OFF. Electrical power consumption of the connected equipment should not exceed 200W.

The equipment should be disconnected by removing the power plug from the wall socket when not in regular use, e.g. when on vacation.

NOTE:

Do not connect appliances with high power consumption such as heaters, irons, or television sets to the AC OUTLETS in order to avoid overheating or fire risk.

This can cause the receiver to malfunction.

⑩ Audio INPUT jacks

PHONO Connect to turntable.

CD Connect to compact disc player.

⑪ CONTROL IN, OUT jacks


Used for system control with other Pioneer components bearing the **SR** mark.

IN For connection from the CONTROL OUT jack of another component.

OUT For connection to the CONTROL IN jack of another component.

NOTE:

The receiver's remote sensor does not function when a plug is inserted in the IN jack. To operate, point the remote control unit at the remote sensor on the component to which the receiver's IN jack is connected.

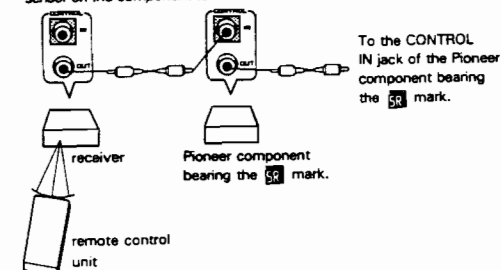

⑫ TAPE1/DAT1 jacks

Connect a DAT (digital audio tape deck) or your primary analog tape deck to these jacks.

Connecting for Recording

The tape recording jack (TAPE REC) on the tape deck or DAT should be connected to the REC side of the TAPE1/DAT1 jack on the receiver with a pin plug connecting cord.

Connecting for Playback

Connect the TAPE PLAY jack on the tape deck or DAT to the PLAY side of the TAPE1/DAT1 jack on the receiver with a pin plug connecting cord.

⑬ TAPE2/DAT2 jacks

Connect a second tape deck to or DAT these jacks.

Connecting for Recording

The tape recording jack (TAPE REC) on the tape deck should be connected to the REC side of the TAPE2/DAT2 jack on the receiver with a pin plug connecting cord.

Connecting for Playback

Connect the TAPE PLAY jack on the tape deck to the PLAY side of the TAPE2/DAT2 jack on the receiver with a pin plug connecting cord.

⑭ TV jacks

Use these jacks if wish to connect a TV tuner having both video and audio outputs.

[VIDEO IN]

Connect the TV tuner's video output to this jack.

[AUDIO IN (L, R)]

Connect the TV tuner's audio output to these jacks.

⑮ VDP/CDV jacks

[VIDEO IN]

When watching the video image from a LD player (VDP), CDV player or a VCR used for playback, connect its VIDEO OUTPUT jack here.

[AUDIO IN (L, R)]

When playing back the audio channel from a LD player (VDP), CDV player or a VCR used for playback, connect its AUDIO OUTPUT jacks here.

⑯ VCR1 jacks

[VIDEO OUT]

When copying program material from the video component connected to the VCR2, VDP or TV jacks, connect to the VIDEO INPUT jack of the VCR used for recording.

[AUDIO OUT (L, R)]

When copying program material from the video component connected to the VCR2 or VDP jacks, or when recording music from an audio component source, connect to the AUDIO INPUT jacks of the VCR used for recording.

[VIDEO IN]

When monitoring the video image from a VCR used for playing, connect its VIDEO OUTPUT jack here.

[AUDIO IN (L, R)]

When monitoring the audio channel from a VCR used for playing, connect its AUDIO OUTPUT jacks here.

⑰ VCR2 jacks

[VIDEO OUT]

When copying program materials from the video component connected to the VCR1, VDP or TV jack, connect to the VIDEO INPUT jack of the VCR used for recording.

[AUDIO OUT (L, R)]

When copying program materials from the video component connected to the VCR1, VDP or TV jacks, or when recording music from an audio component source, connect to the AUDIO INPUT jacks of the VCR used for recording.

[VIDEO IN]

When monitoring the video image from a VCR used for playing, connect its VIDEO OUTPUT jack here.

[AUDIO IN (L, R)]

When monitoring the audio channel from a VCR used for playing, connect its AUDIO OUTPUT jacks here.

⑱ FRONT PRE-OUT jacks

When a separate power amplifier is used to drive the front speakers, connect the power amplifier to these jacks.

⑲ FRONT POWER IN jacks

When a separate pre-amplifier is connected and this unit is used as power amplifier, connect the pre-amplifier to these jacks.

⑳ REAR SPEAKERS terminals

Connect the surround rear speakers to these terminals.

NOTE:

Do not allow any of the cord's conductors to protrude from the terminals or touch any other conductors. Malfunctioning or breakdowns may occur when conductors come into contact with each other.

㉑ Power cord

13. REMOTE CONTROL UNIT LEARNING FUNCTION (Programmable remote control unit only)

Introduction

This system remote control can "learn" the commands of other remote control units, regardless of manufacturer, as long as the other unit is of the infrared type.


In some cases you may still need the original remote control unit for special situations. But as a rule, you will be able to use this Pioneer remote for most system control needs, including video as well as audio equipment.

NOTE:

When using the "LEARN" mode it is a good idea to take the two remote control units to another room. This avoids problems such as sudden high volume output or accidental tape erasure that may occur if particular infrared command signals reach your components. Alternatively, you may wish to unplug your component system. Simply turning off the power may not be sufficient since power on/off switching may also be remote controllable.

Which keys can be programmed with new commands?


There are two mode selector switches near the front end of the remote. The LEARN mode selector lets you select the USE or LEARN function. The LEARN mode allows the Pioneer remote to "LEARN" the commands of other remote control units. The USE mode allows you to use this remote control unit for operation of your system.

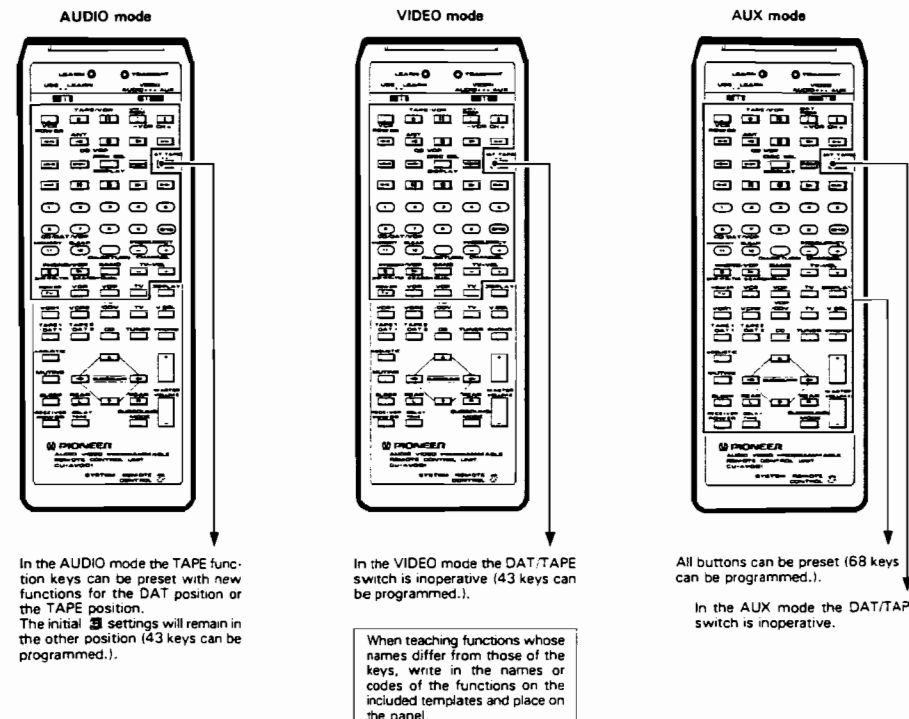

[Operation Example]

Using the remote control unit of your VCR to program the playback command.

- It is recommended that the name of the key and its function correspond. This is convenient when operating equipment.

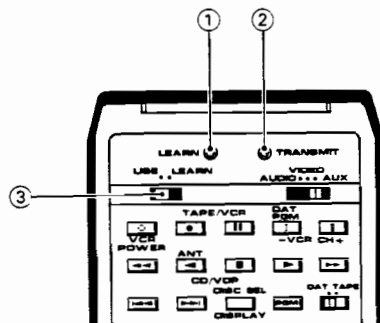**① LEARN indicator**

This indicator shows the remote control unit operating condition.

LIT:

Learning is possible.

OFF:

Regular remote control functions are performed.

FLASHING:

Means the key is not available for programming a new command in the current mode.

② TRANSMIT indicator

This indicator flashes when remote control signals are sent.

③ LEARN selector switch

Set as follows:

LEARN:


This position is used for storing the codes of your remote control unit.

USE:

Set to this position after codes have been stored in the LEARN position. Set to this position for normal operation.

[Operation example]

1. Set the LEARN switch of the programmable remote control unit to the LEARN position and set the TRANSMIT mode selector switch to the VIDEO position.
2. Place the transmission sections of the programmable remote control unit and the remote control of the VCR facing each other.

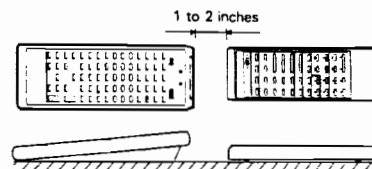

- Place the two units on a table, separated by 2 to 5 cm (1 to 2 inches).

Memorization will not be possible if they are too close.

3. Hold down the VCR PLAY key of the Programmable remote control unit until the LEARN indicator light up, then release the key.
4. Hold down the PLAY key of the VCR remote control unit.
5. Release the key of the VCR remote control unit after making sure that the LEARN indicator has gone out on the Pioneer remote control unit.

NOTE:

If the LEARN indicator flashes, it indicates that you are trying to preset a key not available for the learning function, or otherwise the program capacity has been exceeded, the function programmed last will not be memorized correctly. All previously programmed functions, however, will be retained in memory and may be used as they are if the last function is not essential.

6. Set the LEARN selector switch of the programmable remote control unit to the USE position.
 - The previous code (Pioneer uniform remote control code or code for other equipment) is erased and replaced by the new code.
7. Check that the program works.
 - Try actual operation and make sure the unit works properly.
 - If the VCR does not operate when pressing the key, change angle, position and distance between the remote control units and repeat the programming procedure.
 - When programming, make sure that the function indications (for example, ►, ►►, ■) on the other remote control unit and the programmable remote control unit are the same. This will facilitate operation.

Questions and Answers about the Learning Function

Q: The remote control unit of my VCR has two REC (recording) keys. They both have to be pressed at the same time to start recording. What is the learning procedure in this case?

A: Hold one of the keys on the programmable remote control depressed (for example the VCR ● key) until the LEARN indicator lights up, and then press the two keys on the VCR remote control simultaneously.

Q: The remote control unit of my VCR has a REC (recording) key and a PLAY (playback) key and they both have to be pressed at the same time to start recording. What is the learning procedure in this case?

A: Hold one of the keys on the programmable remote control depressed (for example the VCR ● key) until the LEARN indicator lights up, and then press the REC and PLAY keys on the VCR remote control simultaneously.

- As described above, operations which require two keys to be pressed at the same time are programmed by pressing the two keys simultaneously.

Operating other equipment using the programmable remote control unit


1. Set the LEARN switch of the programmable remote control unit to the USE position.
2. Set the TRANSMIT mode selector switch to the desired position (AUDIO/VIDEO/AUX).
 - Set to the VIDEO position for programming as described in the example.
3. Press the key of the desired function.
 - The TRANSMIT indicator lights up while the remote control unit is sending codes.

NOTE:


- When operating programmed keys, always set the LEARN switch to the USE position. Operation is not possible in the LEARN position.
- For functions which require two keys to be pressed at the same time (recording etc.) or functions for which several codes are sent simultaneously (auto functions, timer programming, etc.) the programming procedure is different and improper operation may occur.

Returning to the Initial Settings

1. Set the LEARN selector switch to the LEARN position.
2. Remove the battery cover.

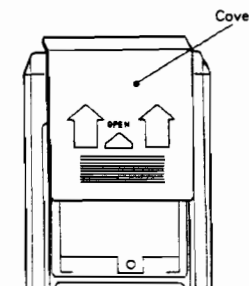

3. Press any of the keys available for programming. The LEARN indicator will illuminate.
4. Use a ball-point pen or similar object to press the RESET key while the LEARN indicator is flashing.

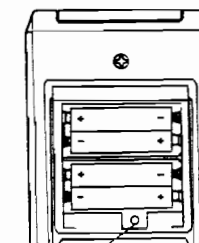

Reset button

- The programmed functions for the AUDIO, VIDEO and AUX positions are cleared, and the remote control unit is reset to the Pioneer uniform remote control codes.
- Press the button gently, do not use excessive force.

14. SPECIFICATIONS

Amplifier section (POWER IN) FRONT

Continuous average power output of 125 watts* per channel, min., at 8 ohms, from 20 Hz to 20,000 Hz with no more than 0.005% total harmonic distortion.**

*Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifier.

**Measured by Audio Spectrum Analyzer.

Continuous Power Output	
1 kHz, 0.7%, 8 Ω (Rear)	30W + 30W
Dynamic Power (2 Ω /4 Ω /8 Ω)	280 W/260 W/185 W
Damping Factor	
1 kHz, 8 Ω	100
Input (Sensitivity/Impedance)	
PHONO MM	2.5 mV/47 k Ω
CD, TAPE 1/DAT 1, TAPE 2/DAT 2, TV, VDP/CDV,	
VCR 1, VCR 2	150 mV/47 k Ω
FRONT POWER AMP IN	1 V/47 k Ω
Phono Overload Level (T.H.D. 0.08%, 1000 Hz)	
PHONO MM	150 mV
Frequency Response	
PHONO MM	20 Hz to 20,000 Hz ± 0.3 dB
CD, TAPE 1/DAT 1, TAPE 2/DAT 2, TV, VDP/CDV,	
VCR 1, VCR 2	5 Hz to 100,000 Hz ± 0.3 dB
Output (Level/Impedance)	
TAPE 1/DAT 1 REC, TAPE 2/DAT 2 REC	150 mV/2.2 k Ω
VCR 1 OUT, VCR 2 OUT	150 mV/2.2 k Ω
FRONT PRE AMP OUT	1 V/220 Ω
Tone Control	
BASS 100 Hz	± 8 dB
TREBLE 10 kHz	± 8 dB
VCR Noise Filter	100 Hz, 5 kHz: -3 dB
Loudness Contour	6 dB (100 Hz)
	3 dB (10 kHz)
Signal-to-Noise Ratio (IHF, short circuited, A network)	
PHONO MM	82 dB
CD, TAPE 1/DAT 1, TAPE 2/DAT 2, TV, VDP/CDV,	
VCR 1, VCR 2	98 dB
Signal-to-Noise Ratio (EIA, at 1 W (1 kHz))	
PHONO MM	77 dB
CD, TAPE 1/DAT 1, TAPE 2/DAT 2, TV, VDP/CDV	
VCR 1, VCR 2	80 dB
SURROUND Section	
CENTER OUT (L = R = 106 mV input) (Level/Impedance)	
	2 V/4.7 k Ω

VIDEO Section

Input (Level/Impedance)	
VCR 1, VCR 2, VDP/CDV, TV, ADAPTOR	1Vp-p/75 Ω
Output (Level/Impedance)	
VCR 1, VCR 2, ADAPTOR, MONITOR	1Vp-p/75 Ω
Frequency Response	
VCR 1, VCR 2, VDP/CDV, TV, ADAPTOR-MONITOR	
	5 Hz - 10 MHz ± 0.5 dB
Signal-to-Noise Ratio	55 dB
Cross Talk	55 dB (3.58 MHz)
Enhancer	2 MHz ± 3 dB

FM Tuner Section

Frequency Range	87.5 MHz to 108 MHz
Usable Sensitivity	Mono: 10.8 dBf, IHF (0.95 μ V/75 Ω)
50 dB Quieting Sensitivity	Mono: 15.3 dBf, (1.6 μ V/75 Ω)
	Stereo: 37.1 dBf, (19.5 μ V/75 Ω)
Signal-to-Noise Ratio	Mono: 80 dB (at 65 dBf)
	Stereo: 76 dB (at 85 dBf)
Distortion	Mono: 0.08% (100 Hz)
	0.08% (1 kHz)
	0.2% (6 kHz)
	Stereo: 0.2% (100 Hz)
	0.15% (1 kHz)
	0.3% (6 kHz)
Capture Ratio	1.0 dB
Alternate Channel Selectivity	65 dB (400 kHz)
Stereo Separation	50 dB (1 kHz)
Frequency Response	30 Hz to 15 kHz ± 0.5 dB
Image Interference Ratio	50 dB
IF Interference Ratio	80 dB
AM Suppression Ratio	55 dB
Spurious Interference Ratio	70 dB
Antenna Input	300 Ω balanced
	75 Ω unbalanced

AM Tuner Section

Frequency Range	530 kHz to 1,700 kHz
Sensitivity (IHF, Loop antenna)	300 μ V/m
Selectivity	30 dB
Signal-to-Noise Ratio	50 dB
Image Interference Ratio	40 dB
IF Interference Ratio	65 dB
Antenna	Loop antenna

Miscellaneous

Power requirements	AC 120V, 60 Hz
Power consumption	550 W, 660 VA
In standby condition	3 W
AC Outlets	
SWITCHED x 2	TOTAL 300 W MAX
UNSWITCHED x 1	200 W MAX
Dimensions	420 (W) x 156 (H) x 421 (D) mm
	16-9/16 (W) x 6-1/8 (H) x 16-9/16 (D) in
Weight (without package)	12 kg (26 lb 7 oz)

Furnished Parts

FM T-type antenna	1
AM Loop antenna	1
Dry cell battery	
VSX-9300S (LR03/AM-4)	4
VSX-7300 (R03/UM-4)	2
Remote control unit	1
Operating Instructions	1
Templates added (VSX-9300S only)	2

NOTE:

Specifications and the design subject to possible modifications without notice due to improvements.