

AV RECEIVER RX-V573/HTR-5065

SERVICE MANUAL

Note: When the following parts are replaced, the model name MUST be written to the back-up IC (EEPROM: IC22 on DIGITAL P.C.B.) to have proper operation. (For details, refer to "S5. SOFT SWITCH" menu of the self-diagnostic function.)

注意: 下記の部品を交換した場合、正常動作のためにモデル名をバックアップ IC (EEPROM : DIGITAL P.C.B. の IC22) へ書き込む必要があります。(詳細は、ダイアグの "S5. SOFT SWITCH" メニューを参照してください。)

- **DIGITAL P.C.B.**
- **EEPROM: IC22 on DIGITAL P.C.B.**

IMPORTANT NOTICE

This manual has been provided for the use of authorized YAMAHA Retailers and their service personnel. It has been assumed that basic service procedures inherent to the industry, and more specifically YAMAHA Products, are already known and understood by the users, and have therefore not been restated.

WARNING: Failure to follow appropriate service and safety procedures when servicing this product may result in personal injury, destruction of expensive components, and failure of the product to perform as specified. For these reasons, we advise all YAMAHA product owners that any service required should be performed by an authorized YAMAHA Retailer or the appointed service representative.

IMPORTANT: The presentation or sale of this manual to any individual or firm does not constitute authorization, certification or recognition of any applicable technical capabilities, or establish a principle-agent relationship of any form.

The data provided is believed to be accurate and applicable to the unit(s) indicated on the cover. The research, engineering, and service departments of YAMAHA are continually striving to improve YAMAHA products. Modifications are, therefore, inevitable and specifications are subject to change without notice or obligation to retrofit. Should any discrepancy appear to exist, please contact the distributor's Service Division.

WARNING: Static discharges can destroy expensive components. Discharge any static electricity your body may have accumulated by grounding yourself to the ground buss in the unit (heavy gauge black wires connect to this buss).

IMPORTANT: Turn the unit OFF during disassembly and part replacement. Recheck all work before you apply power to the unit.

CONTENTS

TO SERVICE PERSONNEL	2
FRONT PANELS	3
REAR PANELS	4-7
REMOTE CONTROL PANEL	8
SPECIFICATIONS / 参考仕様	9-14
INTERNAL VIEW	15
SERVICE PRECAUTIONS / サービス時の注意事項	15
DISASSEMBLY PROCEDURES / 分解手順	16-18
UPDATING FIRMWARE / ファームウェアのアップデート	19-20
SELF-DIAGNOSTIC FUNCTION / ダイアグ (自己診断機能)	21-50

POWER AMPLIFIER ADJUSTMENT / パワーアンプ調整	51
DISPLAY DATA	52-53
IC DATA	54-73
BLOCK DIAGRAMS	74-75
PRINTED CIRCUIT BOARDS	76-89
PIN CONNECTION DIAGRAMS	90
SCHEMATIC DIAGRAMS	91-100
REPLACEMENT PARTS LIST	101-115
REMOTE CONTROL	116-118
CONFIGURING THE SYSTEM SETTINGS	119
システム設定を変更する	120
FIRMWARE UPDATING PROCEDURE	121-126
ファームウェア更新手順	127-132



このサービスマニュアルは、エコマーク認定の再生紙を使用しています。
This Service Manual uses recycled paper.



■ TO SERVICE PERSONNEL


1. Critical Components Information

Components having special characteristics are marked Δ and must be replaced with parts having specifications equal to those originally installed.

2. Leakage Current Measurement (For 120V Models Only)

When service has been completed, it is imperative to verify that all exposed conductive surfaces are properly insulated from supply circuits.

- Meter impedance should be equivalent to 1500 ohms shunted by 0.15 μ F.

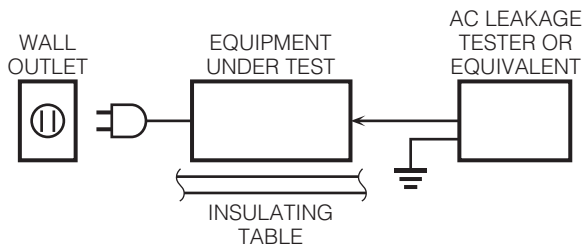

- Leakage current must not exceed 0.5mA.
- Be sure to test for leakage with the AC plug in both polarities.



For U model

“CAUTION”

“F5402: FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE ONLY WITH SAME TYPE 6A, 125V FUSE.”

For C model

CAUTION

F5402: REPLACE WITH SAME TYPE 6A, 125V FUSE.

ATTENTION

F5402: UTILISER UN FUSIBLE DE RECHANGE DE MÊME TYPE DE 6A, 125V.

WARNING: CHEMICAL CONTENT NOTICE!

This product contains chemicals known to the State of California to cause cancer, or birth defects or other reproductive harm.

DO NOT PLACE SOLDER, ELECTRICAL/ELECTRONIC OR PLASTIC COMPONENTS IN YOUR MOUTH FOR ANY REASON WHATSOEVER!

Avoid prolonged, unprotected contact between solder and your skin! When soldering, do not inhale solder fumes or expose eyes to solder/flux vapor!

If you come in contact with solder or components located inside the enclosure of this product, wash your hands before handling food.

About lead free solder / 無鉛ハンダについて

All of the P.C.B.s installed in this unit and solder joints are soldered using the lead free solder.

Among some types of lead free solder currently available, it is recommended to use one of the following types for the repair work.

- Sn + Ag + Cu (tin + silver + copper)
- Sn + Cu (tin + copper)
- Sn + Zn + Bi (tin + zinc + bismuth)

Caution:

As the melting point temperature of the lead free solder is about 30°C to 40°C (50°F to 70°F) higher than that of the lead solder, be sure to use a soldering iron suitable to each solder.

本機に搭載されているすべての基板およびハンダ付けによる接合部は無鉛ハンダでハンダ付けされています。

無鉛ハンダにはいくつかの種類がありますが、修理時には下記のような無鉛ハンダの使用を推奨します。


- Sn+Ag+Cu (錫 + 銀 + 銅)
- Sn+Cu (錫 + 銅)
- Sn+Zn+Bi (錫 + 亜鉛 + ビスマス)

注意：


無鉛ハンダの融点温度は通常の鉛入りハンダに比べ 30 ～ 40°C程度高くなっていますので、それぞれのハンダに合ったハンダごてをご使用ください。

FRONT PANELS

RX-V573

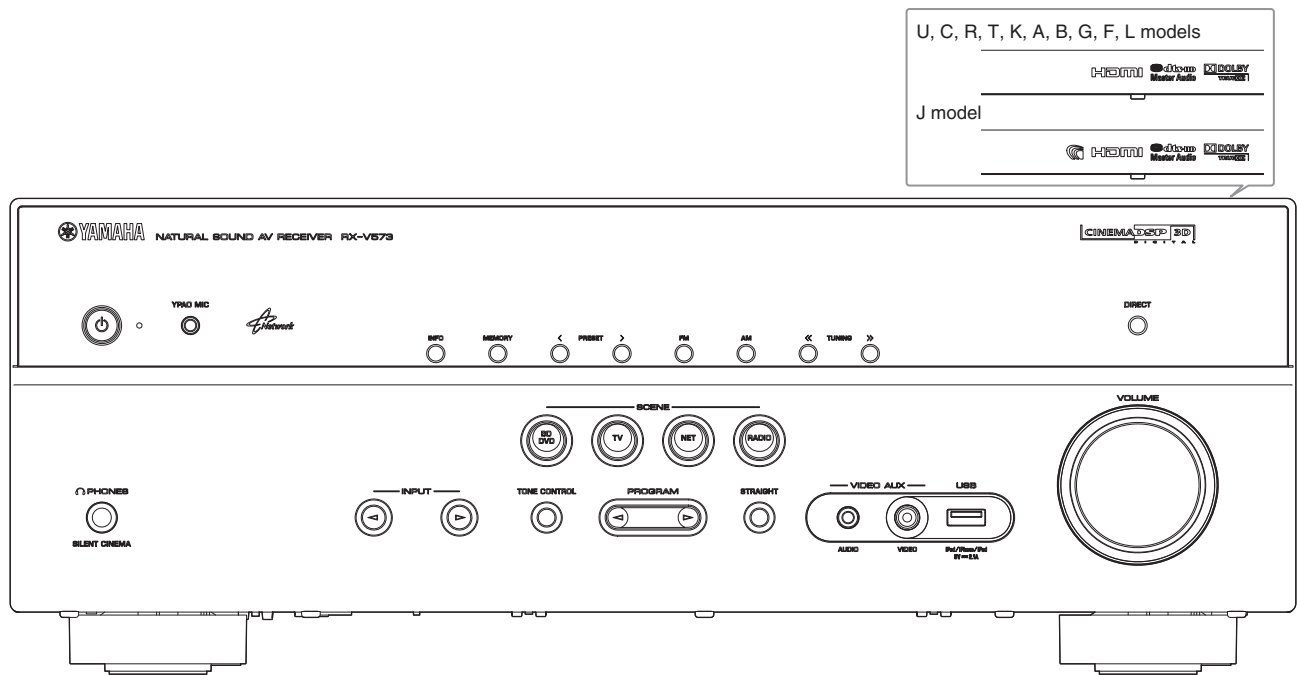


HTR-5065

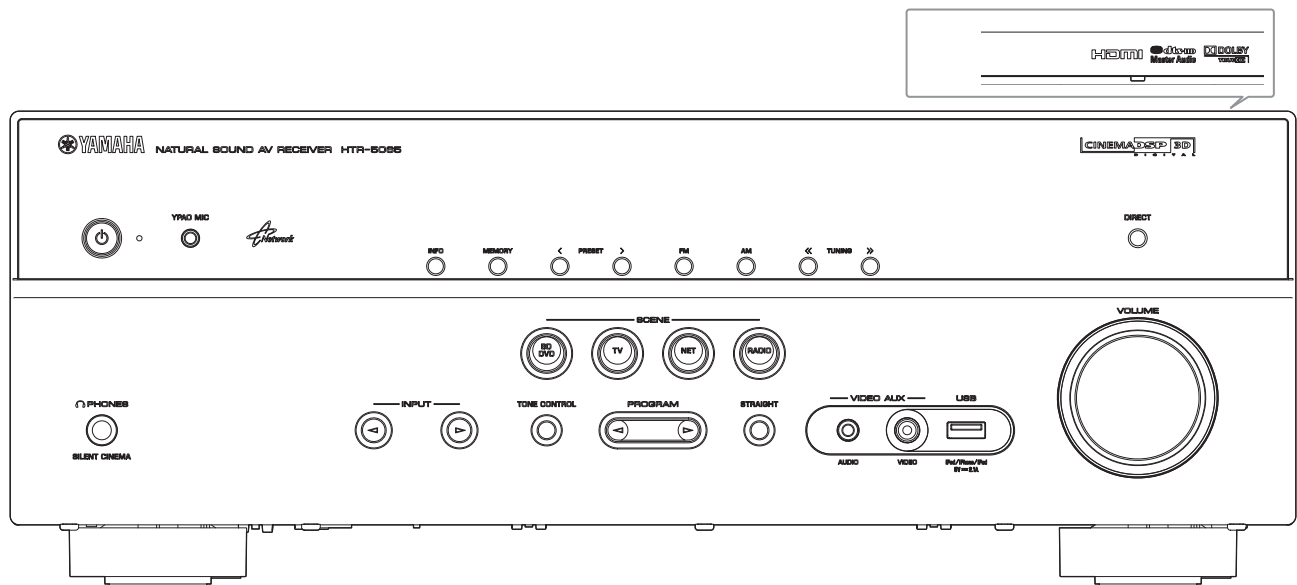


REAR PANELS


RX-V573 (U, C models)

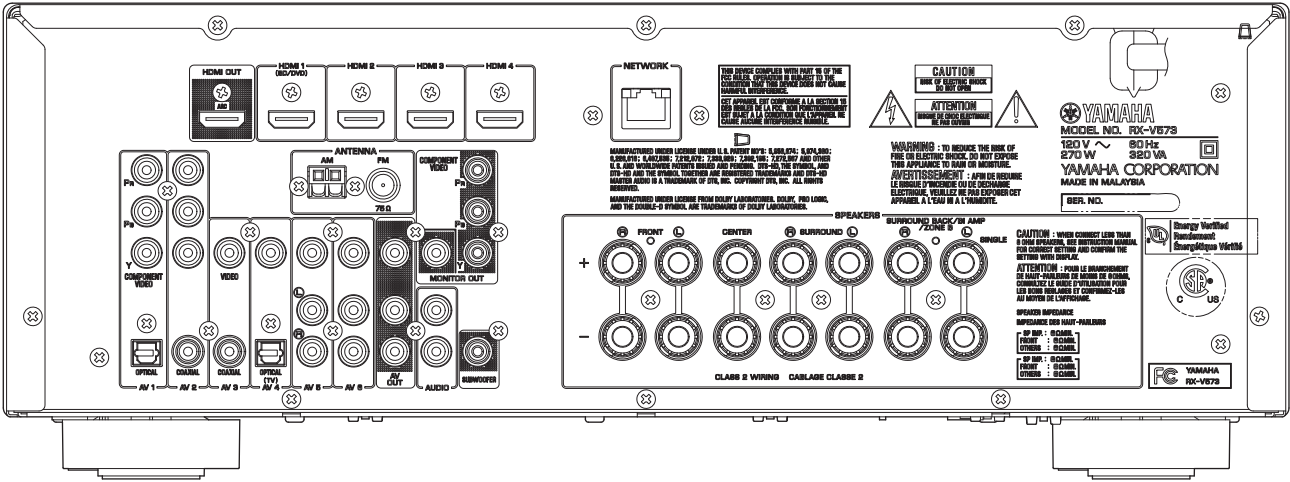



RX-V573 (R model)

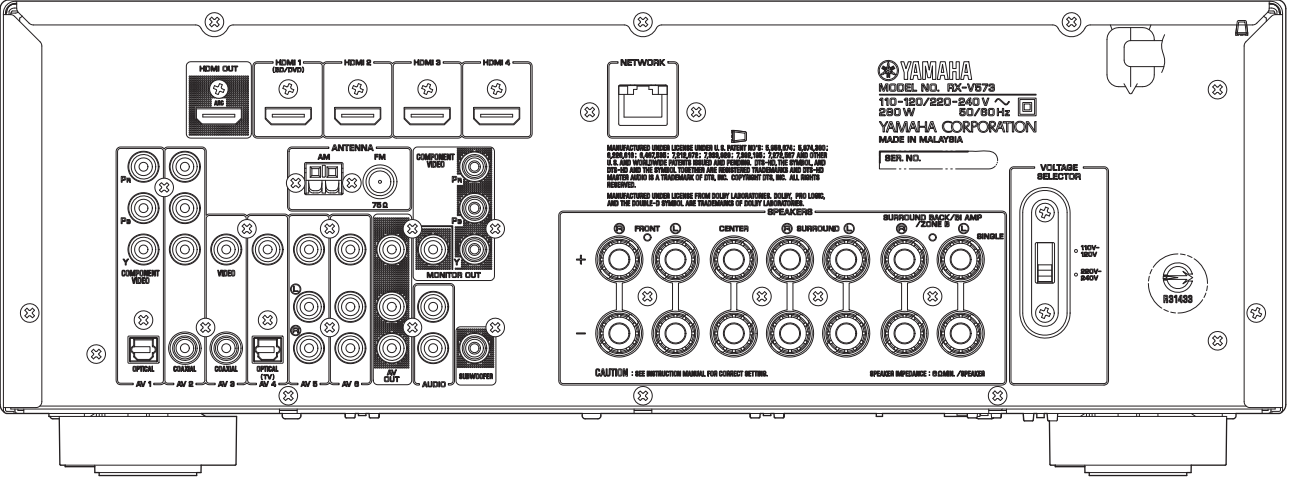


RX-V573 (T model)

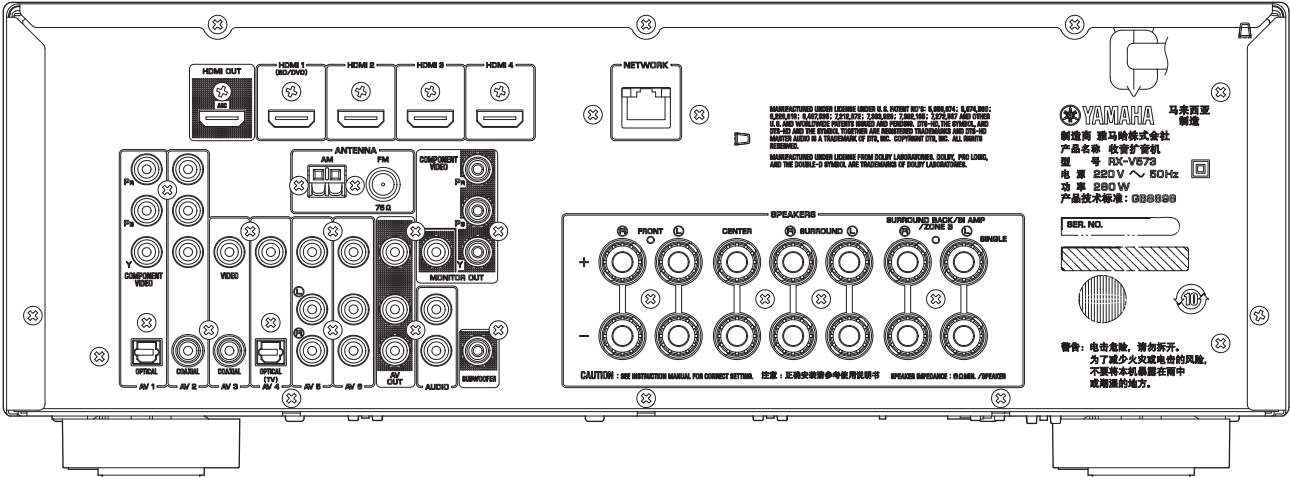


RX-V573 (K model)

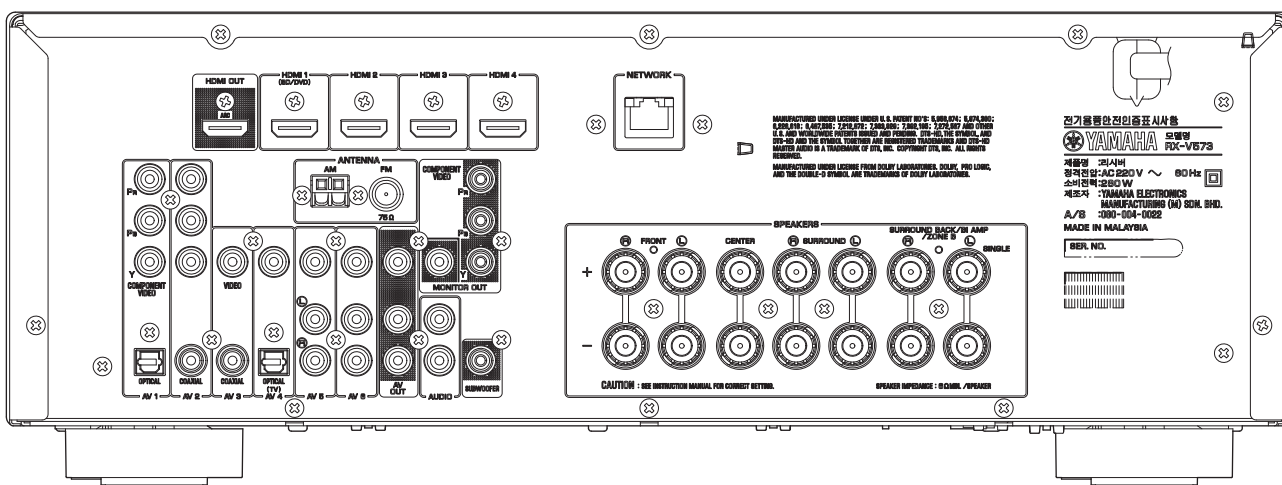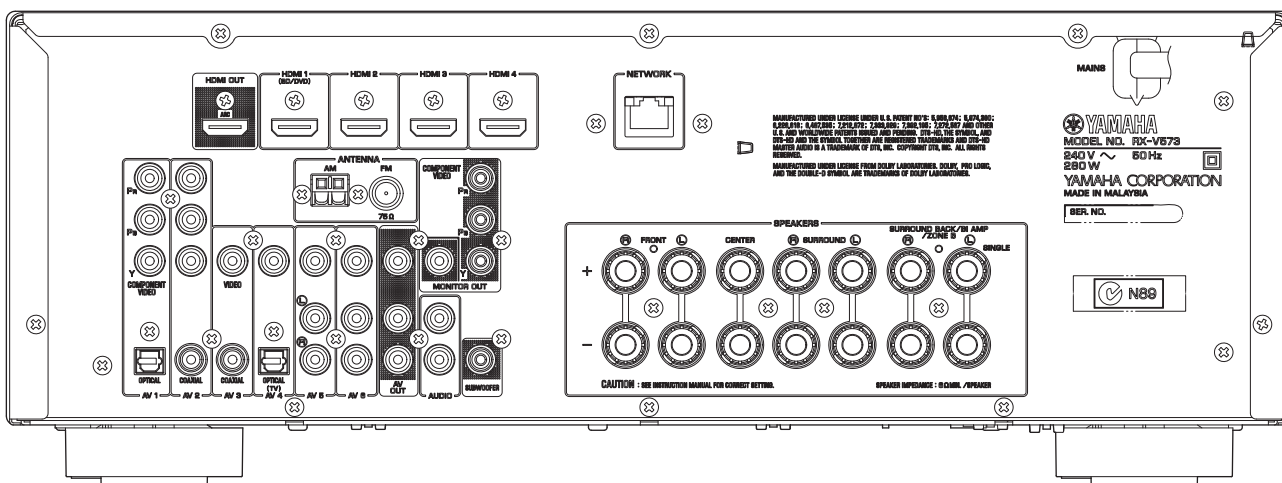**RX-V573 (A model)**

 RX-V573 (B, G, F models)

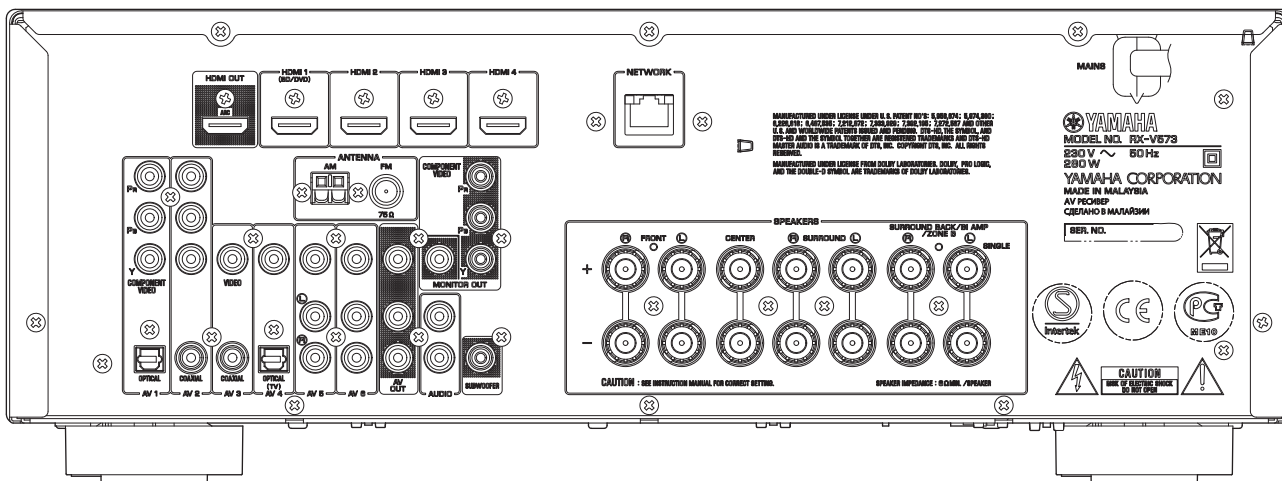




[illegible]

The diagram illustrates the rear panel of the Yamaha HTS-508S receiver. It includes the following components and labels:

- HDMI Ports:** HDMI 1 (BD-VIDEO), HDMI 2, HDMI 3, and HDMI 4.
- Network:** A port for network connectivity.
- Antenna:** Ports for AM and FM signals, and a 75Ω port.
- Component Video:** Ports for Y, Pb, and Pr signals.
- Monitor Out:** A port for monitoring the video signal.
- Optical:** A port for digital audio input.
- Coaxial:** A port for digital audio input.
- AV 1-5:** Five ports for analog audio input.
- AV Out:** A port for digital audio output.
- Audio:** A port for analog audio input.
- Subwoofer:** A port for subwoofer connection.
- Speakers:** A set of eight ports labeled FRONT, CENTER, SURROUND, and SURROUND BACK/AMP, each with a + and - terminal.
- Caution:** A note stating "CAUTION: SEE INSTRUCTION MANUAL FOR CORRECT SETTING."
- Yamaha Logo and Model Number:** The Yamaha logo and the model number HTS-508S are displayed.
- Technical Specifications:** 230 V ~ 60 Hz, 280 W, and MADE IN MALAYSIA.
- Serial Number:** A field for the serial number.
- Warnings:** Symbols for Invertex, CE, PG, and a caution symbol.

■ REMOTE CONTROL PANEL

RAV465

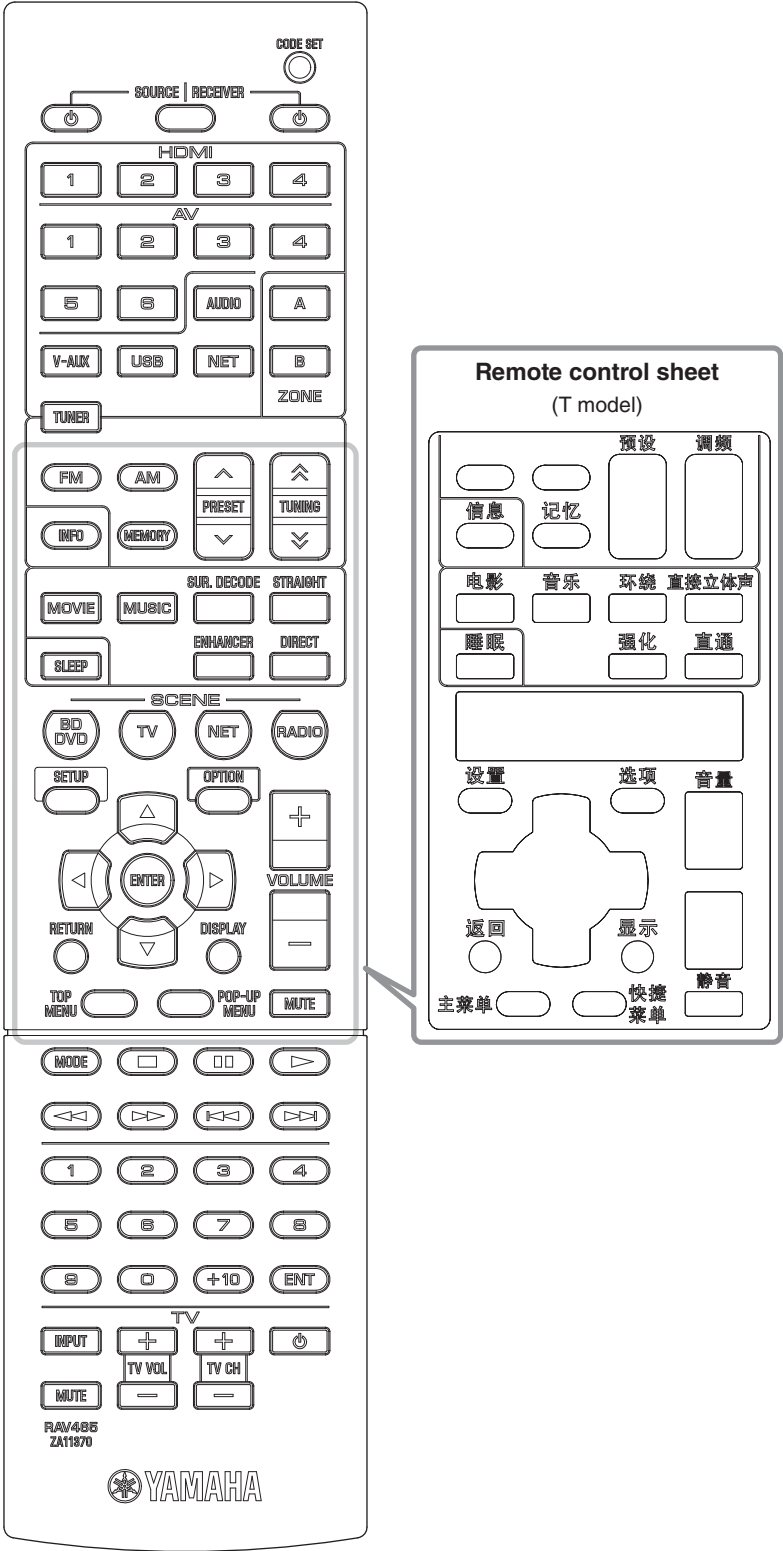

RX-V573/HTR-5065

■ SPECIFICATIONS / 参考仕様

■ Audio Section / オーディオ部

Rated Output Power (Power Amplifier Section) /

定格出力 (パワーアンプ部)

(1 kHz, 0.9 % THD)

– 1 channel driven –

U, C models (8 ohms)

FRONT L/R	115 W/ch
CENTER	115 W
SURROUND L/R	115 W/ch
SURROUND BACK L/R	115 W/ch

R, T, K, A, B, G, F, L, J models (6 ohms)

FRONT L/R	115 W/ch
CENTER	115 W
SURROUND L/R	115 W/ch
SURROUND BACK L/R	115 W/ch

– 2 channels driven simultaneously –

U, C models (8 ohms)

FRONT L/R	95 W + 95 W
CENTER	95 W
SURROUND L/R	95 W + 95 W
SURROUND BACK L/R	95 W + 95 W

(20 Hz to 20 kHz, 0.09 % THD)

– 2 channels driven simultaneously –

U, C models (8 ohms)

FRONT L/R	80 W + 80 W
-----------	-------------

R, T, K, A, B, G, F, L, J models (6 ohms)

FRONT L/R	80 W + 80 W
-----------	-------------

Maximum Effective Output Power / 実用最大出力 (JEITA)

(1 kHz, 10 % THD, 6 ohms / 1 channel driven)

[R, T, K, L J models]

FRONT L/R	135 W/ch
CENTER	135 W
SURROUND L/R	135 W/ch
SURROUND BACK L/R	135 W/ch

Dynamic Power Per Channel / ダイナミックパワー (IHF)

FRONT L/R drive

U, C models

(8 / 6 / 4 ohms)	110 / 130 / 160 W
------------------	-------------------

R, T, K, A, B, G, F, L, J models

(6 / 4 ohms)	110 / 130 W
--------------	-------------

Dynamic Headroom [U, C models]

8 ohms	0.2 dB
--------	--------

Damping Factor / ダンピングファクター (20 Hz to 20 kHz, 8 ohms)

FRONT L/R to SPEAKER-A	120 or more
------------------------	-------------

Input Sensitivity/Input Impedance / 入力感度／入力インピーダンス

(1 kHz, 100 W/8 ohms)

AV5 etc.	200 mV / 47 k-ohms
----------	--------------------

Maximum Input Signal / 最大許容入力 (1 kHz, 0.5 % THD)

AV5 etc. (EFFECT ON)	2.3 V
----------------------	-------

Output Level/Output Impedance / 出力電圧／出力インピーダンス

AV OUT	200 mV / 1.2 k-ohms
--------	---------------------

SUBWOOFER (2 ch stereo and FRONT SP: small)

	1 V / 1.2 k-ohms
--	------------------

Headphone Jack Rated Output/Output Impedance /

ヘッドホン出力／出力インピーダンス (1 kHz, 50 mV, 8 ohms)

AV5 etc. input	100 mV / 470 ohms
----------------	-------------------

Frequency Response / 再生周波数帯域 (10 Hz to 100 kHz)

AV5 etc., FRONT	0 / -3 dB
-----------------	-----------

Signal to Noise Ratio / 信号対雑音比 (IHF-A network)

AV5, etc. (PURE DIRECT) to SP OUT (Input shorted 250 mV)	100 dB or more
--	----------------

Residual Noise / 残留ノイズ (IHF-A Network)

FRONT L/R to SP OUT	150 μ V or less
---------------------	---------------------

Channel Separation / チャンネルセパレーション

AV5, etc. (Input 5.1 k-ohms shorted)	
1 kHz / 10 kHz	60 dB or more / 45 dB or more

Volume Control / 可変範囲／ステップ

	MUTE / -80 dB to +16.5 dB / 0.5 dB step
--	---

Tone Control Characteristics / トーンコントロール特性

FRONT L/R

Bass

Boost/Cut	$\pm$ 6 dB / 0.5 dB step, at 50 Hz
-----------	------------------------------------

Turnover frequency	350 Hz
--------------------	--------

Treble

Boost/Cut	$\pm$ 6 dB / 0.5 dB step, at 20 kHz
-----------	-------------------------------------

Turnover frequency	3.5 kHz
--------------------	---------

Filter Characteristics / フィルタ特性

FRONT, CENTER, SURROUND, SURROUND BACK small (H.P.F.)	
	fc=40/60/80/90/100/110/120/160/200 Hz, 12 dB/oct.

SUBWOOFER small (L.P.F.)

	fc=40/60/80/90/100/110/120/160/200 Hz, 24 dB/oct.
--	---

Optical Jack, Coaxial Jack Support Frequencies /

Optical 端子、Coaxial 端子 対応 fs

	32 kHz to 96 kHz
--	------------------

■ Video Section / ビデオ部

Video Signal Type / ビデオ信号方式

U, C, R, K, J models	NTSC
----------------------	------

T, A, B, G, F, L models	PAL
-------------------------	-----

Composite Video Signal Level / コンポジットビデオ信号

	1 Vp-p / 75 ohms
--	------------------

Component Video Signal Level / コンポーネントビデオ信号

Y	1 Vp-p / 75 ohms
---	------------------

Pb/Pr	0.7 Vp-p / 75 ohms
-------	--------------------

Video Maximum Input Level / ビデオ最大許容入力

(VIDEO Conversion Off)

	1.5 Vp-p or more
--	------------------

Video Signal to Noise Ratio / ビデオ信号対雑音比

	50 dB or more
--	---------------

Monitor Out Frequency Response / モニター出力周波数帯域

(VIDEO Conversion Off)

Component video signal level / コンポーネントビデオ信号

	5 Hz to 60 MHz, -3 dB
--	-----------------------

D4 video signal / D4 ビデオ信号 [J model]

	5 Hz to 60 MHz, -3 dB
--	-----------------------

■ FM Section / FM 部

Tuning Range / 受信周波数範囲

U, C models	87.5 to 107.9 MHz
R, L models	87.5 to 108.0 MHz / 87.50 to 108.00 MHz
T, K, A, B, G, F models	87.50 to 108.00 MHz
J model	76.0 to 90.0 MHz

50 dB Quieting Sensitivity / 50 dB SN 感度 (IHF)

(1 kHz, 100 % MOD.)

Mono	3 µV (20.8 dBf)
------	-----------------

Signal to Noise Ratio / 信号対雑音比 (IHF)

Mono	71 dB
Stereo	69 dB

Harmonic Distortion / 歪率 (1 kHz)

Mono	0.3 %
Stereo	0.5 %

Antenna Input / アンテナ入力

	75 ohms unbalanced
--	--------------------

■ AM Section / AM 部

Tuning Range / 受信周波数範囲

U, C models	530 to 1,710 kHz
R, L models	530 to 1,710 kHz / 531 to 1,611 kHz
T, K, A, B, G, F, J models	531 to 1,611 kHz

Antenna / アンテナ

	Loop antenna
--	--------------

■ General / 総合

Power Supply / 電源電圧

U, C models	AC 120 V, 60 Hz
R model	AC 110–120/220–240 V, 50/60 Hz
T model	AC 220 V, 50 Hz
K model	AC 220 V, 60 Hz
A model	AC 240 V, 50 Hz
B, G, F models	AC 230 V, 50 Hz
L model	AC 220–240 V, 50/60 Hz
J model	AC 100 V, 50/60 Hz

Power Consumption / 消費電力

U, C models	270 W / 320 VA
R, T, K, A, B, G, F, L models	280 W
J model	175 W

Standby Power Consumption (reference data) /

待機時消費電力 (参考値)

HDMI control: OFF / Standby through: OFF	0.1 W or less
HDMI control: ON / Standby through: ON	
INPUT: HDMI1 (HDMI no signal)	1.0 W (typical)
Network standby: ON	2.0 W (typical)

Dimensions (W x H x D) / 寸法 (幅 × 高さ × 奥行き)

	435 x 161 x 315 mm (17-1/8" x 6-3/8" x 12-3/8")
--	---

Weight / 質量

	8.2 kg (18.1 lbs.)
--	--------------------

Finish / 仕上げ

[RX-V573]

T model	Gold color
U, C, R, T, K, A, B, G, F, L, J models	Black color
R, K, B, G, F, L models	Titanium color

[HTR-5065]

U, F models	Black color
-------------	-------------

Accessories / 付属品

Remote control	x 1
Battery (R03, AAA, UM-4)	x 2
FM antenna (1.4 m)	x 1
AM antenna (1.0 m)	x 1
YPAO microphone (6.0 m)	x 1
Remote control sheet (T model)	x 1

* Specifications are subject to change without notice.

※ 参考仕様および外観は、製品の改良のため予告なく変更することがあります。

U	U.S.A. model	B	British model
C	Canadian model	G	European model
R	General model	F	Russian model
T	Chinese model	L	Singapore model
K	Korean model	J	Japanese model
A	Australian model		



Manufactured under license from Dolby Laboratories. Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.

ドルビーラボラトリーズからの実施権に基づき製造されています。「ドルビー」、
「Pro Logic」およびダブル D 記号  はドルビーラボラトリーズの商標です。



DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks & DTS-HD Master Audio is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

DTS-HD および記号は DTS 社の登録商標です。また、DTS-HD Master Audio は DTS 社の商標です。製品にはソフトウェアを含みます。著作権 DTS 社。不許複製。



AirPlay, the AirPlay logo, iPad, iPhone, iPod, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

AirPlay, AirPlay ロゴ、iPad, iPhone, iPod, iPod nano, iPod touch は、米国およびその他の国々で登録されている Apple Inc. の商標です。



Fraunhofer Institut
Integrierte Schaltungen

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

MPEG Layer 3 音声圧縮技術は Fraunhofer IIS および Thomson によってライセンス供与されています。



This receiver supports network connections.
本機はネットワーク接続に対応しています。



"HDMI," the "HDMI" logo and "High-Definition Multimedia Interface" are trademarks, or registered trademarks of HDMI Licensing LLC.

HDMI、HDMI ロゴ、および High-Definition Multimedia Interface は、HDMI Licensing, LLC の商標または登録商標です。

x.v.Color™

"x.v.Color" is a trademark of Sony Corporation.

「x.v.Color」は、ソニー株式会社の商標です。

SILENT CINEMA™

"SILENT CINEMA" is a trademark of Yamaha Corporation.

「サイレントシネマ™ SILENT CINEMA™」はヤマハ株式会社の登録商標です。



DLNA™ and DLNA CERTIFIED™ are trademarks or registered trademarks of Digital Living Network Alliance. All rights reserved. Unauthorized use is strictly prohibited.

DLNA™ および DLNA CERTIFIED™ はデジタルリビングネットワークアライアンスの登録商標です。無断使用は固く禁じられています。

Windows®

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Windows は米国 Microsoft Corporation の米国およびその他の国における登録商標です。


Windows XP, Windows Vista, Windows 7, Windows Media Audio, Windows Media Connect and Windows Media Player are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Windows XP、Windows Vista、Windows 7、Windows Media Audio、Windows Media Connect、Windows Media player は、米国 Microsoft Corporation の米国およびその他の国における登録商標、または商標です。



AAC ロゴマークはドルビーラボラトリーズの商標です。

• DIMENSIONS

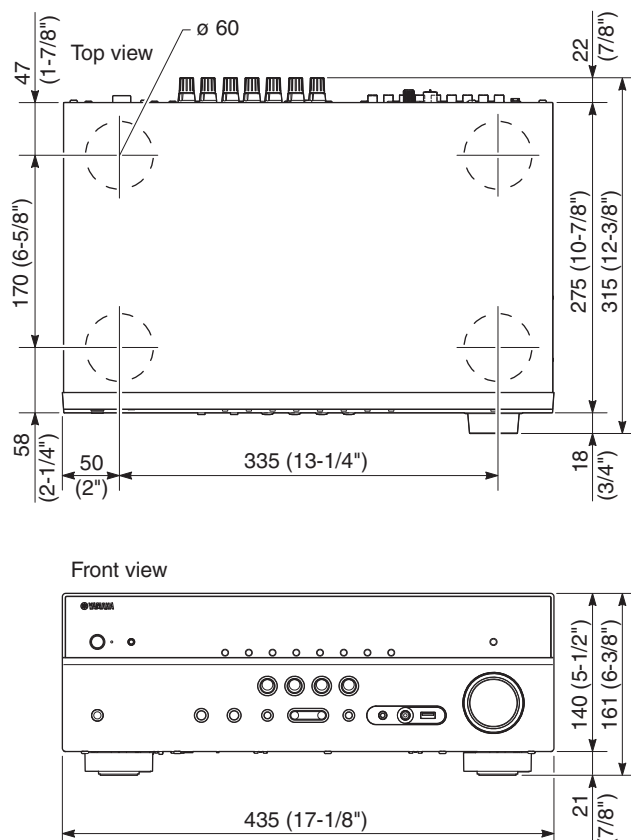

Unit: mm (inch)
単位: mm (インチ)

- **SELECT MENU**

Sound Field Effects (CINEMA DSP)

Unit	Sound Program	CINEMA DSP 3D	Music Enhancer
MOVIE	Standard	☐	☐
	Spectacle	☐	☐
	Sci-Fi	☐	☐
	Adventure	☐	☐
	Drama	☐	☐
	Mono Movie	☐	☐
	Sports	☐	☐
	Action Game	☐	☐
	Roleplaying Game	☐	☐
MUSIC	Hall in Munich	☐	☐
	Hall in Vienna	☐	☐
	Chamber	☐	☐
	Cellar Club	☐	☐
	The Roxy Theatre	☐	☐
	The Bottom Line	☐	☐
	Music Video	☐	☐
	2ch Stereo		☐
	7ch Stereo		☐
	SUR. DECODE (*1)		☐

*1 Decode Type

Decode Type	☒ Pro Logic
	☒ PLIIx Movie
	☒ PLIIx Music
	☒ PLIIx Game
	Neo: 6 Cinema
	Neo: 6 Music


• SET MENU TABLE

MAIN MENU	SUB-MENU	PARAMETER			VALUE [INITIAL VALUE]	
Speaker	Configuration	Power Amp Assign			[Basic] / BI-AMP / Zone B	
		Subwoofer			[Use] / None	
		Front			[Small] / Large	
		Center			[Small] / Large / None	
		Surround			[Small] / Large / None	
		Surround Back			Small x1 / [Small x2] / Large x1 / Large x2 / None	
		Crossover			40 Hz / 60 Hz / [80 Hz] / 90 Hz / 100Hz / 110 Hz / 120 Hz / 160 Hz / 200 Hz	
		Subwoofer Phase			[Normal] / Reverse	
		Extra Bass			[Off] / On	
	Distance	Unit			Feet / Meter	
		Front L			0.30 to 24.00 m, [3.00 m], 0.05 m step	
		Front R			1.0 to 80.0 ft, [10.0 ft], 0.2 ft step	
		Center			0.30 to 24.00 m, [2.60 m], 0.05 m step 1.0 to 80.0 ft, [8.6 ft], 0.2 ft step	
		Surround L			0.30 to 24.00 m, [2.40 m], 0.05 m step	
		Surround R				
		Surround Back L			1.0 to 80.0 ft, [8.0 ft], 0.2 ft step	
		Surround Back R			0.30 to 24.00 m, [3.00 m], 0.05 m step 1.0 to 80.0 ft, [10.0 ft], 0.2 ft step	
		Subwoofer				
	Level	Front L			-10.0 to +10.0 dB, [0.0 dB], 0.5 dB step	
		Front R				
		Center				
		Surround L			-10.0 to +10.0 dB, [-1.0 dB], 0.5 dB step	
		Surround R				
		Surround Back L				
		Surround Back R				
		Subwoofer			-10.0 to +10.0 dB, [0.0 dB], 0.5 dB step	
	Equalizer	EQ Select			PEQ / [GEQ] / Off * “PEQ” is available only when the YPAO has been performed “PEQ” は自動測定（YPAO）を行った場合のみ選択可能	
		GEQ Edit	Front L	63 Hz		-6.0 to +6.0 dB, [0 dB], 0.5 dB step
			Front R	160 Hz		
			Center	400 Hz		
			Surround L	1 kHz		
			Surround R	2.5 kHz		
				6.3 kHz		
				16 kHz		
		Test Tone			[Off] / On	
		HDMI	Configuration	HDMI Control		
	Audio Output			Amp		Off / [On]
HDMI OUT (TV)				[Off] / On		
* This setting is available only when “HDMI Control” is set to “Off”. “HDMI Control” が “Off” の場合のみ設定可能						
Standby Through				[Off] / On		
* This setting is available only when “HDMI Control” is set to “Off”. “HDMI Control” が “Off” の場合のみ設定可能						
TV Audio Input				AV1 / AV2 / AV3 / [AV4] / AV5 / AUDIO1 / AUDIO2		
Standby Sync				Off / On / [Auto]		
ARC				Off / [On]		
SCENE	BD / DVD			Off / [On]		
	TV					
	NET			[Off] / On		
	RADIO					


MAIN MENU	SUB-MENU	PARAMETER		VALUE [INITIAL VALUE]
Sound	DSP Parameter	CINEMA DSP 3D Mode		Off / [On]
		Panorama		[Off] / On
		Center Width		0 to 7, [3]
		Dimension		-3 to +3, [0]
		Center Image		0.0 to 1.0, [0.3]
	Lipsync	Select		Manual / [Auto]
		Adjustment		0 to 250 ms, [0 ms], 1 ms step
	Volume	Dynamic Range		[Maximum] / Standard / Min/Auto
		Max Volume		-30.0 to +15.0 dB / +16.5 dB (Maximum volume), [+16.5 dB], 5.0 dB step
Initial Volume		[Off] / Mute / -80.0 to +16.5 dB, 0.5 dB step		
ECO	Auto Power Down		U, C, R, T, K, A, L, J models: [Off] / 2 hours / 4 hours / 8 hours / 12 hours B, G, F models: Off / 2 Hours / 4 Hours / [8 Hours] / 12 Hours	
	ECO Mode		[Off] / On	
Function	Input Rename		Input sources: HDMI1 / HDMI2 / HDMI3 / HDMI4 / AV1 / AV2 / AV3 / AV4 / AV5 / AV6 / AUDIO / USB / V-AUX Input is possible to 9 characters Input possible Character type Capital: A to Z Small: a to z Figure: 0 to 9 Symbols: +, -, etc. Space Preset name select: Blu-ray / DVD / SetTopBox / Game / TV / DVR / CD / CD-R / Satellite / VCR / Tape / MD / PC / iPod / HD DVD	
	Dimmer		-4 to 0 (higher to brighten), [0]	
	Memory Guard		[Off] / On	
Network	IP Address	DHCP		Off / [On]
			IP Address	xxx.xxx.xxx. x
			Subnet Mask	xxx.xxx.xxx. x
			Default Gateway	xxx.xxx.xxx. x
			DNS Server (Primary)	x. x. x. x
			(Secondary)	x. x. x. x
			* This setting is available only when “DHCP” is set to “Off.” “DHCP” が “Off” の場合のみ設定可能	
	MAC Address Filter		[Off] / On	
		MAC Address 1–10	xx:xx:xx:xx:xx:xx * This setting is available only when “MAC Address Filter” is set to “On.” “MAC Address Filter” が “On” の場合のみ設定可能	
	DMC Control		Disable / [Enable]	
	Network Standby		[Off] / On	
	Network Name		Input is possible to 15 characters	
	Information	MAC Address	xx:xx:xx:xx:xx:xx	
		IP Address	xxx.xxx.xxx. x	
		Subnet Mask	xxx.xxx.xxx. x	
		Default Gateway	xxx.xxx.xxx. x	
		DNS Server (Primary)	x. x. x. x	
		(Secondary)	x. x. x. x	
		Status	The connection status of the NETWORK jack	
	vTuner ID	xxxxxxxxxxxx		
	Network Update	Perform Update		
		Firmware Version	x.xx	
		System ID	xxxxxxxx	
Language (U, C, R, T, K, A, B, G, F, L models)			English (English) / Français (French) / Deutsch (German) / Español (Spanish) / Русский (Russian) / 中文 (Chinese)	

INTERNAL VIEW


Rear view

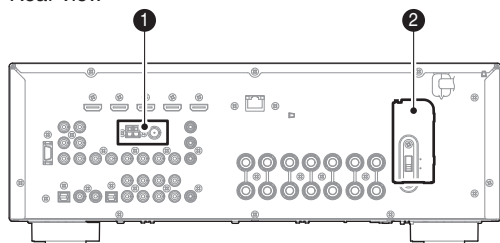

Top view

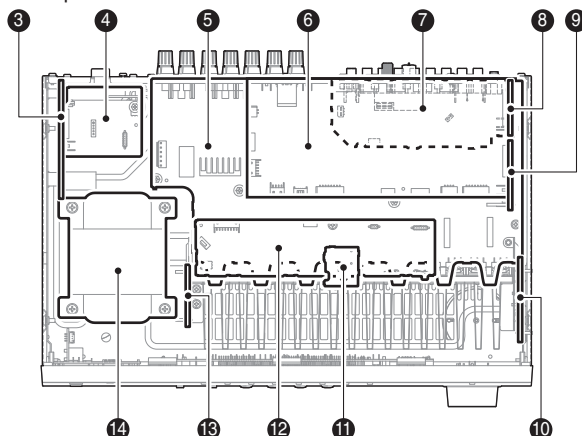

Front view

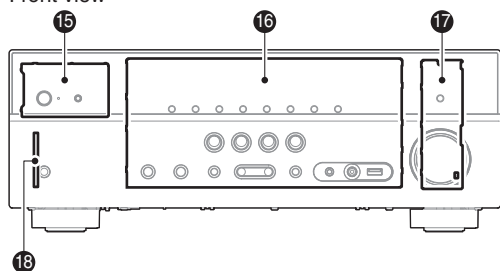

- ① AM/FM TUNER
- ② MAIN (5) P.C.B. (R model)
- ③ OPERATION (2) P.C.B.
- ④ MAIN (4) P.C.B.
- ⑤ MAIN (1) P.C.B.
- ⑥ DIGITAL P.C.B.
- ⑦ OPERATION (3) P.C.B.
- ⑧ MAIN (3) P.C.B.
- ⑨ MAIN (2) P.C.B.
- ⑩ MAIN (6) P.C.B.
- ⑪ OPERATION (8) P.C.B.
- ⑫ OPERATION (4) P.C.B.
- ⑬ OPERATION (9) P.C.B.
- ⑭ POWER TRANSFORMER
- ⑮ OPERATION (5) P.C.B.
- ⑯ OPERATION (1) P.C.B.
- ⑰ OPERATION (6) P.C.B.
- ⑱ OPERATION (7) P.C.B.

SERVICE PRECAUTIONS / サービス時の注意事項

Safety measures

- Some internal parts in this product contain high voltages and are dangerous.
Be sure to take safety measures during servicing, such as wearing insulating gloves.
- Note that the capacitors indicated below are dangerous even after the power is turned off because an electric charge remains and a high voltage continues to exist there.
Before starting any repair work, connect a discharging resistor (5 k-ohms/10 W) to the terminals of each capacitor indicated below to discharge electricity.
The time required for discharging is about 30 seconds per each.

C2084 and C2085 on MAIN (1) P.C.B.

C5407 on OPERATION (2) P.C.B.

For details, refer to "PRINTED CIRCUIT BOARDS".

安全対策

- この製品の内部には高電圧部分があり危険です。修理の際は、絶縁性の手袋を使用などの安全対策を行ってください。
- 下記のコンデンサには電源を OFF にした後も電荷が残り、高電圧が維持されており危険です。
修理作業前に放電用抵抗 (5 k Ω /10 W) を下記の各コンデンサの端子間に接続して放電してください。
放電所用時間は各々約 30 秒間です。

MAIN (1) P.C.B. の C2084、C2085

OPERATION (2) P.C.B. の C5407

詳しくは "PRINTED CIRCUIT BOARDS" を参照してください。

■ DISASSEMBLY PROCEDURES / 分解手順

(Remove parts in the order as numbered.)

Disconnect the power cable from the AC outlet.

(番号順に部品を外してください。)

AC 電源コンセントから、電源コードを抜いてください。

1. Removal of Top Cover

- Remove 4 screws (①) and 5 screws (②). (Fig. 1)
- Lift the rear of the top cover to remove it. (Fig. 1)

1. トップカバーの外し方

- ① のネジ 4 本、② のネジ 5 本を外します。(Fig. 1)
- トップカバーの後部を持ち上げ、外します。(Fig. 1)

2. Removal of Front Panel Unit

- Remove 7 screws (③), and remove W4761. (Fig. 1)
- Remove CB21, CB61, CB371, CB477 and CB952. (Fig. 1)
- Unlock and remove CB525. (Fig. 1)
- Release 2 hooks on both ends and remove the front panel unit. (Fig. 1)

2. フロントパネルユニットの外し方

- ③ のネジ 7 本を外し、W4761 を外します。(Fig. 1)
- CB21、CB61、CB371、CB477、CB952 を外します。(Fig. 1)
- ロックを外し、CB525 を外します。(Fig. 1)
- フック 2 箇所を外し、フロントパネルユニットを外します。(Fig. 1)

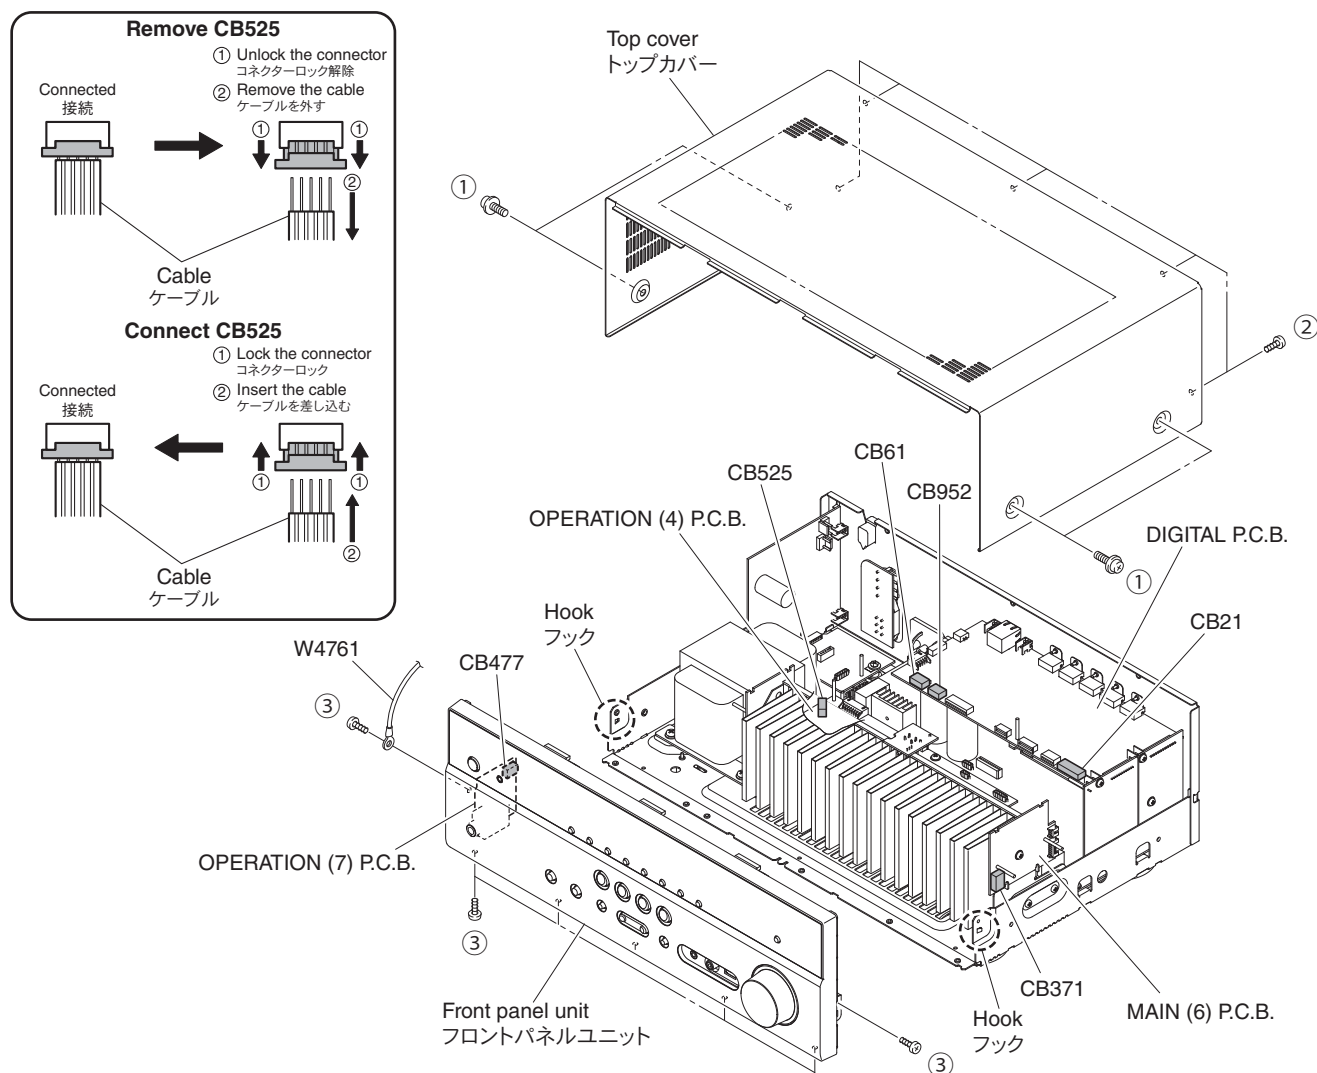


Fig. 1

3. Removal of DIGITAL P.C.B.

- Remove 2 screws (④) and 5 screws (⑤). (Fig. 3)
- Remove 2 screws (⑥). (Fig. 2)
- Remove CB22, CB26, CB64 and CB91. (Fig. 2)
- Unlock and remove CB23~CB25. (Fig. 2)
- Remove the DIGITAL P.C.B. which is connected directly to the MAIN (2) P.C.B. and MAIN (3) P.C.B. with board-to-board connectors. (Fig. 2)

4. Removal of AMP Unit

- Remove 4 screws (⑦), 4 screws (⑧) and 2 screws (⑨). (Fig. 2)
- Remove 3 screws (⑩). (Fig. 3)
- Remove the amp unit. (Fig. 2)

3. DIGITAL P.C.B. の外し方

- ④ のネジ 2 本、⑤ のネジ 5 本を外します。(Fig. 3)
- ⑥ のネジ 2 本を外します。(Fig. 2)
- CB22、CB26、CB64、CB91 を外します。(Fig. 2)
- ロックを外し、CB23 ~ CB25 を外します。(Fig. 2)
- DIGITAL P.C.B. を外します。ただし、DIGITAL P.C.B. は MAIN (2) P.C.B.、MAIN (3) P.C.B. に基板対基板コネクタで直接接続されています。(Fig. 2)

4. アンプユニットの外し方

- ⑦ のネジ 4 本、⑧ のネジ 4 本、⑨ のネジ 2 本を外します。(Fig. 2)
- ⑩ のネジ 3 本を外します。(Fig. 3)
- アンプユニットを外します。(Fig. 2)

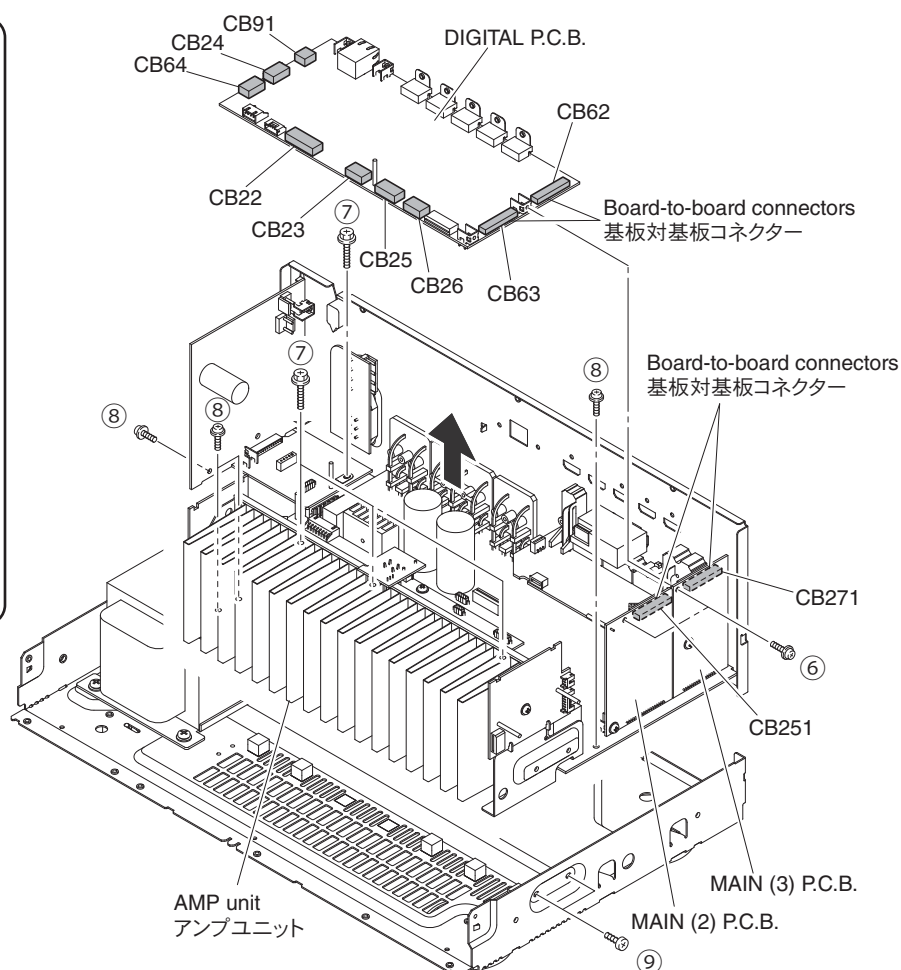
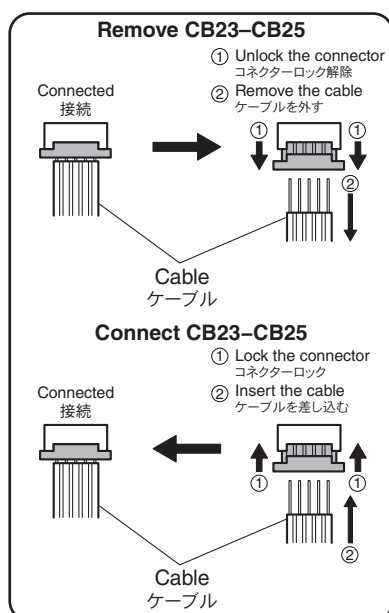


Fig. 2

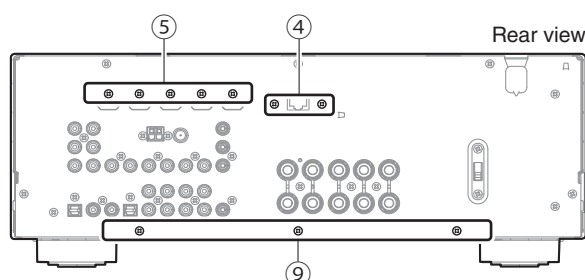



Fig. 3

When checking the P.C.B.s:

- Place the P.C.B.s (with rear panel) upright. (Fig. 4)
- Connect the heatsink and rear panel to the chassis with a ground lead or the like. (Fig. 4)
- Reconnect all cables (connectors) that have been disconnected.
- When connecting the flexible flat cable, be careful with polarity.

P.C.B. をチェックする場合には：

- リアパネルと一緒に P.C.B. を立ち上げて置きます。(Fig. 4)
- ヒートシンク、リアパネルをリード線等でシャーシに接続してください。(Fig. 4)
- 外したケーブル（コネクター）をすべて接続します。
- フラットケーブルを接続する際、極性に注意してください。

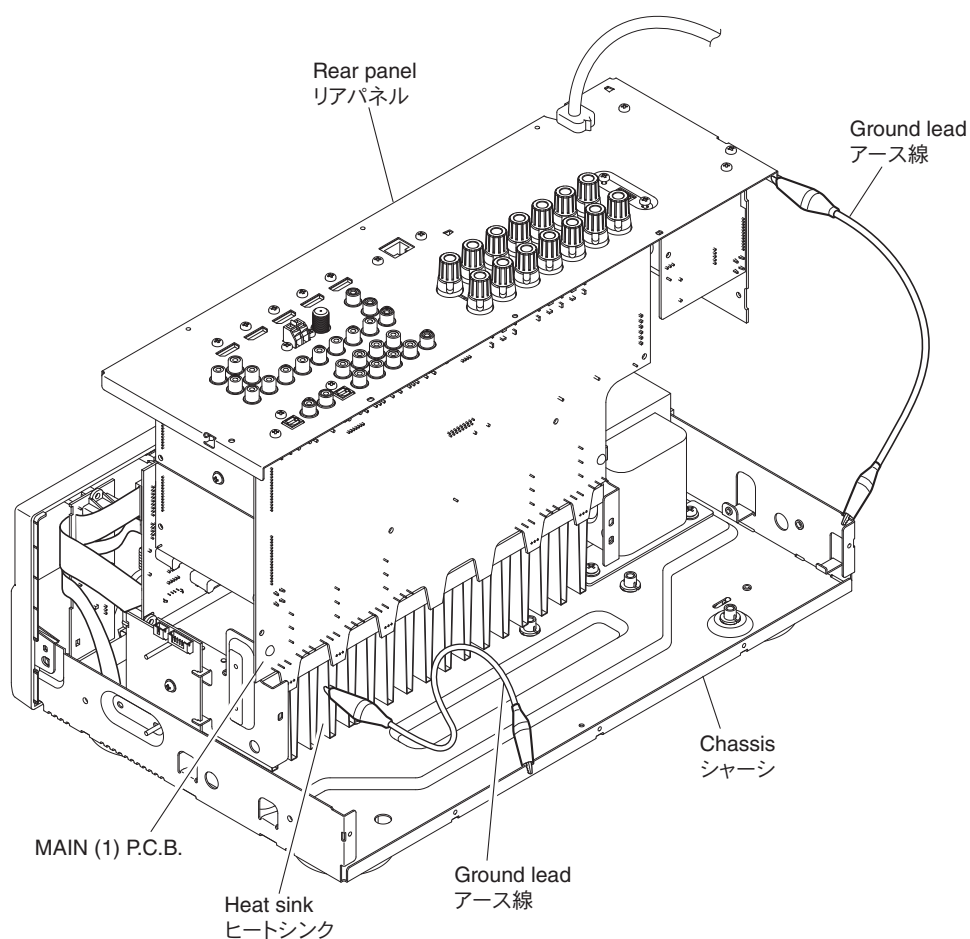**Fig. 4**

■ UPDATING FIRMWARE / ファームウェアのアップデート

When the following parts are replaced, the firmware must be updated to the latest version.

DIGITAL P.C.B.
IC2 on DIGITAL P.C.B.
IC43 on DIGITAL P.C.B.
IC953 on DIGITAL P.C.B.

下記の部品を交換した場合、ファームウェアを最新バージョンにアップデートする必要があります。

DIGITAL P.C.B.
DIGITAL P.C.B. の IC2
DIGITAL P.C.B. の IC43
DIGITAL P.C.B. の IC953

● Confirmation of firmware version and checksum

Before and after updating the firmware, check the firmware version and checksum by using the self-diagnostic function menu.

Start up the self-diagnostic function and select "S4. ROM VERSION/CHECKSUM" menu.

Using the sub-menu, have the firmware version and checksum displayed, and note them down.
(See "SELF-DIAGNOSTIC FUNCTION")

- * When the firmware version is different from written one after updating, perform the updating procedure again from the beginning again.

● ファームウェアのバージョンとチェックサムの確認

ファームウェアのアップデートの前後に、ファームウェアのバージョンとチェックサムをダイアグで確認します。

ダイアグを起動し、"S4. ROM VERSION/CHECKSUM" メニューを選択します。

サブメニューでファームウェアのバージョンとチェックサムを表示し、それらを書きとめます。
(「ダイアグ」参照)

- ※ アップデート後、ファームウェアのバージョンが書き込まれたものと異なる場合、アップデートの操作を最初からやり直してください。

● Initializing the back-up IC (EEPROM: IC22 on DIGITAL P.C.B.)

After updating the firmware, the back-up IC MUST be initialized by the following procedure to store the setting information (soundfield parameters, system memory and tuner presetting, etc.) properly.

Start up the self-diagnostic function and select "S3. FACTORY PRESET" menu. (See "SELF-DIAGNOSTIC FUNCTION")

Select "PRESET RSRV", press the "⏻" (Power) key to turn off the power once and turn on the power again. Then the back-up IC is initialized.

● バックアップ IC の初期化 (EEPROM : DIGITAL P.C.B. の IC22)

ファームウェアのアップデート後、設定情報（音場プログラムのパラメーターやシステムメモリー、チューナープリセット等）を正常に保存するために、下記の方法でバックアップ IC を初期化する必要があります。

本機のダイアグを起動し、"S3. FACTORY PRESET" メニューを選択します。
(「ダイアグ」参照)

"PRESET RSRV" を選択し、"⏻"（電源）キーを押して電源を一度きってから、もう一度電源を入れるとバックアップ IC が初期化されます。

● Required Tools

- USB storage device
- Firmware
RX-V573/HTR-5065: R0305-xxxx.bin

● 必要なツール

- USB フラッシュメモリー
- ファームウェア
RX-V573 : R0305-xxxx.bin

● Preparation

1. Download the latest firmware from the specified download source to the folder of the PC.
2. Copy the latest firmware from the PC to the root folder of the USB storage device.

Note) When the latest firmware is copied to a sub-folder of the USB storage device, the update will not proceed.

● 準備

1. 指定のダウンロード先から、最新のファームウェアを PC のフォルダへダウンロードしてください。
2. PC から USB フラッシュメモリーのルートフォルダへ最新のファームウェアをコピーします。

注意) 最新のファームウェアをサブフォルダにコピーした場合、書き込みはできません。

● Operation Procedures

1. Insert the USB storage device to the USB jack.
(Fig. 1)
2. While pressing the "INFO" key, connect the power cable to the AC outlet. (Fig. 1)

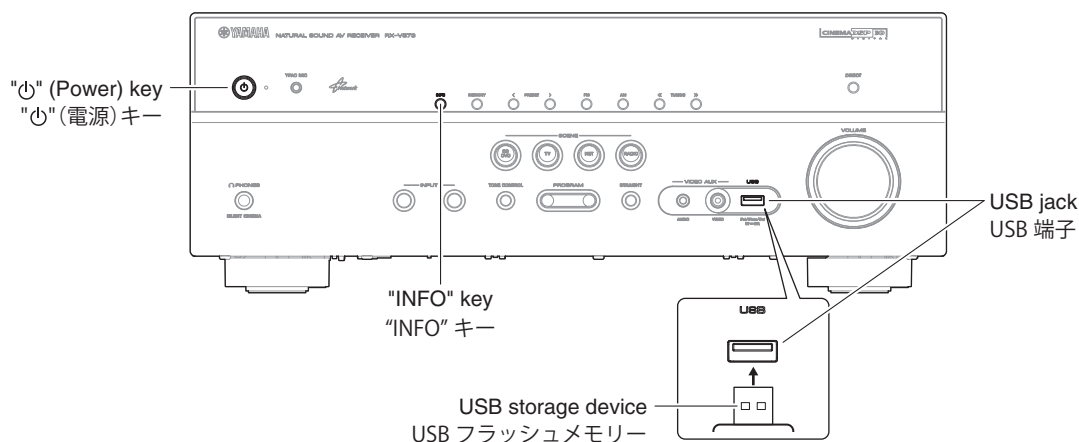


Fig. 1

3. The USB UPDATE mode is activated and "USB Update" is displayed. Writing of the firmware starts automatically. (Fig. 2)

Writing is started. / 書き込み開始

USB Update



VERIFYING...



Sx-x:xx%

Writing being executed. / 書き込み中

Fig. 2

4. When writing of the firmware is completed, "UPDATE SUCCESS", "PLEASE..." and "POWER OFF!" are displayed repeatedly. (Fig. 3)

Writing is completed. / 書き込み完了

UPDATE SUCCESS



PLEASE...



POWER OFF!

 


Fig. 3

5. Press the "Power" key to turn off the power. (Fig. 1)
6. Remove the USB storage device from the USB jack. (Fig. 1)
7. Start up the self-diagnostic function and check that the firmware version and checksum are the same as written ones. (See "Confirmation of firmware version and checksum")

● 操作手順

1. USB 端子に USB フラッシュメモリを差し込みます。(Fig. 1)
2. "INFO" キーを押しながら、電源コードを AC コンセントに接続します。(Fig. 1)

3. USB UPDATE モードが起動し、"USB Update" が表示されて、ファームウェアの書き込みが自動的に開始されます。(Fig. 2)

4. ファームウェアの書き込み完了後、"UPDATE SUCCESS"、"PLEASE..."、"POWER OFF!" が繰り返し表示されます。(Fig. 3)

5. "Power" (電源) キーを押して電源を切ります。(Fig. 1)
6. USB 端子から USB フラッシュメモリを抜きます。(Fig. 1)
7. ダイアグを起動し、ファームウェアのバージョンとチェックサムが、書き込まれたものと同じであることを確認します。("ファームウェアのバージョンとチェックサムの確認" 参照)

■ SELF-DIAGNOSTIC FUNCTION / ダイアグ（自己診断機能）

This unit has self-diagnostic functions that are intended for inspection, measurement and location of faulty point.

There are 21 main menu items, each of which has sub-menu items.

Listed in the table below are main menu items and sub-menu items.

Note: Some of the menu items listed below may not apply to the models covered in this service manual.

本機には、検査、測定、不良個所の発見を目的にしたダイアグ（自己診断機能）があります。

ダイアグには 21 個のメインメニューがあり、そのそれぞれにサブメニューがあります。

下表はダイアグメニュー一覧です。

注意：以下のメニュー項目の一部は、このサービスマニュアルに記載されているモデルに適用されない場合があります。

No.	Main menu	No.	Sub-menu
A: Audio system / オーディオ系			
A1	DSP AUDIO	1	DSP MARGIN
		2	DSP NON MARGIN
		3	DSP FULL CENTER
		4	DSP FULL SURROUND
		5	DSP FULL SURROUND BACK
		6	DSP FULL SUBWOOFER
A2	DIRECT AUDIO	1	ANALOG DIRECT
A3	HDMI AUDIO	1	HDMI AUTO
		2	ARC
A4	SPEAKERS SET	1	BI-AMP (Not for service / サービスでは使用しません)
		2	FULL MUTE
		3	AC B : HIGH (Not for service / サービスでは使用しません)
		4	AC B : LOW (Not for service / サービスでは使用しません)
A5	MIC CHECK	1	MIC ROUTE CHECK
A6	MANUAL TEST	1	TEST ALL
D: Display system / 表示系			
D1	FL CHECK	1	INITIAL DISPLAY
		2	ALL SEGMENT OFF
		3	ALL SEGMENT ON
		4	CHECK PATTERN 1
		5	CHECK PATTERN 2
U: Universal system / 特殊端子系			
U1	USB	1	USB FRONT 1 TRACK
		2	USB FRONT 2 TRACK
		3	USB_VBUS HIGH POWER
N: Network system / ネットワーク系			
N1	NETWORK	1	IP ADDRESS CHECK
		2	MAC ADDRESS CHECK
		3	LINE NOISE 100 MDI (Not for service / サービスでは使用しません)
		4	LINE NOISE 100 MDIX (Not for service / サービスでは使用しません)
		5	LINE NOISE 10 MDI (Not for service / サービスでは使用しません)
		6	LINE NOISE 10 MDIX (Not for service / サービスでは使用しません)
		7	LINK CHECK
		8	EXT TEST

No.	Main menu	No.	Sub-menu
C: Communication system / 通信・バスライン系			
C1	DIGITAL PCB CHECK	1	ALL
		2	BUS FLASH ROM
		3	I2C
		4	BUS DIR
		5	BUS DSP1
		6	EEPROM
C2	HDMI INFO	1	HDMI MODEL NAME
		2	HDMI PRODUCT ID
C3	NETWORK IC CHECK	1	ALL
		2	NET RAM
		3	PHY TEST
		4	APL ID
V: Video system / ビデオ系			
V1	ANALOG VIDEO CHECK	1	ANALOG BYPASS
		2	MUTE CHECK
V2	DIGITAL VIDEO CHECK	1	HDMI REPEAT
		2	OSD-VIDEO OUT
P: Power supply and protection system / 電源・プロテクション系			
P1	SYSTEM MONITOR	1	DC
		2	PS1/PS2/PS3
		3	THM1/THM2/THM3
		4	OUTPUT LEVEL
		5	LIMITER CONTROL
		6	USB/L3 (J model)
		7	KEY1/KEY2
P2	PROTECTION HISTORY	1	HISTORY 1
		2	HISTORY 2
		3	HISTORY 3
		4	HISTORY 4
S: System and version system / システム・バージョン系			
S1	FIRMWARE UPDATE	1	DSP FIRMWARE UPDATE (Not for service / サービスでは使用しません)
S2	SET INFORMATION	1	INITIAL DISPLAY
		2	MODEL/DESTINATION
		3	DEBUG (Not for service / サービスでは使用しません)
S3	FACTORY PRESET	1	PRESET INHIBIT
		2	PRESET RESERVED
S4	ROM VERSION/CHECKSUM	1	SYSTEM VERSION
		2	MICROPROCESSOR VERSION
		3	MICROPROCESSOR CHECKSUM
		4	DSP VERSION
		5	DSP CHECKSUM
		6	OSD VERSION
		7	OSD CHECKSUM
		8	NETWORK VERSION
		9	NETWORK CHECKSUM
		10	MODEL/DESTINATION
		11	VERIFY ERROR (Not for service / サービスでは使用しません)
S5	SOFT SWITCH	1	SWITCH MODE
		2	MODEL NAME

● Starting Self-Diagnostic Function

While pressing the “TONE CONTROL” and “INFO” keys, press the “” (Power) key to turn on the power, and release those 2 keys.


The self-diagnostic function mode is activated.

● ダイアグの起動

“TONE CONTROL” と “INFO” キーを押しながら “” (電源) キーを押して電源を入れた後、2つのキーを放します。

ダイアグが起動します。

Keys of this unit / 本機キー

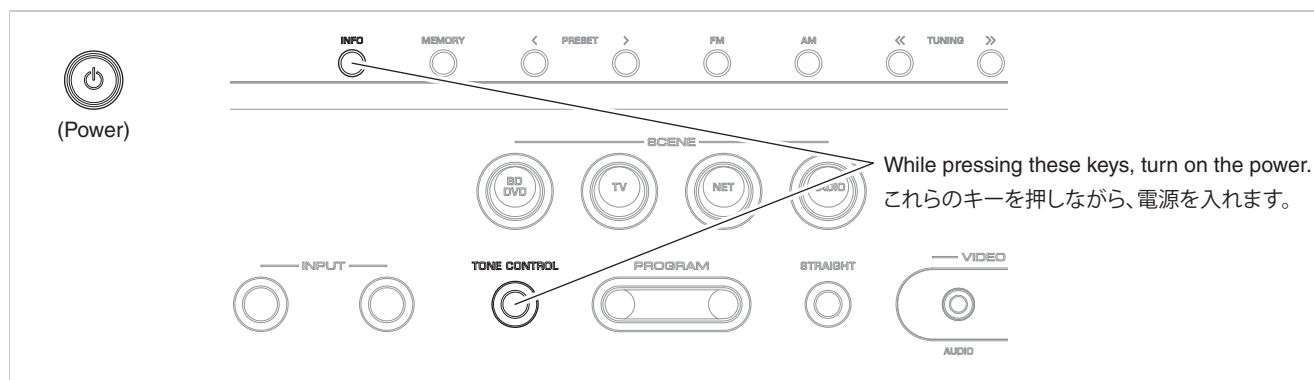

● Starting Self-Diagnostic Function in the protection cancel mode

If the protection function works and causes hindrance to troubleshooting, cancel the protection function by the procedure below, and it will be possible to enter the self-diagnostic function mode. (The protection functions other than the excess current detect function will be disabled.)

While pressing the “TONE CONTROL” and “INFO” keys, press the “” (Power) key to turn on the power and keep pressing those 2 keys and “” (Power) key for 3 seconds or longer.

The self-diagnostic function mode is activated with the protection functions disabled.

In this mode, the “SLEEP” segment of the FL display flashes to indicate that the mode is self-diagnostic function mode with the protection functions disabled.

● プロテクション解除モードでの起動

プロテクションが動作することにより、故障箇所の診断に支障をきたすような場合は、次の方法によりプロテクションを解除した状態でダイアグモードに入ることができます。(過電流検出以外のプロテクション動作を解除する)

“TONE CONTROL” と “INFO” キーを押しながら “” (電源) キーを押して電源を入れ、2つのキーと “” (電源) キーを3秒以上押し続けます。

プロテクション解除モードでダイアグが起動します。

このモードではFLの“SLEEP”セグメントが点滅し、プロテクションを解除した状態でのダイアグモードであることを知らせます。

CAUTION!

Using this unit with the protection function disabled may cause further damage to this unit. Use special care for this point when using this mode.

注意！

プロテクションを解除した状態でのダイアグモードは、危険な状態でもプロテクションが作動しないため、動作させると、本機を破壊することがあります。このモードを使用する場合は十分注意してください。

● Canceling Self-Diagnostic Function

- Before canceling self-diagnostic function, execute setting for "S3. FACTORY PRESET" menu. (Memory initialization inhibited or Memory initialized).
 - * In order to keep the user memory preserved, be sure to select PRESET INHIBIT (Memory initialization inhibited).
- Press the "⏻" (Power) key to turn off the power.

● Display provided when Self-Diagnostic Function started

The display is as described below depending on the situation when the power to this unit is turned off.

 
1. When the power is turned off by usual operation:

"NO PROTECT" is displayed. Then "A1-1. DSP MARGIN" is displayed in a few seconds.

Opening message / オープニング表示

NO PROTECT

After a few seconds / 数秒後



A1-1
DSP MARGIN

Main menu display / メインメニュー表示

● ダイアグの解除

- ダイアグを解除する前に、"S3. FACTORY PRESET" メニュー（メモリーの初期化禁止／またはメモリーの初期化）の設定をします。
 - ※ ユーザーメモリーを保持したい場合は、必ず PRESET INHIBIT（メモリー初期化禁止）を選択してください。
- "⏻"（電源）キーを押して電源を切ります。

● ダイアグ起動時の表示

本機の電源が切れたときの状況により、下記のように表示されます。

1. 通常の操作で電源を切った場合：

"NO PROTECT" が表示されます。数秒後、"A1-1. DSP MARGIN" が表示されます。

2. When the protection function worked to turn off the power:

The information of protection function which worked at that time is displayed. Then "A1-1. DSP MARGIN" is displayed in a few seconds.

Note: At that time if you restart the self-diagnostic function after turning off the power once, "NO PROTECT" will be displayed. That is because that situation is equal to "1. When the power is turned off by usual operation:".

However history of the protection function is stored in memory as backup data. For details, refer to "P2. PROTECTION HISTORY" menu.

2-1. When there is a history of protection function due to excess current.



Cause: An excessive current flowed through the power amplifier.

Supplementary information: As current of the power amplifier is detected, the abnormal channel can be identified by checking the current detect transistor.

Turning on the power without correcting the abnormality will cause the protection function to work immediately and the power supply will instantly be shut off.

Notes:

- Applying the power to this unit without correcting the abnormality can be dangerous and cause additional circuit damage. To avoid this, if "I PROTECT" protection function works 1 time, the power will not turn on even when the "⏻" (Power) key is pressed. In order to turn on the power again, start up the self-diagnostic function.
- The output transistors in each amplifier channel should be checked for damage before applying power to this unit.
- Amplifier current should be monitored by measuring DC voltage across the emitter resistors for each channel.

2. プロテクションが働いて電源が切れた場合:

そのときに働いたプロテクションの情報が表示されます。数秒後、"A1-1. DSP MARGIN" が表示されます。

注) このとき、一旦電源を切った後にダイアグを再起動すると、"NO PROTECT" が表示されます。それは、その状況が「1. 通常の操作で電源を切った場合:」と同じだからです。

ただし、プロテクションの履歴はバックアップデータとしてメモリーに保存されます。詳細は、"P2. PROTECTION HISTORY" メニューを参照してください。

2-1. 過電流によるプロテクション履歴がある場合

原因: パワーアンプに過電流が流れた。


補足: パワーアンプの電流を検出していますので、電流検出トランジスタをチェックすれば異常チャンネルが特定できます。

異常状態のまま電源を入れると、瞬時にプロテクションが働き、すぐに電源が切れます。

注意:

- 異常状態のまま本機の電源を入れると、危険な状態になり、さらに回路が損傷を受ける原因になります。それを避けるために、「I PROTECT」が1回働いた場合、それ以降 "⏻" (電源) キーを押しても電源が入らなくなります。再度電源を入れる場合、ダイアグを起動してください。
- 本機の電源をいれる前に、各パワーアンプの出力トランジスタに損傷がないかチェックしてください。
- パワーアンプの電流は、各チャンネルのエミッターの抵抗器間 DC 電圧を測定することによりモニターしてください。

2-2. When the protection function worked due to abnormal DC output.

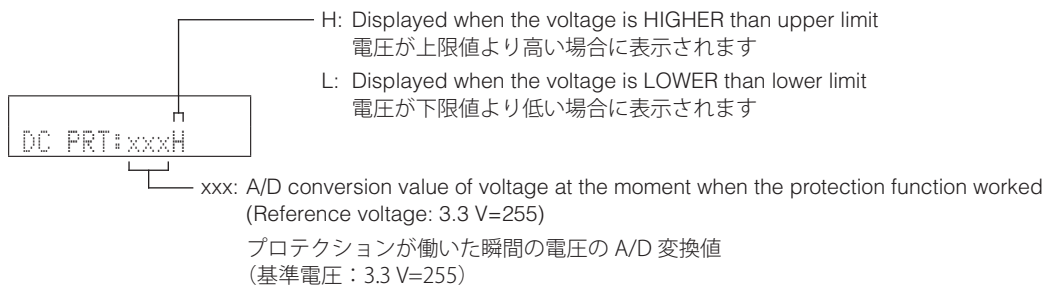

Cause: DC output of the power amplifier is abnormal.

Supplementary information: The protection function worked due to a DC voltage appearing at the speaker terminal. A cause could be a defect in the amplifier.


Turning on the power without correcting the abnormality will cause the protection function to work in 5 seconds and the power supply will be shut off.

原因: パワーアンプの DC 出力が異常。

補足: アンプの故障でスピーカー端子に直流電圧が掛かるなどが原因で、プロテクションが働いたことを示します。

異常状態のまま電源を入れると、5 秒後にプロテクションが働き、電源が切れます。

2-3. When the protection function worked due to abnormal voltage in the power supply section.

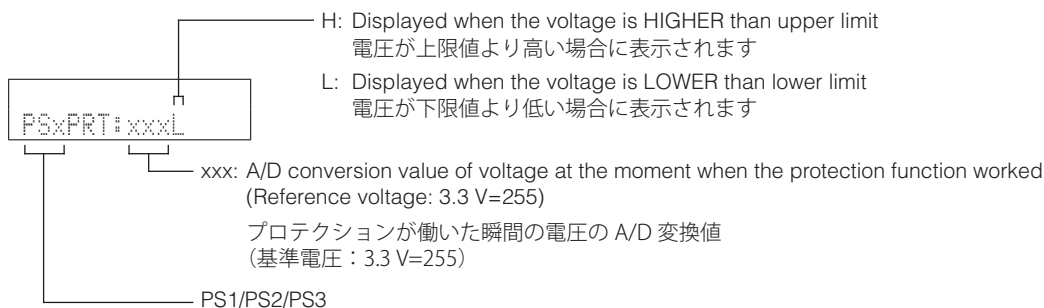

Cause: The voltage in the power supply section is abnormal.

Supplementary information: The protection function worked due to a defect or overload in the power supply.

Turning on the power without correcting the abnormality will cause the protection function to work in 1 seconds and the power supply will be shut off.

2-3. 電源部の電圧異常によりプロテクションが働いた場合

原因: 電源部の電圧が異常。

補足: 電源電圧による原因で、プロテクションが働いたことを示します。

異常状態のまま電源を入れると、1 秒後にプロテクションが働き、電源が切れます。


Notes:

- Applying the power to this unit without correcting the abnormality can be dangerous and cause additional circuit damage. To avoid this, if "PS" and "DC" protection function works 3 times consecutively, the power will not turn on even when the "P" (Power) key is pressed. In order to turn on the power again, start up the self-diagnostic function.
- The output transistors in each amplifier channel should be checked for damage before applying power to this unit.
- Amplifier current should be monitored by measuring DC voltage across the emitter resistors for each channel.

注意:

- 異常状態のまま本機の電源を入れると、危険な状態になり、さらに回路が損傷を受ける原因になります。それを避けるために、「DC」、「PS」プロテクションが連続して3回目働いた場合、それ以降「P」（電源）キーを押しても電源が入らなくなります。再度電源を入れる場合、ダイアグを起動してください。
- 本機の電源をいれる前に、各パワーアンプの出力トランジスタに損傷がないかチェックしてください。
- パワーアンプの電流は、各チャンネルのエミッターの抵抗器間 DC 電圧を測定することによりモニターしてください。

2-4. When the protection function worked due to excessive heatsink temperature.

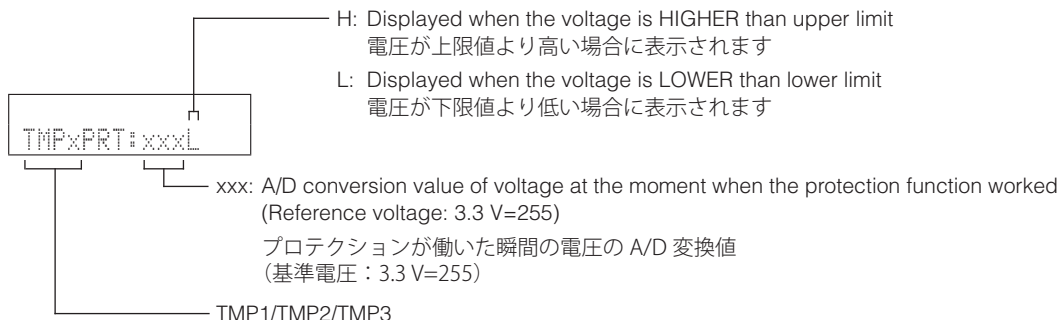

Cause: The temperature of the heatsink is excessive.

Supplementary information: The protection function worked due to the temperature limit being exceeded. Causes could be poor ventilation or a defect related to the thermal sensor.

Turning on the power without correcting the abnormality will cause the protection function to work in 1 seconds and the power supply will be shut off.

2-4. ヒートシンクの異常温度によりプロテクションが働いた場合

原因： ヒートシンクの温度が異常。

補足： 温度制限を越えた原因で、プロテクションが働いたことを示します。

異常状態のまま電源を入れると、1 秒後にプロテクションが働き、電源が切れます。

● History of protection function

When the protection function has worked, its history is stored in memory as backup data.

Even if no abnormality is noted while servicing the unit, an abnormality which has occurred previously can be defined as long as the backup data has been stored.

For details, refer to "P2. PROTECTION HISTORY" menu.

● プロテクションの履歴

プロテクションが働いた場合、その履歴はバックアップデータとしてメモリーに保存されます。

修理のときに異常が認められなくても、バックアップデータが残っていれば、お客様のところで起きた異常を区別できます。

詳細は、「P2. PROTECTION HISTORY」メニューを参照してください。

● Operation procedure of Main menu and Sub-menu

There are 21 main menu items, each of which has sub-menu items.

Main menu selection

Select the main menu using "SCENE TV" (forward) and "SCENE BD/DVD" (reverse) keys.

Sub-menu selection

Select the sub-menu using "SCENE RADIO" (forward) and "SCENE NET" (reverse) keys.

● メインメニューとサブメニューの操作


ダイアグには 21 個のメインメニューがあり、そのそれぞれにサブメニューがあります。

メインメニューの選択

"SCENE TV" (順送り)、"SCENE BD/DVD" (逆送り) キーで選択します。

サブメニューの選択

"SCENE RADIO" (順送り)、"SCENE NET" (逆送り) キーで選択します。

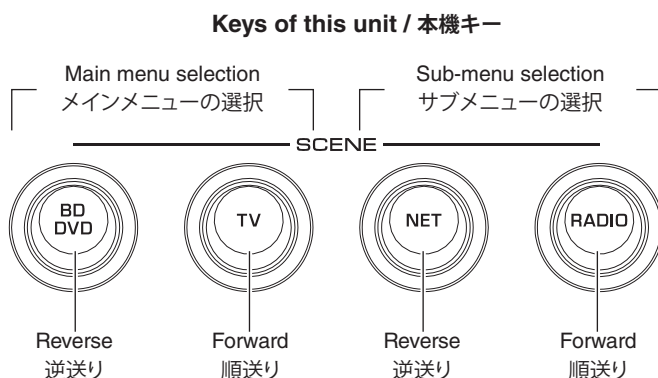

● Functions in Self-Diagnostic Function mode

In addition to the self-diagnostic function menu items, functions listed below are available.

- Power ON/OFF
- Master volume
- Muting
- Input selection

* Functions related to the tuner and the set menu are not available.

● ダイアグ中の機能

ダイアグメニューの他に、以下の機能が動作します。

- 電源 オン/オフ
- マスターボリューム
- ミューティング
- インプットセレクト

※ チューナー関連、セットメニュー関連は機能しません。

● Initial settings when Self-Diagnostic Function started

The following initial settings are used when self-diagnostic function is started.

When self-diagnostic function is canceled, these settings are restored to those before starting self-diagnostic function.

- Master volume: -20 dB
- Input: AV5
- Main menu: A1-1. DSP MARGIN
- Speaker setting: LARGE, Bass out to SWFR (All channels)
- HDMI Control: Off

● ダイアグ開始時の初期設定

ダイアグ開始時に以下のような設定になります。

ダイアグ解除時にはダイアグ開始前の状態に戻ります。

- マスターボリューム: -20 dB
- インプット: AV5
- メインメニュー: A1-1. DSP MARGIN
- スピーカー設定: LARGE、Bass out to SWFR (すべてのチャンネル)
- HDMI コントロール: OFF

● Details of Self-Diagnostic Function menu

A1. DSP AUDIO

This menu is used to check audio signal route via DSP.

A1-1. DSP MARGIN

The audio signal is output including the head margin via DSP.

* When input source is stereo, signal is assigned as below.

Front L: Front L, Center, Surround L, Surround Back L

Front R: Front R, Surround R, Surround Back R

Front L +10 dB: Subwoofer

```
A1-1
DSP MARGIN
```

A1-2. DSP NON MARGIN

The SUBWOOFER signal is output including the head margin via DSP.

The audio signal other than SUBWOOFER is output without including the head margin via DSP.

```
A1-2
DSP NON MARGIN
```

A1-3. DSP FULL CENTER

The audio signal is output to only CENTER channel in digital full bit without including the head margin.

```
A1-3
DSP FULL C
```

INPUT: AV5 ANALOG

SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUTPUT				SUBWOOFER OUTPUT
		FRONT	CENTER	SURROUND	SURROUND BACK	
Both ch, -20 dBm	+6.5 dB	-∞	+13.0 dBm	-∞	-∞	-∞

● ダイアグメニュー詳細

A1. DSP AUDIO

DSP を経由する音声信号の経路をチェックします。

A1-1. DSP MARGIN

音声信号が DSP を経由してヘッドマージンを含んで出力されます。

※ 2ch 信号入力時、以下のように信号が振り分けられて出力されます。

Front L : Front L、Center、Surround L、Surround Back L

Front R : Front R、Surround R、Surround Back R

Front L +10 dB : Subwoofer

A1-2. DSP NON MARGIN

サブウーファースの音声信号が DSP を経由してヘッドマージンを含んで出力されます。

サブウーファー以外の音声信号は DSP を経由してヘッドマージンを含まず出力されます。

A1-3. DSP FULL CENTER

音声信号がヘッドマージンを含まず、デジタルフルビットで CENTER チャンネルのみへ出力されます。

A1-4. DSP FULL SURROUND

The audio signal is output to only SURROUND L/R channels in digital full bit without including the head margin.

```
A1-4
DSP FULL SUR
```

INPUT: AV5 ANALOG

SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUTPUT				SUBWOOFER OUTPUT
		FRONT	CENTER	SURROUND	SURROUND BACK	
Both ch, -20 dBm	+6.5 dB	-∞	-∞	+13.0 dBm	-∞	-∞

A1-4. DSP FULL SURROUND

音声信号がヘッドマージンを含まず、デジタルフルビットで SURROUND L/R チャンネルのみへ出力されます。

A1-5. DSP FULL SURROUND BACK

The audio signal is output to only SURROUND BACK L/R channel in digital full bit without including the head margin.

```
A1-5
DSP FULL SB
```

INPUT: AV5 ANALOG

SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUTPUT				SUBWOOFER OUTPUT
		FRONT	CENTER	SURROUND	SURROUND BACK	
Both ch, -20 dBm	+6.5 dB	-∞	-∞	-∞	+13.0 dBm	-∞

A1-5. DSP FULL SURROUND BACK

音声信号がヘッドマージンを含まず、デジタルフルビットで SURROUND BACK L/R チャンネルのみへ出力されます。

A1-6. DSP FULL SUBWOOFER

The audio signal is output to only SUBWOOFER channel in digital full bit without including the head margin.

```
A1-6
DSP FULL SW
```

INPUT: AV5 ANALOG

SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUTPUT				SUBWOOFER OUTPUT
		FRONT	CENTER	SURROUND	SURROUND BACK	
Both ch, -20 dBm	+6.5 dB	-∞	-∞	-∞	-∞	-6.5 dBm

A1-6. DSP FULL SUBWOOFER

音声信号がヘッドマージンを含まず、デジタルフルビットで SUBWOOFER チャンネルのみへ出力されます。

A2. DIRECT AUDIO

This menu is used to check audio signal route of DIRECT mode.

A2-1. ANALOG DIRECT

The analog input audio signal is output to FRONT L/R in DIRECT mode.

A2-1
ANALOG DIRECT

INPUT: AV5 ANALOG

SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUTPUT				SUBWOOFER OUTPUT
		FRONT	CENTER	SURROUND	SURROUND BACK	
Both ch, -20 dBm	+6.5 dB	+13.0 dBm	-∞	-∞	-∞	-∞

A2. DIRECT AUDIO

DIRECT モードの音声信号の経路をチェックします。

A2-1. ANALOG DIRECT

アナログ入力の音声信号が DIRECT モードで FRONT L/R へ出力されます。

A3. HDMI AUDIO

This menu is used to check the route of audio signal input to HDMI IN/OUT jack.

- * Before check using "A3-2. ARC" menu, be sure to connect a TV monitor equipped with Audio Return Channel function to this unit in advance.

A3-1
HDMI AUTO



A3-2
ARC

A3-1. HDMI AUTO

The audio signal input to selected HDMI IN jack is output.

選択された HDMI IN 端子へ入力された音声信号が出力されます。

A3-2. ARC (Audio Return Channel function)

The audio signal input to HDMI OUT jack is output.

HDMI OUT 端子へ入力された音声信号が出力されます。


A3. HDMI AUDIO

HDMI IN/OUT 端子へ入力された音声信号の経路をチェックします。

※ "A3-2. ARC" メニューでのチェックの前に、あらかじめ必ず Audio Return Channel 機能に対応しているテレビを接続してください。

A4. SPEAKERS SET

This menu is used to check the speaker output.

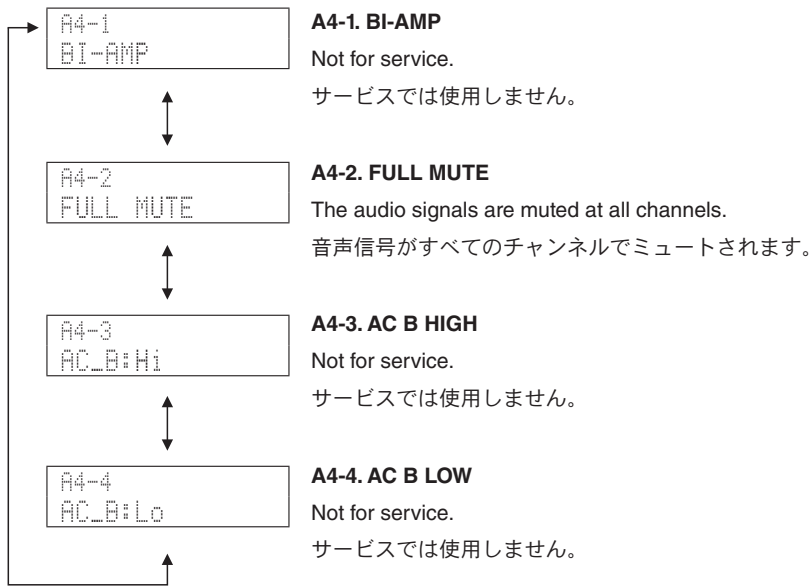

A4. SPEAKERS SET

スピーカー出力をチェックします。

A5. MIC CHECK

A5-1. MIC ROUTE CHECK

The audio signal input to the YPAO MIC jack is output to FRONT L and FRONT R channels via A/D-D/A.

A5. MIC CHECK

A5-1. MIC ROUTE CHECK

YPAO マイク端子へ入力された音声信号が A/D - D/A 経由で FRONT L、FRONT R チャンネルへ出力されます。



A6. MANUAL TEST

The test noise generated by built-in noise generator in DSP is output to the channels specified by the sub-menu.

	Test noise / テストノイズ
for SUBWOOFER / SUBWOOFER 用	30 Hz to 80 Hz pink noise / ピンクノイズ
for other than SUBWOOFER / SUBWOOFER 以外	500 Hz to 2 kHz pink noise / ピンクノイズ

A6-1. TEST ALL

The test noise is output to all channels.

A6-1 TEST ALL

A6. MANUAL TEST

DSP に内蔵されたノイズジェネレータによって生成されたテストノイズが、サブメニューで指定したチャンネルへ出力されます。

A6-1. TEST ALL

 
 
 
テストノイズが全てのチャンネルへ出力されます。

D1. FL CHECK




This menu is used to check operation of the FL display.

D1. FL CHECK

FL 表示の動作をチェックします。

FL display / FL 表示**D1-1. INITIAL DISPLAY / 初期表示****D1-2. ALL SEGMENT OFF / 全セグメント消灯****D1-3. ALL SEGMENT ON / 全セグメント点灯**

  * After check, change to next menu at once.
確認後、すみやかに次のサブメニューを選択してください。

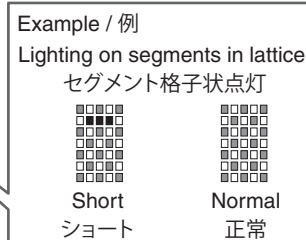D1-4. CHECK PATTERN 1 / チェックパターン 1**D1-5. CHECK PATTERN 2 / チェックパターン 2**

Segment conditions of the FL tube is checked by turning ON and OFF all segments.

Next, a short between segments next to each other is checked by turning ON and OFF all segments alternately (in lattice).

(In the above example, the segments in the second row from the top are shorted.)

全セグメント消灯・全セグメント点灯により FL 管のセグメントの不良を確認します。

次に、全セグメントを交互（格子状）に点灯／消灯することで、隣り合うセグメントのショートをチェックします。

（上記の例は、上から 2 列目のセグメントがショートしています。）

U1. USB

This menu is used to check the audio signal route from USB storage device.

U1-1. USB FRONT 1 TRACK

The 1st music file stored in the USB storage device connected to the USB jack is reproduced.

- * Copy 2 or more music files from PC to the root folder of the USB storage device in advance.

```
U1-1
USB_F 1 TRACK
```

U1-2. USB FRONT 2 TRACK

The 2nd music file stored in the USB storage device connected to the USB jack is reproduced.

```
U1-2
USB_F 2 TRACK
```

U1-3. USB_VBUS HIGH POWER

The output current (USB_VBUS) of USB jack is output at up to 2.1A/5V.

```
U1-3
USB_VBUS_HPWR
```

U1. USB

USB フラッシュメモリーからの音声信号の経路をチェックします。

U1-1. USB FRONT 1 TRACK

USB 端子に接続された USB フラッシュメモリーに保存された音楽ファイルの 1 曲目が再生されます。

- ※ あらかじめPCからUSBフラッシュメモリーのルートフォルダに音楽ファイルを 2 曲以上コピーしてください。

U1-2. USB FRONT 2 TRACK

USB 端子に接続された USB フラッシュメモリーに保存された音楽ファイルの 2 曲目が再生されます。

U1-3. USB_VBUS HIGH POWER

USB 端子の出力電流 (USB_VBUS) が最大 2.1A / 5V で出力されます。

N1. NETWORK

This menu is used to check functions related to NETWORK.

Connect between LAN port of broadband router and NETWORK jack of this unit with a network cable.

* When the network condition varies while sub-menu is displayed (e.g., the network is deactivated once), the correct result will not be displayed. In that case, once turn off the power to this unit, then start up the self-diagnostic function again and select this menu.

N1-1. IP ADDRESS CHECK

This menu is used to check that IP address can be obtained.



- OK: Connected (IP address obtained)
接続 (IP アドレス取得完了)
- NG: No traffic / Disconnected
通信不能 / 接続が切れている

N1-2. MAC ADDRESS CHECK

This menu is used to check that MAC address is written.



- OK: Normal / 正常
- NG: Unwritten / 書き込まれていない

 
N1-3. LINE NOISE 100 MDI

Not for service.



N1-4. LINE NOISE 100 MDIX

Not for service.



N1.NETWORK

ネットワークに関連する機能をチェックします。

ブロードバンドルーターのLAN ポートと本機の NETWORK 端子をネットワークケーブルで接続します。

※ サブメニュー表示中にネットワークの状態が変わると (たとえばネットワークが一時切れるなど) 正しい結果が表示されません。その場合、一度本機の電源を切り、ダイアグを再起動して本メニューを選択します。

N1-1. IP ADDRESS CHECK

IP アドレスが取得されていることをチェックします。

N1-2. MAC ADDRESS CHECK

MAC アドレスが書き込まれていることをチェックします。

N1-3. LINE NOISE 100 MDI

サービスでは使用しません。

N1-4. LINE NOISE 100 MDIX

サービスでは使用しません。

N1-5. LINE NOISE 10 MDI

Not for service.

```
N1-5
LN MDI 10
```

N1-5. LINE NOISE 10 MDI

サービスでは使用しません。

N1-6. LINE NOISE 10 MDIX

Not for service.

```
N1-6
LN MDIX 10
```

N1-6. LINE NOISE 10 MDIX

サービスでは使用しません。

N1-7. LINK CHECK

This menu is used to check that the broadband router is connected correctly.

```
N1-7
LINK CHK:OK
```

N1-7. LINK CHECK

ブロードバンドルーターが正しく接続されていることをチェックします。

OK: Connected / 接続

NG: No traffic / Disconnected

通信不能 / 接続が切れている

N1-8. EXT TEST


Transmission/reception of the NETWORK port is checked.

With the power turned off, short the pins of the NETWORK jack as shown in the figure below.

Start up the self-diagnostic function and select this menu.

Transmission/reception test is executed and its result is displayed.

Note) Be sure to return the shorted pins to their original condition after executing this test.

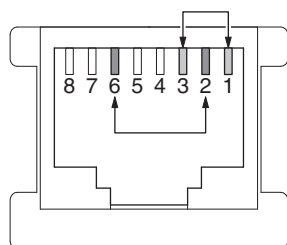

NETWORK jack

N1-8. EXT TEST

NETWORK ポートの送受信テストを行います。

電源を切った状態で、下図のように NETWORK 端子のピンをショートさせます。

ダイヤグを起動して本メニューを選択します。

送受信テストを行い、その結果が表示されます。

注意) 検査後、ショートしたピンを必ず元の状態に戻してください。

```
N1-8
EXT TEST:OK
```

OK: Normal / 正常

NG: Abnormal / 異常

--: Checking / チェック中

C1. DIGITAL P.C.B. CHECK

This menu is used to check the communication and bus line connection between devices on DIGITAL P.C.B.

C1-1. ALL

The synthetic judgment result of sub-menu C1-2 to C1-6 is displayed.



OK: No error detected / 不良検出なし
NG: An error is detected / 不良検出あり

C1-2. BUS FLASH ROM

FLASH ROM (IC953)'s reading/writing are checked.



OK: No error detected / 不良検出なし
NG: An error is detected / 不良検出あり

C1-3. I2C

The I2C (Inter integrated circuit) bus line connection is checked.



0 : No error detected / 不良検出なし
1 : An error is detected / 不良検出あり

- Error detection of AM/FM tuner / AM/FM チューナーの不良検出
- Error detection of Video selector receiver (IC502) / ビデオセレクトー (IC502) の不良検出
- Error detection of HDMI receiver/transmitter (IC1) / HDMI レシーバー／トランスミッター (IC1) の不良検出

C1-4. BUS DIR

Communication and bus line connection between microprocessor (IC21) and DIR (IC61) are checked.



OK: No error detected / 不良検出なし
NG: An error is detected / 不良検出あり

C1. DIGITAL P.C.B. CHECK

DIGITAL P.C.B. 上の各デバイス間の通信とバスライン接続をチェックします。

C1-1. ALL

サブメニュー C1-2 ～ C1-6 の総合判定結果を表示します。

C1-2. BUS FLASH ROM

FLASH ROM (IC953) の読み出し／書き込みをチェックします。

C1-3. I2C

I2C (Inter integrated circuit) バスライン接続をチェックします。

C1-4. BUS DIR

マイコン (IC21) と DIR (IC61) 間の通信とバスライン接続をチェックします。

C1-5. BUS DSP1

Communication and bus line connection between microprocessor (IC21) and DSP1 (IC41) are checked.

C1-5. BUS DSP1

マイコン (IC21) と DSP1 (IC41) 間の通信とバスライン接続をチェックします。

```
C1-5
DSP1 BUS:OK
```

OK: No error detected / 不良検出なし

NG: An error is detected / 不良検出あり

C1-6. EEPROM

EEPROM (IC22)'s reading is checked.

C1-6. EEPROM

EEPROM (IC22) の読み出しをチェックします。

```
C1-6
EEPROM:OK
```

OK: No error detected / 不良検出なし

NG: An error is detected / 不良検出あり

C2. HDMI INFORMATION

This menu is used to display information about HDMI.

C2. HDMI INFORMATION

HDMI に関する情報が表示されます。

C2-1. HDMI MODEL NAME

The model name of this unit written to HDMI module is displayed.

C2-1. HDMI MODEL NAME

HDMI モジュールに書き込まれている本機のモデル名が表示されます。

```
C2-1
HMN:RX-V573
```

RX-V573

HTR-5065

C2-2. HDMI PRODUCT ID

The product ID of this unit written to HDMI module is displayed.

C2-2. HDMI PRODUCT ID

HDMI モジュールに書き込まれている本機のプロダクト ID が表示されます。

```
C2-2
HID:3172
```

3172: RX-V573

3175: HTR-5065

C3. NETWORK IC CHECK

This menu is used to check the communication and bus line connection between devices related to network.

C3-1. ALL

The synthetic judgment result of sub-menu C3-2 to C3-4 is displayed.

```
C3-1
ALL:OK
```

OK: No error detected / 不良検出なし
 NG: An error is detected / 不良検出あり
 --: Checking / チェック中

C3-2. NET RAM

Communication and bus line connection between network microprocessor (IC951) and SDRAM (IC952) are checked.

```
C3-2
NET RAM:OK
```

OK: No error detected / 不良検出なし
 NG: An error is detected / 不良検出あり
 --: Checking / チェック中

C3-3. PHY (Ethernet PHYceiver) TEST

The perform a loopback test in PHY (IC955).

```
C3-3
PHY TEST:OK
```

OK: No error detected / 不良検出なし
 NG: An error is detected / 不良検出あり
 --: Checking / チェック中

C3-4. APL (Apple) ID

Apple authentication IC (IC956) device ID is checked.

```
C3-3
APL ID:OK
```

OK: No error detected / 不良検出なし
 NG: An error is detected / 不良検出あり
 --: Checking / チェック中

C3. NETWORK IC CHECK

ネットワークに関連する各デバイス間の通信とバスラインの接続をチェックします。

C3-1. ALL

サブメニュー C3-2 ～ C3-4 の総合判定結果を表示します。

C3-2. NET RAM

ネットワークマイコン (IC951) と SDRAM (IC952) の通信とバスラインの接続チェックします。

C3-3. PHY (Ethernet PHYceiver) TEST

PHY (IC955) 内でループバックテストを行います。

C3-4. APL (Apple) ID

Apple 認証 IC (IC956) のデバイス ID をチェックします。


V1. ANALOG VIDEO CHECK

This menu is used to check the analog video signal route.

V1-1. ANALOG BYPASS


The video signal is converted and output as shown below.

V1-1
ANALOG BYPASS

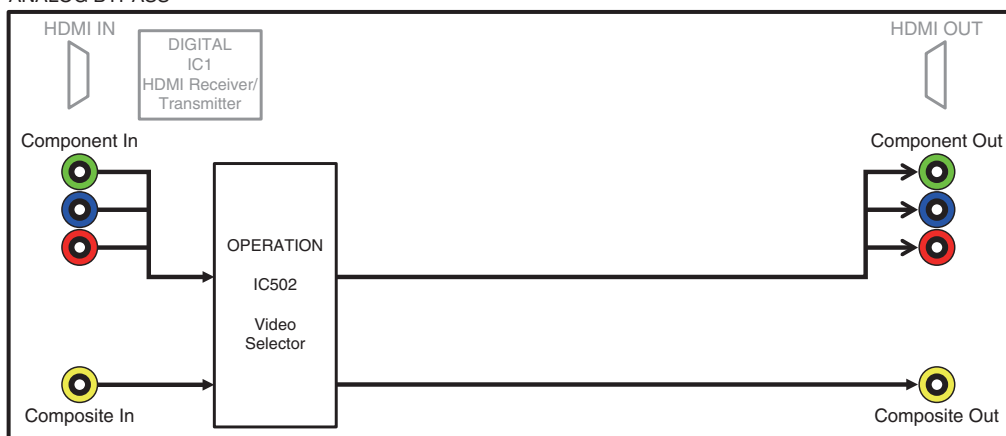ANALOG BYPASS**V1-2. MUTE CHECK**

The video signal is muted.

V1-2
MUTE CHECK

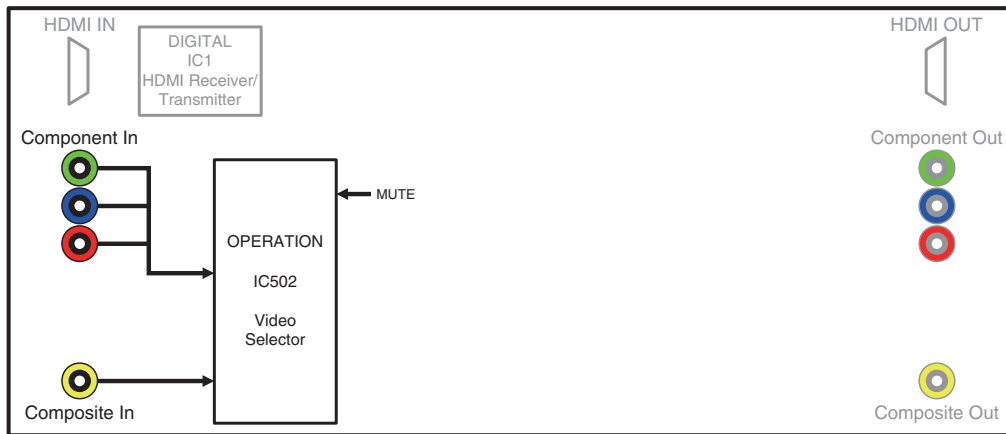MUTE CHECK**V1. ANALOG VIDEO CHECK**

アナログ映像信号の経路をチェックします。

V1-1. ANALOG BYPASS

映像信号が以下のように変換され、出力されます。

V1-2. MUTE CHECK

映像信号がミュートされます。

V2. DIGITAL VIDEO CHECK

This menu is used to check the digital video signal route.

V2-1. HDMI REPEAT

The video/audio signals input to HDMI IN jack are output to HDMI OUT jack.

V2. DIGITAL VIDEO CHECK

デジタル映像信号の経路をチェックします。


V2-1. HDMI REPEAT

HDMI IN 端子へ入力された映像信号と音声信号が HDMI OUT 端子へ出力されます。

V2-1
HDMI REPEAT **

The Deep Color video signals is input, "30" bit or "36" bit is displayed.

Deep Color 映像信号を入力すると、"30" bit または "36" bit が表示されます。

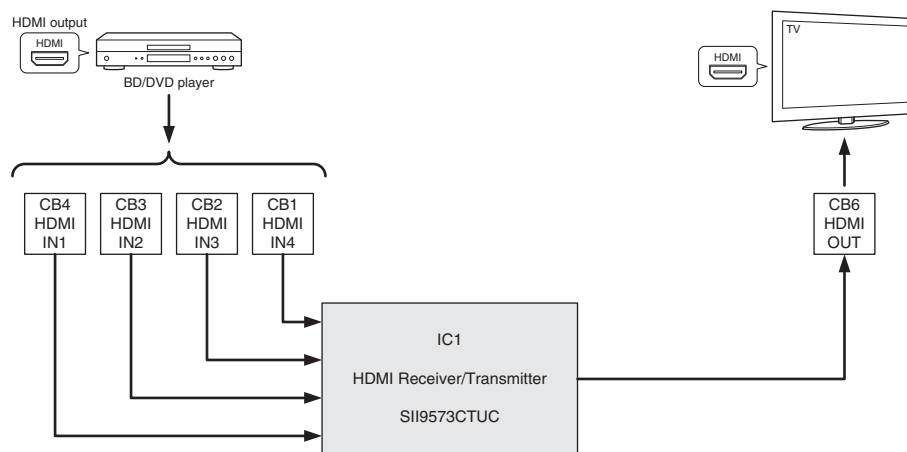


V2-2. OSD (On-Screen Display) VIDEO OUT

The "OSD CHECK" screen is output to HDMI OUT jack.


V2-2. OSD (On-Screen Display) VIDEO OUT

OSD CHECK 画面が HDMI OUT 端子へ出力されます。

V2-2
OSD-VIDEO OUT

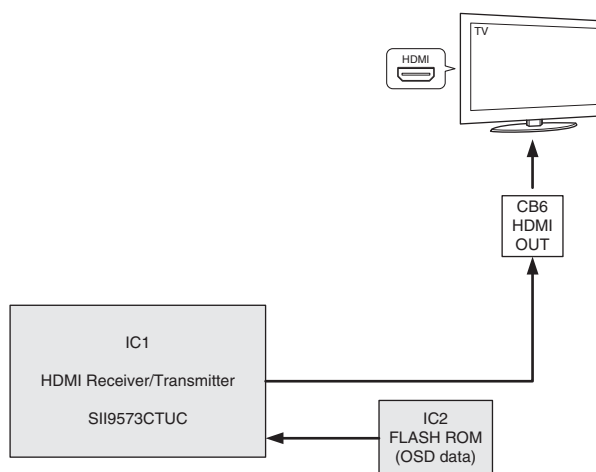

TV screen display / TV 画面表示

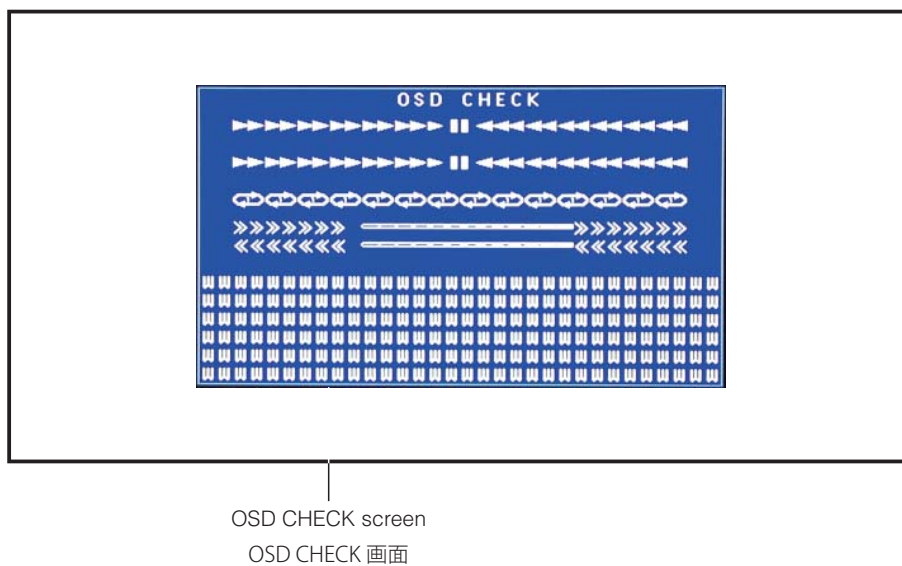

P1. SYSTEM MONITOR

This menu is used to display the A/D conversion value of the microprocessor which detects panel keys and protection functions by using the sub-menu.

When “P1-7. KEY1/KEY2” sub-menu is selected, keys become inoperable due to detection of the values of all keys. However, it is possible to advance to the next menu by turning the VOLUME knob.

* Numeric values in the figure are given as reference only.

P1-1. DC

Power amplifier DC (DC voltage) output is detected.

The voltage at 120 pin (DC_PRT) of IC21 is displayed.

Normal value: 27 to 89
(Reference voltage: 3.3 V=255)

* If DC becomes out of the normal value range, the protection function works to turn off the power.



P1-2. PS1/PS2/PS3

Power supply voltage (PS) protection detection.

The voltage at 126 pin (PS1_PRT)/107 pin (PS2_PRT)/106 pin (PS3_PRT) of IC21 are displayed.


Voltage detects

PS1: AC_BL, AC_V, AC_12, ±7A, +3.3S
PS2: ±12A, +5A, ±3.3V, -VP
PS3: +5.5V

Normal value

PS1: 12 to 100
PS2: 34 to 106
PS3: 132 to 168
(Reference voltage: 3.3 V=255)

* If PS1, PS2 or PS3 becomes out of the normal value range, the protection function works to turn off the power.

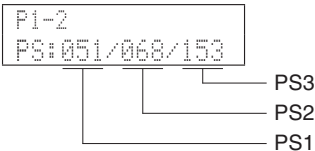

P1. SYSTEM MONITOR

パネルキー、プロテクションなどを検出しているマイコンの A/D 変換値を、サブメニューで表示します。

サブメニュー “P1-7. KEY1/KEY2” にすると、全キーの値を検出するためキー操作はできなくなりますが、VOLUME ツマミを回すことにより、次のメニューに進めることができます。

※ 図中の数値は参考例です。

P1-1. DC

パワーアンプ DC（直流電圧）出力の検出

IC21 の 120 ピン（DC_PRT）の電圧が表示されます。

正常値： 27 ～ 89
(基準電圧：3.3 V=255)

※ DC が正常値を外れるとプロテクションが働き、電源が切れます。

P1-2. PS1/PS2/PS3

電源電圧（PS）プロテクションの検出

IC21 の 126 ピン（PS1_PRT）／ 107 ピン（PS2_PRT）／ 106 ピン（PS3_PRT）の電圧が表示されます。

検出電圧

PS1： AC_BL、AC_V、AC_12、±7A、+3.3S
PS2： ± 12A、+5A、± 3.3V、-VP
PS3： +5.5V

正常値

PS1： 12 ～ 100
PS2： 34 ～ 106
PS3： 132 ～ 168
(基準電圧：3.3 V=255)

※ PS1、PS2 または PS3 が正常値を外れるとプロテクションが働き、電源が切れます。

P1-3. THM1/THM2/THM3

Temperature of the heatsink (THM) is detected.
The voltage at 122 pin (THM1)/123 pin (THM2)
/110 pin (THM3) of IC21 is displayed.

Normal value


THM1: 42 to 255

THM2: 42 to 255 (U, C models)

THM3: 114 to 255

(Reference voltage: 3.3 V=255)

* If THM1, THM2 or THM3 becomes out of
the normal value range, the protection
function works to turn off the power.

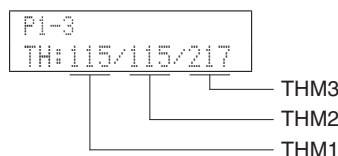**P1-3. THM1/THM2/THM3**

ヒートシンク温度 (THM) の検出
IC21 の 122 ピン (THM1) / 123 ピン (THM2)
/ 110 ピン (THM3) の電圧が表示されます。

正常値

THM1 : 42 ~ 255

THM2 : (サービスでは使用しません。)

THM3 : 114 ~ 255

(基準電圧 : 3.3 V=255)

※ THM1 または THM3 が正常値を外れるとプ
ロテクションが働き、電源が切れます。

P1-4. OUTPUT LEVEL

Output level of speaker output is detected.
The voltage at 121 pin (AMP_OLV) of IC21 is
displayed.
(Reference voltage: 3.3 V=255)

**P1-4. OUTPUT LEVEL**

スピーカー出力の出力レベルの検出
IC21 の 121 ピン (AMP_OLV) の電圧が表示さ
れます。
(基準電圧 : 3.3 V=255)

P1-5. LIMITER CONTROL

Power limiter control is detected.
The voltage at 7 pin (AMP_LMT) of IC21 is
displayed.
(Reference voltage: 3.3 V=255)

**P1-5. LIMITER CONTROL**

 
電源リミッター制御の検出
IC21 の 7 ピン (AMP_LMT) の電圧が表示され
ます。
(基準電圧 : 3.3 V=255)

P1-6. USB/L3 (J model)**USB**

Power supply voltage of USB jack is detected.
The voltage at 109 pin (USB_VBUS_PRT) of
IC21 is detected.
(Reference voltage: 3.3 V=255)

L3 (J model)

Not for service.

**P1-6. USB/L3 (J model)****USB**

USB 端子の電源電圧の検出
IC21 の 109 ピン (USB_VBUS_PRT) の電圧が
表示されます。
(基準電圧 : 3.3 V=255)

L3 (J model)

D 端子の L3 (OPERATION P.C.B. CB502 の 11
ピン) レベルの検出
IC21 の 108 ピン (L3_DET) の電圧が表示され
ます。
(基準電圧 : 3.3 V=255)

P1-7. KEY1/KEY2

Panel key is detected.

When the A/D conversion value of the panel key becomes out of the specified range, normal operation will not be available.

In that case, check the constant of voltage dividing resistor, solder condition, etc. Refer to table.

* When "P1-7. KEY1/KEY2" menu is selected, keys become inoperable due to detection of the values of all keys. However, it is possible to advance to the next menu by turning the VOLUME knob.

(Reference voltage: 3.3 V=255)

P1-7. KEY1/KEY2


パネルキーの検出

パネルキーの A/D 値が規定範囲から外れると、正常な動きをしません。

下表をご覧になり、各キーの分圧抵抗の定数、ハンダ不良等の確認をしてください。

※ "P1-7. KEY1/KEY2" メニューにすると、全キーの値を検出するためキー操作はできなくなりますが、VOLUME ツマミを回すことにより、次のメニューに進めることができます。

(基準電圧：3.3 V=255)

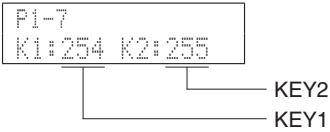

Display / 表示	KEY1
0 – 11	RADIO (SCENE4)
12 – 32	NET (SCENE3)
33 – 54	TV (SCENE2)
55 – 75	BD/DVD (SCENE1)
76 – 96	–
97 – 119	–
120 – 142	INPUT >
143 – 163	INPUT <
182 – 197	 (Power)
198 – 229	TONE CONTROL
255	Key off


Display / 表示	KEY2
0 – 11	DIRECT
12 – 32	TUNING >>
33 – 54	TUNING <<
55 – 77	AM
78 – 99	FM
100 – 121	PRESET >
122 – 144	PRESET <
145 – 166	MEMORY
167 – 186	INFO
187 – 205	STRAIGHT
206 – 226	PROGRAM >
227 – 246	PROGRAM <
255	Key off

P2. PROTECTION HISTORY

This menu is used to display the history of protection function.

All history of protection function will be erased by pressing the "STRAIGHT" key.

* Numeric values in the figure are given as reference only.

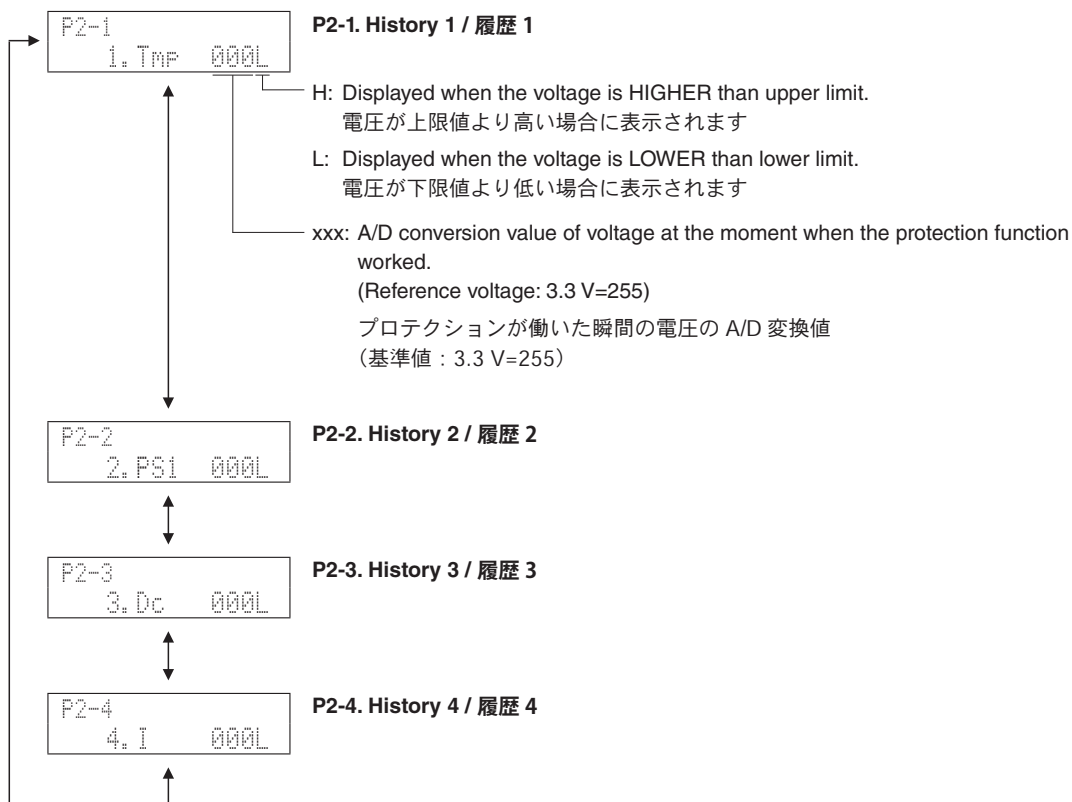

S1. FIRMWARE UPDATE

Not for service.

S1. FIRMWARE UPDATE

サービスでは使用しません。

S1-1
UPDATE TI

S2. SET INFORMATION

The model name and destination of this unit are displayed.

S2. SET INFORMATION

本機のモデル名、仕向け先が表示されます。

S2-1. INITIAL DISPLAY

S2-1
MODEL/DEST

S2-1. INITIAL DISPLAY

S2-2. MODEL/DESTINATION

The model name and destination of this unit are displayed.

 


本機のモデル名、仕向け先が表示されます。

- Not for service / サービスでは使用しません
- Destination / 仕向け先
U / C / R / T / K / A / G (B, G, F) / L / J
- Model name / モデル名
V573 : RX-V573
H5065 : HTR-5065

S2-3. DEBUG

Not for service.



S2-3. DEBUG

サービスでは使用しません。

NRC (Net Restart Counter)

S3. FACTORY PRESET

This menu is used to reserve/inhibit initialization of the back-up IC (EEPROM: IC22 on DIGITAL P.C.B.).

S3. FACTORY PRESET

バックアップ IC (EEPROM : DIGITAL P.C.B. の IC22) の初期化を予約／禁止します。



S3-1. PRESET INHIBIT (Initialization inhibited) / PRESET INHIBIT (初期化禁止)

Initialization of the back-up IC is not executed. Select this sub-menu to protect the values set by the user.
バックアップ用 IC の初期化は行われません。ユーザーの設定値を保護するときは、こちらを選択してください。



S3-2. PRESET RESERVED (Initialization reserved) / PRESET RESERVED (初期化予約)

Initialization of the back-up IC is reserved. (Actual initialization is executed when the power is turned on next.) To reset to the original factory settings or to reset the backup IC, select this sub-menu and press the "P" (Power) key to turn off the power.

ユーザーメモリーの初期化が予約されます。(実際に初期化されるのは、次回の電源投入時です。) 工場出荷時やユーザーメモリーをリセットしたいときは、こちらを選択してから "P" (電源) キーを押して電源を切ってください。

CAUTION: Before setting to the PRESET RESERVED, write down the existing preset memory content of the tuner. (This is because setting to the PRESET RESERVED will cause the user memory content to be erased.)

注意： PRESET RESERVED を選んで初期化をする前に、チューナーのユーザーメモリーの内容を書き写してください。(初期化をすると、チューナーのユーザーメモリーの内容は消えてしまいます。)

S4. ROM VERSION/CHECKSUM

The firmware version and checksum values are displayed.

The checksum is obtained by adding the data at every 8-bit and expressing the result as a hexadecimal notation.


* Numeric values in the figure are given as reference only.

S4. ROM VERSION/CHECKSUM

ファームウェアのバージョン、チェックサムが表示されます。

チェックサムは、データを8ビットごとに加算していき、16進数で表記したものです。

※ 図中の数値は参考例です。

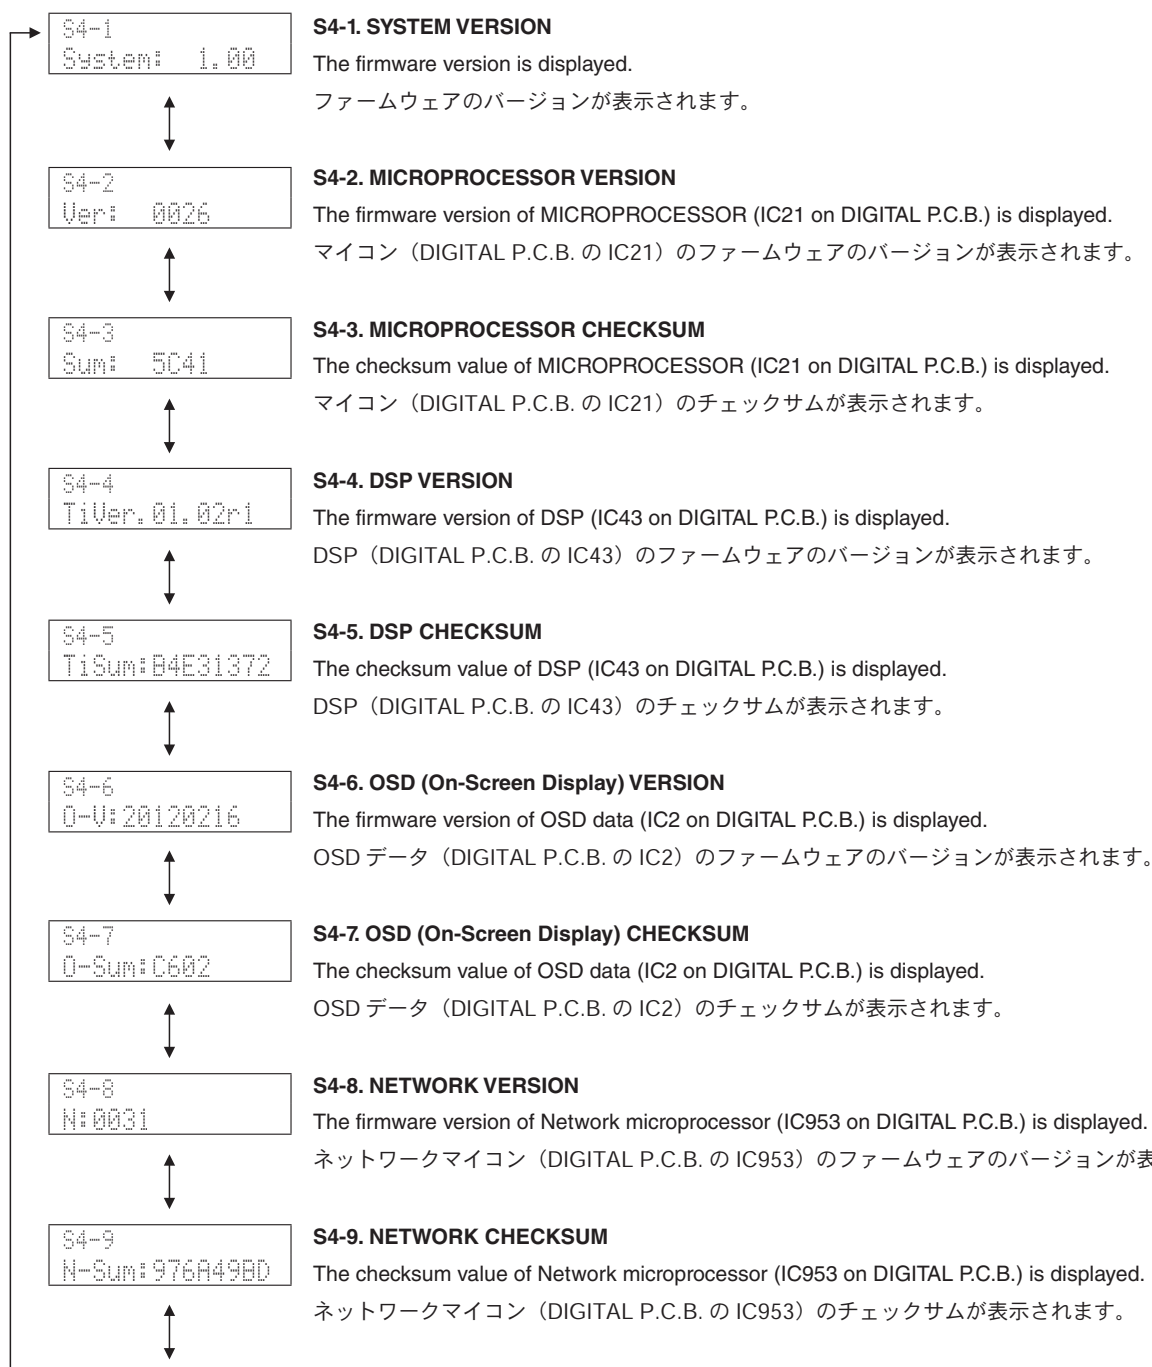

S4-10
V5 333 U 111

S4-10. MODEL/DESTINATION

The model name and destination are displayed.

モデル名と仕向け先が表示されます。

DESTINATION detection value

Detection value	000	111	222	333	444	555	666	777	888
Destination	J	U	C	R	T	K	A	G (B, G, F)	L

MODEL detection value

Detection value	333	444
Model name	V5 (RX-V573)	H5 (HTR-5065)

S4-11
Verifu 106 01

S4-11. VERIFY ERROR

Not for service.

サービスでは使用しません。

S5. SOFT SWITCH

This menu is used to write the model name to the back-up IC (EEPROM: IC22 on DIGITAL P.C.B.).

When the following parts are replaced, the model name MUST be written by using this menu to have proper operation.

DIGITAL P.C.B.

EEPROM: IC22 on DIGITAL P.C.B.

To write the model name, first switch to the write mode by using the "S5-1. SWITCH MODE" menu and then select the desired model name by using "S5-2. MODEL NAME" menu.

S5-1. SWITCH MODE

Pressing the "STRAIGHT" key will change the display alternately as shown below. When "S5-1. SW: MODEL" is displayed, this unit is in the write mode.

S5-1
SW :PCB



Write mode / 書き込みモード

S5-1
SW :MODEL

Press the "STRAIGHT" key

Note: After writing of the model name is completed, be sure to change to "S5-1. SW: PCB".

注意: モデル名の書き込みを完了した後、必ず "S5-1. SW: PCB" に切り替えてください。

S5-2. MODEL NAME

Select the desired model name by pressing the "STRAIGHT" key. Then the selected model name is written automatically.

S5-2
MODEL: V573



S5-2. MODEL NAME



"STRAIGHT" キーを押して目的のモデル名を選択します。選択されたモデル名が自動的に書き込まれます。

S5-2
MODEL: H5065

Press the "STRAIGHT" key

■ POWER AMPLIFIER ADJUSTMENT / パワーアンプ調整




- Right after power is turned on, confirm that the voltage across the terminals of R2154 (SURROUND BACK Rch), R2152 (SURROUND Rch), R2149 (FRONT Rch), R2151 (CENTER), R2150 (FRONT Lch), R2153 (SURROUND Lch) and R2155 (SURROUND BACK Lch) are within the confines of 0.1 mV to 10 mV.
 - If measured voltage exceeds 10 mV, remove R2108 (SURROUND BACK Rch), R2107 (SURROUND Rch), R2111 (FRONT Rch), R2110 (CENTER), R2109 (FRONT Lch), R2112 (SURROUND Lch) and R2133 (SURROUND BACK Lch), and then reconfirm the voltage.
- Attention**
If the measured voltage exceeds 10 mV after repairing the power amplifier, check other parts again for any possible defect before removing the resistor.
- Confirm that the voltage is within the confines of 0.2 mV to 15 mV after 60 minutes.
- 電源投入直後、R2154 (SURROUND BACK Rch)、R2152 (SURROUND Rch)、R2149 (FRONT Rch)、R2151 (CENTER)、R2150 (FRONT Lch)、R2153 (SURROUND Lch)、R2155 (SURROUND BACK Lch) の端子間電圧を測定し、0.1 mV から 10 mV の間であることを確認してください。
 - 電圧が 10 mV を超えている場合は、R2108 (SURROUND BACK Rch)、R2107 (SURROUND Rch)、R2111 (FRONT Rch)、R2110 (CENTER)、R2109 (FRONT Lch)、R2112 (SURROUND Lch)、R2113 (SURROUND BACK Lch) を外し、電圧を再確認してください。
- 注意**
パワーアンプ修理後に 10 mV を超えている場合は、抵抗を外す前に故障箇所を調べてください。
- 60 分後、電圧が 0.2 mV ～ 15 mV であることを確認してください。

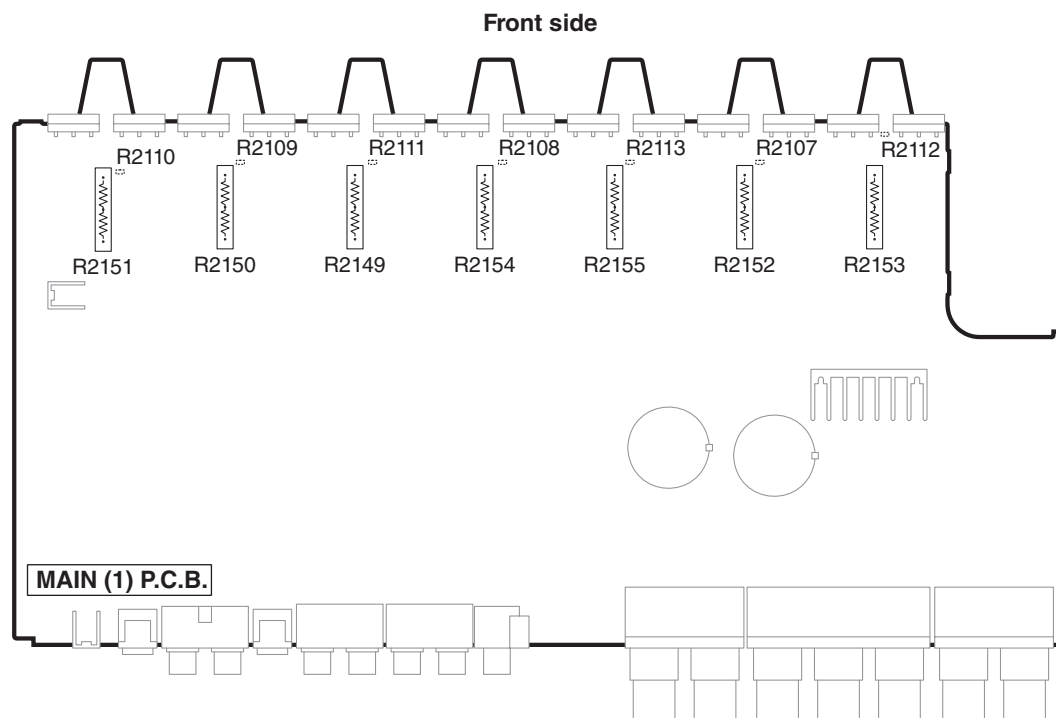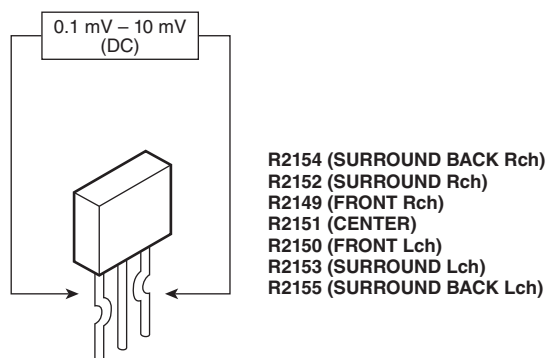

● V4001 : 18-MT-11GNK (OPERATION P.C.B.)



Note : 1) F1, F2 Filament pin 2) NP No pin 3) NX No extend pin 4) 1G-18G Grid pin

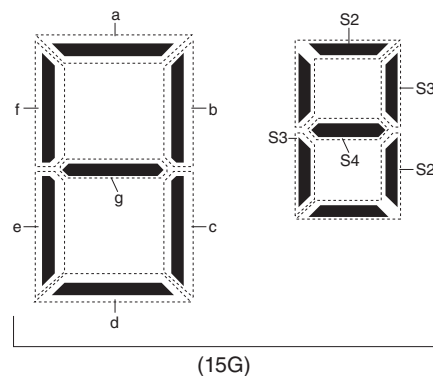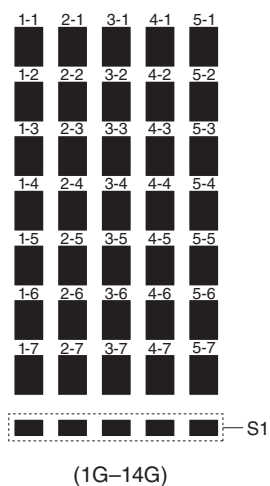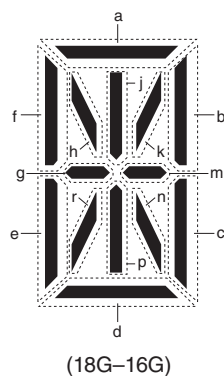


● ANODE CONNECTION

	18G	17G	16G	15G	1G–14G
P1	1a	1a	1a	S5	1-1
P2	1h	1h	1h	S7	2-1
P3	1j	1j	1j	1d	3-1
P4	1k	1k	1k	2d	4-1
P5	1b	1b	1b	S2	5-1
P6	1f	1f	1f	1e	1-2
P7	1m	1m	1m	2e	2-2
P8	1g	1g	1g	S3	3-2
P9	1c	1c	1c	1c	4-2
P10	1e	1e	1e	2c	5-2
P11	1r	1r	1r	S4	1-3
P12	1p	1p	1p	1g	2-3
P13	1n	1n	1n	2g	3-3
P14	1d	1d	1d	1f	4-3
P15	2a	2a	2a	2f	5-3
P16	2h	2h	2h	1b	1-4
P17	2j	2j	2j	2b	2-4
P18	2k	2k	2k	1a	3-4
P19	2b	2b	2b	2a	4-4
P20	2f	2f	2f	PL	5-4
P21	2m	2m	2m	SW	1-5
P22	2g	2g	2g	PR	2-5
P23	2c	2c	2c	L	3-5
P24	2e	2e	2e	C	4-5
P25	2r	2r	2r	R	5-5
P26	2p	2p	2p	SL	1-6
P27	2n	2n	2n	SR	2-6
P28	2d	2d	2d	SBL	3-6
P29	SIRIUS	S8	HD	SB	4-6
P30	OUT	S9	TAG	SBR	5-6
P31	HDMI	iPod CHARGE	CINEMA DSP	S6	1-7
P32	1	SP B	3	S13	2-7
P33	2	S15	STEREO	MUTE	3-7
P34	S12	SP A	TUNED	ZONE 2	4-7
P35	S10	PARTY	ENHANCER	ZONE 3	5-7
P36	S11	—	ADAPTIVE DRC	SLEEP	S1

IC DATA

IC1: SII9573CTUC (DIGITAL P.C.B.)
HDMI port processors

* No replacement part available. / サービス部品供給なし

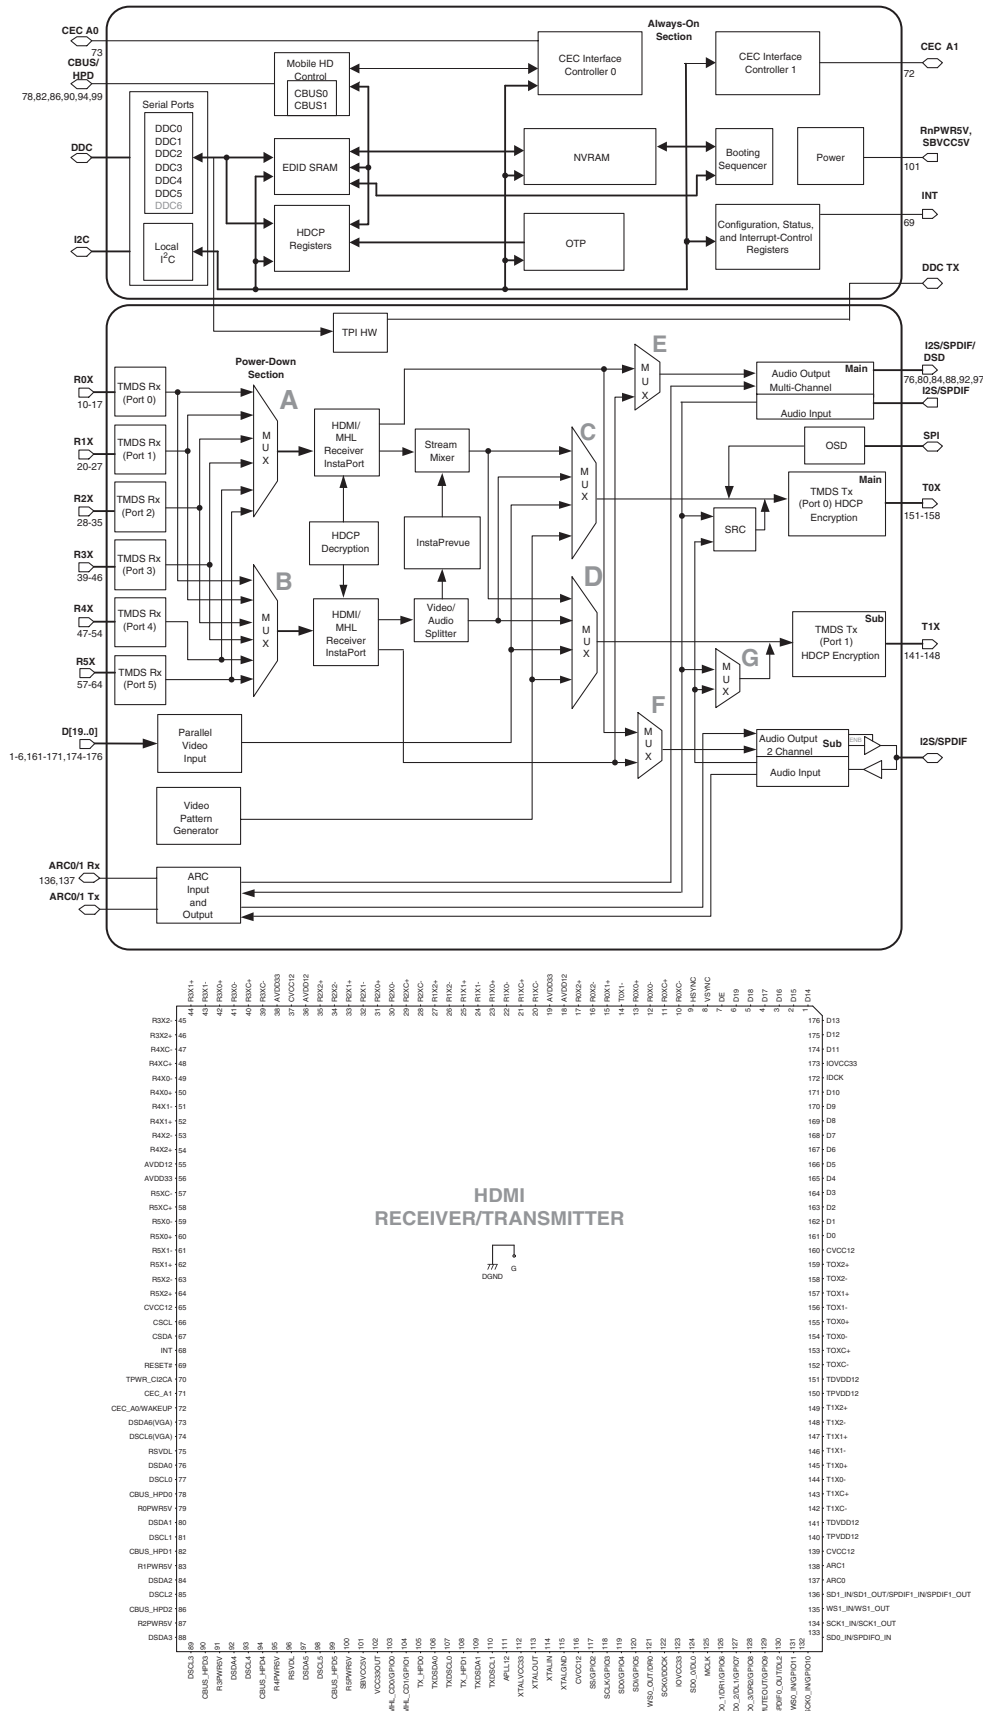

HDMI
RECEIVER/TRANSMITTER



HDMI Receiver and MHL Port Pins

Pin No.	Function Name	Type	I/O	Detail of Function
12	R0X0-	TMDS	Input	HDMI receiver Port 0 TMDS input data pairs.
13	R0X0+			
14	R0X1-			
15	R0X1+			
16	R0X2-			
17	R0X2+			
10	R0XC-	TMDS	Input	HDMI receiver Port 0 TMDS input clock pair.
11	R0XC+			
22	R1X0-	TMDS	Input	HDMI receiver Port 1 TMDS input data pairs.
23	R1X0+			
24	R1X1-			
25	R1X1+			
26	R1X2-			
27	R1X2+			
20	R1XC-	TMDS	Input	HDMI receiver Port 1 TMDS input clock pair.
21	R1XC+			
30	R2X0-	TMDS	Input	HDMI receiver Port 2 TMDS input data pairs.
31	R2X0+			
32	R2X1-			
33	R2X1+			
34	R2X2-			
35	R2X2+			
28	R2XC-	TMDS	Input	HDMI receiver Port 2 TMDS input clock pair.
29	R2XC+			
41	R3X0-	TMDS	Input	HDMI receiver Port 3 TMDS input data pairs.
42	R3X0+			
43	R3X1-			
44	R3X1+			
45	R3X2-			
46	R3X2+			
39	R3XC-	TMDS	Input	HDMI receiver Port 3 TMDS input clock pair.
40	R3XC+			
49	R4X0-	TMDS	Input	HDMI receiver Port 4 TMDS input data pairs.
50	R4X0+			
51	R4X1-			
52	R4X1+			
53	R4X2-			
54	R4X2+			
47	R4XC-	TMDS	Input	HDMI receiver Port 4 TMDS input clock pair.
48	R4XC+			
59	R5X0-	TMDS	Input	HDMI receiver Port 5 TMDS input data pairs.
60	R5X0+			
61	R5X1-			
62	R5X1+			
63	R5X2-			
64	R5X2+			
57	R5XC-	TMDS	Input	HDMI receiver Port 5 TMDS input clock pair.
58	R5XC+			

Note: For Port 0 and Port 5 that have been configured as MHL inputs, the R0X0+ and R0X0- pin pair and R5X0+ and R5X0- pin pair carry the respective MHL signals.

HDMI Transmitter Port Pins

Pin No.	Function Name	Type	I/O	Detail of Function
154	T0X0-	TMDS	Output	HDMI transmitter Port 0 TMDS output data pairs. Main HDMI transmitter output Port TMDS data pairs.
155	T0X0+			
156	T0X1-			
157	T0X1+			
158	T0X2-			
159	T0X2+			
152	T0XC-	TMDS	Output	HDMI transmitter Port 0 TMDS output clock pair. Main HDMI transmitter output Port TMDS clock pair.
153	T0XC+			
144	T1X0-	TMDS	Output	HDMI transmitter Port 1 TMDS output data pairs. Sub HDMI transmitter output Port TMDS data pairs.
145	T1X0+			
146	T1X1-			
147	T1X1+			
148	T1X2-			
149	T1X2+			
142	T1XC-	TMDS	Output	HDMI transmitter Port 1 TMDS output clock pair. Sub HDMI transmitter output Port TMDS clock pair.
143	T1XC+			

Audio Return Channel Pins

Pin No.	Function Name	Type	I/O	Detail of Function
137	ARC0	Analog	Input/Output	Audio Return Channels 0 and 1. These pins are used to transmit or receive an IEC60958-1 audio stream. In ARC transmitter mode, received on the SPDIFn_IN input pin, this pin transmits an S/PDIF signal to an ARC receiver-capable source (such as HTiB) or a repeater (such as AVR) devices, using single-mode ARC. In ARC receiver mode, transmitted through the SPDIFn_OUT pin, this pin receives an S/PDIF signal from an ARC transmitter-capable sink (such as DTV) device, using single-mode ARC. In combination with external components, common-mode ARC can be received. Each channel can either be an ARC input or an ARC output at one time.
138	ARC1			

Audio Pins

Pin No.	Function Name	Type	I/O	Detail of Function
121	WS0_OUT/DR0	LVTTL	Output	Main port I2S word select output/DSD data right bit 0.
122	SCK0/DDCK	LVTTL	Output	Main port I2S serial clock output/DSD clock output.
124	SDO_0/DL0	LVTTL	Output	Main port I2S serial data 0 output/DSD data left bit 0 output.
125	MCLK	LVTTL	Output	Master clock output.
126	SDO_1/DR1/GPIO6	LVTTL	Output	Main port I2S serial data 1 output/DSD data right bit 1 output/programmable GPIO 6.
127	SDO_2/DL1/GPIO7	LVTTL	Output	Main port I2S serial data 2 output/DSD data left bit 1 output/programmable GPIO 7.
128	SDO_3/DR2/GPIO8	LVTTL	Output	Main port I2S serial data 3 output/DSD data right bit 2/programmable GPIO 8.
129	MUTEOUT/GPIO9	LVTTL	Input/Output	Mute audio output/programmable GPIO 9.
130	SPDIF0_OUT/DL2	Analog/LVTTL	Output	Main port S/PDIF output/DSD data left bit 2.
131	WS0_IN/GPIO11	LVTTL	Input/Output	Main port I2S word select input/programmable GPIO 11.
132	SCK0_IN/GPIO10	LVTTL	Input/Output	Main port I2S serial clock input/programmable GPIO 10.
133	SD0_IN/SPDIF0_IN	Analog/LVTTL	Input	Main port I2S serial data input/S/PDIF input.
134	SCK1_IN/SCK1_OUT	LVTTL	Input/Output	Sub port I2S serial clock1 input/I2S serial bit clock output.
135	WS1_IN/WS1_OUT	LVTTL	Input/Output	Sub port I2S word select input/I2S word select output.
136	SD1_IN/SD1_OUT/SPDIF1_IN/SPDIF1_OUT	LVTTL	Input/Output	Sub port I2S serial data input/I2S serial data1 output/ SPDIF input/SPDIF output.

Crystal Pins

Pin No.	Function Name	Type	I/O	Detail of Function
113	XTALOUT	LVTTL 5 V tolerant	Output	Crystal clock output.
114	XTALIN	LVTTL 5 V tolerant	Input	Crystal clock input.

SPI Interface Pins

Pin No.	Function Name	Type	I/O	Detail of Function
117	SS/GPIO2	LVTTL	Input/Output	SPI slave select/programmable GPIO 2.
118	SCLK/GPIO3	LVTTL Schmitt Open drain/	Input/Output	SPI clock/programmable GPIO 3.
119	SDO/GPIO4	LVTTL Schmitt Open drain	Input/Output	SPI slave data output/master data input/programmable GPIO 4.
120	SDI/GPIO5	LVTTL Schmitt Open drain	Input/Output	SPI slave data input/master data output/programmable GPIO 5.

Parallel Video Bus

Pin No.	Function Name	Type	I/O	Detail of Function
1	D14	LVTTL	Input	Video data inputs. The video data inputs can be configured to support a wide variety of input formats, including multiple RGB and YCbCr bus formats, using register settings.
2	D15			
3	D16			
4	D17			
5	D18			
6	D19			
161	D0			
162	D1			
163	D2			
164	D3			
165	D4			
166	D5			
167	D6			
168	D7			
169	D8			
170	D9			
171	D10			
174	D11			
175	D12			
176	D13			
7	DE	LVTTL	Input	Data enable input.
9	HSYNC	LVTTL	Input	Horizontal sync input.
8	VSYNC	LVTTL	Input	Vertical sync input.
172	IDCK	LVTTL	Input	Input data clock.

System Switching Pins

Pin No.	Function Name	Type	I/O	Detail of Function
76	DSDA0	LVTTL Schmitt Open drain 5 V tolerant	Input/Output	DDC I2C data for respective HDMI receiver port. These signals are true open drain, and do not pull to ground when power is not applied to the device. These pins require an external pull-up resistor.
80	DSDA1			
84	DSDA2			
88	DSDA3			
92	DSDA4			
97	DSDA5			
73	DSDA6(VGA)	LVTTL Schmitt Open drain 5 V tolerant	Input/Output	DDC I2C data for VGA port. This signal is true open drain, and does not pull to ground when power is not applied to the device. This pin requires an external pull-up resistor.
77	DSCL0	LVTTL Schmitt Open drain 5 V tolerant	Input	DDC I2C clock for respective HDMI receiver port. These signals are true open drain, and do not pull to ground when power is not applied to the device. These pins require an external pull-up resistor.
81	DSCL1			
85	DSCL2			
89	DSCL3			
93	DSCL4			
98	DSCL5			
74	DSCL6(VGA)	LVTTL Schmitt Open drain 5 V tolerant	Input	DDC I2C clock for VGA port. This signal is true open drain, and does not pull to ground when power is not applied to the device. This pin requires an external pull-up resistor.
106	TXDSDA0	LVTTL Schmitt Open drain 5 V tolerant	Input/Output	DDC master I2C data for HDMI transmitter Port 0. This signal is true open drain, and does not pull to ground when power is not applied to the device. This pin requires an external pull-up resistor.
109	TXDSDA1	LVTTL Schmitt Open drain 5 V tolerant	Input/Output	DDC master I2C data for HDMI transmitter Port 1. This signal is true open drain, and does not pull to ground when power is not applied to the device. This pin requires an external pull-up resistor.
107	TXDSCL0	LVTTL Schmitt Open drain 5 V tolerant	Input/Output	DDC master I2C clock for HDMI transmitter Port 0. This signal is true open drain, and does not pull to ground when power is not applied to the device. This pin requires an external pull-up resistor.
110	TXDSCL1	LVTTL Schmitt Open drain 5 V tolerant	Input/Output	DDC master I2C clock for HDMI transmitter Port 1. This signal is true open drain, and does not pull to ground when power is not applied to the device. This pin requires an external pull-up resistor.
79	R0PWR5V	Power	Input	5 V port detection input for respective HDMI receiver port. Connect to 5 V signal from HDMI input connector. These pins require a 10 ohms series resistor, a 5.1 k-ohms pull down resistor, and at least a 1 μ F capacitor to ground.
83	R1PWR5V			
87	R2PWR5V			
91	R3PWR5V			
95	R4PWR5V			
100	R5PWR5V			
78	CBUS_HPD0	LVTTL 1.5 mA 5 V tolerant Analog	Input/Output	Hot plug detect output for the respective HDMI receiver port. In MHL mode, these pins serve as the respective CTRL bus.
82	CBUS_HPD1			
86	CBUS_HPD2			
90	CBUS_HPD3			
94	CBUS_HPD4			
99	CBUS_HPD5			
105	TX_HPD0	LVTTL 5 V tolerant	Input	Hot plug detect input for HDMI transmitter Port 0.
108	TX_HPD1	LVTTL 5 V tolerant	Input	Hot plug detect input for HDMI transmitter Port 1.
103	MHL_CD0/GPIO0	LVTTL	Input/Output	MHL cable detect 0/programmable GPIO 0.
104	MHL_CD1/GPIO1	LVTTL	Input/Output	MHL cable detect 1/programmable GPIO 1.

Control Pins

Pin No.	Function Name	Type	I/O	Detail of Function
66	CSCL	Schmitt Open drain 5 V tolerant	Input	Local configuration/status I2C clock. Chip configuration/status is accessed via this I2C port. This pin is true open drain, so it does not pull to ground if power is not applied.
67	CSDA	LVTTL Schmitt Open drain 5 V tolerant	Input/Output	Local configuration/status I2C data. Chip configuration/status is accessed via this I2C port. This pin is true open drain, so it does not pull to ground if power is not applied.
69	RESET#	Schmitt	Input	External reset. Active LOW. Must be pulled up to VCC33OUT. When main power is not provided to the system, the microprocessor must present a high impedance of at least 100 k-ohms to RESET#. If this condition is not met, a circuit to block the leakage from VCC33OUT to the microprocessor GPIO may be required.

Configuration Pins

Pin No.	Function Name	Type	I/O	Detail of Function
70	TPWR_Ci2CA	LVTTL	Input/Output	I2C slave address input / Transmit power sense output. During power-on-reset (POR), this pin is used as an input to latch the I2C subaddress. The level on this pin is latched when the POR transitions from the asserted state to the de-asserted state. After completion of POR, this pin is used as the TPWR output. A register setting can change this pin to show if the active port is receiving a TMDS clock.
68	INT	Schmitt Open drain 8 mA 3.3 V tolerant	Output	Interrupt output. This is an open-drain output and requires an external pull-up resistor.

CEC Pins

Pin No.	Function Name	Type	I/O	Detail of Function
72	CEC_A0	CEC Compliant 5V tolerant, Schmitt triggered, LVTTL	Input/Output	Primary CEC I/O used for interfacing to CEC devices This signal is electrically compliant with the CEC specification. As an input, this pin acts as an LVTTL schmitt triggered input and is 5 V tolerant. As an output, the pin acts as an NMOS driver with resistive pull-up. This pin has an internal pull-up resistor. This signal should be connected to the CEC signal of all HDMI input and output ports if the system supports just one CEC line. OR In a system designed to have separate CEC connectivity for the HDMI input and output ports, this signal should be connected to the CEC signal of all the input ports supported in the system. This signal and CEC_A0 each connect to a separate CEC controller within the port processor and are independent of each other.
71	CEC_A1	CEC Compliant 5V tolerant, Schmitt triggered, LVTTL	Input/Output	Secondary CEC I/O used for interfacing to CEC devices. This signal is electrically compliant with the CEC specification. As an input, this pin acts as an LVTTL schmitt triggered input and is 5 V tolerant. As an output, the pin acts as an NMOS driver with resistive pull-up. This pin has an internal pull-up resistor. This is an optional CEC signal provided for system designers who want to implement a system with two independent CEC lines, such as a system that supports a separate CEC line for the HDMI input ports and the HDMI output ports. In the example of a DTV that provides a second HDMI output using the SiI957n port processor; this signal can be connected to the CEC signal of the output port while the CEC_A1 signal is connected to the CEC signal of the input ports. This signal and CEC_A1 each connect to a separate CEC controller within the port processor and are independent of each other.

Power and Ground Pins


Pin No.	Function Name	Type	I/O	Detail of Function
19	AVDD33	Power	3.3 V	TMDS core VDD.
38				
56				
123	IOVCC33	Power	3.3 V	I/O VCC.
173				
101	SBVCC5	Power	5.0 V	Local power from system. This pin requires a 10 ohms series resistor.
18	AVDD13	Power	1.3 V	TMDS receiver core VDD.
36				
55				
37	CVCC13	Power	1.3 V	Digital core VCC.
65				
116				
139				
160				
111	APLL13	Power	1.3 V	PLL analog VCC.
102	VCC33OUT	Power	3.3 V	Internal regulator 3.3 V output.
140	TPVDD13	Power	1.3 V	Analog power for TMDS Tx core.
150				
141	TDVDD13	Power	1.3 V	Digital power for TMDS Tx core.
151				
112	XTALVCC33	Power	3.3 V	PLL crystal oscillator power.
115	XTALGND	Ground	GND	PLL crystal oscillator ground.
ePad	GND	Ground	GND	The ePad must be soldered to ground, as this is the only ground connection for the device.

Reserved Pin


Pin No.	Function Name	Type	Detail of Function
75	RSVDL	Reserved	Reserved, must be tied to ground.
96			

IC41: D70YE101BRFP266 (DIGITAL P.C.B.)
Decoder/Post processor

* No replacement part available. / サービス部品供給なし

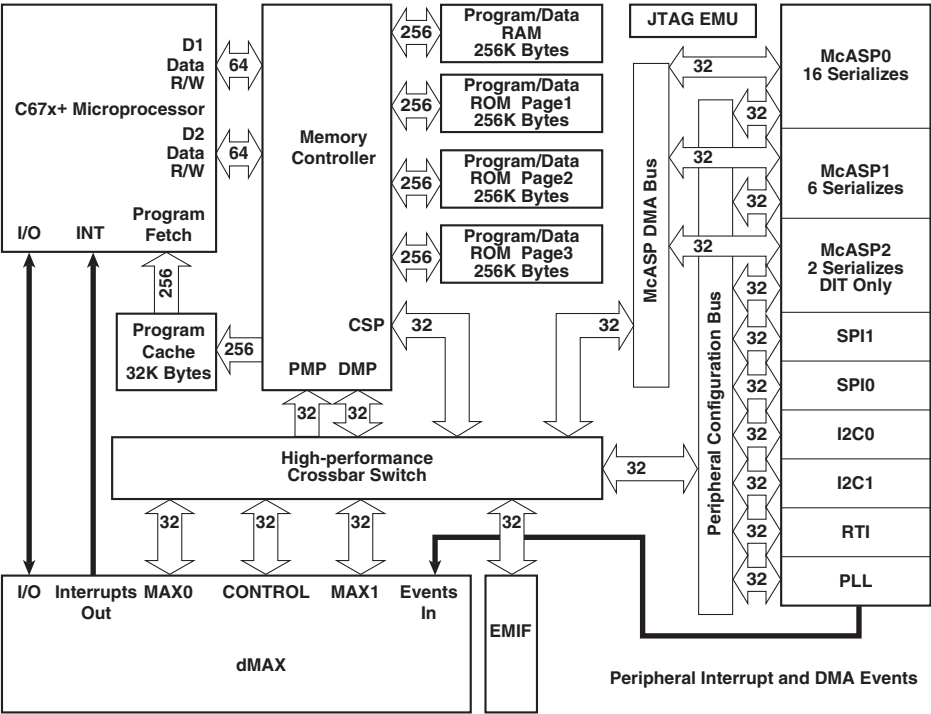

RX-V573/HTR-5065

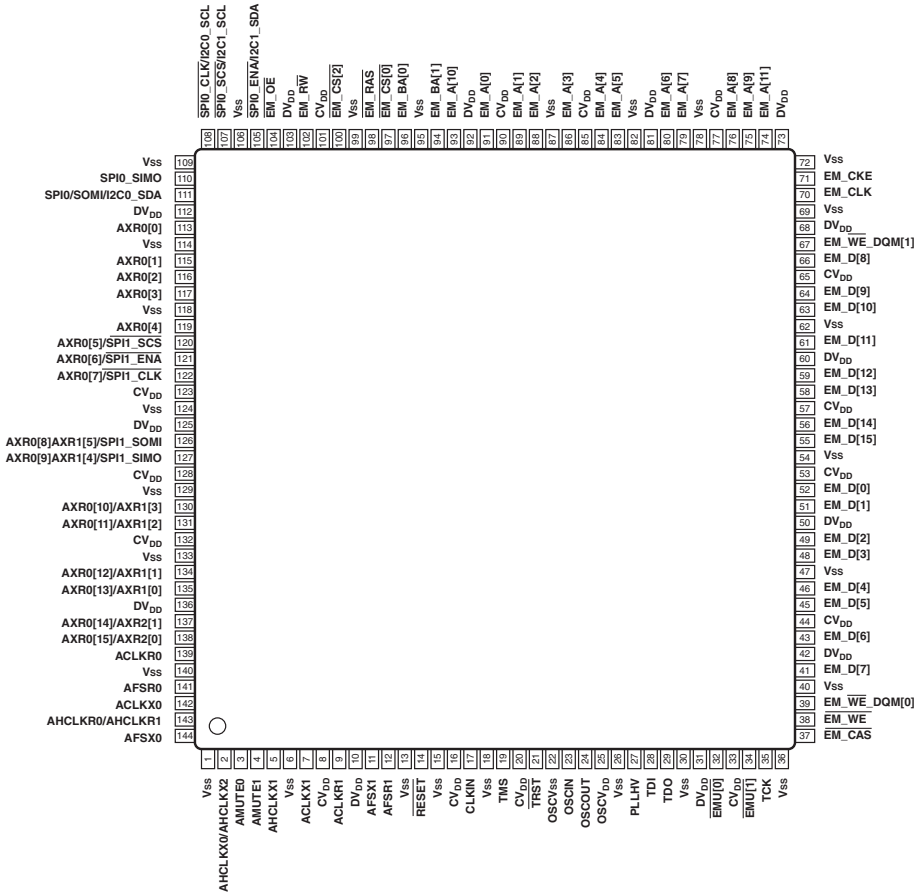


No.	Function Name (P.C.B.)	I/O	Detail of Function
1	VSS		
2	AHCLKX0/AHCLKX2	IO	McASP0 and McASP2 transmit master clock
3	AMUTE0	IO	McASP0 mute output
4	AMUTE1	IO	McASP1 mute output
5	AHCLKX1	IO	McASP1 transmit master clock
6	VSS		
7	ACLKX1	IO	McASP1 transmit bit clock
8	CVDD		
9	ACLKR1	IO	McASP1 receive bit clock
10	DVDD		
11	AFSX1	IO	McASP1 transmit frame Sync (L/R clock)
12	AFSR1	IO	McASP1 receive frame Sync (L/R clock)
13	VSS		
14	RESET	IO	Device reset pin
15	VSS		
16	CVDD		
17	CLKIN	IO	Alternate clock input (3.3-V LVCMOS input)
18	VSS		
19	TMS	IO	Test mode select
20	CVDD		
21	TRST	IO	Test reset
22	OSCVSS	PWR	Oscillator Vss tap point (for filter only)
23	OSCIN	IO	1.2-V oscillator input
24	NC	O	
25	OSCVDD	PWR	Oscillator 1.2-V Vpp tap point (for filter only)
26	VSS		
27	PLLHV	PWR	PLL 3.3-V supply input (requires external filter)
28	TDI	IO	Test data in
29	TDO	OZ	Test data out
30	VSS		
31	DVDD		
32	EMU[0]	IO	Emulation pin 0
33	CVDD		
34	EMU[1]	IO	Emulation pin 1
35	TCK	IO	Test clock
36	Ground(Vss)		
37	EM_CAS	O	SDRAM column address strobe
38	EM_WE	O	SDRAM write enable
39	EM_WE_DQM[0]	O	Write enable or byte enable for EM_D [7:0]
40	VSS		
41	EM_D[7]	IO	EMIF data bus [lower 16-bits]
42	DVDD		
43	EM_D[6]	IO	EMIF data bus [lower 16-bits]
44	CVDD		
45	EM_D[5]	IO	EMIF data bus [lower 16-bits]
46	EM_D[4]	IO	EMIF data bus [lower 16-bits]
47	VSS		
48	EM_D[3]	IO	EMIF data bus [lower 16-bits]
49	EM_D[2]	IO	EMIF data bus [lower 16-bits]
50	DVDD		

No.	Function Name (P.C.B.)	I/O	Detail of Function
51	EM_D[1]	IO	EMIF data bus [lower 16-bits]
52	EM_D[0]	IO	EMIF data bus [lower 16-bits]
53	CVDD		
54	VSS		
55	EM_D[15]	IO	EMIF data bus [lower 16-bits]
56	EM_D[14]	IO	EMIF data bus [lower 16-Bits]
57	CVDD		
58	EM_D[13]	IO	EMIF data bus [lower 16-Bits]
59	EM_D[12]	IO	EMIF data bus [lower 16-Bits]
60	DVDD		
61	EM_D[11]	IO	EMIF data bus [lower 16-Bits]
62	VSS		
63	EM_D[10]	IO	EMIF data bus [lower 16-Bits]
64	EM_D[9]	IO	EMIF data bus [lower 16-Bits]
65	CVDD		
66	EM_D[8]	IO	EMIF data bus [lower 16-bits]
67	EM_WE_DQM[1]	O	Write enable or byte enable for EM_D [15:8]
68	DVDD		
69	VSS		
70	EM_CLK	O	SDRAM clock
71	EM_CKE	O	SDRAM clock enable
72	VSS		
73	DVDD		
74	EM_A[11]	O	EMIF address bus
75	EM_A[9]	O	EMIF address bus
76	EM_A[8]	O	EMIF address bus
77	CVDD		
78	VSS		
79	EM_A[7]	O	EMIF address bus
80	EM_A[6]	O	EMIF address bus
81	DVDD		
82	VSS		
83	EM_A[5]	O	EMIF address bus
84	EM_A[4]	O	EMIF address bus
85	CVDD		
86	EM_A[3]	O	EMIF address bus
87	VSS		
88	EM_A[2]	O	EMIF address bus
89	EM_A[1]	O	EMIF address bus
90	CVDD		
91	EM_A[0]	O	EMIF address bus
92	DVDD		
93	EM_A[10]	O	EMIF address bus
94	EM_BA[1]	O	SDRAM bank address and asynchronous memory Low-Order address
95	VSS		
96	EM_BA[0]	O	SDRAM bank address and asynchronous memory Low-Order address
97	EM_CS[0]	O	SDRAM chip select
98	EM_RAS	O	SDRAM row address strobe
99	VSS		
100	EM_CS[2]	O	Asynchronous memory chip select

No.	Function Name (P.C.B.)	I/O	Detail of Function
101	CVDD		
102	NC	O	Asynchronous memory read/not write
103	DVDD		
104	EM_OE	O	SDRAM output enable
105	SPI0_ENA/I2C1_SDA	IO	SPI0 enable (ready) or I2c1 serial data
106	VSS		
107	SPI0_ENA/I2C1_SCL	IO	SPI0 enable (ready) or I2c1 serial clock
108	SPI0_CLK/I2C0_SCL	IO	SPI0 serial clock or I2c0 serial clock
109	VSS		
110	SPI0_SIMO	IO	SPI0 data pin slave in master out
111	SPI0_SOMI/I2C0_SDA	IO	SPI0 data pin slave out master in or I2C0 serial data
112	DVDD		
113	AXR0[0]	IO	McASP0 serial data 0
114	VSS		
115	AXR0[1]	IO	McASP0 serial data 1
116	AXR0[2]	IO	McASP0 serial data 2
117	AXR0[3]	IO	McASP0 serial data 3
118	VSS		
119	AXR0[4]	IO	McASP0 serial data 4
120	SPI1_SCS	IO	McASP0 serial data 5 or SPI1 slave chip select
121	SPI1_ENA	IO	McASP0 serial data 6 or SPI1 enable (ready)
122	SPI1_CLK	IO	McASP0 serial data 7 or SPI1 serial clock
123	CVDD		
124	VSS		
125	DVDD		
126	/SPI1_SOMI	IO	McASP0 serial data 8 or McASP1 serial data 5 or SPI1 data pin slave out master in
127	/SPI1_SIMO	IO	McASP0 serial data 9 or McASP1 serial data 4 or SPI1 data pin slave in master out
128	CVDD		
129	VSS		
130	AXR0[10]	IO	McASP0 serial data 10 or McASP1 serial data 3
131	AXR0[11]	IO	McASP0 serial data 11 or McASP1 serial data 2
132	CVDD		
133	VSS		
134	AXR0[12]	IO	McASP0 serial data 12 or McASP1 serial data 1
135	AXR0[13]	IO	McASP0 serial data 13 or McASP1 serial data 0
136	DVDD		
137	AXR0[14]	IO	McASP0 serial data 14 or McASP2 serial data 1
138	AXR0[15]	IO	McASP0 serial data 15 or McASP2 serial data 0
139	ACLKR0	IO	McASP0 receive bit clock
140	VSS		
141	AFSR0	IO	McASP0 receive frame Sync (L/R clock)
142	ACLKX0	IO	McASP0 transmit bit clock
143	AHCLKR0/AHCLKR1	IO	McASP0 and McASP1 receive master clock
144	AFSX0	IO	McASP0 transmit frame Sync (L/R clock)

IC951: DM860A (DIGITAL P.C.B.)
Network microprocessor

* No replacement part available. / サービス部品供給なし

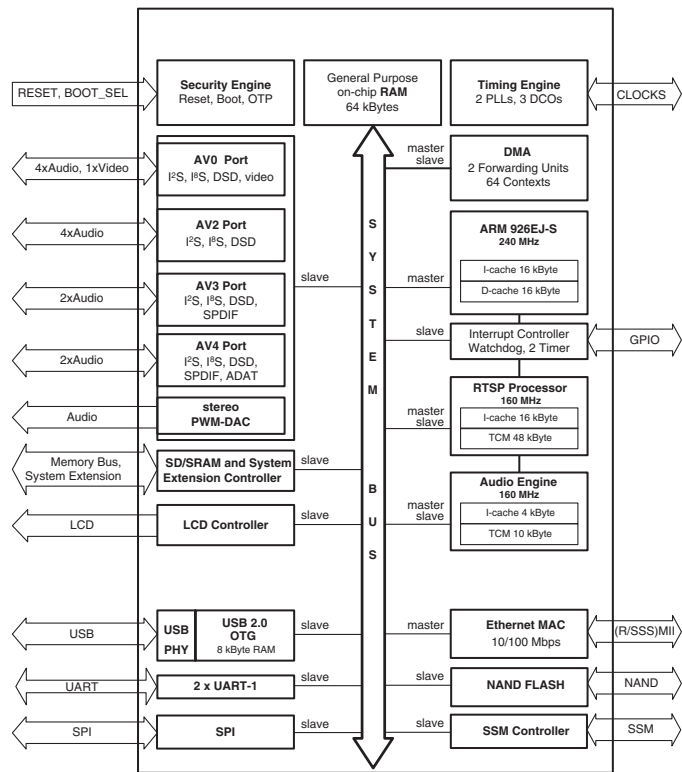

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	
A	USBDN	VDD33 USBC	VSS33 USBC	n.c.	n.c.	VDD33	RFCLKP	RFRXQP	RFRXIP	HIGHZ	SSMD0	SSMD4	SSMCMD	RXD1	TDO	TDI	A0	A1	A
B	USBDP	VDD33 USBT	VSS33 USBT	n.c.	n.c.	VSS	RFCLKN	RFRXQN	RFRXIN	TEST1	SSMD1	SSMD5	TXD1	RXD0	TMS	SPICLK	SPINCS1	A2	B
C	VSS12 USB	USBREXT	USBXO	USBXI	NRES12 OUT	VSS	RREF	n.c.	n.c.	SSMCLK	SSMD2	SSMD6	TXD0	TCK	SPINCS0	A3	A4	A5	C
D	VDD12 USB	USBVBUS	USBATST	NRES33 OUT	NRES33 REF	NRES12 REF	VDD33	VDD12	SSMWP	SSMCP	SSMD3	SSMD7	NRESET	SPIDI	SPIDO	A6	A7	A8	D
E	VSS33 RTC	USBDI	USBVB USDRV	NC		VDD12 CORE	VDD12 CORE	VDD33IO	VDD33IO	VDD12 CORE	VDD12 CORE	VDD33IO	VDD33IO		A9	A10	A11	A12	E
F	VDD33 RTC	RTCXIN	VDD33 PLL	NC	VDD33IO	VSS	VSS	VSS	VSS	VSS	VSS	VSS	VSS	VDD12 CORE	A13_RAS	A14_CAS	A15_BA0	A16_BA1	F
G	VDD12 DCO	RTXCOUT	VSS33 PLL	NC	VDD33IO	VSS	VSS	VSS	VSS	VSS	VSS	VSS	VSS	VDD12 CORE	A17_DQ M0	A18_DQ M1	A19	A20	G
H	VSS12 DCO	VSS12 PLL	VDD12 PLL	NC	VDD12 CORE	VSS	VSS	VSS	VSS	VSS	VSS	VSS	VSS	VDD33IO	A21	A22	A23	NCS3	H
J	PDOUT1	VCO1	XTALO	NC	VDD12 CORE	VSS	VSS	VSS	VSS	VSS	VSS	VSS	VSS	VDD33IO	NCS0	NCS1	NCS2	MEMCKE	J
K	PDOUT0	VCO0	XTALI	AOUTLP	VDD33IO	VSS	VSS	VSS	VSS	VSS	VSS	VSS	VSS	VDD12 CORE	MEMCLK	NWE	NOE	NWAIT	K
L	AV0CLK	AOUTLN	AOUTRN	AOUTRP	VDD33IO	VSS	VSS	VSS	VSS	VSS	VSS	VSS	VSS	VDD12 CORE	D3	D2	D1	D0	L
M	AV0 CTRL0	AV0 CTRL1	AV0 CTRL2	AV0 DATA3	VDD12 CORE	VSS	VSS	VSS	VSS	VSS	VSS	VSS	VSS	VDD33IO	D7	D6	D5	D4	M
N	AV0 DATA2	AV0 DATA1	AV0 DATA0	AV1 DATA3	VDD12 CORE	VSS	VSS	VSS	VSS	VSS	VSS	VSS	VSS	VDD33IO	D11	D10	D9	D8	N
P	AV1 DATA2	AV1 DATA1	AV1 DATA0	AV2 DATA3		VDD33IO	VDD33IO	VDD12 CORE	VDD12 CORE	VDD33IO	VDD33IO	VDD12 CORE	VDD12 CORE		FD0	FD1	D13	D12	P
R	AV2CLK	AV2 CTRL1	AV2 CTRL2	AV3CLK	AV3 DATA1	LCDD11	LCDD7	LCDD3	LCD CTRL0	VPP	MIITXEN	MIITXCLK	MIIRXER	MIICRS	FD2	FD3	FD4	D14	R
T	AV2 CTRL0	AV2 DATA1	AV3 CTRL1	AV3 DATA0	LCDD14	LCDD10	LCDD6	LCDD2	LCD CTRL1	LCCLK	MIITXER	MIIRXCLK	MIICOL	MII RXDV	FD5	FD6	FD7	D15	T
U	AV2 DATA0	AV3 CTRL0	AV4 DATA1	LCDD16	LCDD13	LCDD9	LCDD5	LCDD1	LCD CTRL2	MIITXD0	MIITXD2	MIIRXD0	MIIRXD2	MIIMDIO	NFCE0	FCLE	NFWE	NFRB	U
V	NC	AV4 DATA0	LCDD17	LCDD15	LCDD12	LCDD8	LCDD4	LCDD0	LCD CTRL3	MIITXD1	MIITXD3	MIIRXD1	MIIRXD3	MIIMDC	MIIPHY CLK	NFWP	NFRE	FALE	V
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	

AV-Port 0

Pin No.	Function Name	I/O	Detail of Function
M4	AV0DATA[3:0]	I/O	Audio/video data. Several formats are supported.
N1			
N2			
N3			
N4	AV1DATA[3:0]	I/O	Video data, together with AV0DATA[3:0]: AV0DATA[3:0] = video[3:0] AV1DATA[3:0] = video[7:4]
P1			
P2			
P3			
L1	AV0CLK	I/O	Data clock. Depending on the AV-Port 0 configuration, this clock is a bit- or byte-clock which is used to transmit or receive the AV0DATA[*] synchronously.
M1	AV0CTRL0	I/O	Configurable sync signal: • Serial audio formats: LRCK input or output. • Video formats: PSYNC input or output.
M2	AV0CTRL1	I/O	Configurable sync signal: • Serial audio formats: Master clock output. • Video formats: DVALID input or output.
M3	AV0CTRL2	I/O	Configurable sync signal: • Video formats: FSYNC input or output.

AV-Port 2

Pin No.	Function Name	I/O	Detail of Function
P4	AV2DATA[3:0]	I/O	Audio data. Several formats are supported.
R3			
T2			
U1			
R1	AV2CLK	I/O	Data clock. Depending on the AV-Port 2 configuration this clock is a bit-clock which is used to transmit or receive the AV2DATA[*] synchronously.
T1	AV2CTRL0	I/O	Configurable sync signal: Serial audio formats: LRCK input or output.
R2	AV2CTRL1	I/O	Configurable sync signal: Serial audio formats: Master clock output.

AV-Port 3

Pin No.	Function Name	I/O	Detail of Function
R5	AV3DATA[1:0]	I/O	Audio data. Several formats are supported.
T4			
R4	AV3CLK	I/O	Data clock. Depending on the AV-Port 3 configuration this clock is a bit-clock which is used to transmit or receive the AV3DATA[*] synchronously.
U2	AV3CTRL0	I/O	Configurable sync signal: Serial audio formats: LRCK input or output.
T3	AV3CTRL1	I/O	Configurable sync signal: Serial audio formats: Master clock output.

AV-Port 4

Pin No.	Function Name	I/O	Detail of Function
U3	AV4DATA[1:0]	I/O	Audio data. Several formats are supported.
V2			

PWM-DAC

Pin No.	Function Name	I/O	Detail of Function
K4	AOUTLP	O	Left channel PWM output (positive).
L2	AOUTLN	O	Left channel PWM output (negative).
L4	AOUTRP	O	Right channel PWM output (positive).
L3	AOUTRN	O	Right channel PWM output (negative).

UART Interface

Pin No.	Function Name	I/O	Detail of Function
B14	RXD0	I	UART-0 receive signal.
C13	TXD0	O	UART-0 transmit signal.
A14	RXD1	I	UART-1 receive signal.
B13	TXD1	O	UART-1 transmit signal.

Serial Peripheral Interface (SPI)

Pin No.	Function Name	I/O	Detail of Function
D14	SPIDIN	I	SPI data receive.
D15	SPIDOUT	O	SPI data transmit.
B16	SPICLK	I/O	SPI clock.
C15	SPINCS0	I/O	Multi-master mode: Chip-select input (used to detect bus conflict). Master only mode: Chip-select 1 output. Slave mode: Chip-select input.
B17	SPINCS1	I/O	Multi-master mode: Chip-select 2 output. Master only mode: Chip-select 2 output. Slave mode: Not used.

External Memory Interface

Pin No.	Function Name	I/O	Detail of Function
T18	D[15:0]	I/O	Data bus for external memory and peripheral access.
R18			
P17			
P18			
N15			
N16			
N17			
N18			
M15			
M16			
M17			
M18			
L15			
L16			
L17			
L18			
E18	A[12:0]	O	Address bus for external memory and peripheral access.
E17			
E16			
E15			
D18			
D17			
D16			
C18			
C17			
C16			
B18			
A18			
A17			
F15	A13_RAS	O	SRAM: Address output SDRAM: Row access strobe
F16	A14_CAS	O	SRAM: Address output SDRAM: Column access strobe
F17	A15_BA0	O	SRAM: Address output SDRAM: Bank select
F18	A16_BA1	O	SRAM: Address output SDRAM: Bank select
G15	A17_DQM0	O	SRAM: Address output SDRAM: Data mask
G16	A18_DQM1	O	SRAM: Address output SDRAM: Data mask
H17	A[23:19]	O	Address bus for external memory and peripheral access.
H16			
H15			
G18			
G17			

Pin No.	Function Name	I/O	Detail of Function
H18	NCS[3:0]	O	Chip select signals. The active memory range for NCS[n] (active low) can be configured. • NCS[0] supports SRAM, can be used for booting. • NCS[1] supports SDRAM or SRAM. • NCS[2] supports SRAM. • NCS[3] supports SRAM.
J17			
J16			
J15			
K17	NOE	O	Output enable, asserted (low) for read operations.
K16	NWE	O	Write enable, asserted (low) for write operations.
K18	NWAIT	I	External wait line. If NWAIT is asserted, memory access will be stalled. Can be configured as either low-active (default) or high-active.
K15	MEMCLK	O	SDRAM system clock.
J18	MEMCKE	O	SDRAM clock enable.

NAND-Flash Interface

Pin No.	Function Name	I/O	Detail of Function
T17	FD[7:0]	I/O	Bi-directional data bus.
T16			
T15			
R17			
R16			
R15			
P16			
P15			
V18	FALE	O	Address latch enable; pull-up/down defines boot mode.
U16	FCLE	O	Command latch enable; pull-up/down defines boot mode.
U15	NFCE0	O	Chip-enable, low-active.
U18	NFRB	I	Ready/busy. NAND flash is busy when NFRB is low.
V17	NFRE	O	Read enable, low-active.
U17	NFWE	O	Write enable, low-active.
V16	NFWP	O	Write protect, low-active.

Ethernet MAC-Phy Interface (MII)

Pin No.	Function Name	I/O	MII	RMII	SMII
U14	MIIDIO	I/O	Management data	Management data	
V14	MIIMDC	O	Management clock	Management clock	
V13	MIIRXD[3]	I	RxD 3	RxD 1	
U13	MIIRXD[2]	I	RxD 2	RxD 0	
V12	MIIRXD[1]	I	RxD 1		Rx-Sync
U12	MIIRXD[0]	I	RxD 0		RxD
T12	MIIRXCLK	I	Receive clock		Receive clock
R13	MIIRXER	I	Receive error	Receive error	
T14	MIIRXDV	I	Receive data valid	Carrier sense/data valid	
V11	MIITXD[3]	O	TxD 3	TxD 1	
U11	MIITXD[2]	O	TxD 2	TxD 0	
V10	MIITXD[1]	O	TxD 1		Tx-Sync
U10	MIITXD[0]	O	TxD 0		TxD
R12	MIITXCLK	I	Transmit clock		Transmit clock
T11	MIITXER	O	Transmit error		
R11	MIITXEN	O	Transmit data enable	Transmit data enable	
T13	MIICOL	I	MII ethernet collision		
R14	MIICRS	I	MII carrier sense		
V15	MIIPHYCLK	O	25.000 MHz clock	50.000 MHz clock	125.000 MHz clock

USB 2.0 OTG

Pin No.	Function Name	I/O	Detail of Function
B1	USBD+	I/O	Positive data line that is connected to the serial USB cable.
A1	USBD-	I/O	Negative data line that is connected to the serial USB cable.
E2	USBID	I	USB ID pin of mini-AB receptacle.
C2	USBREXT	I	External bias resistor (2K7, 1%); connect resistor to VSSUSB.
D2	USBVBUS	I	VBUS voltage sense.
E3	USBVBUSDRV	O	Control signal to control VBUS 5V voltage source.
C4	USBXTALI	I	Oscillator circuit input for a 24.000 MHz crystal (optional). Without external crystal, pull this pin to GND.
C3	USBXTALO	O	Oscillator circuit output for a 24.000 MHz crystal (optional). Without external crystal, leave this pin open.
D3	USBATST	-	Do not connect.

Power-on Reset Pins

Pin No.	Function Name	I/O	Detail of Function
D6	NRES12REF	I	Voltage reference input. NRES12OUT is release when this input voltage exceeds VTH12.
C5	NRES12OUT	O	Open-drain reset (active low) for 1.2V core power supply.
D5	NRES33REF	I	Voltage reference input. NRES33OUT is release when this input voltage exceeds VTH33.
D4	NRES33OUT	O	Open-drain reset (active low) for 3.3V core power supply

Real-Time Clock (RTC) Pins (RTC is Not Supported)

Pin No.	Function Name	I/O	Detail of Function
F2	RTCXIN	I	No connection. Leave this pin open circuit.
G2	RTCXOUT	O	No connection. Leave this pin open circuit.
F1	VDD33RTC	Power	No connection. Leave this pin open circuit.
E1	VSS33RTC	Power	Ground (0 V) for RTC

LCD Interface

Pin No.	Function Name	I/O	TFT Mode	LCD STN monochr.	LCD STN monochr. (double)	LCD STN color	LCD STN color (bias)
V3	LCDD[17]	O	RED5				
U4	LCDD[16]	O	RED4				
V4	LCDD[15]	O	RED3				
T5	LCDD[14]	O	RED2				
U5	LCDD[13]	O	RED1				
V5	LCDD[12]	O	(RED0)				
R6	LCDD[11]	O	GREEN5				
T6	LCDD[10]	O	GREEN4				
U6	LCDD[9]	O	GREEN3				
V6	LCDD[8]	O	GREEN2				
R7	LCDD[7]	O	GREEN1		DATAHIGH3	DATA7	DATA7
T7	LCDD[6]	O	GREEN0		DATAHIGH2	DATA6	DATA6
U7	LCDD[5]	O	BLUE5		DATAHIGH1	DATA5	DATA5
V7	LCDD[4]	O	BLUE4		DATAHIGH0	DATA4	DATA4
R8	LCDD[3]	O	BLUE3	DATA3	DATALOW3	DATA3	DATA3
T8	LCDD[2]	O	BLUE2	DATA2	DATALOW2	DATA2	DATA2
U8	LCDD[1]	O	BLUE1	DATA1	DATALOW1	DATA1	DATA1
V8	LCDD[0]	O	(BLUE0)	DATA0	DATALOW0	DATA0	DATA0
T10	LCDCCLK	O	Byte clock	CL2	CL2	CL2	CL2
V9	LCDCCTRL[3]	O	Display off	Display off	Display off	Display off	Display off
U9	LCDCCTRL[2]	O	Vsync	FLM	FLM	FLM	FLM
T9	LCDCCTRL[1]	O	HSync	CL1	CL1	CL1	CL1
R9	LCDCCTRL[0]	O	DVALID			M/Bias	

SSM Interface

Pin No.	Function Name	I/O	Detail of Function
D12	SSMD[7:0]	I/O	Data lines.
C12			
B12			
A12			
D11			
C11			
B11			
A11			
C10	SSMCLK	O	Clock output.
A13	SSMCMD	O	Command output.
D10	SSMCP	I	Card power input (high = off).
D9	SSMWP	I	Write protect input (low = protect).

External PLL Pins

Pin No.	Function Name	I/O	Detail of Function
J2	VCO[1:0]	I	External oscillator inputs, typically coming from an external VCO. Together with the external loop-filter and the internal clock dividers, each PDOUT/VCO pair can form a complete PLL.
K2			
J1	PDOUT[1:0]	O	Phase discriminator outputs. These signals are charge-pump type outputs. Each of them can be used to feed the loop-filter of a PLL structure.
K1			

Global Pins

Pin No.	Function Name	I/O	Detail of Function
D13	NRESET	I	Reset (active low). When asserted, the chip is placed in the reset state and the peripheral pins are configured as inputs. After deassertion of NRESET, the chip is clocked by XTALI and starts booting from the port configured by the FCLE, FALE pins. The NRESET signal must be asserted after power-up.
K3	XTALI	I	Oscillator circuit input. Internal system clock will be derived from XTALI (internal clock multiplier).
J3	XTALO	O	Oscillator circuit output.
C7	RREF	I	Reference current. Connect a 3.0 k-ohms $\pm 1\%$ resistor to GND.
B10	TEST1	I	Reserved. Connect to VDD for normal operation.
A10	HIGHZ	I	Reserved. Connect to VDD for normal operation.
E4	n.c.	—	Pins must be left unconnected (18x).
F4			
G4			
H4			
J4			
V1			
A4			
A5			
B4			
B5			
C8			
C9			

JTAG Interface

Pin No.	Function Name	I/O	Detail of Function
B15	TMS	I	JTAG mode select.
C14	TCK	I	JTAG clock.
A16	TDI	I	JTAG serial data input.
A15	TDO	O	JTAG serial data output.


Power Supply Pins

Pin No.	Function Name	Detail of Function	Pin No.	Function Name	Detail of Function
A6	VDD33	I/O power supply (+3.3 V).	K13	VSS	Ground (0 V).
E8			L6		
E9			L7		
E12			L8		
E13			L9		
F5			L10		
G5			L11		
H14			L12		
J14			L13		
K5			M6		
L5			M7		
M14			M8		
N14			M9		
P6			M10		
P7			M11		
P10			M12		
P11			M13		
D7			N6		
F6			N7		
F7			N8		
F8			N9		
F9	VSS	Ground (0 V).	N10		
F10			N11		
F11			N12		
F12			N13		
F13			B6		
G6			C6		
G7			R10	VPP	
G8			A2	VDD33USB	Power supply (+3.3 V) for USB interface. Ground (0 V).
G9			B2		
G10			A3	VSS33USB	
G11			B3		
G12			F3	VDD33PLL	Power supply (+3.3V) for PLL.
G13			G3	VSS33PLL	Ground (0 V).
H6			E6	VDD12	Power supply (+1.2V).
H7			E7		
H8			E10		
H9			E11		
H10			F14		
H11			G14		
H12			H5		
H13			J5		
J6			K14		
J7			L14		
J8			M5		
J9			N5		
J10			P8		
J11			P9		
J12			P12		
J13			P13		
K6	VSS	Ground (0 V).	D8		
K7			D1	VDD12USB	Power supply (+1.2V) for USB interface.
K8			C1	VSS12USB	Ground (0 V).
K9			H3	VDD12PLL	Power supply (+1.2V) for PLL.
K10			H2	VSS12PLL	Ground (0 V).
K11			G1	VDD12DCO	Power supply (+1.2V) for DCO.
K12			H1	VSS12DCO	Ground (0 V).

IC21: R5F3651TNFC (DIGITAL P.C.B.)

Microprocessor

* No replacement part available. / サービス部品供給なし

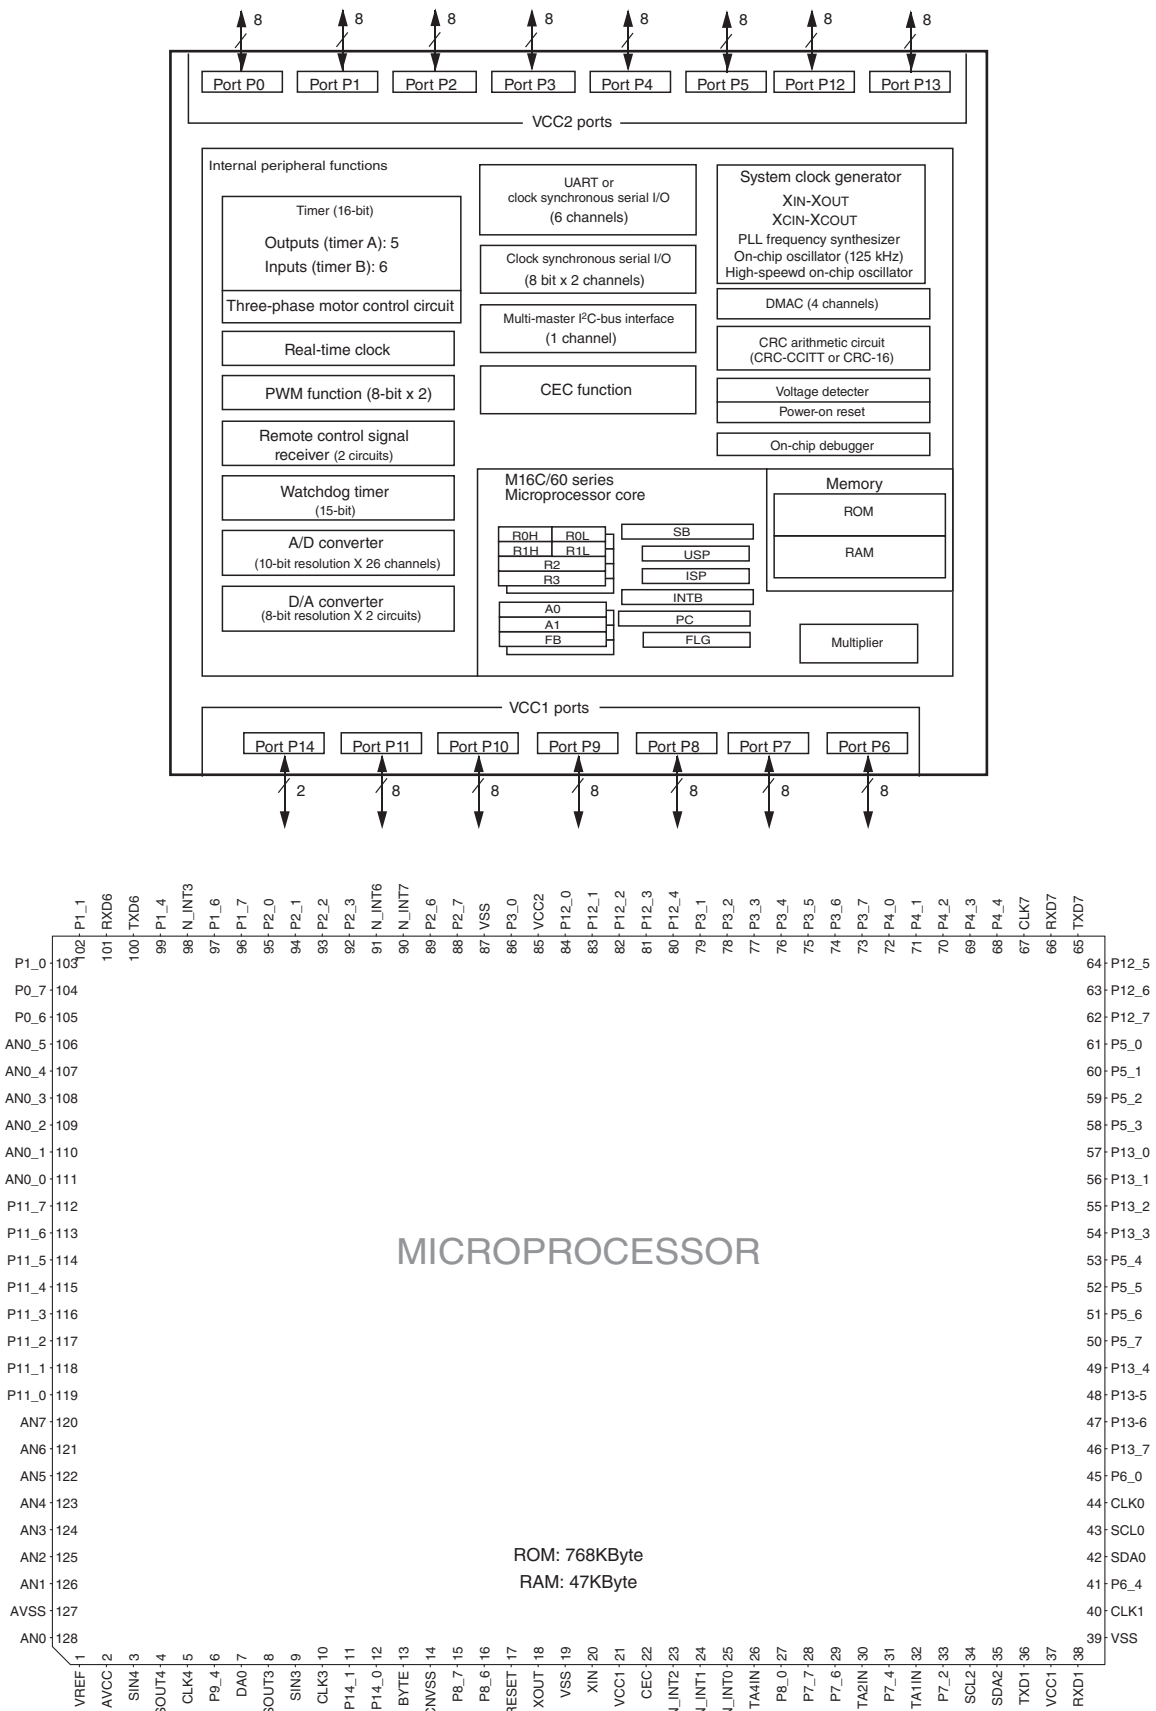

Pin No.	Port Name	Function Name (P.C.B.)	I/O		Detail of Function
			POWER ON	STANDBY	
1	VREF	VREF	MCU	MCU	AD standard voltage
2	AVCC	AVCC	MCU	MCU	Microprocessor power supply
3	P9_7/N_ADTRG/SIN4	EEP_MISO	SI	O	EEPROM / Expansion Flash synchronization data input
4	P9_6/ANEX1/SOUT4	EX_MOSI	SO	O	FL driver / EEPROM / Expansion Flash synchronization data input
5	P9_5/ANEX0/CLK4	EX_SCK	SO	O	FL driver / EEPROM / Expansion Flash synchronous clock output
6	P9_4/DA1/TB4IN/PWM1	(no_use)	O	O	
7	P9_3/DA0/TB3IN/PWM0	AMP_LMT	DA	O	Limiter control output
8	P9_2/TB2IN/PMC0/SOUT3	DSP_MOSI	SO	O	DSP, DIR, DAC synchronization data output
9	P9_1/TB1IN/PMC1/SIN3	DSP_MISO	SI	I-	DSP, DIR, DAC synchronization data input
10	P9_0/TB0IN/CLK3	DSP_SCK	SO	O	DSP, DIR, DAC synchronous clock output
11	P14_1	HDMI_N_RST	O	O	HDMI RxTx reset
12	P14_0	TUN_N_RST	O	O	Tuner reset
13	BYTE	BYTE	MCU	MCU	Data bus width reshuffling input / Single chip mode: L (16bit)
14	CNVSS	E8A_CNVSS	MCU	MCU	Processor mode select / Low: Single chip mode
15	P8_7/XCIN	VDEC_N_RST	O	O	Video decoder reset
16	P8_6/XCOUT	DIAG_FCT	O	O	Diag OK: Output High / Diag NG: Output Low (default)
17	/RESET	CPU_N_RST	MCU	MCU	Reset input
18	XOUT	XOUT	MCU	MCU	Oscillation circuit output
19	VSS	DGND	MCU	MCU	Microprocessor ground
20	XIN	XIN	MCU	MCU	Oscillation circuit input
21	VCC1	+3.3M	MCU	MCU	Microprocessor power supply
22	P8_5/N_NMI/N_SD/CEC	HDMI_CEC	IO	I+	Microprocessor CEC control
23	P8_4/N_INT2/ZP	DSP_N_INT	IRQ	IRQ	Interrupt input from DSP
24	P8_3/N_INT1	HDMI_MUTE	IRQ	I-	HDMI MUTE input / H: Mute
25	P8_2/N_INT0	HDMI_N_INT	IRQ	I-	Interrupt input from HDMI RxTx
26	P8_1/TA4IN/N_U/N_CTS5/N_RTS5	DIR_N_INT	TMR	O	DIR interrupt input
27	P8_0/TA4OUT/U/RXD5/SCL5	(no_use)	O	O	
28	P7_7/TA3IN/CLK5	DIR_N_RST	O	O	DIR reset
29	P7_6/TA3OUT/TXD5/SDA5	DIR_N_CS	O	O	DIR chip select
30	P7_5/TA2IN/N_W	TUN_N_INT	TMR	O	Tuner GPIO2 input
31	P7_4/TA2OUT/W	NCPU_SPI_REQ	I	I	NET SPI request
32	P7_3/N_CTS2/N_RTS2/TA1IN/N_V	ACPWER_DET	TMR	I+	AC power detection / L: Power down
33	P7_2/CLK2/TA1OUT/V	NCPU_SPI_RDY	I	I	NET SPI ready
34	P7_1/RXD2/SCL2/SCLMM/TA0IN/TB5IN	HDMI_SCL	SO	O	HDMI Rx/Tx I2C SCL output Video decoder, A-video switch I2C SCL output
35	P7_0/TXD2/SDA2/SDAMM/TA0OUT	HDMI_SDA	SI	O	HDMI Rx/Tx I2C SDA input and output Video decoder, A-video switch I2C SDA input and output
36	P6_7/TXD1/SDA1	E8A_TXD	SO	I+	
37	VCC1	+3.3M	MCU	MCU	Microprocessor power supply
38	P6_6/RXD1/SCL1	E8A_RXD	SI	I+	
39	VSS	DGND	MCU	MCU	Microprocessor ground
40	P6_5/CLK1	E8A_SCLK	O	I+	
41	P6_4/N_CTS1/N_RTS1/N_CTS0/CLKS1	E8A_BUSY	I-	I-	
42	P6_3/TXD0/SDA0	TUN_SDA	SI	O	Tuner I2C synchronization data input and output
43	P6_2/RXD0/SCL0	TUN_SCL	SO	O	Tuner I2C synchronous clock output
44	P6_1/CLK0	(no_use)	O	O	
45	P_6_0/RTCOU/N_CTS0/N_RTS0	(no_use)	O	O	
46	P13_7	VOL_MOSI	O	O	Electronic volume flip-flop synchronization data output
47	P13_6	VOL_SCK	O	O	Electronic volume flip-flop synchronous clock output
48	P13_5	I_PRT	I-	I-	Overcurrent protection detection
49	P13_4	TRANS_RY	O	O	
50	P5_7/N_RDY/CLKOUT	DCDC_PON	O	O	
51	P5_6/ALE	MT_N_SW	O	O	Mute control (Subwoofer)

Pin No.	Port Name	Function Name (P.C.B.)	I/O		Detail of Function
			POWER ON	STANDBY	
52	P5_5/N_HOLD	E8A_N_EPM	I-	I-	
53	P5_4/N_HLDA	HP_N_DET	I+	O	Headphone detection / L: Headphone detected
54	P13_3	HPRY	O	O	Headphone relay control
55	P13_2	SPRY_SB_BA	O	O	Speaker relay control (Surround back and Bi-Amp) / H: Relay ON
56	P13_1	(no_use)			
57	P13_0	SPRY_5CH	O	O	Speaker relay control (Front / Center / Surround) / H: Relay ON
58	P5_3/BCLK	MT_N_SB	O	O	Mute control (Surround back)
59	P5_2/N_RD	(no_use)			
60	P5_1/N_WRH/N_BHE	MT_N_5CH	O	O	Mute control (Front / Center / Surround)
61	P5_0/N_WRL/N_WR	E8A_N_CE	I+	I+	
62	P12_7	OSDFS_N_CS	O	O	Chip select control of OSD Flash from microprocessor
63	P12_6	USB_VBUS_PON	O	O	
64	P12_5	PRY	O	O	Power relay control / H: ON
65	P4_7/PWM1/TXD7/SDA7/N_CS3	FPGA_MOSI	SO	O	FPGA, OSD Flash synchronization data output
66	P4_6/PWM0/RXD7/SCL7/N_CS2	FPGA_MISO	SI	O	FPGA, OSD Flash synchronization data input
67	P4_5/CLK7/N_CS1	FPGA_SCK	SO	O	FPGA, OSD Flash synchronous clock output
68	P4_4/N_CTS7/N_RTS7/N_CS0	FPGA_N_CS	O	O	FPGA chip select
69	P4_3/A19	(reserved)	O	O	
70	P4_2/A18	FLSH_N_CS	O	O	Expansion FlashROM chip select / FPGA FlashROM chip select
71	P4_1/A17	N_FCT	I	I	FCT detection / H: Product mode, L: FCT mode
72	P4_0/A16	NDAC_N_MT	O	O	Mute control
73	P3_7/A15	OSDFS_BUS_SEL	O	O	L: ROHM Apple / FPGA SPI / H: Spalta OSD SPI
74	P3_6/A14	VOL_RB	I+	I+	Volume rotary encoder B
75	P3_5/A13	VOL_RA	I+	I+	Volume rotary encoder A
76	P3_4/A12	FLD_N_CS	O	O	FL driver chip select
77	P3_3/A11	FLD_N_RST	O	O	FL driver reset
78	P3_2/A10	MIC_N_DET	I-	I-	MIC detection / L: MIC detected
79	P3_1/A9	STBY_LED	O	O	Standby through LED / H: LED lighting
80	P12_4	NCPU_PON	O	O	H: Power supply ON
81	P12_3	DSP_PON	O		H: Power supply ON
82	P12_2	+3.3S_PON	O		H: Power supply ON
83	P12_1	HDMI_PON	O		H: Power supply ON
84	P12_0	VID_PON	O		H: Power supply ON
85	VCC2	VCC2	MCU	MCU	Microprocessor power supply
86	P3_0/A8	EEP_N_CS	O	O	EEPROM chip select
87	VSS	VSS	MCU	MCU	Microprocessor ground
88	P2_7/AN2_7/A7	USB_IPLERR	I+	I+	USB IPL error status detection / Port input pull-down
89	P2_6/AN2_6/A6	USB_BUSY	I+	I	Condition output from USB device
90	P2_5/N_INT7/AN2_5/A5	REM_IN	IRQ	IRQ	Remote control pulse input
91	P2_4/N_INT6/AN2_4/A4	PSW_N_DET	IRQ	IRQ	Power system switch (Power, Scene) detection L: STANDBY key ON
92	P2_3/AN2_3/A3	DSP_N_RST	O	O	DSP reset
93	P2_2/AN2_2/A2	DSP_N_RDY	I+	O	DSP ready input
94	P2_1/AN2_1/A1	DSP_N_CS	O	O	DSP chip select
95	P2_0/AN2_0/A0	DSP_FMT	O	O	DSP full mute output / H: Mute
96	P1_7/N_INT5/IDU/D15	USB_SEARCH	I-	I-	Condition output from USB device
97	P1_6/N_INT4/IDW/D14	NCPU_VBUSDRV	I-	I-	USB power supply output demand from NET microprocessor
98	P1_5/N_INT3/IDV/D13	USB_MCHNG	IRQ		USB file reproduction end flag input
99	P1_4/D12	USB_N_RST	O	O	USB device • reset
100	P1_3/TXD6/SDA6/D11	NCPU_SPI_MOSI	SO	O	NET SPI data output
101	P1_2/RXD6/SCL6/D10	NCPU_SPI_MISO	SI	O	NET SPI data input
102	P1_1/CLK6/D9	NCPU_SPI_SCK	O	O	NET SPI clock output
103	P1_0/N_CTS6/N_RTS6/D8	NCPU_SPI_N_CS	O	O	NET SPI chip select

Pin No.	Port Name	Function Name (P.C.B.)	I/O		Detail of Function
			POWER ON	STANDBY	
104	P0_7/AN0_7/D7	DAC_N_CS	O	O	DAC chip select
105	P0_6/AN0_6/D6	NCPU_AMUTE	I	O	NET audio mute demand
106	P0_5/AN0_5/D5	PS3_PRT	AD		PS protection detection 3
107	P0_4/AN0_4/D4	PS2_PRT	AD		PS protection detection 2
108	P0_3/AN0_3/D3	L3_DET	AD	I	D terminal L3 detection
109	P0_2/AN0_2/D2	USB_VBUS_PRT	AD	I	USB iPad power supply feedback
110	P0_1/AN0_1/D1	THM3	AD	I	Temperature detection 3
111	P0_0/AN0_0/D0	DEST	AD	I	Model distinction
112	P11_7	NCPU_N_RST	O	O	
113	P11_6	DIR_SDO	I	O	DIR_SDO input for CDDA writing
114	P11_5	DIR_WCK	I	O	DIR_WCK input for CDDA writing
115	P11_4	(reserved)	O	O	
116	P11_3	VIDI2C_ON	O	O	Vdec and A-video selector I2C line control
117	P11_2	FPGA_N_CFG	O	O	FPGA configuration control
118	P11_1	FPGA_N_STA	I	O	FPGA configuration status
119	P11_0	FPGA_CDONE	I	O	FPGA configuration completion signal
120	P10_7/AN7/N_K13	DC_PRT	AD	I	Power amp DC detection
121	P10_6/AN6/N_K12	AMP_OLV	AD	I	Power amp output level detection
122	P10_5/AN5/N_K11	THM1	AD	I	Temperature detection 1
123	P10_4/AN4/N_K10	THM2	AD	I	Temperature detection 2
124	P10_3/AN3	KEY2	AD	I	KEY AD value uptake 2
125	P10_2/AN2	KEY1	AD	I	KEY AD value uptake 1
126	P10_1/AN1	PS1_PRT	AD	I	PS protection detection 1
127	AVSS	AVSS	MCU	MCU	Microprocessor ground
128	P10_0/AN0	(no_use)	O	O	AD spare

Key detection for A/D port
Key input (A/D) pull-up resistance: 10 k-ohms

	0 Ω	+ 1.0 kΩ	+ 1.0 kΩ	+ 1.5 kΩ	+ 1.5 kΩ	+ 2.2 kΩ	+3.3 kΩ	+ 4.7 kΩ	+ 13.2 kΩ	+ 22 kΩ	+ 33 kΩ
Detected voltage value at 125 pin	0 – 0.15 V	0.15 – 0.425 V	0.425 – 0.703 V	0.703 – 0.978 V	0.978 – 1.241 V	1.241 – 1.536 V	1.536 – 1.84 V	1.84 – 2.102 V	2.102 – 2.299 V	2.336 – 2.55 V	2.55 – 2.971 V
A/D value (3.3 V=255)	0 – 11	12 – 32	33 – 54	55 – 75	76 – 95	96 – 118	119 – 142	143 – 162	163 – 177	181 – 197	198 – 229
KEY1	RADIO (SCENE4)	NET (SCENE3)	TV (SCENE2)	BD/DVD (SCENE1)	—	—	INPUT >	INPUT <	—	⌀ (power)	tone CONTROL


	0 Ω	+ 1.0 kΩ	+ 1.0 kΩ	+ 1.5 kΩ	+ 1.8 kΩ	+ 2.2 kΩ	+3.3 kΩ	+ 4.7 kΩ	+ 6.8 kΩ	+ 10 kΩ	+ 22 kΩ	+ 68 kΩ
Detected voltage value at 124 pin	0 – 0.15 V	0.15 – 0.425 V	0.425 – 0.703 V	0.703 – 0.999 V	0.999 – 1.279 V	1.279 – 1.564 V	1.564 – 1.86 V	1.86 – 2.142 V	2.142 – 2.399 V	2.399 – 2.653 V	2.653 – 2.919 V	2.916 – 3.175 V
A/D value (3.3 V=255)	0 – 11	12 – 32	33 – 54	55 – 77	78 – 98	99 – 120	121 – 143	144 – 165	166 – 185	186 – 205	206 – 225	226 – 245
KEY2	DIRECT	TUNING >>	TUNING <<	AM	FM	PRESET >	PRESET <	MEMORY	INFO	STRAIGHT	PROGRAM >	PROGRAM <

Destination detection for A/D port
Pull-up resistance: 10 k-ohms



R5418 on OPERATION P.C.B.	0 Ω	1.2 kΩ	2.7 kΩ	4.7 kΩ	6.8 kΩ	10 kΩ	15 kΩ	47 kΩ	100 kΩ
Detected voltage value at 111 pin	0 – 0.162 V	0.162 – 0.517 V	0.517 – 0.872 V	0.872 – 1.193 V	1.193 – 1.492 V	1.492 – 1.816 V	1.816 – 2.2 V	2.572 – 2.869 V	2.869 – 3.163 V
A/D value	000	111	222	333	444	555	666	777	888
Destination	J	U	C	R, S	T	K	A	B, G, F	L, H

BLOCK DIAGRAMS

HDMI/AUDIO Section Block Diagram

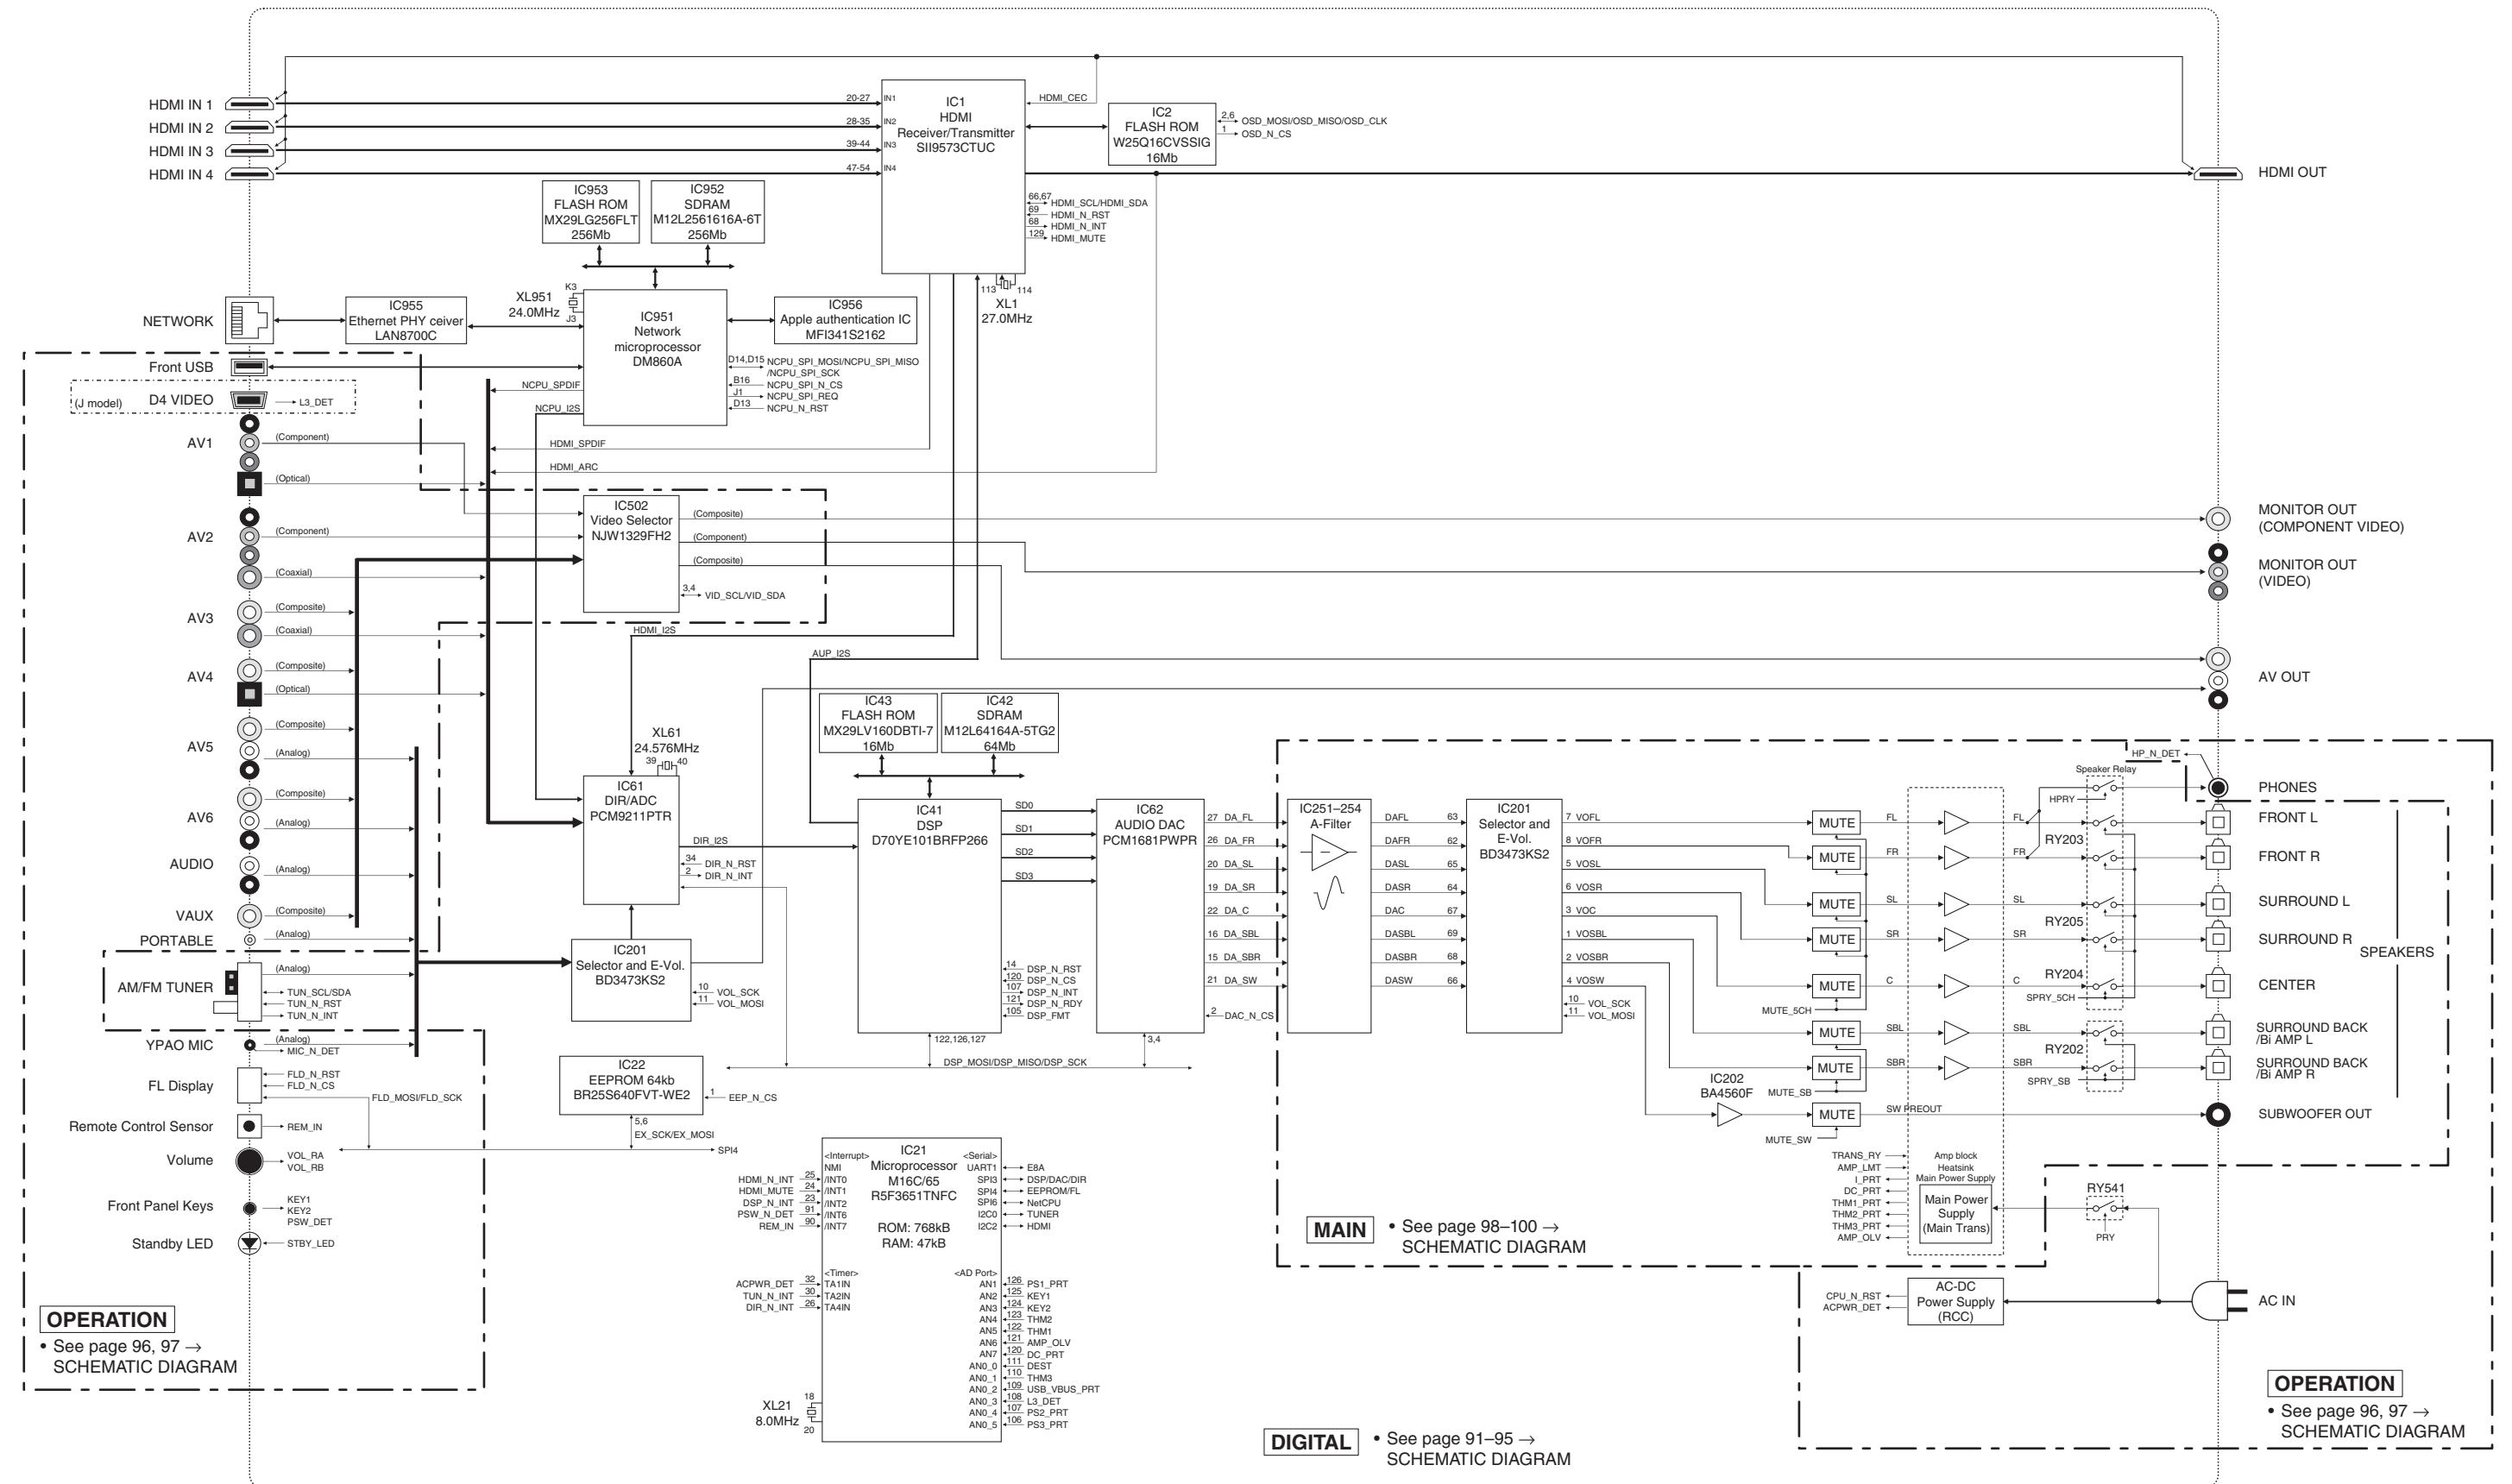

1	
2	
3	
4	
5	
6	
7	

 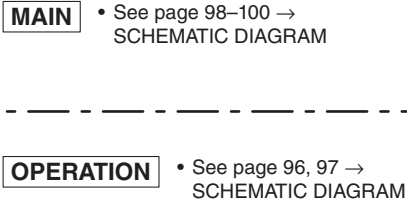


PRINTED CIRCUIT BOARDS


• Semiconductor Location

Ref no.	Location	Ref no.	Location
D24	H3	D205	B4
D201	E5	IC2	G4
D202	F5	IC3	G4
D203	F5	IC5	F4
D204	F5	IC6	H3
		IC7	F4
		IC8	H3
		IC21	F5
		IC22	G4
		IC24	G5
		IC25	E5
		IC26	H5
		IC27	E5
		IC41	H4
		IC43	H5
		IC44	G5
		IC45	H5
		IC61	I4
		IC62	I5
		IC64	C5
		IC65	E3
		IC66	B5
		IC67	E4
		IC68	E5
		IC951	D4
		IC952	C4
		IC953	C4
		IC955	D3
		IC956	D4
		Q12	G5
		Q13	G5
		Q201	G4
		Q207	G5
		Q208	F5
		Q209	F5
		Q210	F5
		Q401	G5
		Q402	G5
		Q601	C5
		Q602	C5
		Q604	D3
		Q605	C5
		Q606	D3
		Q607	B5
		Q902	B3

DIGITAL (Side A)

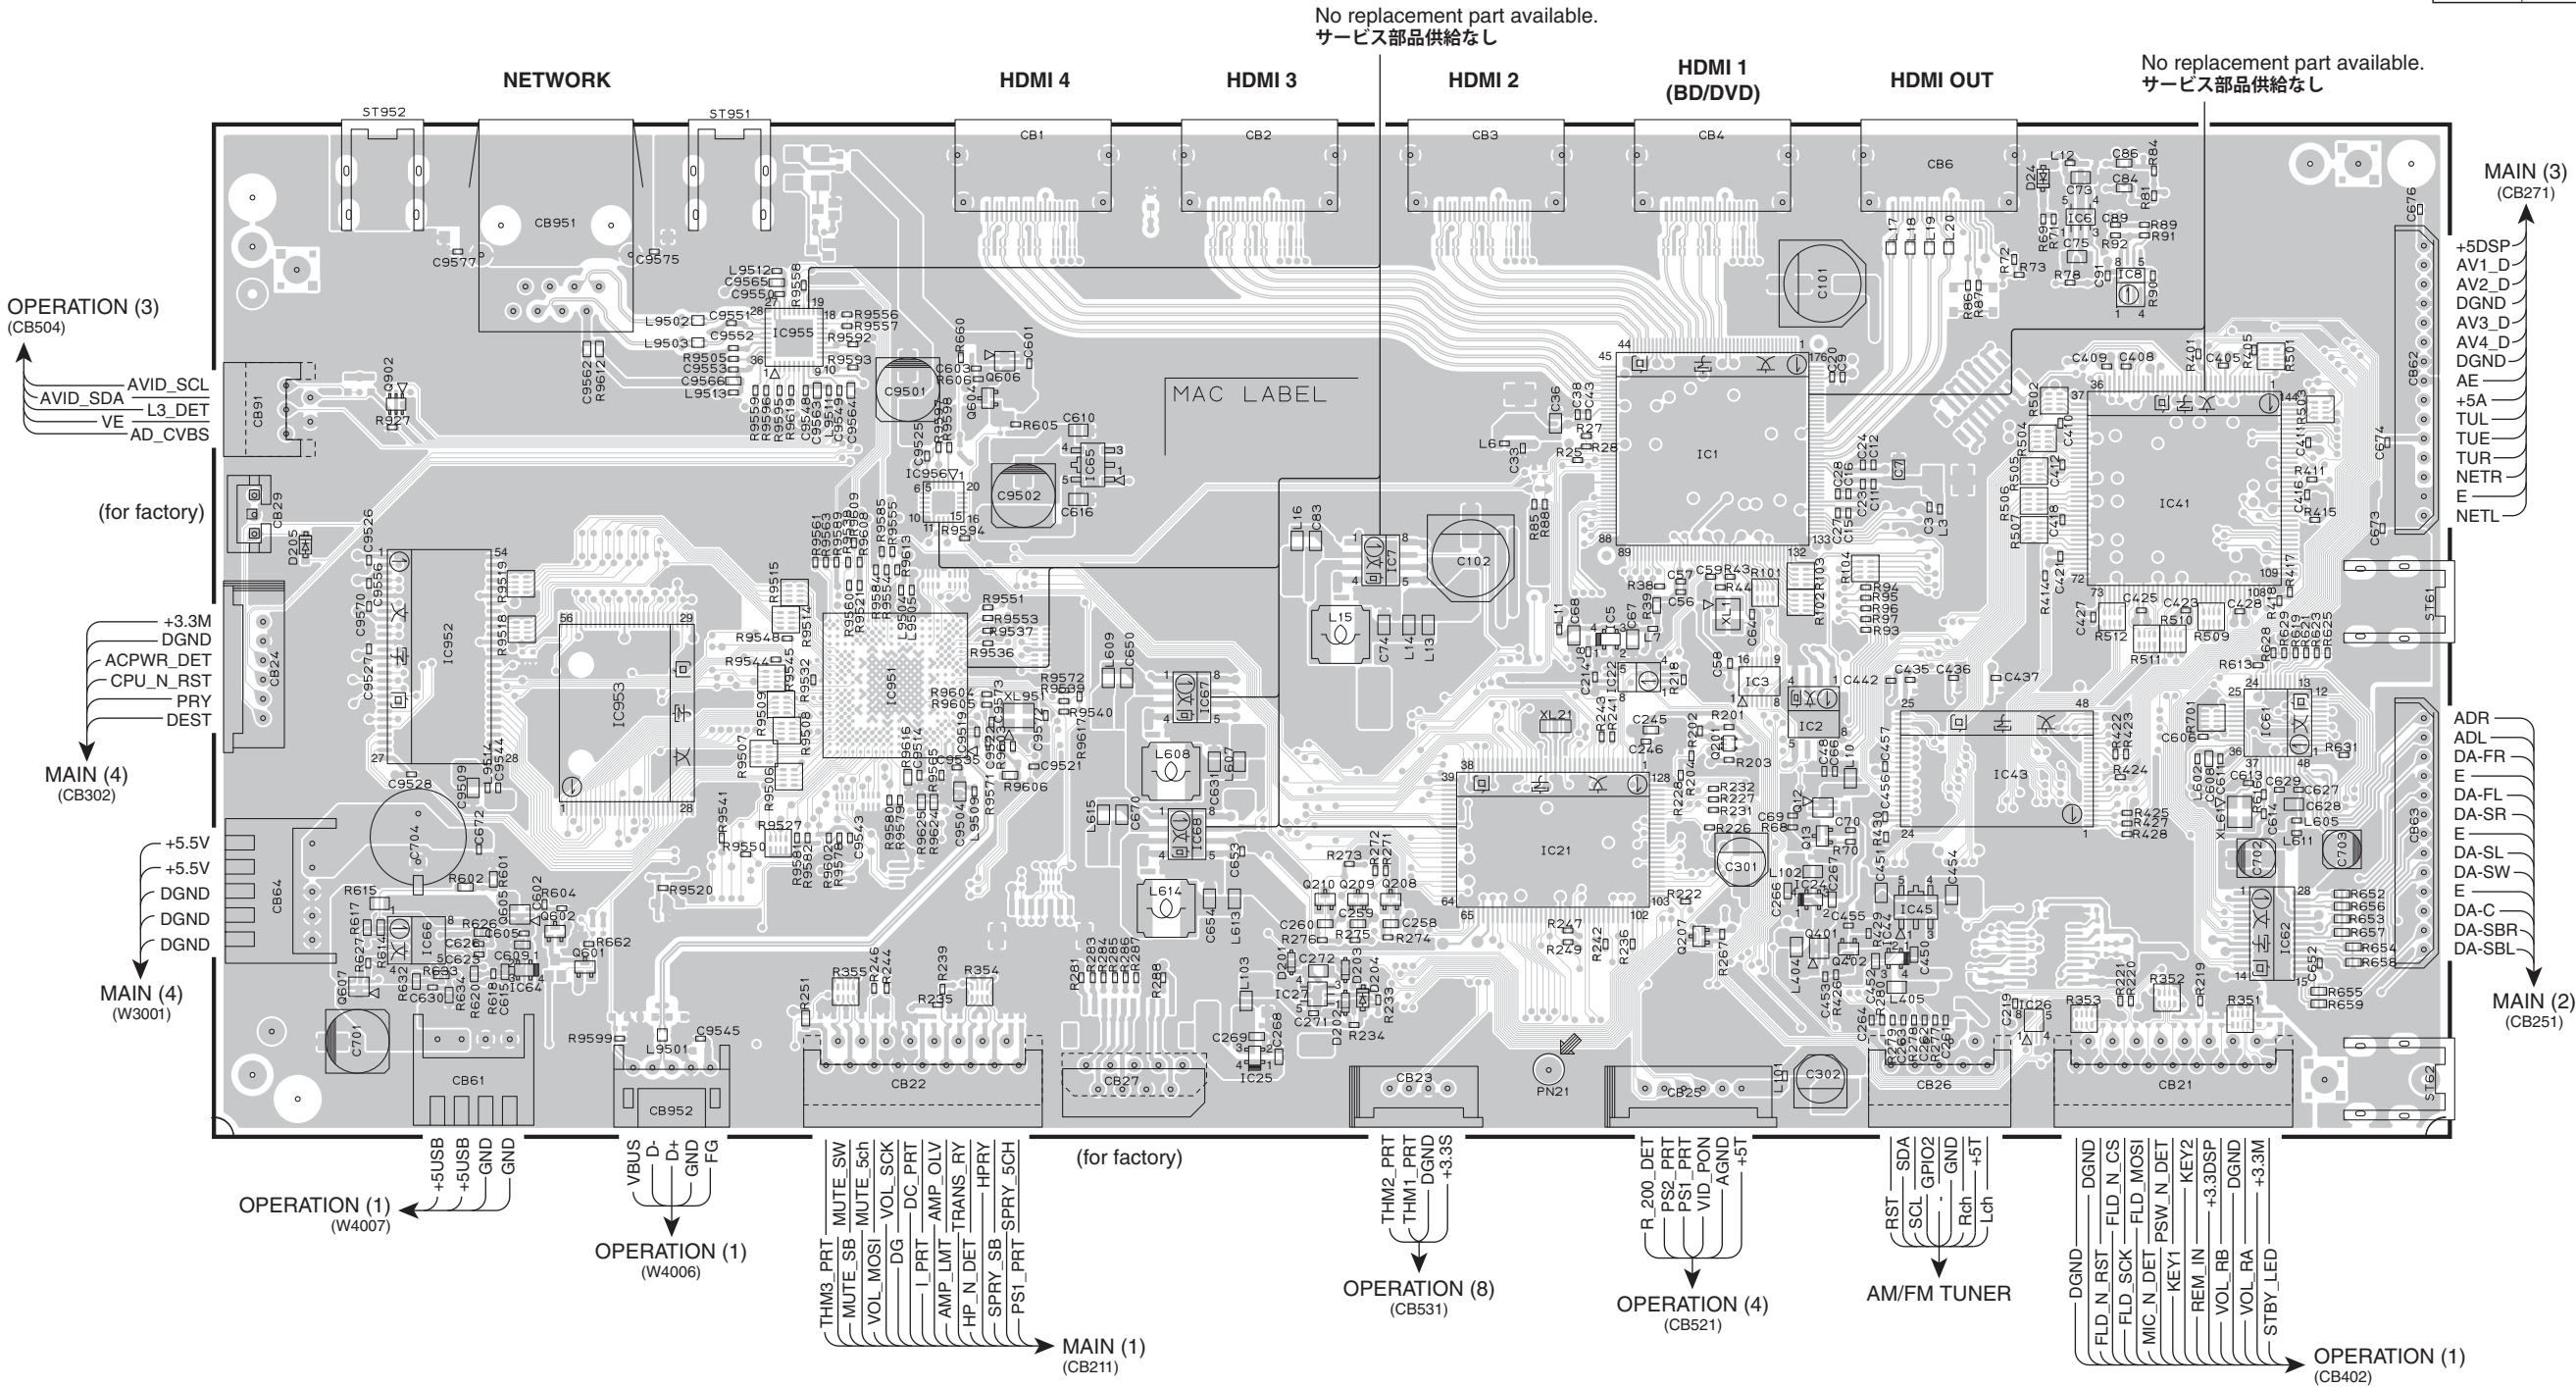


DIGITAL (Side B)

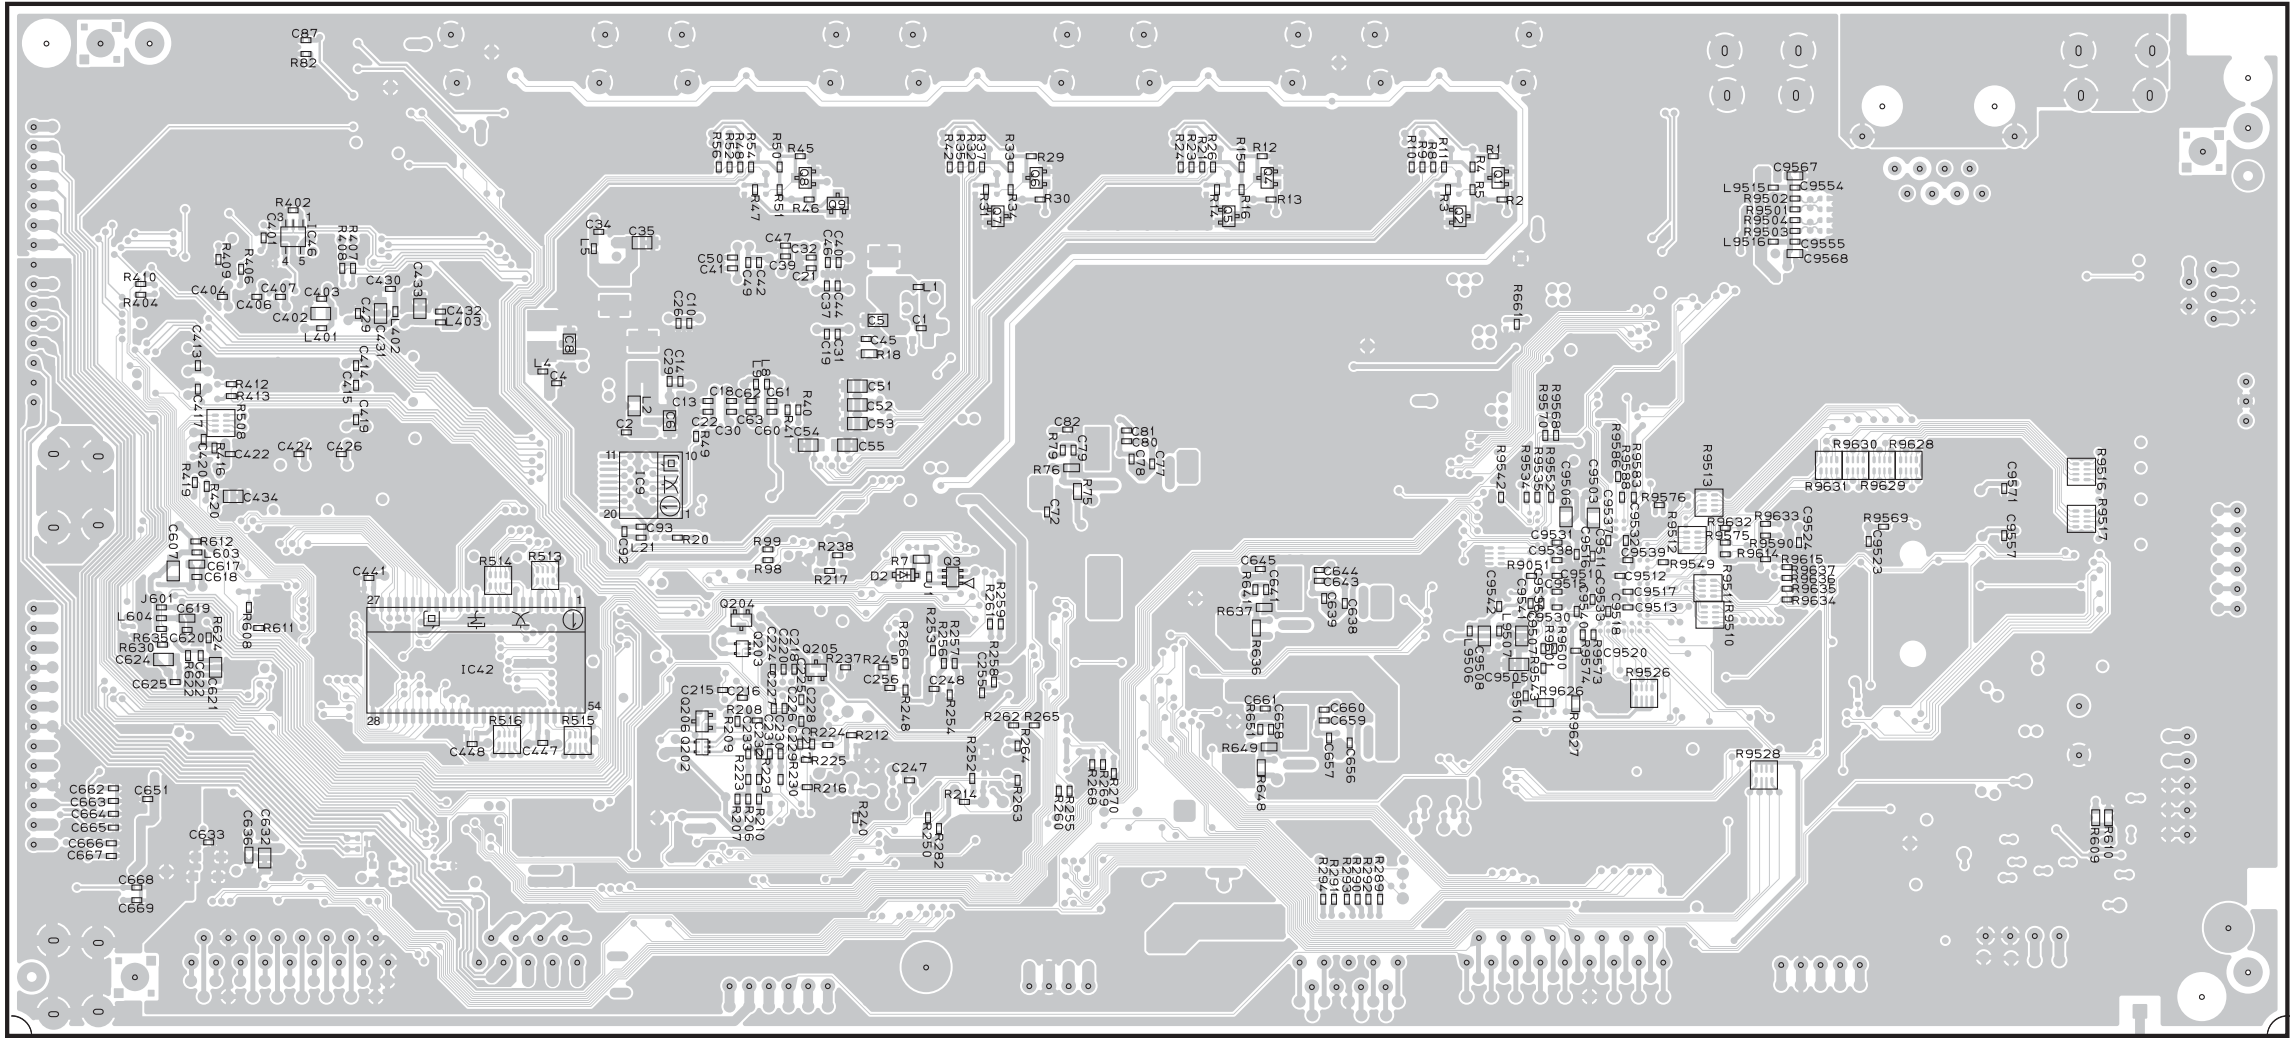


• Semiconductor Location

Ref no.	Location
D2	D4
IC9	C4
IC42	C5
IC46	B3
Q1	F3
Q2	F3
Q3	D4
Q4	E3
Q5	E3
Q6	E3
Q7	D3
Q8	D3
Q9	D3
Q202	D5
Q203	D4
Q204	D4
Q205	D5
Q206	D5

OPERATION (1) (Side A)

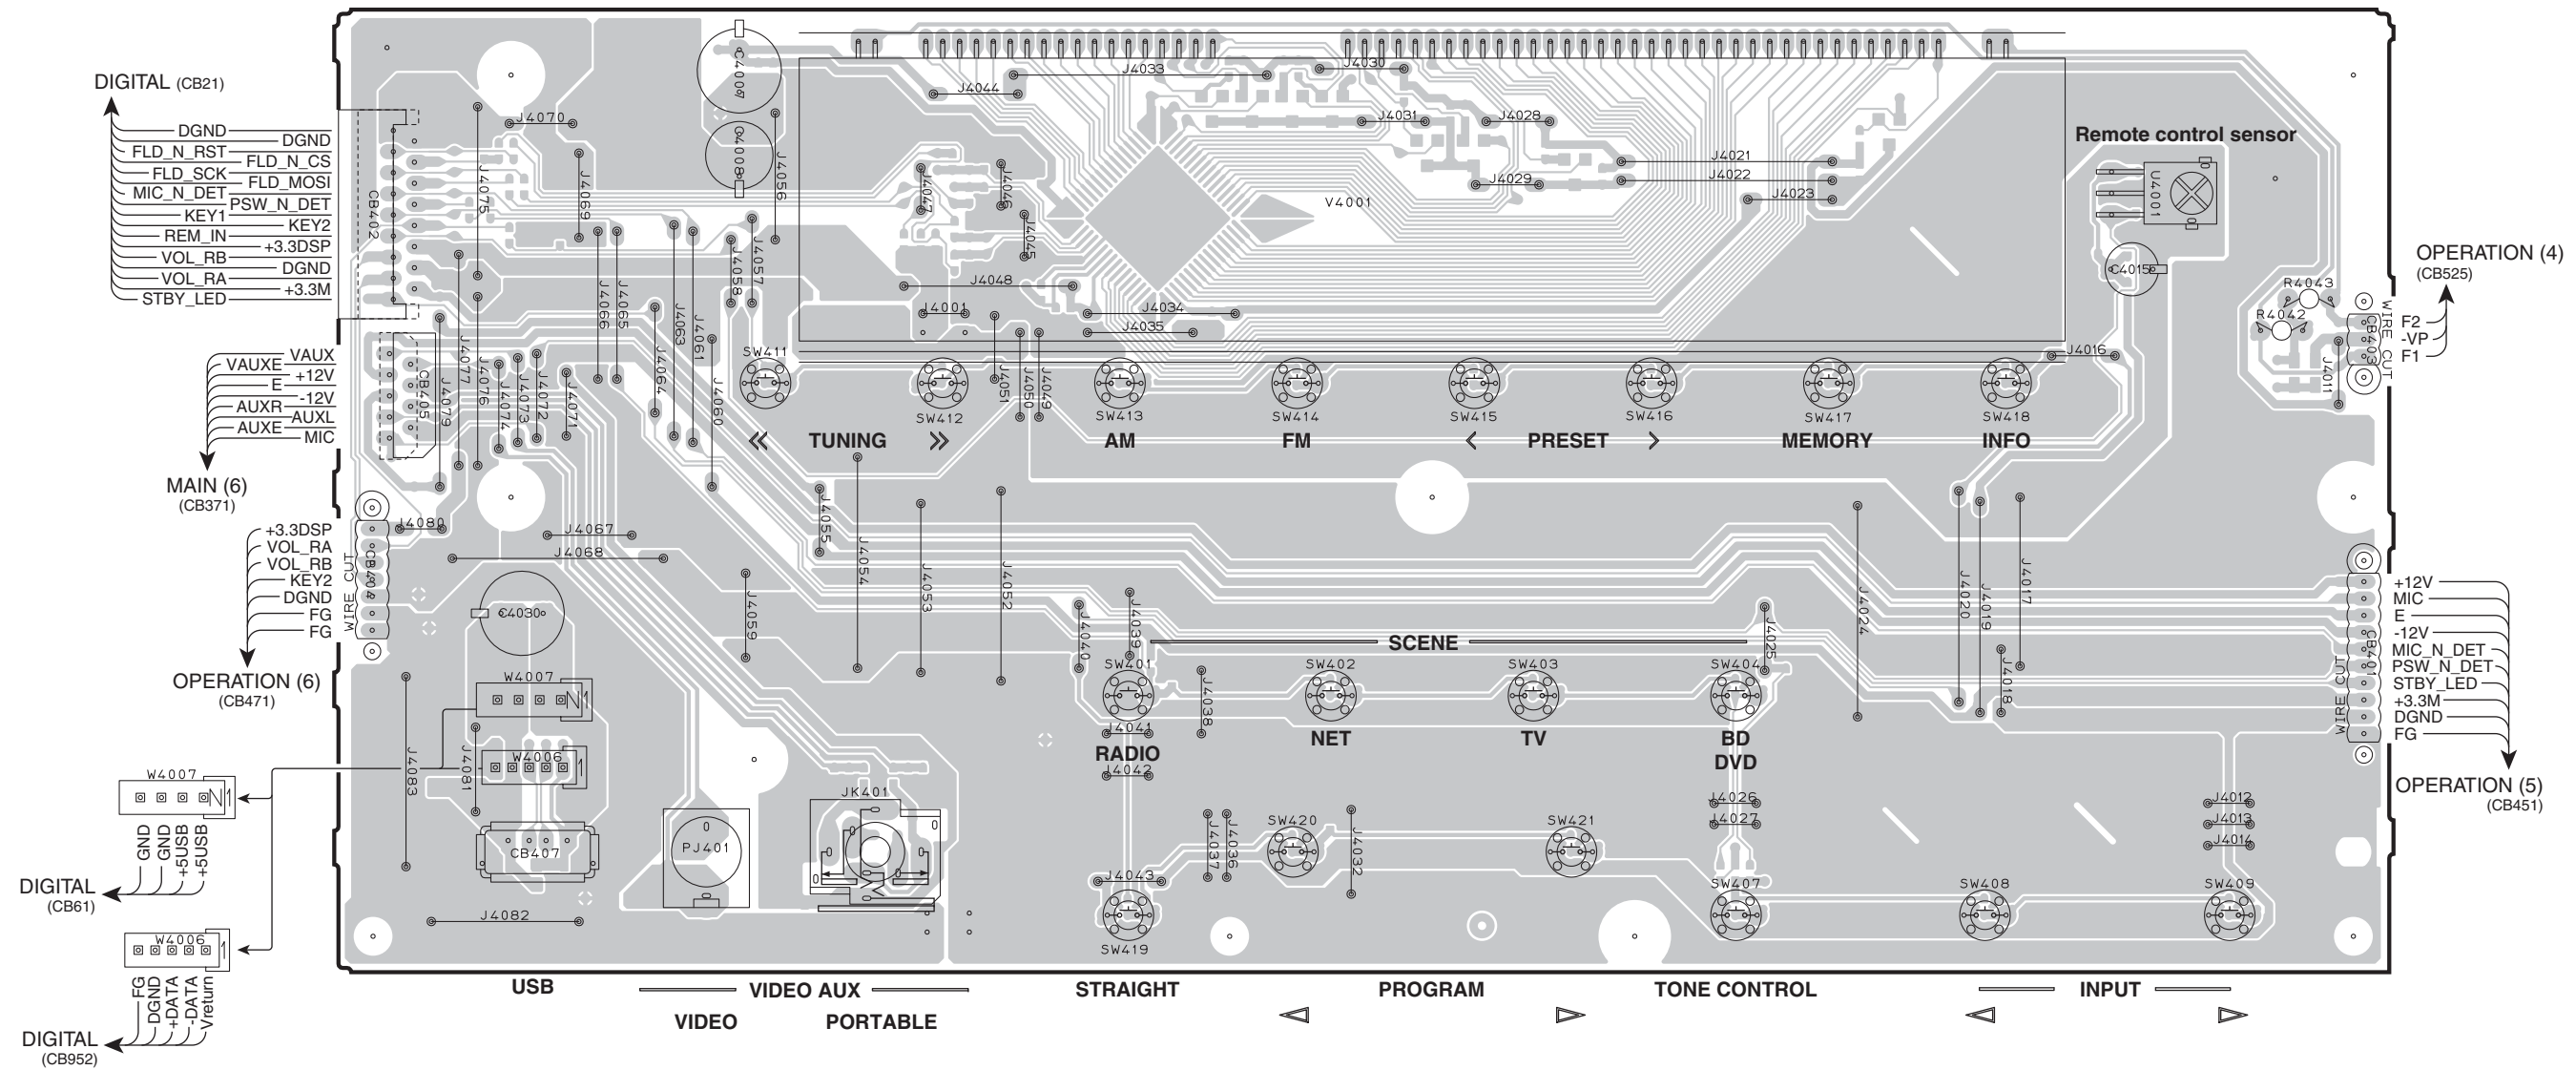


OPERATION (1) (Side B)

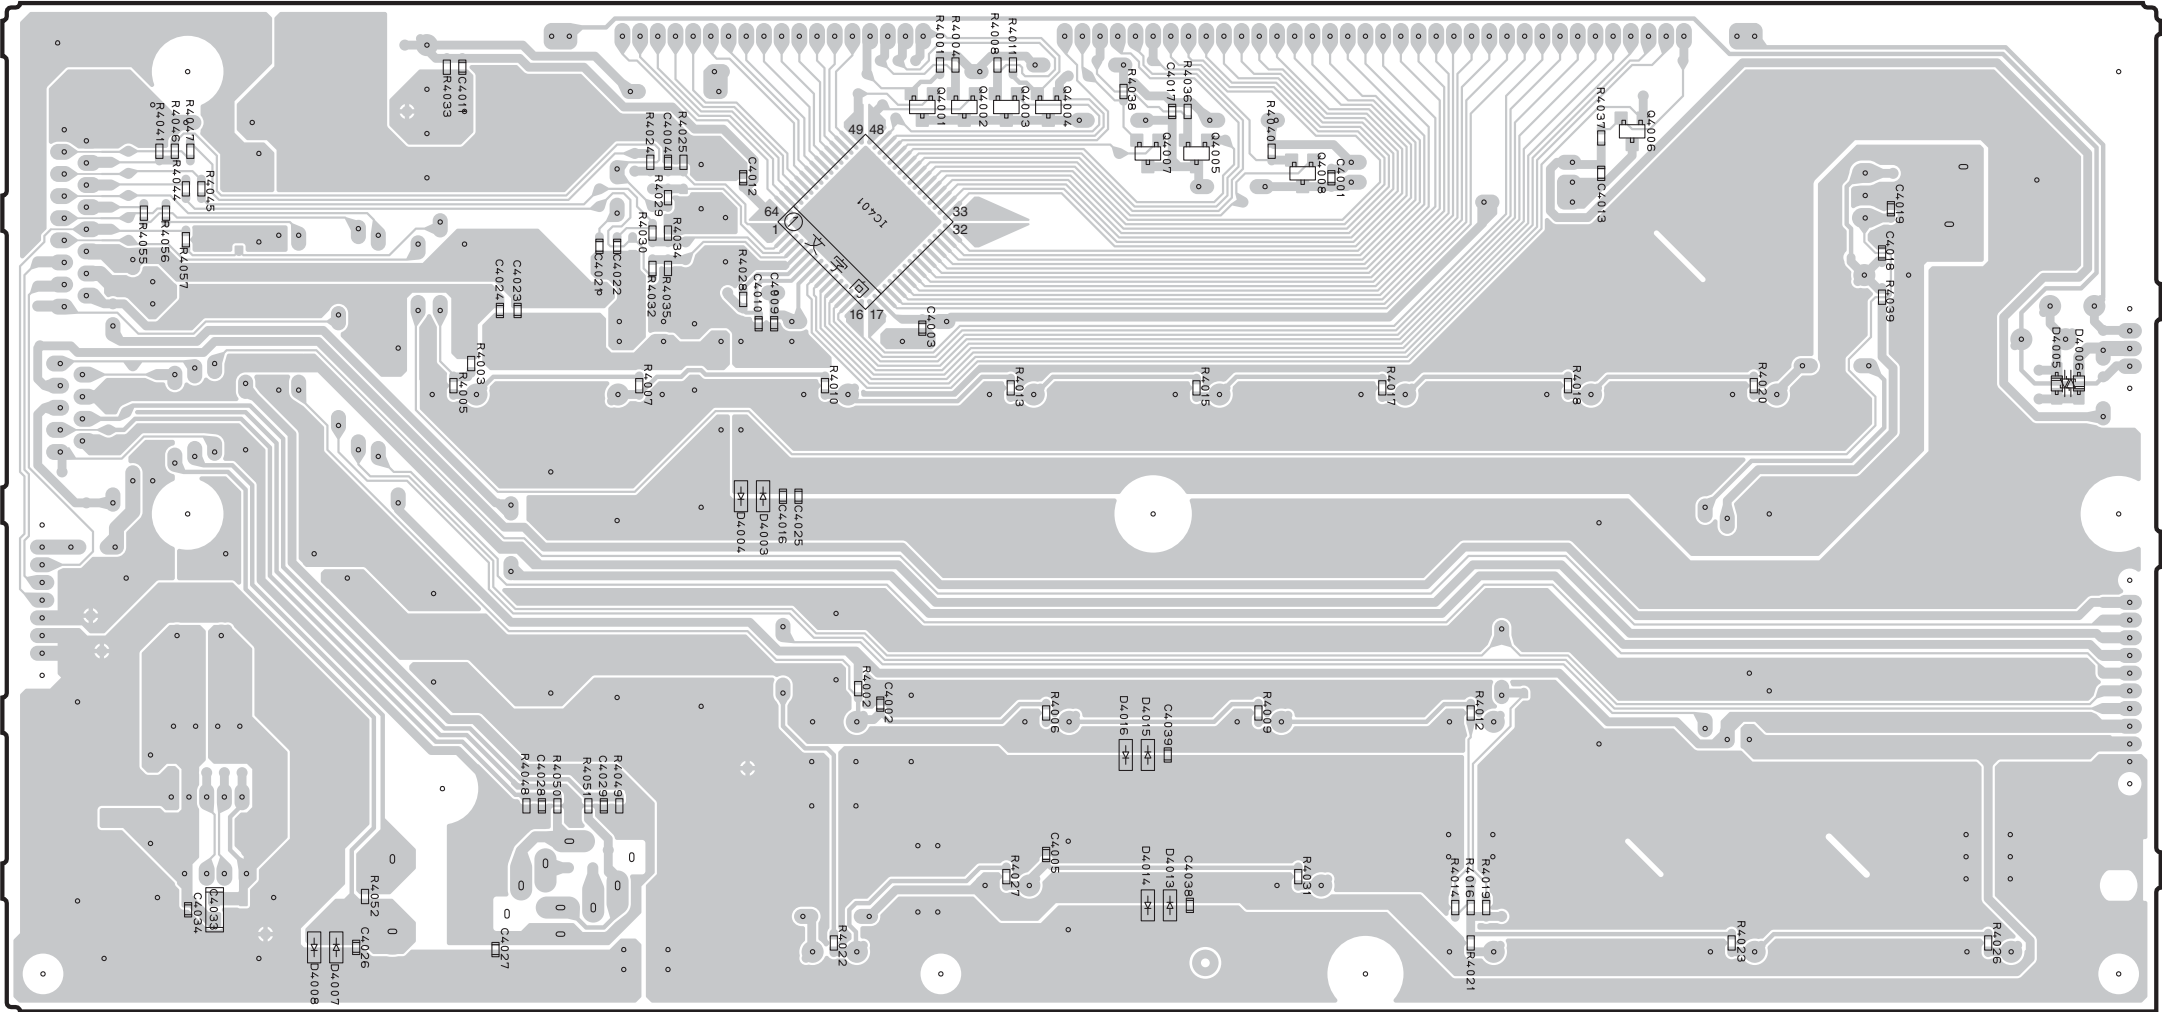

• Semiconductor Location

Ref no.	Location
D4003	D4
D4004	D4
D4005	H4
D4006	I4
D4007	C6
D4008	C6
D4013	F5
D4014	E5
D4015	E5
D4016	E5
IC401	E3
Q4001	E3
Q4002	E3
Q4003	E3
Q4004	E3
Q4005	F3
Q4006	G3
Q4007	E3
Q4008	F3


OPERATION (2) (Side A)

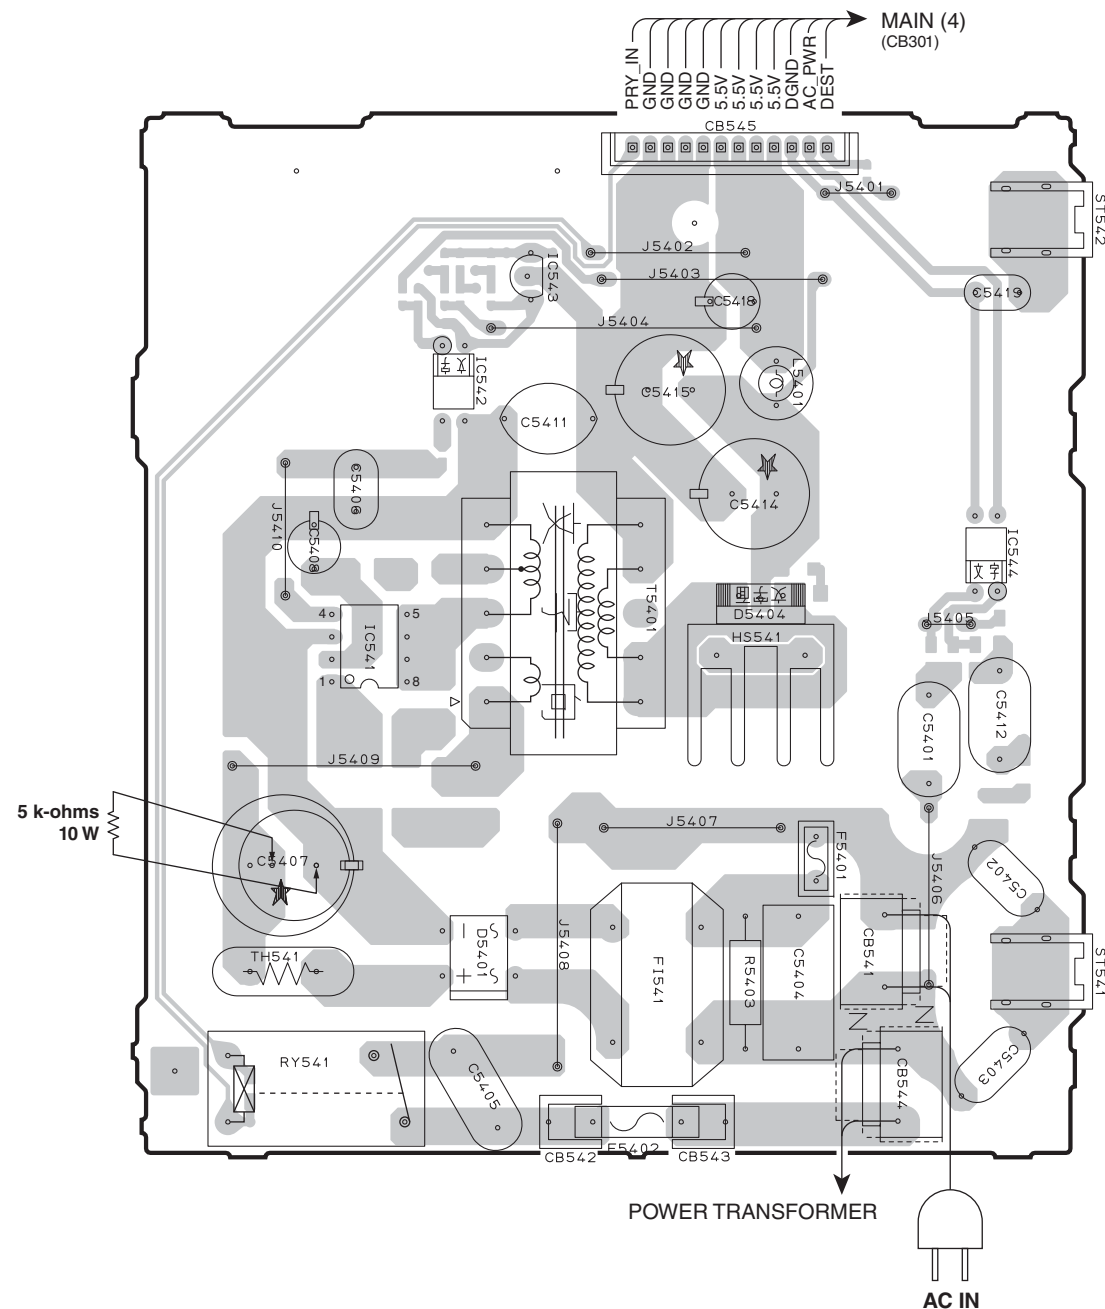

- Semiconductor Location

Ref no.	Location
D5401	C5
D5404	D4
IC541	B4
IC542	C3
IC543	C3
IC544	D4

OPERATION (3) (Side A)

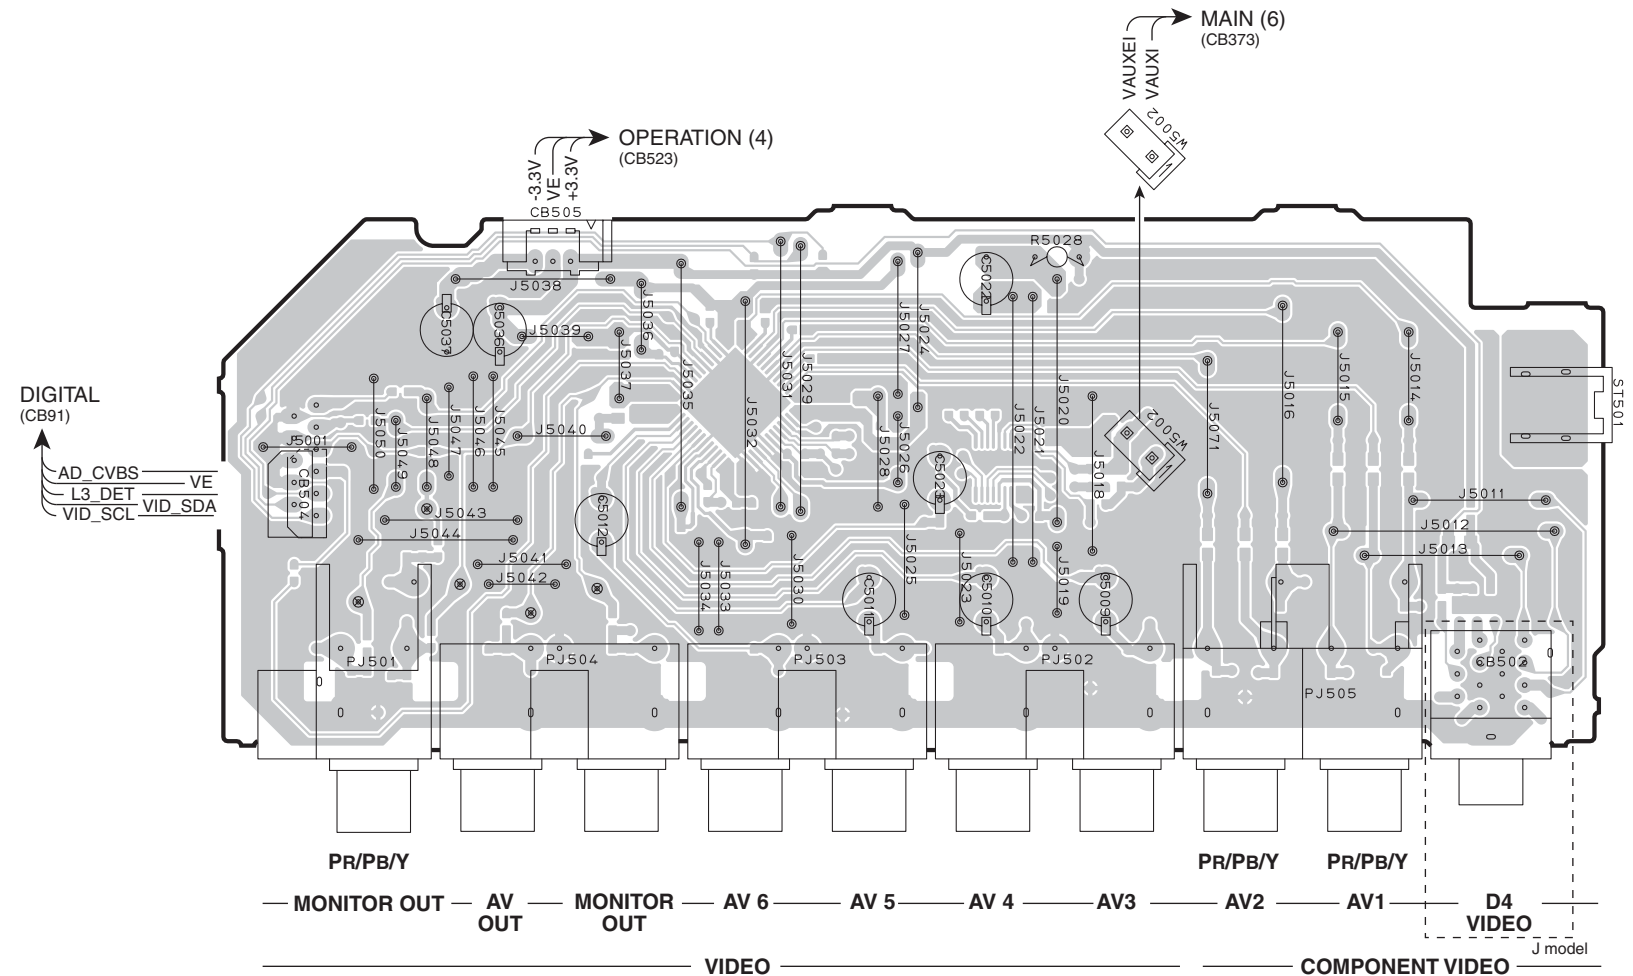


Safety measures

- Some internal parts in this product contain high voltages and are dangerous. Be sure to take safety measures during servicing, such as wearing insulating gloves.
 - Note that the capacitors indicated below are dangerous even after the power is turned off because an electric charge remains and a high voltage continues to exist there. Before starting any repair work, connect a discharging resistor (5 k-ohms/10 W) to the terminals of each capacitor indicated below to discharge electricity. The time required for discharging is about 30 seconds per each.
- C5407 on OPERATION (2) P.C.B.


安全対策

- この製品の内部には高電圧部分があり危険です。修理の際は、絶縁性の手袋を使用するなどの安全対策を行ってください。
- 下記のコンデンサには電源を OFF にした後も電荷が残り、高電圧が維持されており危険です。修理作業前に放電用抵抗 ($5\text{ k}\Omega/10\text{ W}$) を下記の各コンデンサの端子間に接続して放電してください。放電所用時間は各々約 30 秒間です。
(S) K 200 (2) P.C.B. の C5407

OPERATION (2) (Side B)

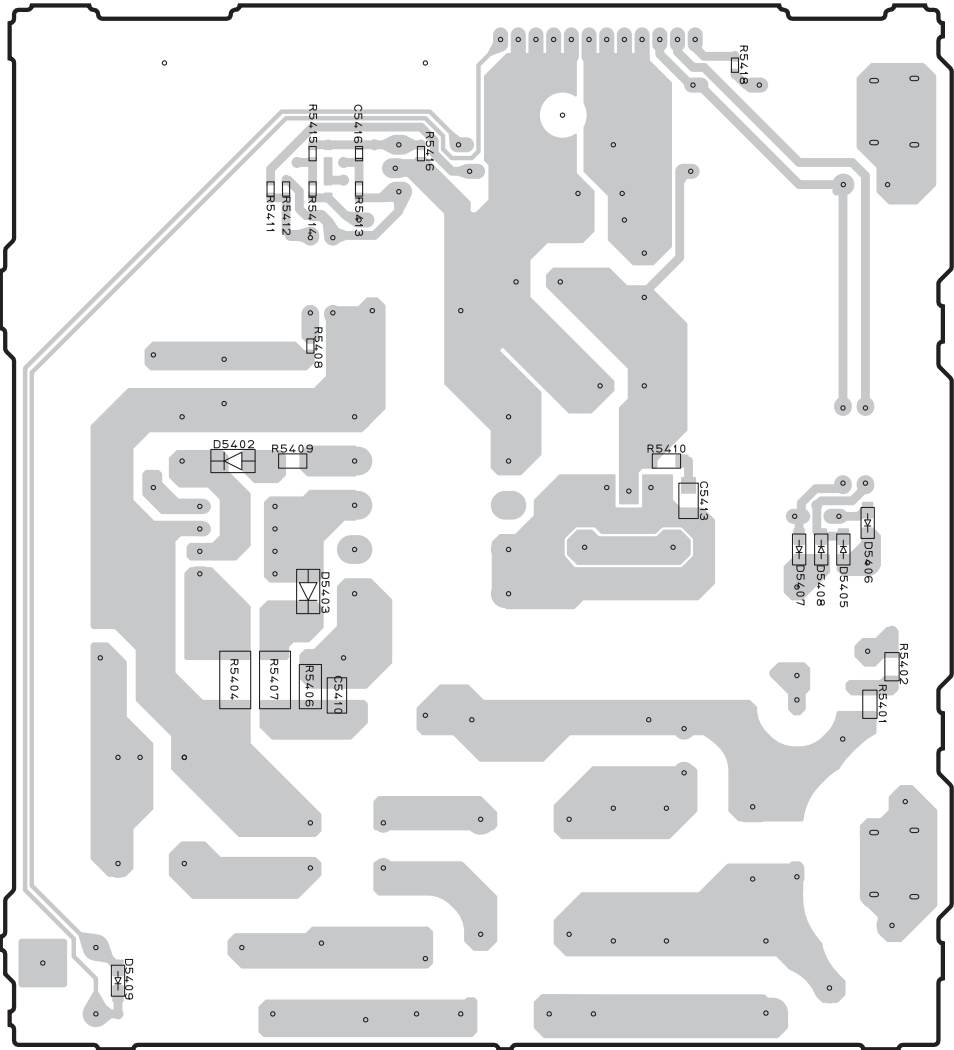


OPERATION (3) (Side B)

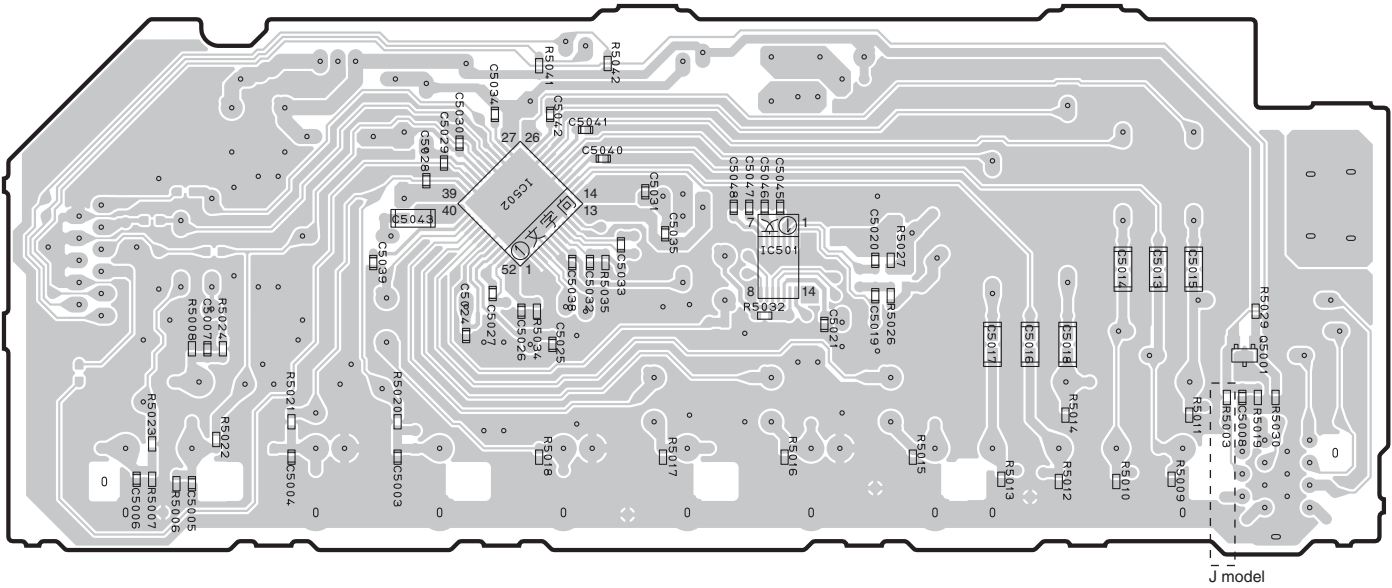

• Semiconductor Location

Ref no.	Location
D5402	B4
D5403	B4
D5405	D4
D5406	D4
D5407	D4
D5408	D4
D5409	A5
IC501	H3
IC502	G3
Q5001	I4


OPERATION (4) (Side A)

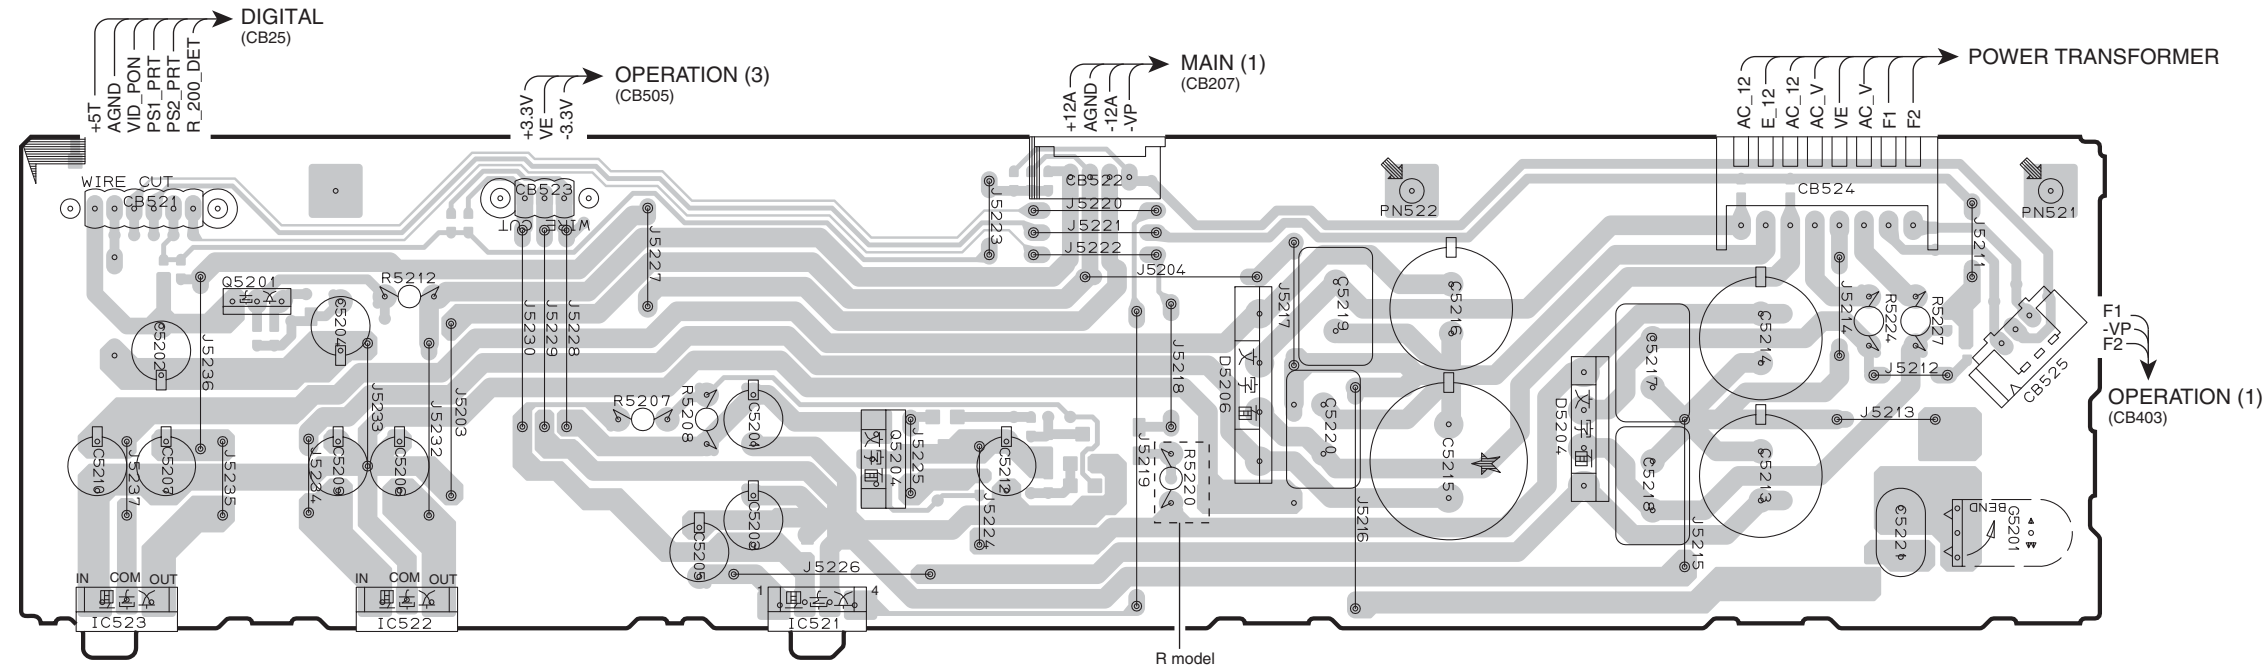


- Semiconductor Location

Ref no.	Location
D4504	C6
D5204	G3
D5206	F3
IC521	D4
IC522	C4
IC523	B4
Q5201	C3
Q5204	E3

OPERATION (5) (Side A)

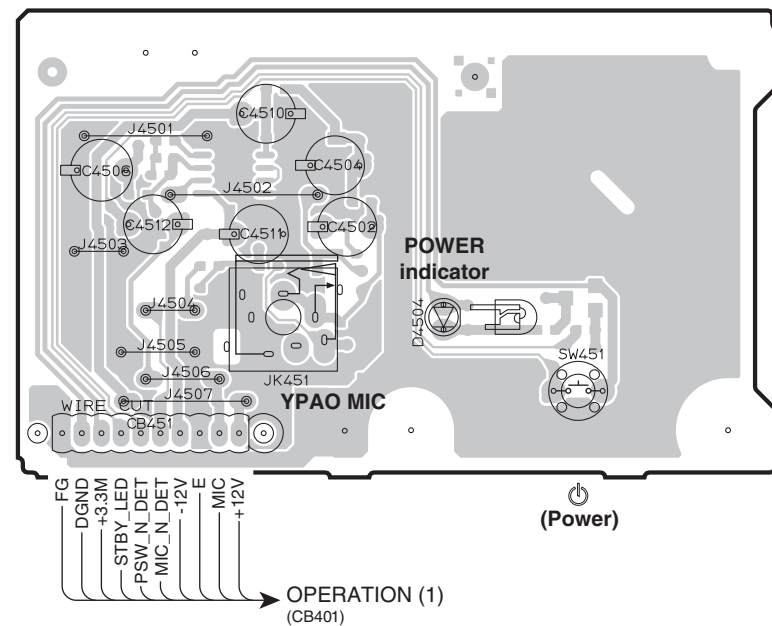

OPERATION (6) (Side A)

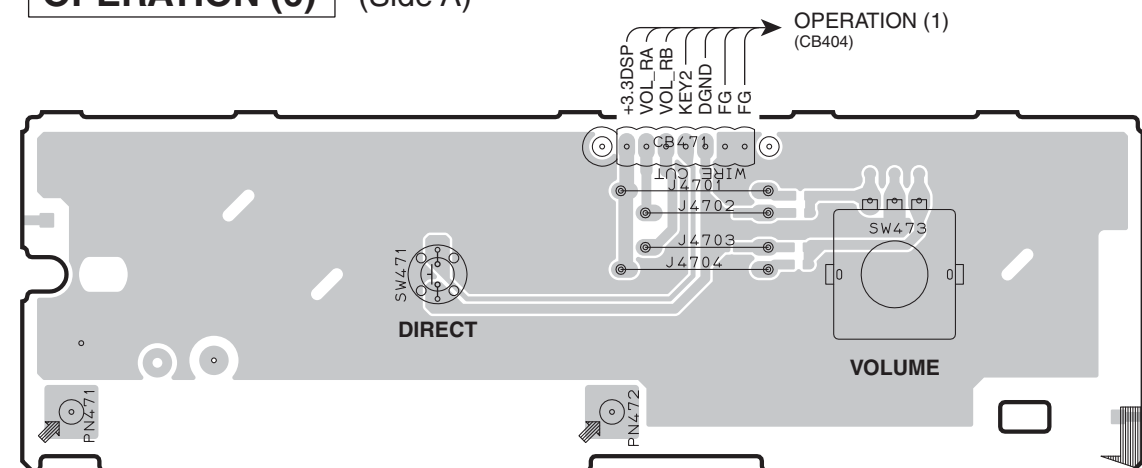


1

OPERATION (4) (Side B)


2

3


4

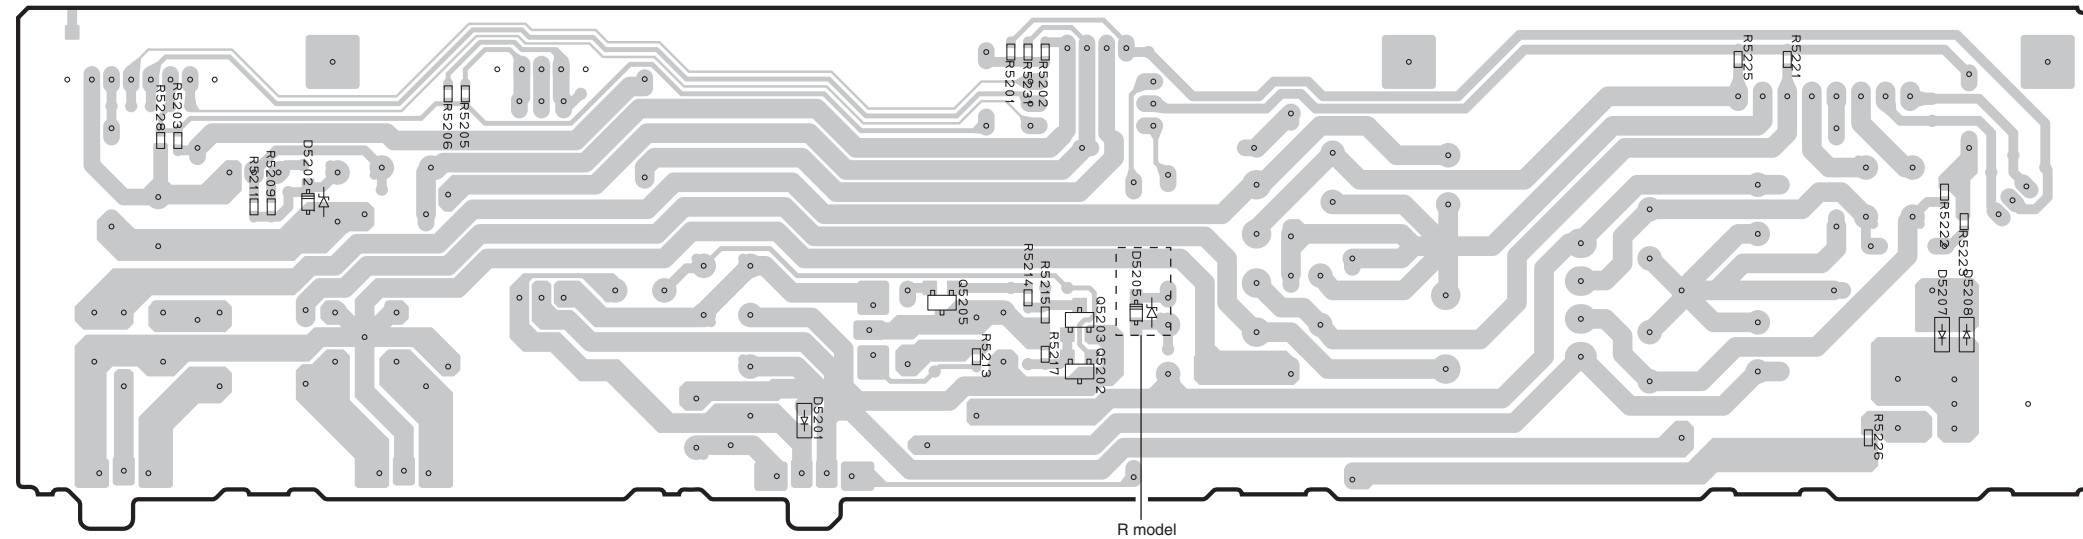

OPERATION (5) (Side B)

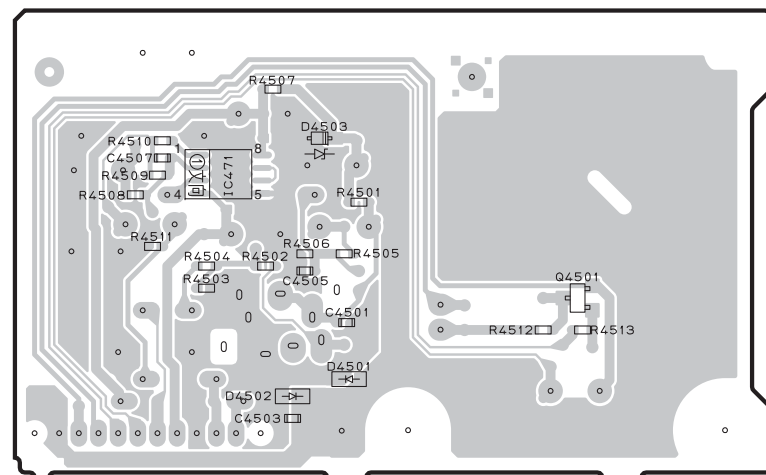

OPERATION (6)

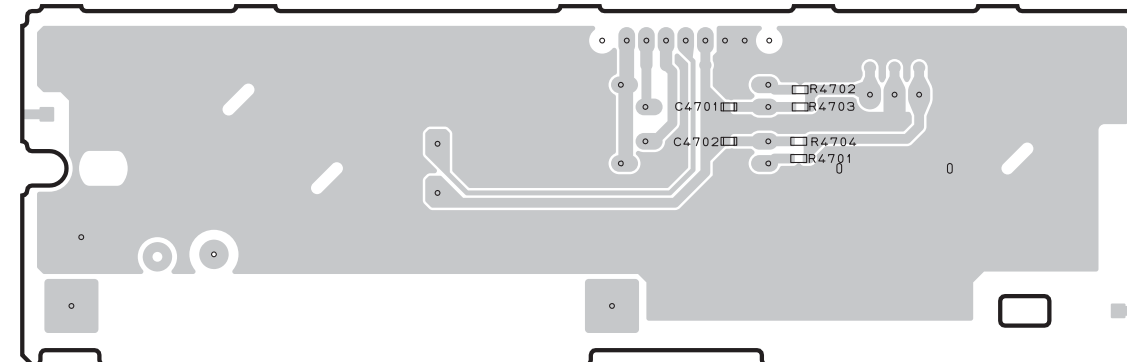

- Semiconductor Location


Ref no.	Location
D4501	B6
D4502	B6
D4503	D5
D5201	D4
D5202	B3
D5205	E3
D5207	H3
D5208	H3
IC471	B6
Q4501	C6
Q5202	E3
Q5203	E3
Q5205	D3

5


6

7


OPERATION (7) (Side A)

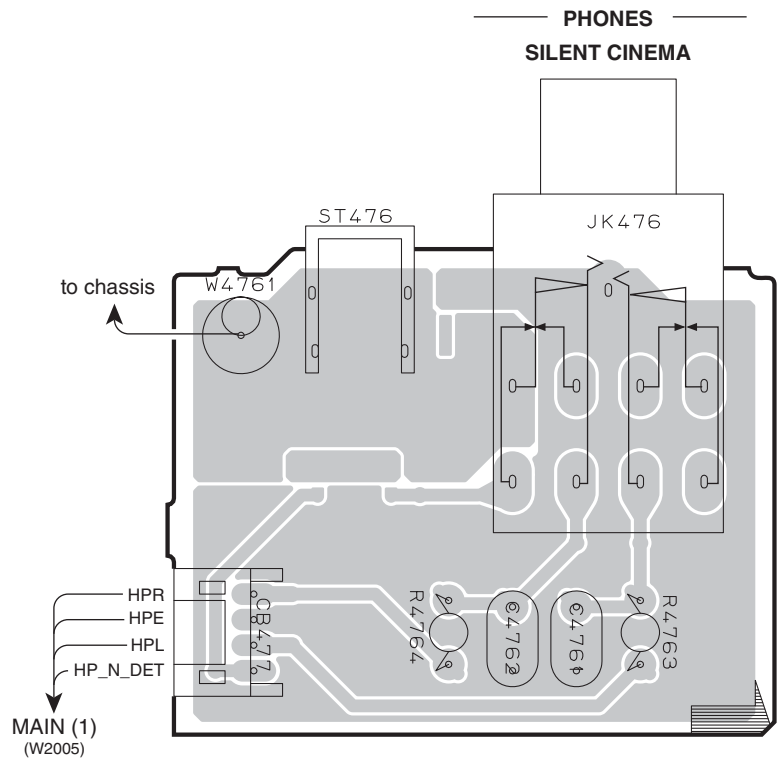

OPERATION (8) (Side A)

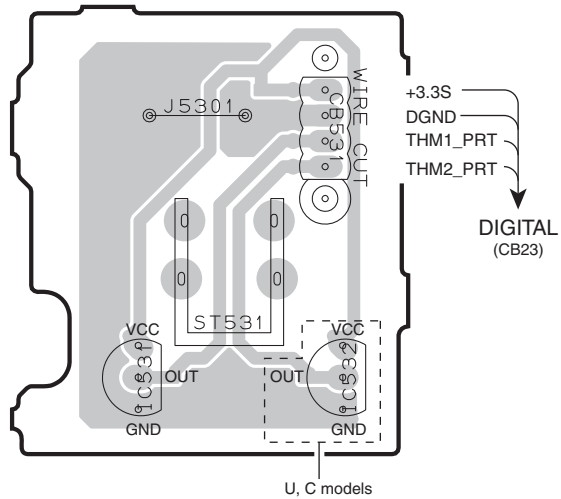

OPERATION (9) (Side A)

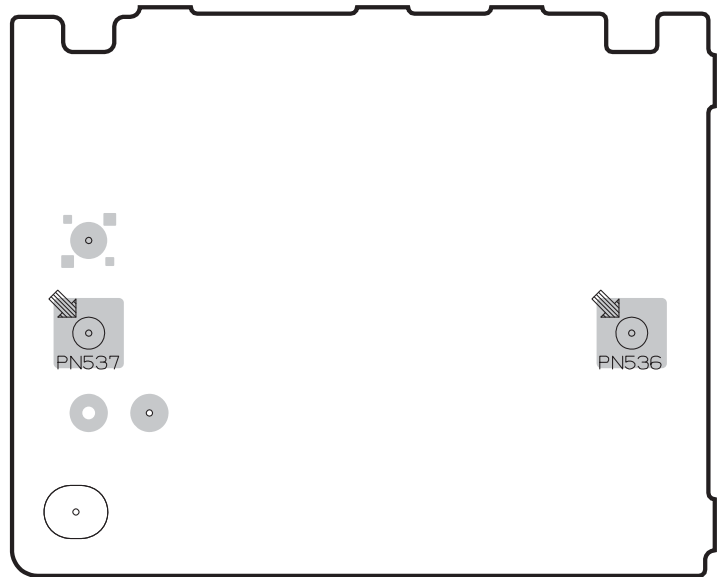


• Semiconductor Location


Ref no.	Location
IC531	E4
IC532	F4

1

OPERATION (7) (Side B)

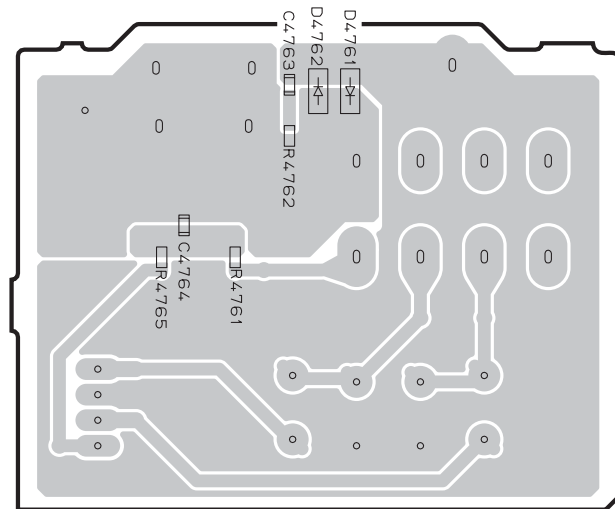


OPERATION (8) (Side B)

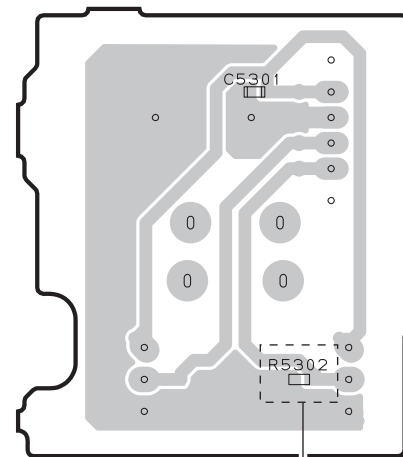

R, T, K, A, B, G, F, L, J models

OPERATION (9) (Side B)

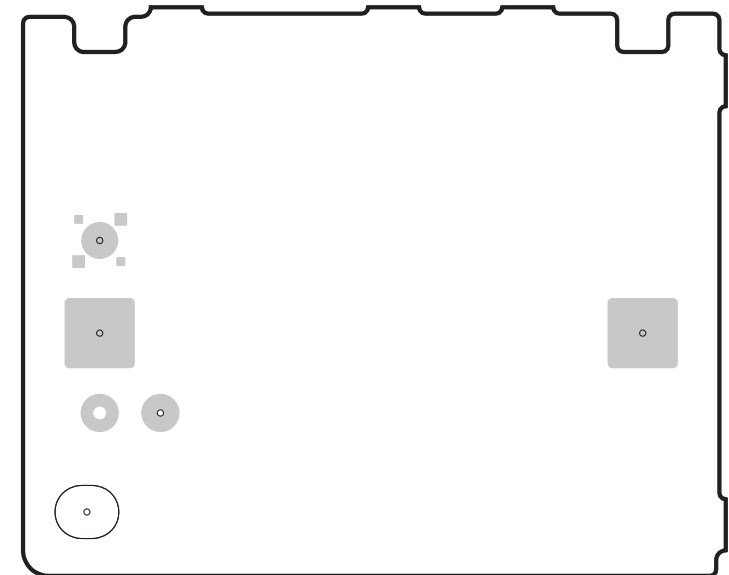

2

3

4

5

• Semiconductor Location

Ref no.	Location
D4761	C3
D4762	B3

6

7

Safety measures

- Some internal parts in this product contain high voltages and are dangerous. Be sure to take safety measures during servicing, such as wearing insulating gloves.
- Note that the capacitors indicated below are dangerous even after the power is turned off because an electric charge remains and a high voltage continues to exist there. Before starting any repair work, connect a discharging resistor (5 k-ohms/10 W) to the terminals of each capacitor indicated below to discharge electricity. The time required for discharging is about 30 seconds per each. C2084, C2085 on MAIN (1) P.C.B.

安全対策


- この製品の内部には高電圧部分があり危険です。修理の際は、絶縁性の手袋を使用するなどの安全対策を行ってください。
- 下記のコンデンサには電源を OFF にした後も電荷が残り、高電圧が維持されており危険です。修理作業前に放電用抵抗 (5 k Ω /10 W) を下記の各コンデンサの端子間に接続して放電してください。放電所用時間は各々約 30 秒間です。

MAIN (1) P.C.B. の C2084、C2085

Semiconductor Location


Ref no.	Location	Ref no.	Location	Ref no.	Location	Ref no.	Location
D2032	D5	D2038	D5	D2046	H5	Q2022	C7
D2033	F5	D2039	F5	D2049	H4	Q2023	B7
D2035	D5	D2040	F5	D2052	D3	Q2024	G7
D2036	F5	D2044	I4	D2053	D4	Q2025	H7
				Q2015	C5	Q2026	E7
				Q2016	C5	Q2027	F7
				Q2017	C5	Q2028	D7
				Q2018	E5	Q2029	C5
				Q2019	E5	Q2030	E5
				Q2020	D5	Q2031	D6
				Q2021	D5	Q2032	G6

MAIN (1) (Side A)

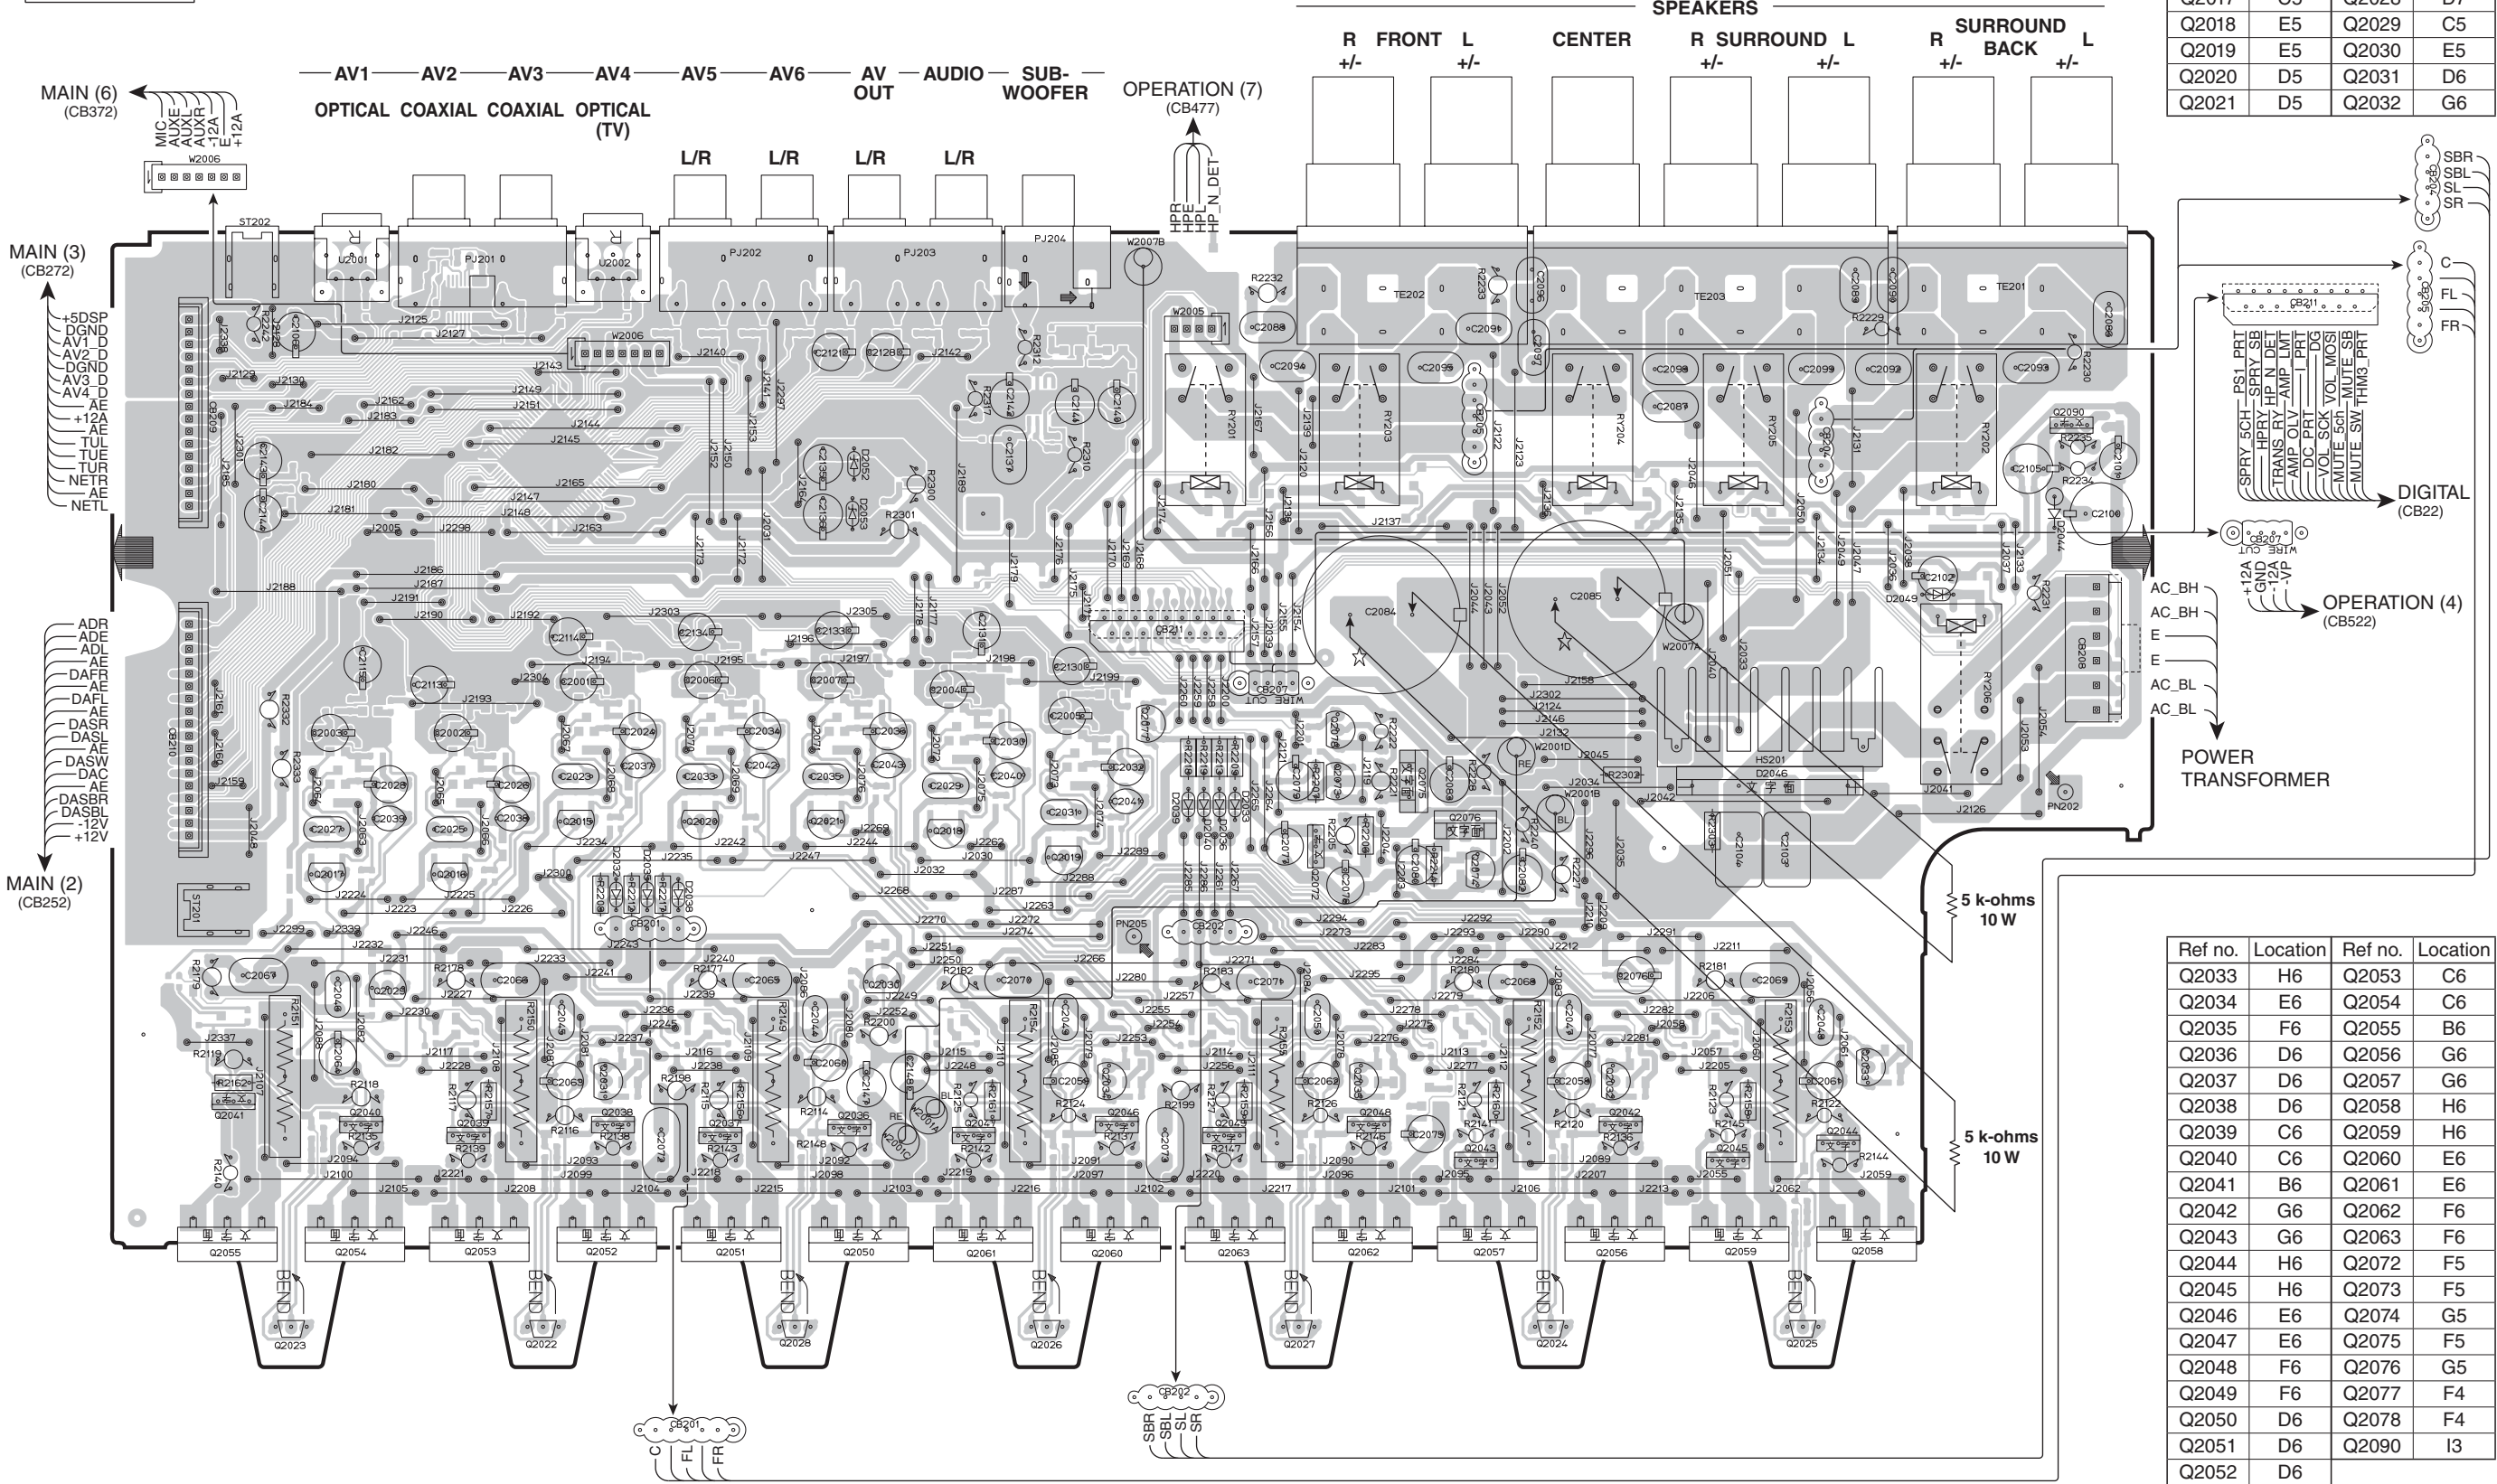

Ref no.	Location	Ref no.	Location
Q2033	H6	Q2053	C6
Q2034	E6	Q2054	C6
Q2035	F6	Q2055	B6
Q2036	D6	Q2056	G6
Q2037	D6	Q2057	G6
Q2038	D6	Q2058	H6
Q2039	C6	Q2059	H6
Q2040	C6	Q2060	E6
Q2041	B6	Q2061	E6
Q2042	G6	Q2062	F6
Q2043	G6	Q2063	F6
Q2044	H6	Q2072	F5
Q2045	H6	Q2073	F5
Q2046	E6	Q2074	G5
Q2047	E6	Q2075	F5
Q2048	F6	Q2076	G5
Q2049	F6	Q2077	F4
Q2050	D6	Q2078	F4
Q2051	D6	Q2090	I3
Q2052	D6		


MAIN (1) (Side B)

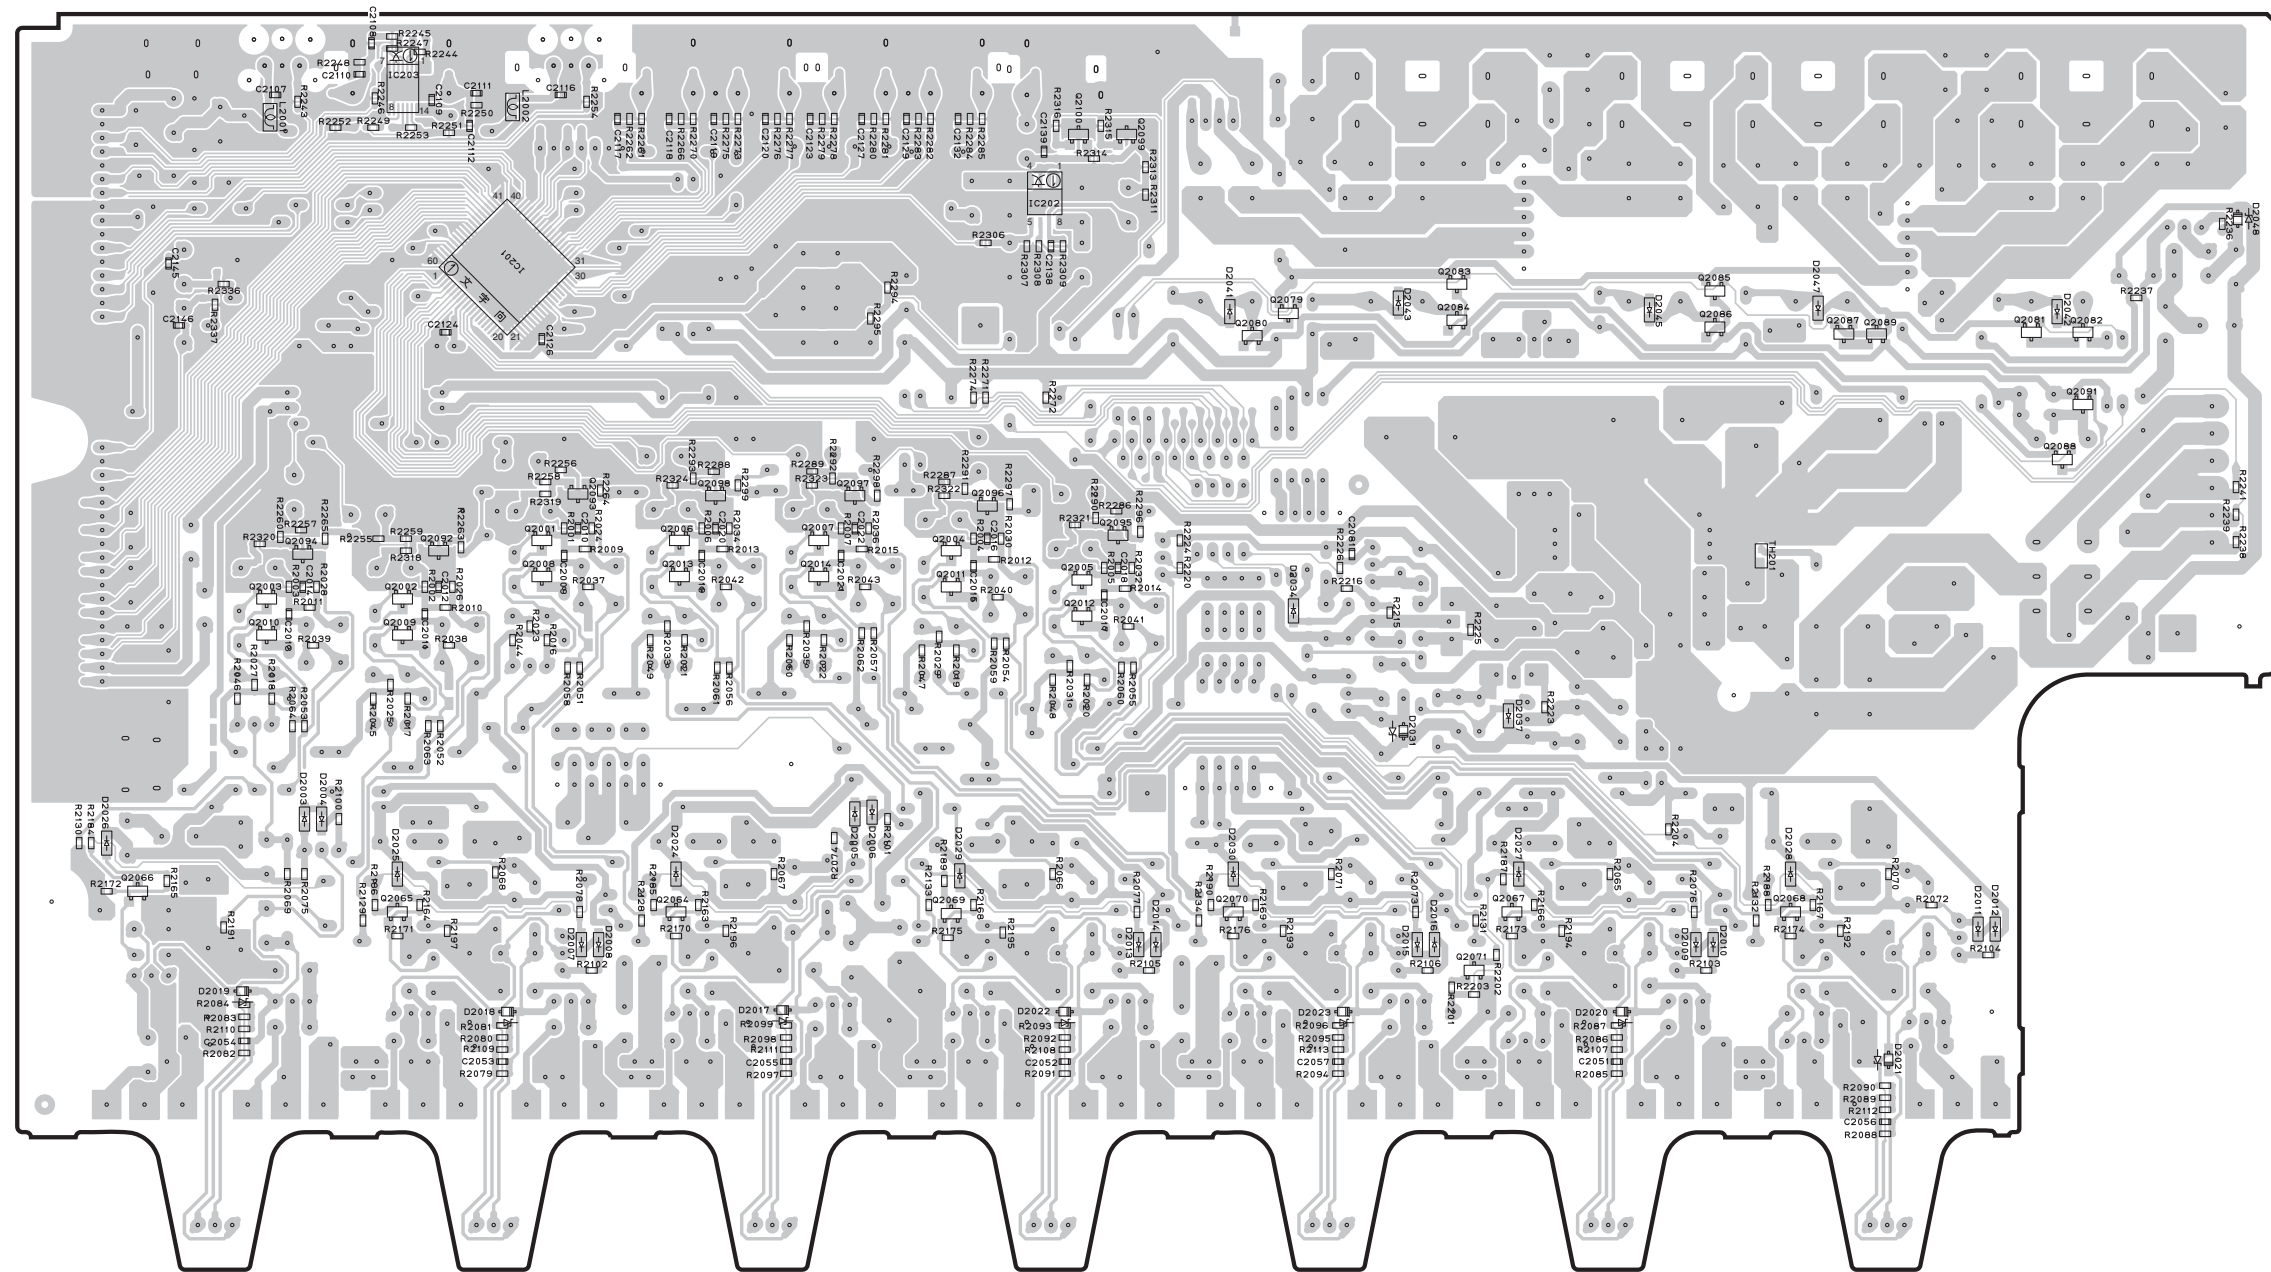


- Semiconductor Location

Ref no.	Location	Ref no.	Location
D2003	B5	Q2003	B5
D2004	B5	Q2004	D4
D2005	D5	Q2005	E4
D2006	D5	Q2006	C4
D2007	C6	Q2007	D4
D2008	C6	Q2008	C4
D2009	G6	Q2009	B5
D2010	G6	Q2010	B5
D2011	H6	Q2011	D4
D2012	H6	Q2012	E5
D2013	E6	Q2013	C4
D2014	E6	Q2014	D4
D2015	F6	Q2064	C6
D2016	F6	Q2065	B6
D2017	D6	Q2066	B5
D2018	C6	Q2067	F6
D2019	B6	Q2068	G6
D2020	F6	Q2069	D6
D2021	G6	Q2070	E6
D2022	E6	Q2071	F6
D2023	F6	Q2079	E4
D2024	C5	Q2080	E4
D2025	B5	Q2081	H4
D2026	A5	Q2082	H4
D2027	F5	Q2083	F3
D2028	G5	Q2084	F4
D2029	D5	Q2085	G4
D2030	E5	Q2086	G4
D2031	F5	Q2087	G4
D2034	E5	Q2088	H4
D2037	F5	Q2089	G4
D2041	E4	Q2091	H4
D2042	H4	Q2092	C4
D2043	F4	Q2093	C4
D2045	G4	Q2094	B4
D2047	G4	Q2095	E4
D2048	I3	Q2096	D4
IC201	C3	Q2097	D4
IC202	E3	Q2098	C4
IC203	B3	Q2099	E3
Q2001	C4	Q2100	E3
Q2002	B5		

MAIN (2) (Side A)

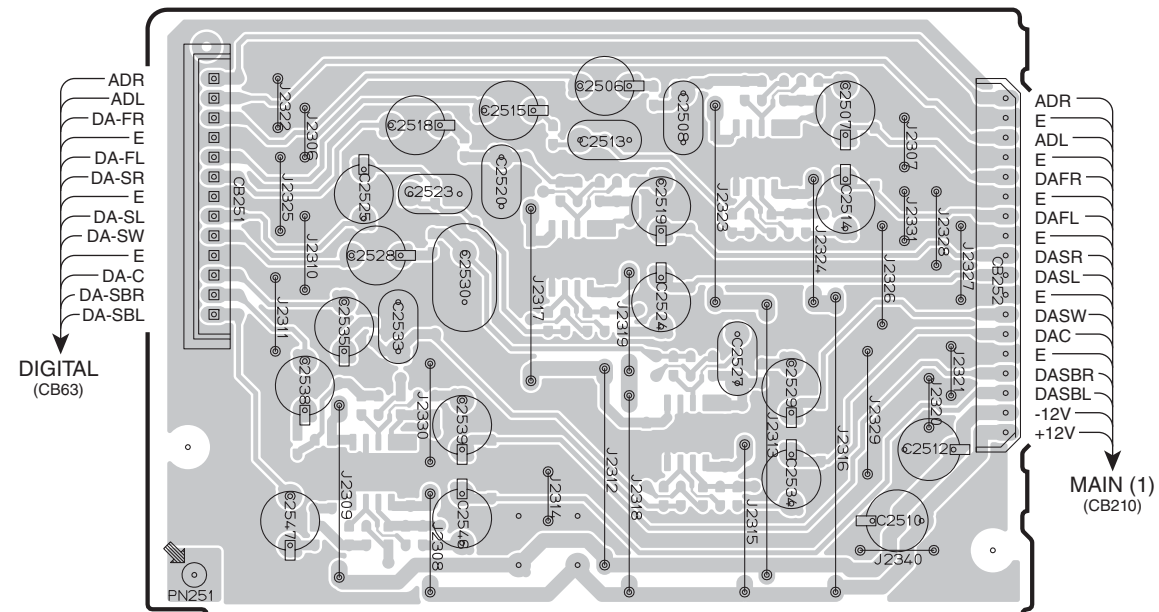


MAIN (3) (Side A)

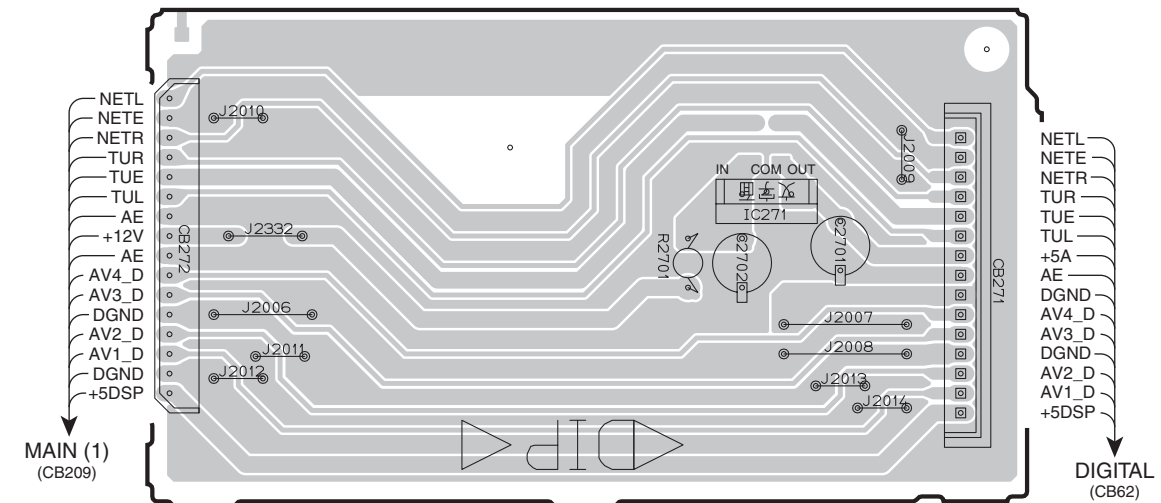

- Semiconductor Location


Ref no.	Location
IC271	H2

MAIN (4) (Side A)

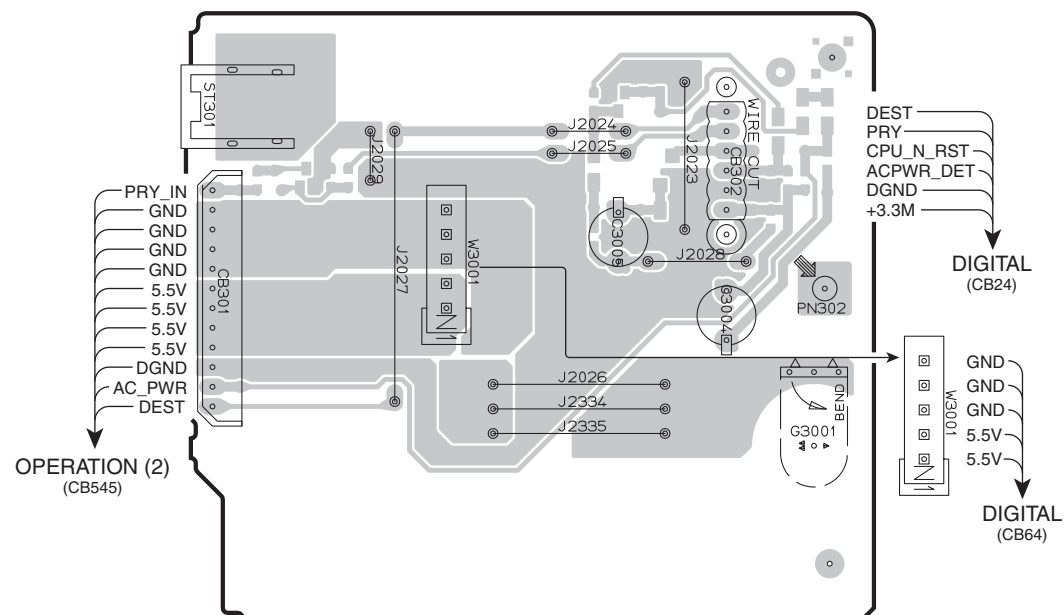


MAIN (5) (Side A)

R model

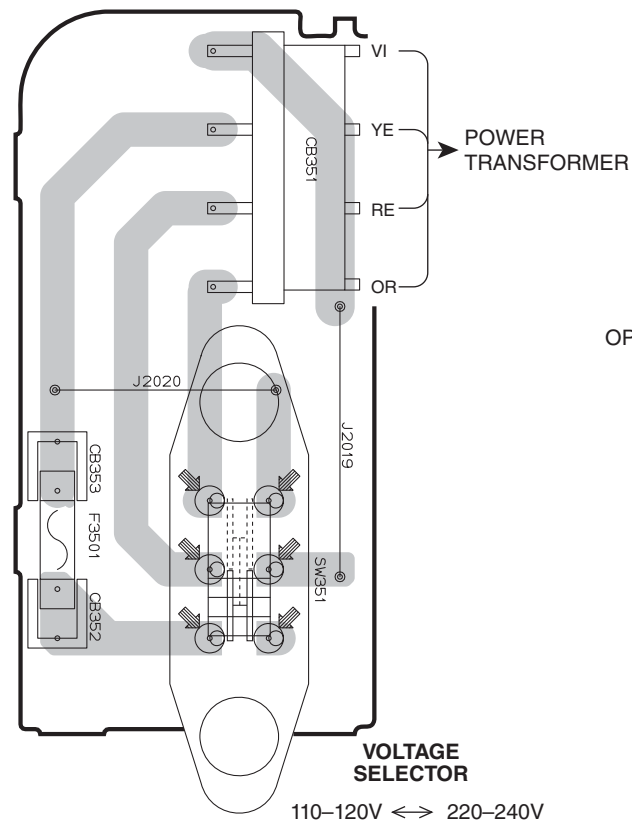

MAIN (6) (Side A)

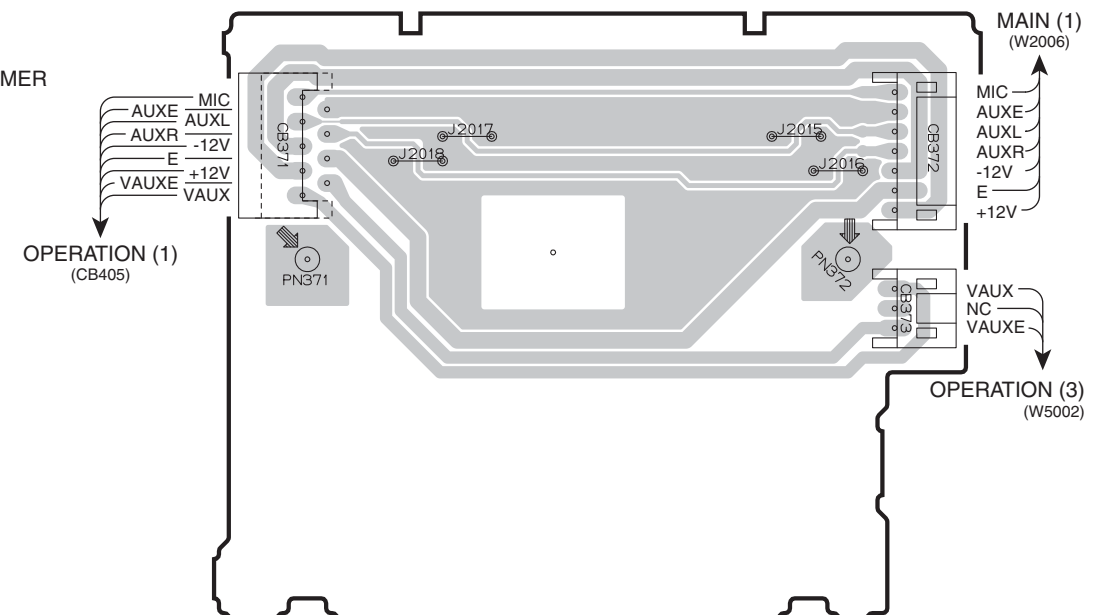

PIN CONNECTION DIAGRAMS

ICs

BA4560F-E2 	BD7542F-E2 	D70YE101BRFP266 	DM860A-AQE 	
BD3473KS2 	BD9328EFJ 		18 	
	BR25S640FVT-WE2 			
KIA7812API 	KIA7912PI 	LM19CIZ/LF 	LAN8700C-AEZG-TR 	M12L64164A-5TG
M66003-0131FP-R 	MFI341S2162 	MX29GL256FLT2I-90Q 	MX29LV160DBTI-70G 	NJM2388F33
NJM41033V (TE2) 	NJW1329FH3 	PCM1681PWPR 	PCM9211PTR 	R5F3651TNFC
NJM4565M (TE1) 				
R1163N501B-TR-FE 	SII9573CTUC 		SN74LVC1G17DCKR 	TC74LCX245FT
R1172H121D-T1-F 			STR2A153 	TC74VHCU04FT
RP130Q331D-TR-F RP130Q501D-TR-F 				TC7SH08FU

ICs

TC7WH32FK (TE85L, F) 	TC7WHU04FU 	TL431ACLPR 	W25Q16CVSSIG 	W9825G6JH-6
--------------------------	----------------	----------------	------------------	-----------------










Diodes

1N4003S 1SS133 1SS176 1SS270A 	1SS355VMTE-17 	DBL155G 	HZU5.6B3 TRF-E 	KBP103G 1.0A 200V 	MTZJ6.8C 	RB215T-90
RB500V-40 RB501V-40 RB521S-30 	RF101L2STE25 	RS203M-B-C-J80 	SARS05 	TS6P03G 6.0A 200V 	UDZS39B TE-17 39V UDZV4.3B UDZV5.1B UDZV12B UDZV13B 	

Transistors

2N5401C-AT/P 	2N5551C-AT 	2SA1162-Y (TE85R, F) 2SC2712-Y (TE85R, F) 	2SA1312-GR,BL 	2SA1576UBTLR 2SC3324-GR,BL 	2SA1708 2SC4488 	2SA1941 2SC5198
2SA949 2SC2229 	2SC4081UBTLR 	2SD2704 K 	2SD2705S TP 	DTA044EUBTL DTC014EUBTL 	HN4B01JE 	KRA104S-RTK KRC102S-RTK KRC104S-RTK
KTA1046-Y-U/PFY KTA1659A-U/PF 	KTA1504S 	KTC3198 Y AT 	KTC3875S 	RAL035P01 	μPA672T-T1-A 	

 SCHEMATIC DIAGRAMS
DIGITAL 1/5

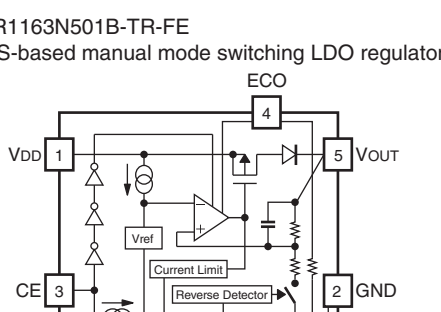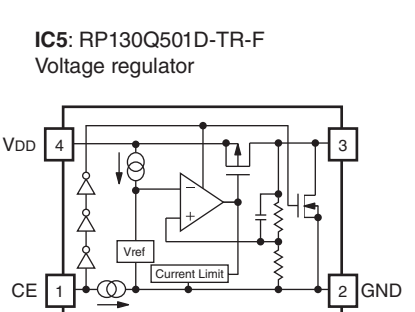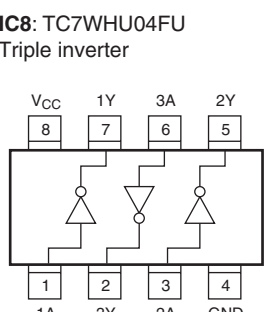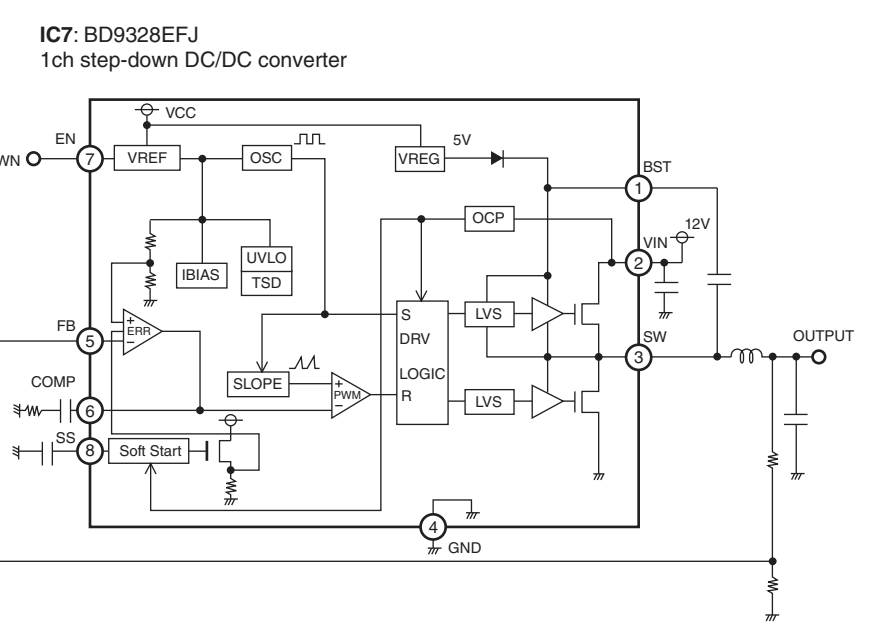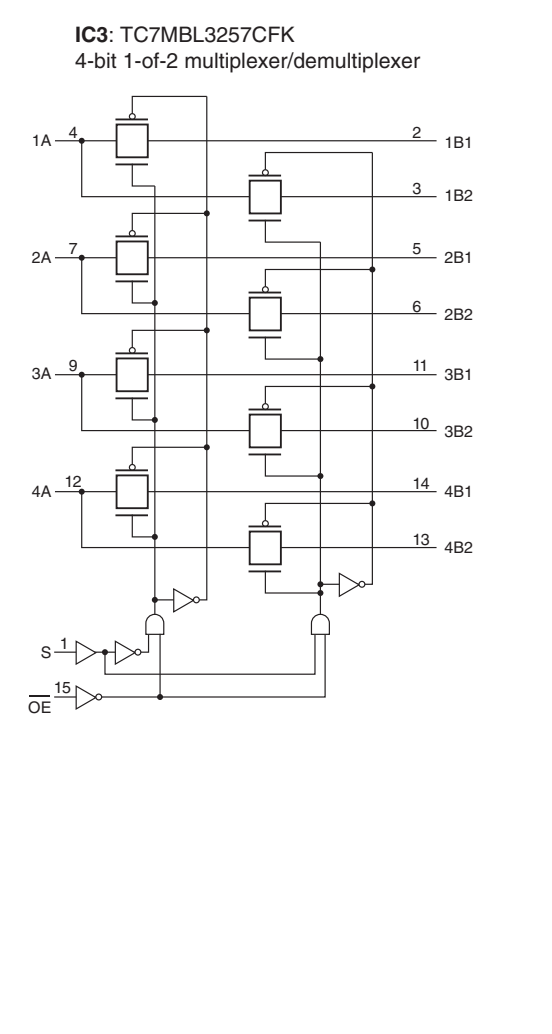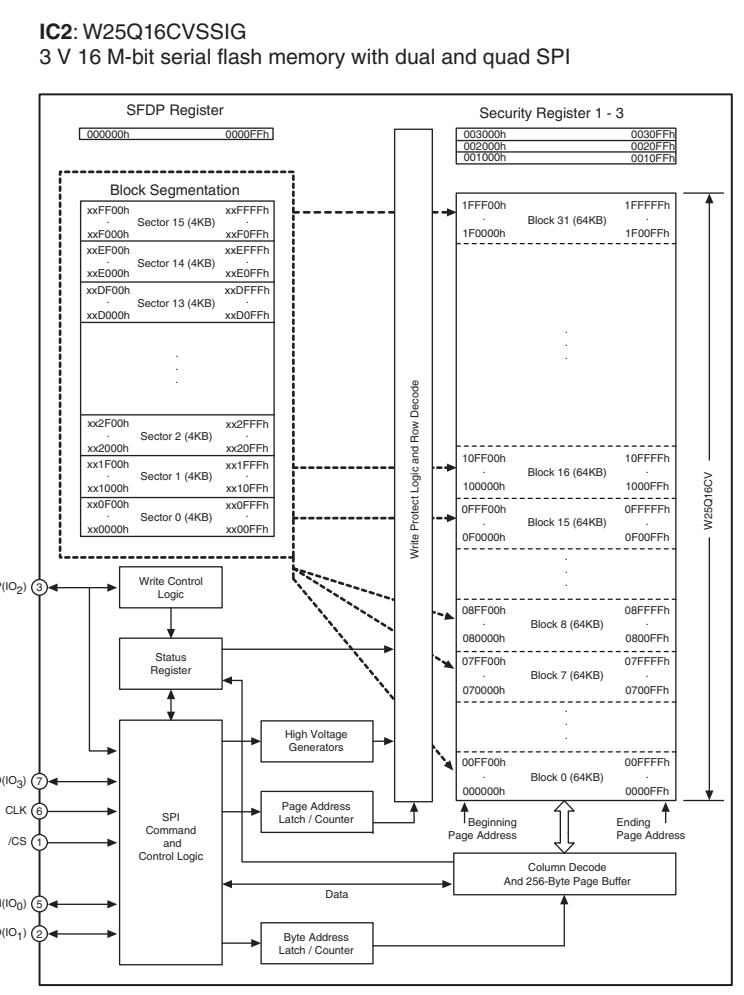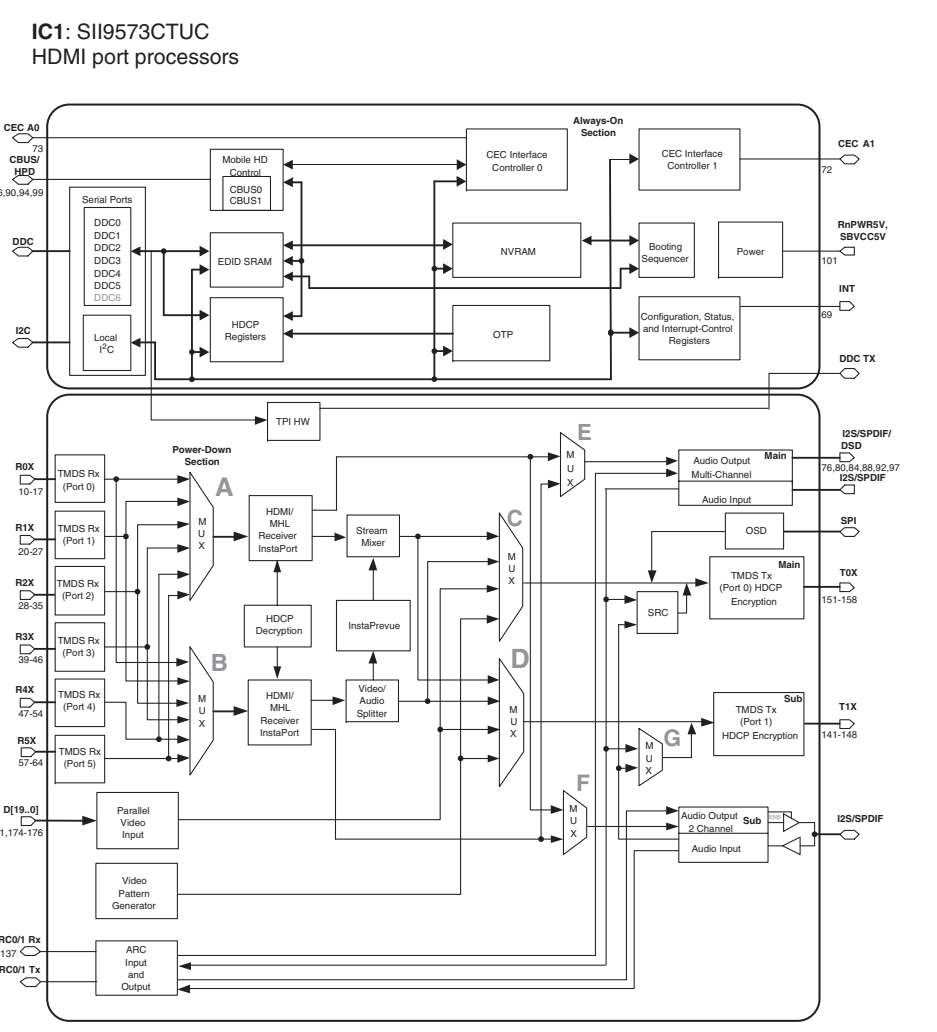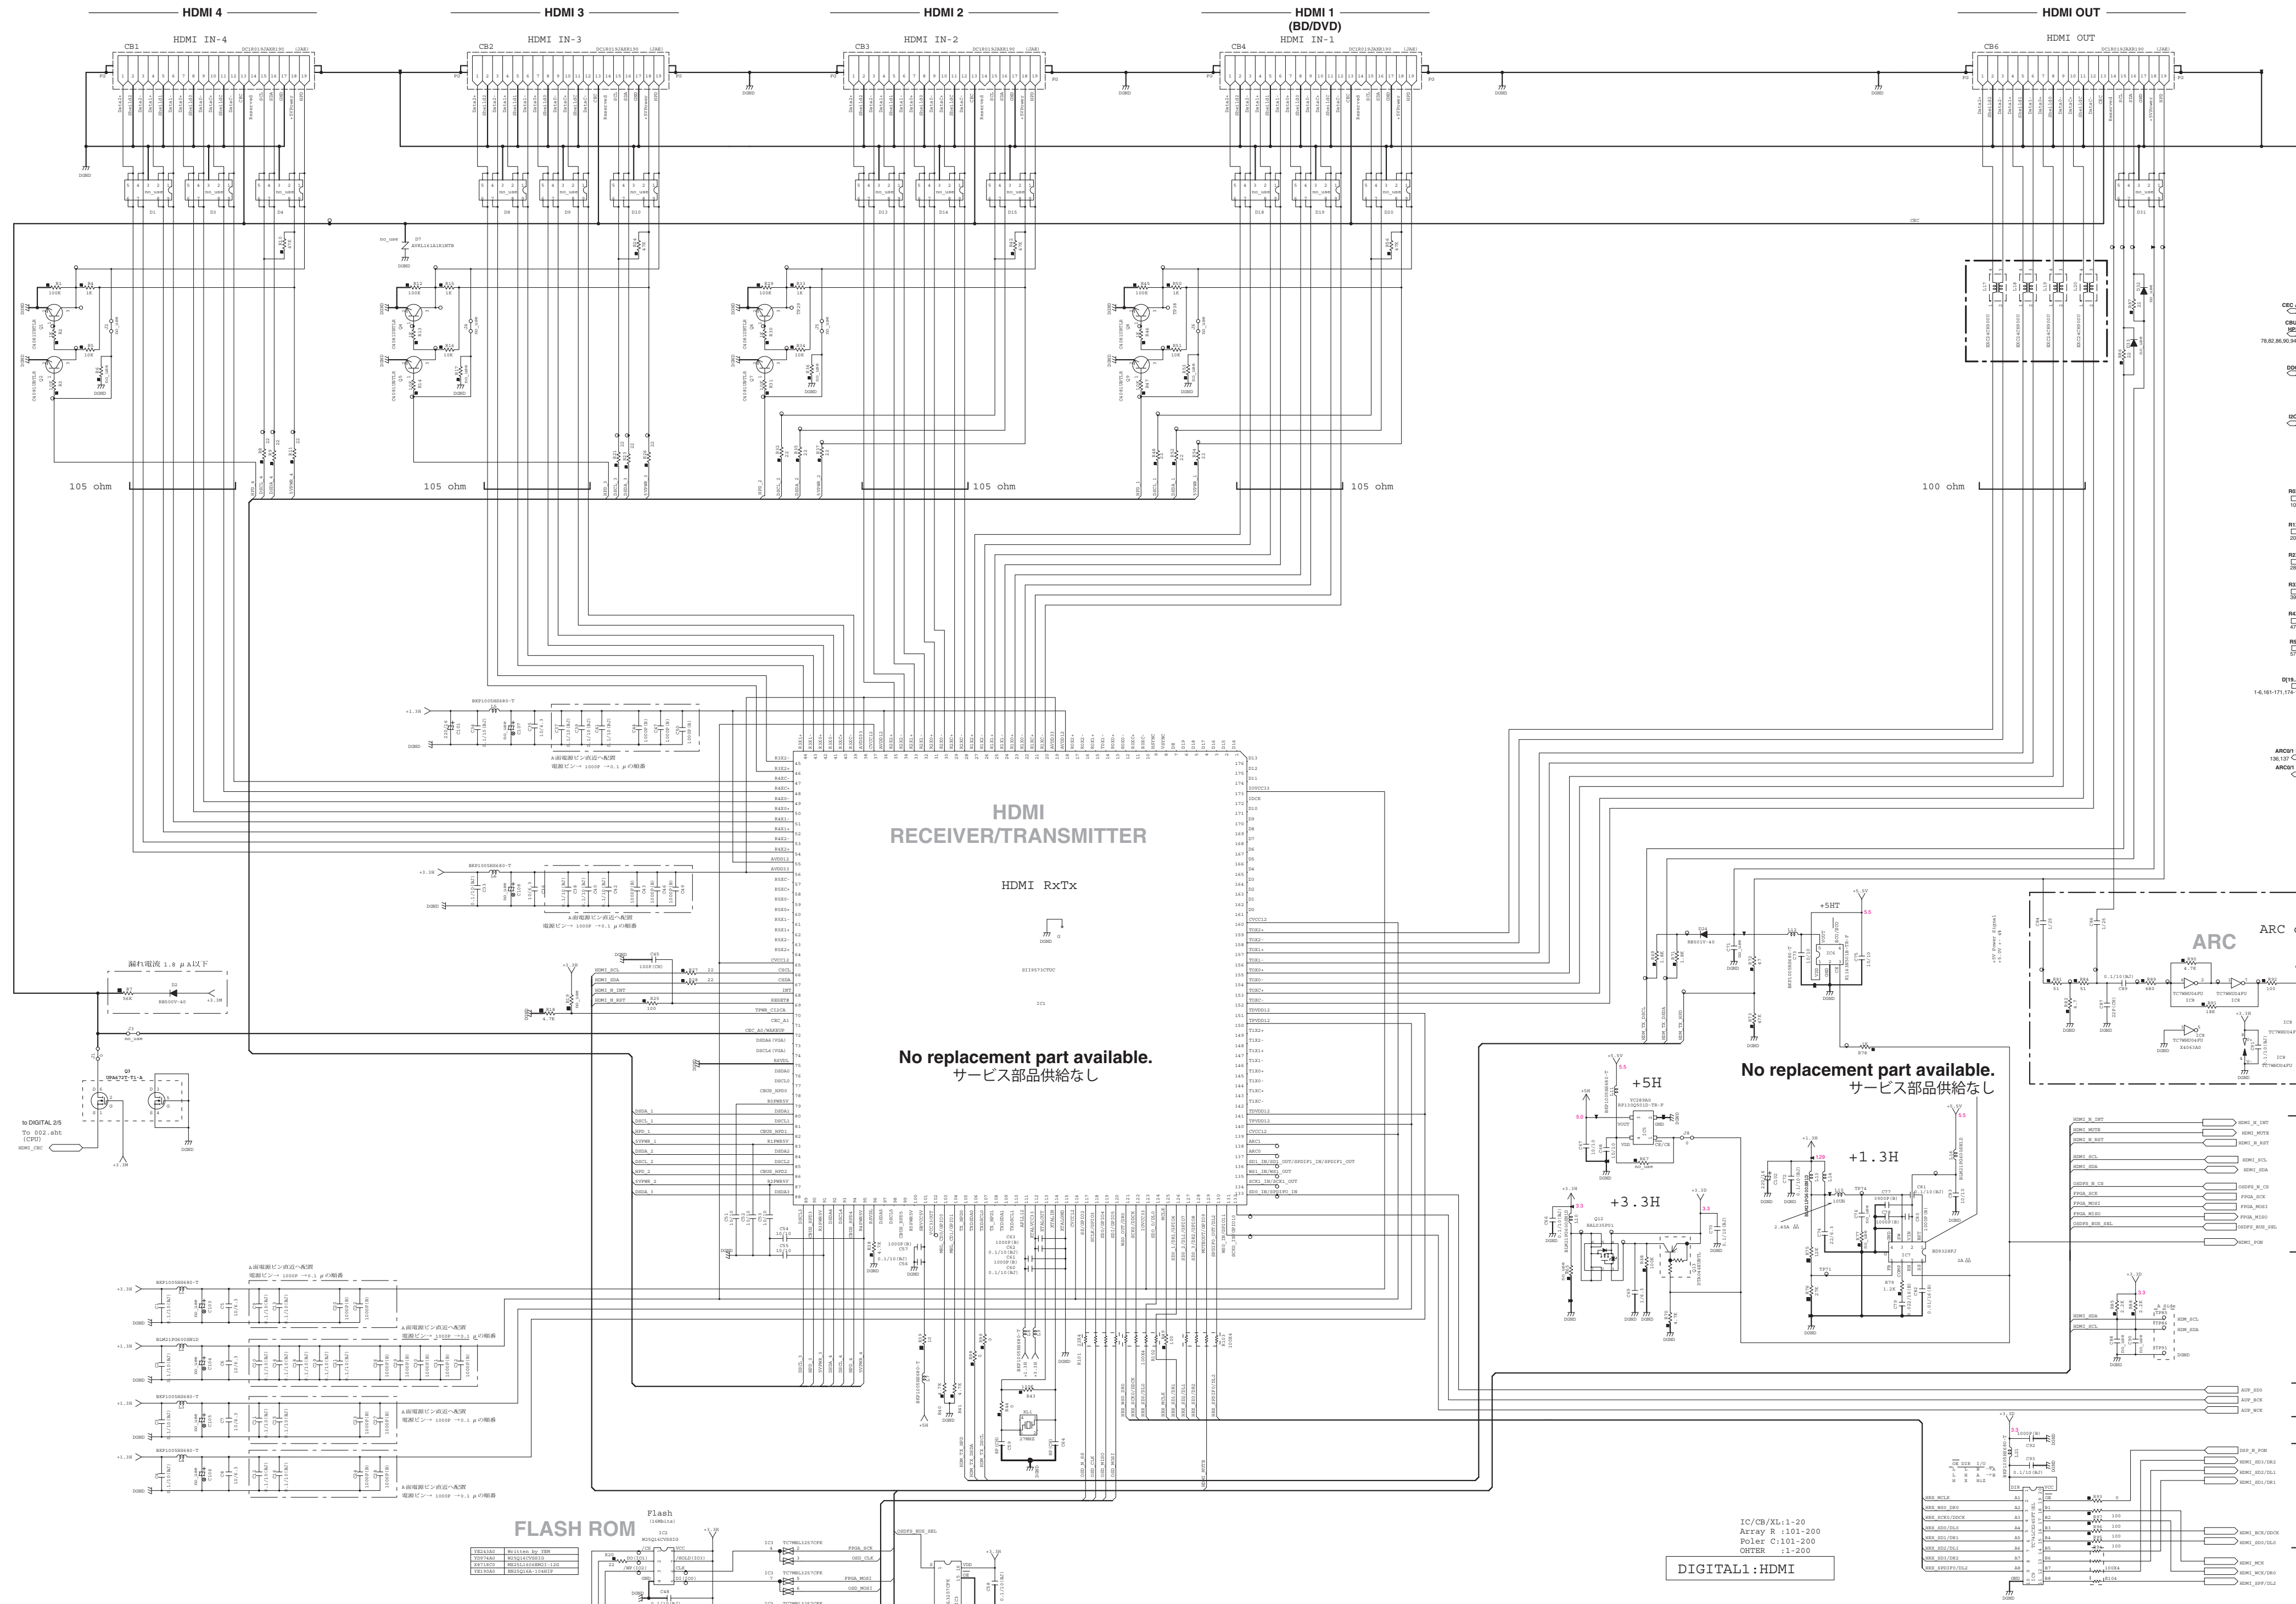

Pin No.	Symbol	Description
1	Vcc	Vcc
2	GND	Ground Pin
3	Vout	Output Pin
4	Vin	Input Pin

Pin No.	Symbol	Description
1	Vcc	Vcc
2	GND	Ground Pin
3	CE	Chip Enable Pin (V _{CC} Active)
4	EC	EC
5	Vout	Output Pin

CAPACITOR		PARTS NAME
NO MARK	ELECTROLYTIC CAPACITOR	
NO MARK	CERAMIC CAPACITOR	
NO MARK	CERAMIC TUBULAR CAPACITOR	
NO MARK	POLYESTER FILM CAPACITOR	
NO MARK	POLYESTER FILM CAPACITOR	
NO MARK	MICA CAPACITOR	
NO MARK	POLYPROPYLENE FILM CAPACITOR	
NO MARK	SEMICONDUCTIVE CERAMIC CAPACITOR	
NO MARK	POLYPROPYLENE METAL FILM CAPACITOR	

RESISTOR		PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)	
NO MARK	CARBON FILM RESISTOR (P=10)	
NO MARK	METAL OXIDE FILM RESISTOR	
NO MARK	METAL FILM RESISTOR	
NO MARK	METAL PLATE RESISTOR	
NO MARK	FIRE PROOF CARBON FILM RESISTOR	
NO MARK	CEMENT MOLDED RESISTOR	
NO MARK	RESISTOR VARIABLE RESISTOR	
NO MARK	CHIP RESISTOR	


NOTICE (model)

(J) JAPAN
(U) U.S.A.
(C) CANADA
(R) GENERAL
(T) CHINA
(K) KOREA
(A) AUSTRALIA
(B) BRITISH
(G) EUROPE
(S) SINGAPORE
(E) SOUTH EUROPE
(V) TAIWAN
(F) RUSSIAN
(L) LATIN AMERICA
(B) BRAZIL
(H) THAI

★ All voltages are measured with a 10MQV DC electronic voltmeter.
★ Components having special characteristics are marked Δ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

●電圧は、内部抵抗 10MΩの電圧計で測定したものです。
●△印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
●本回路図は標準回路図です。改良のため予告なく変更することがあります。


DIGITAL 2/5

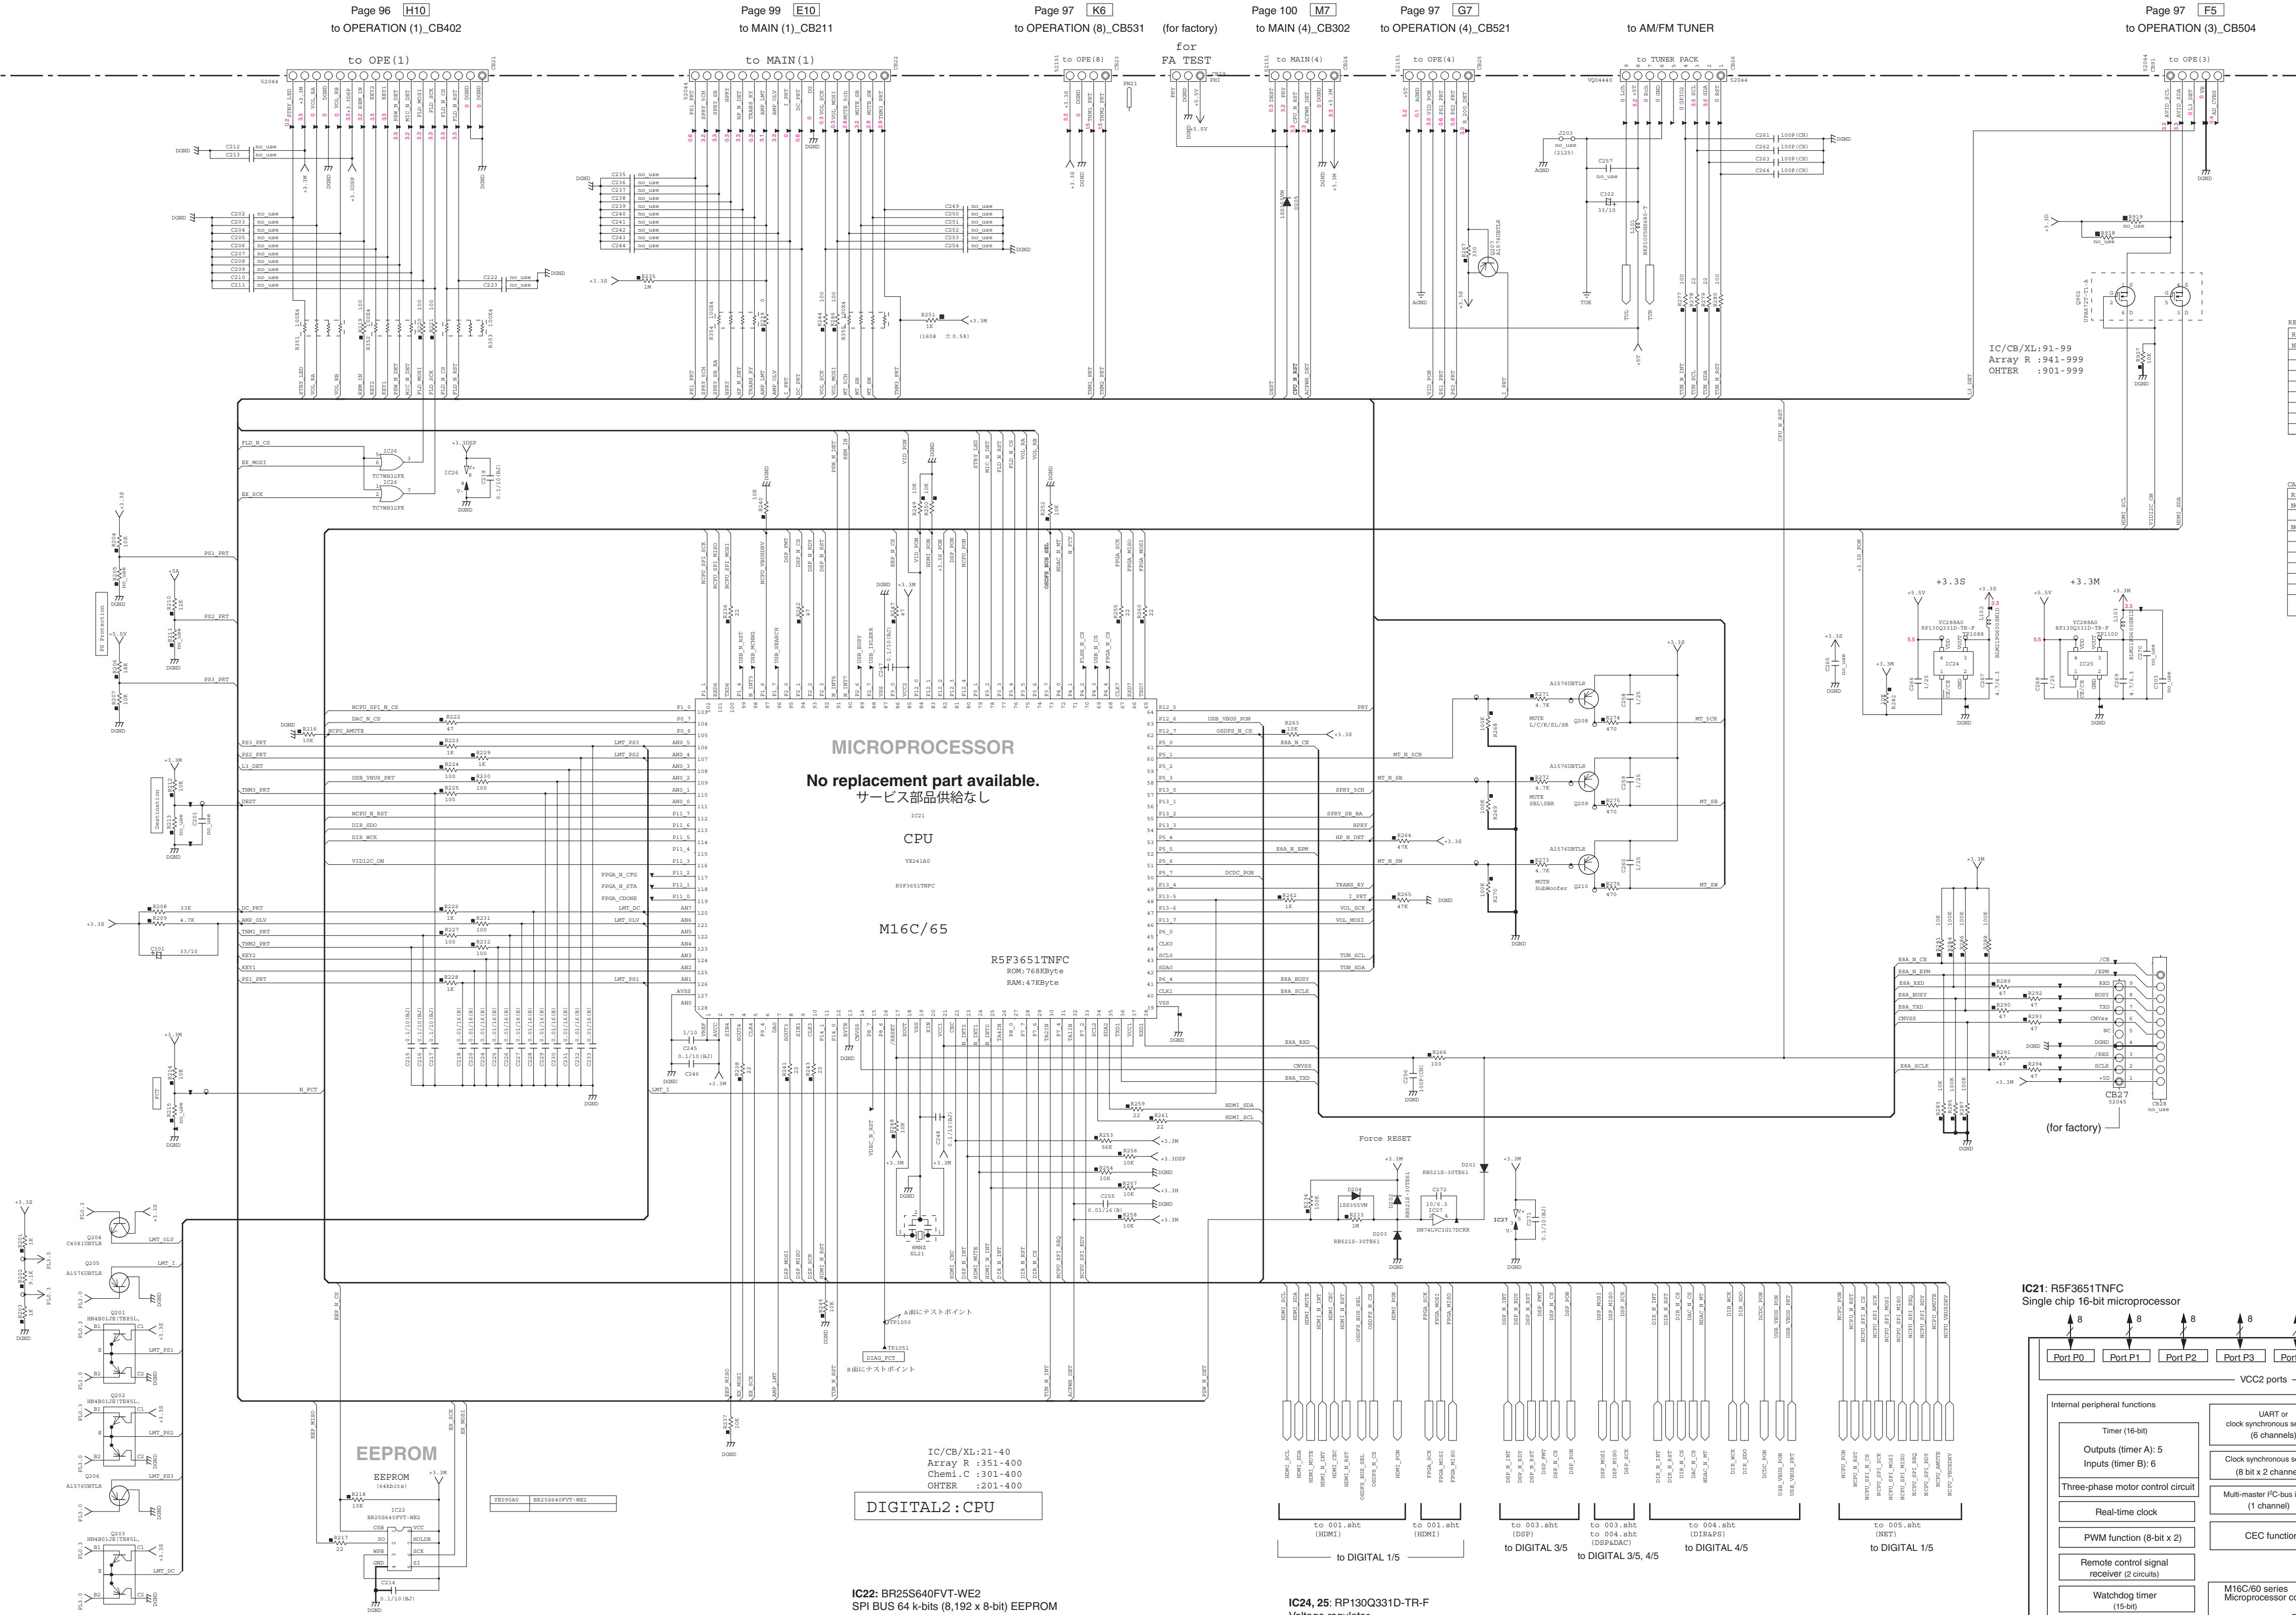


★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked Δ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● 電圧は、内部抵抗 10MΩ の電圧計で測定したものです。
● Δ印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがあります。


DIGITAL 3/5

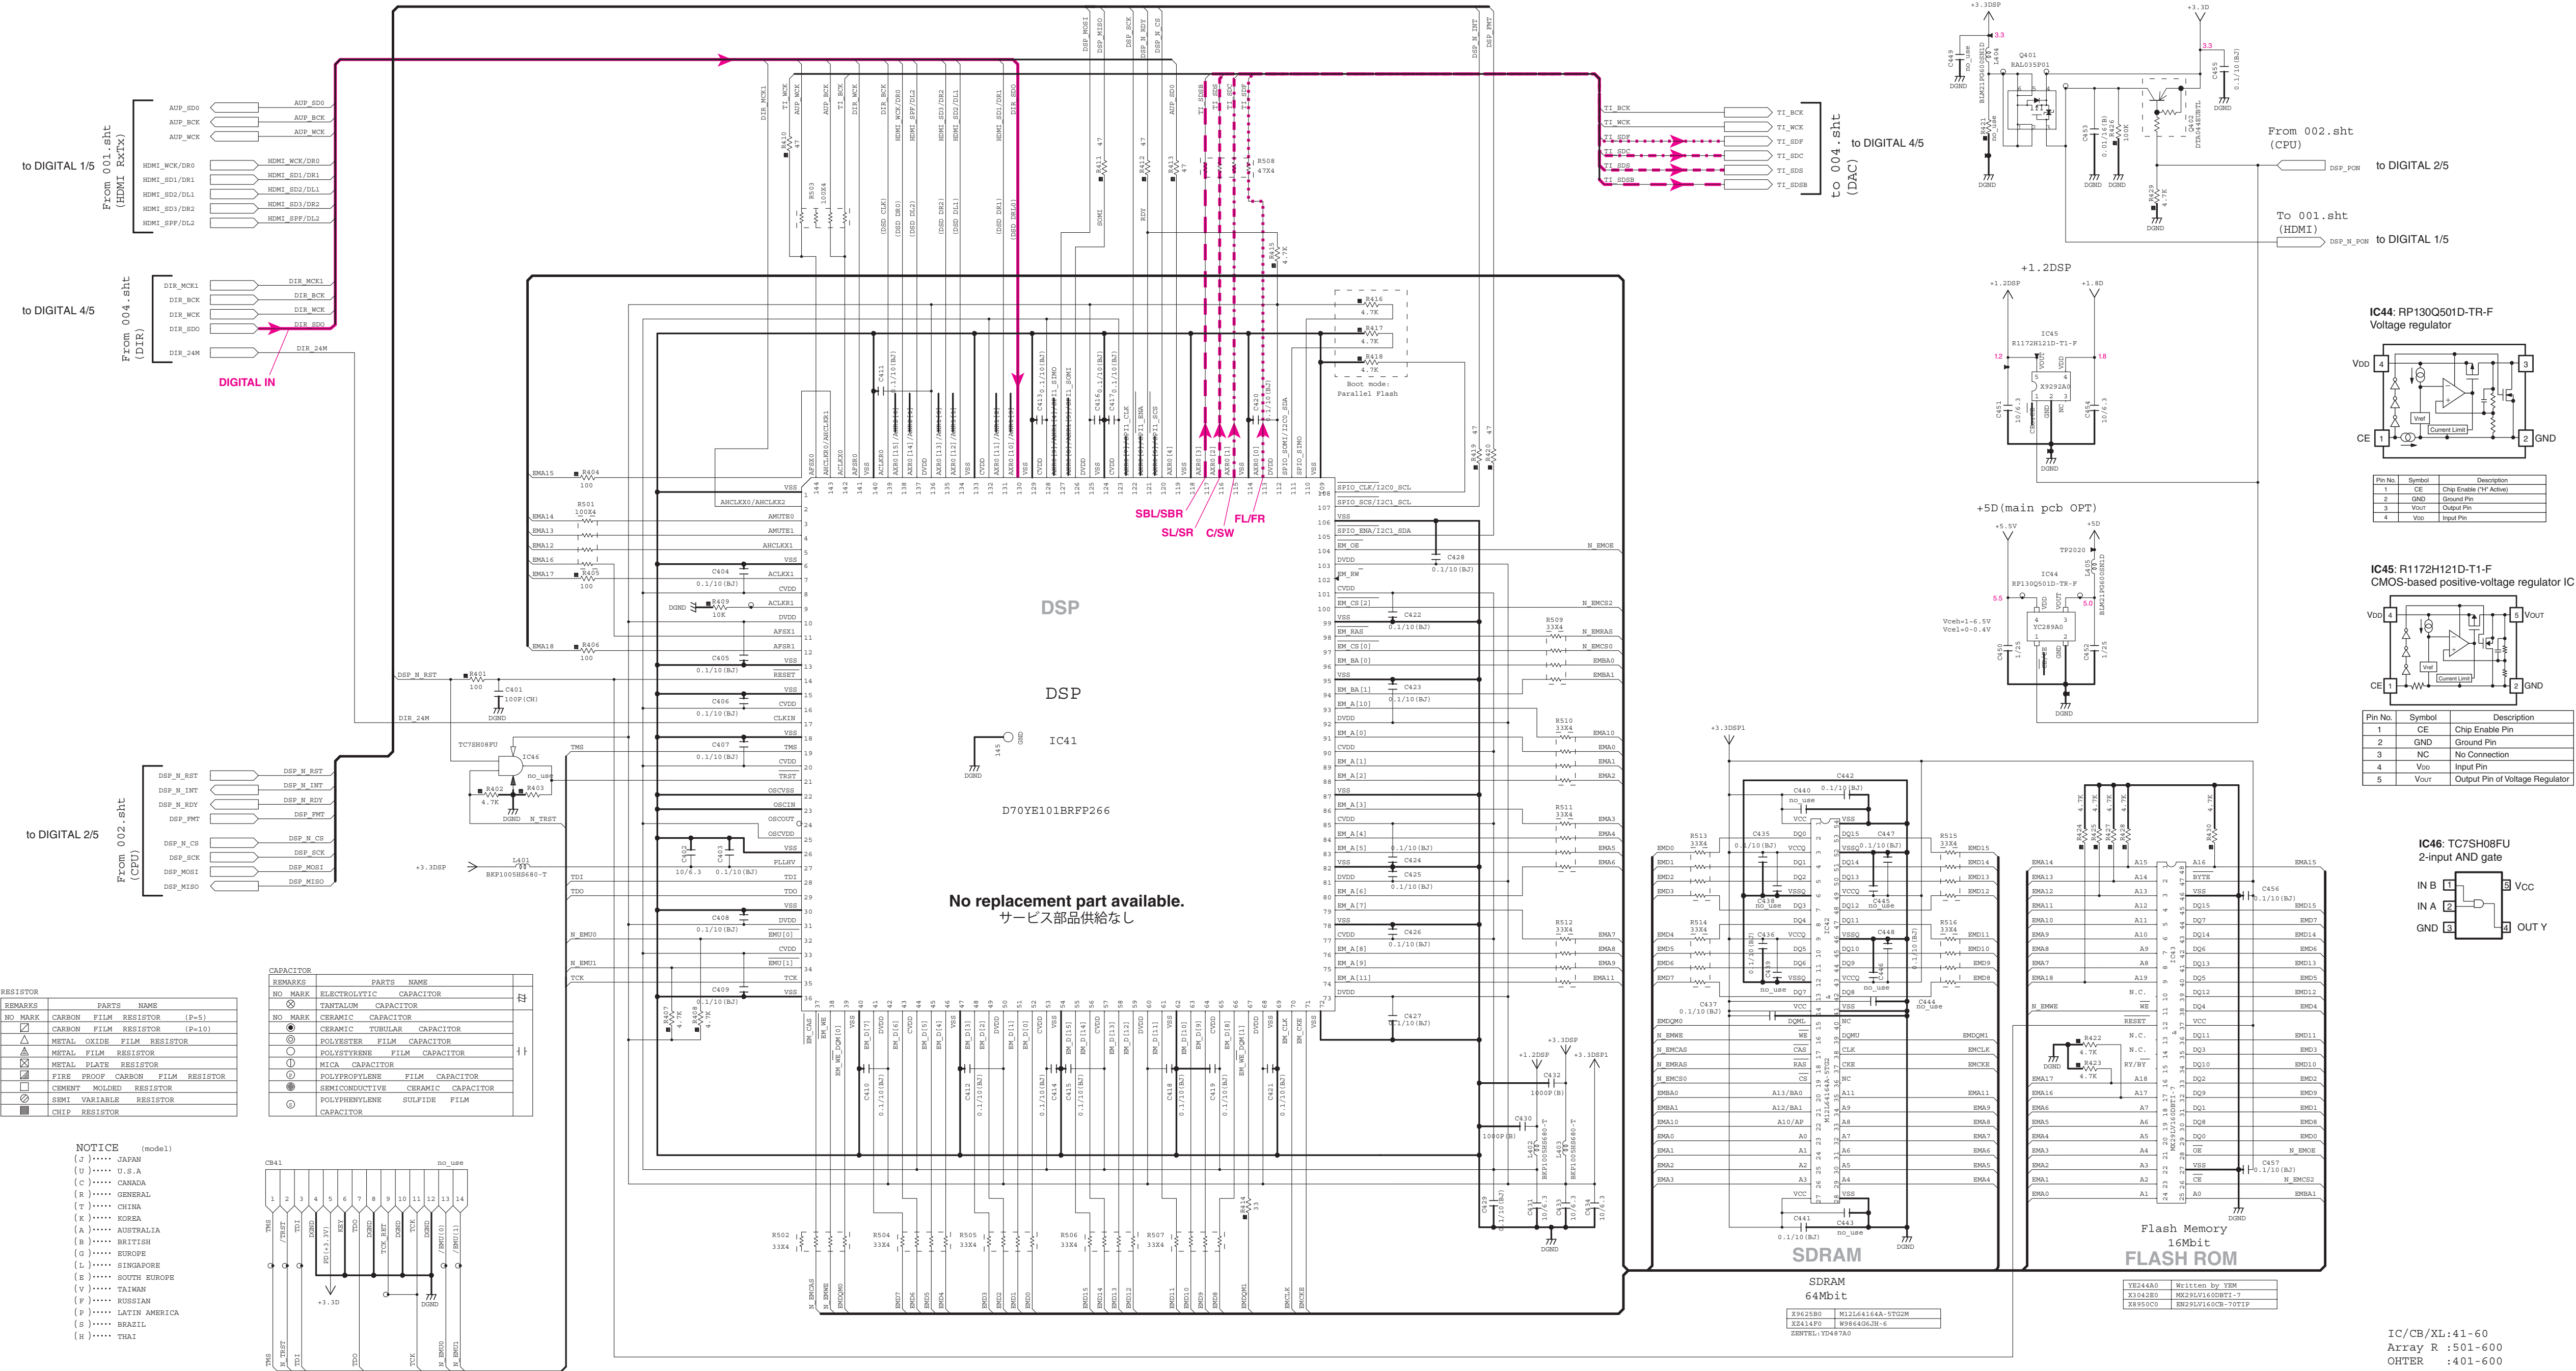


IC41: D70YE101BRFP266
Floating-point digital signal processors

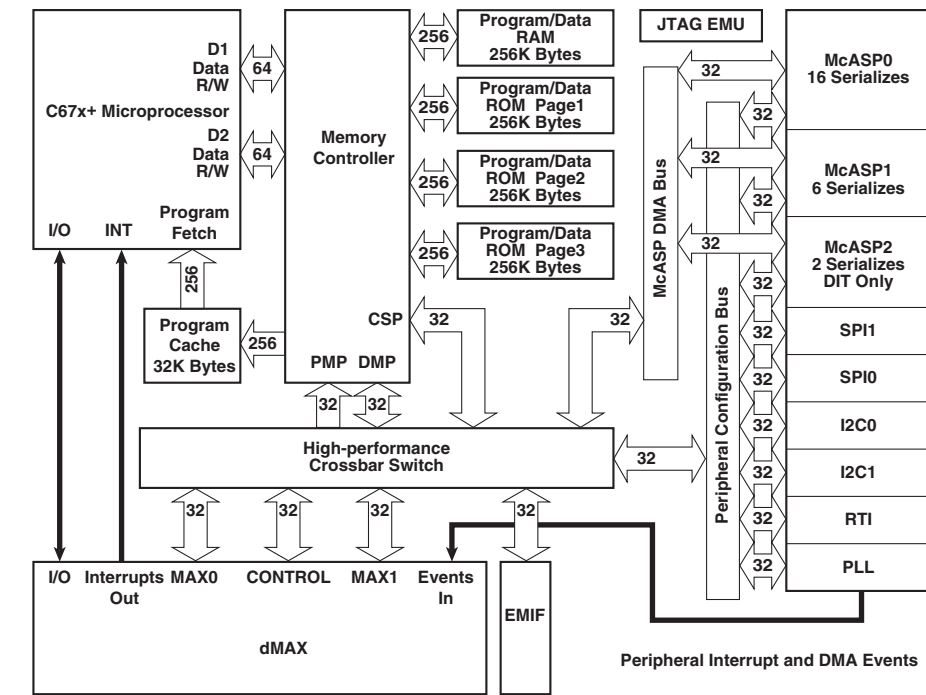

IC42: M12L64164A-5TG
1M x 16-bit x 4 banks synchronous DRAM

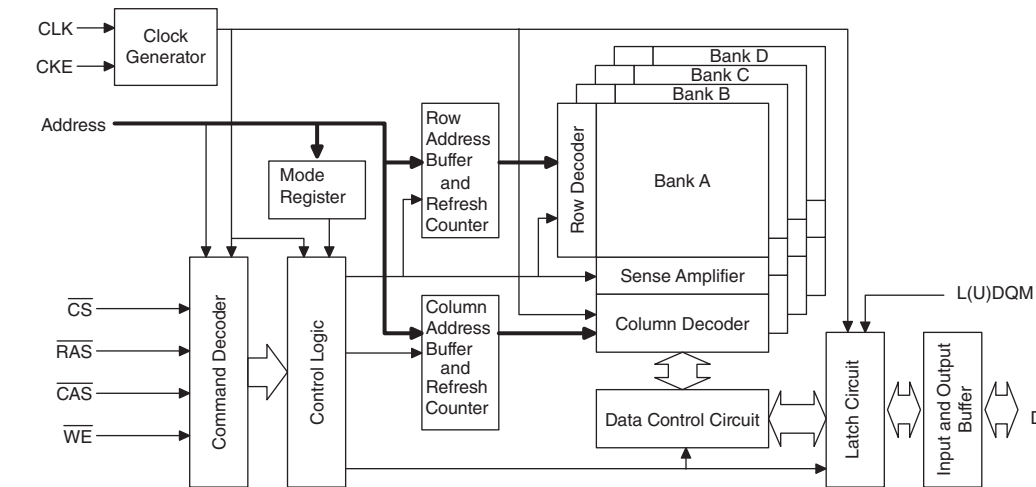

IC43: MX29LV160DBT1-70G
16 M-bit 3 V supply flash memory

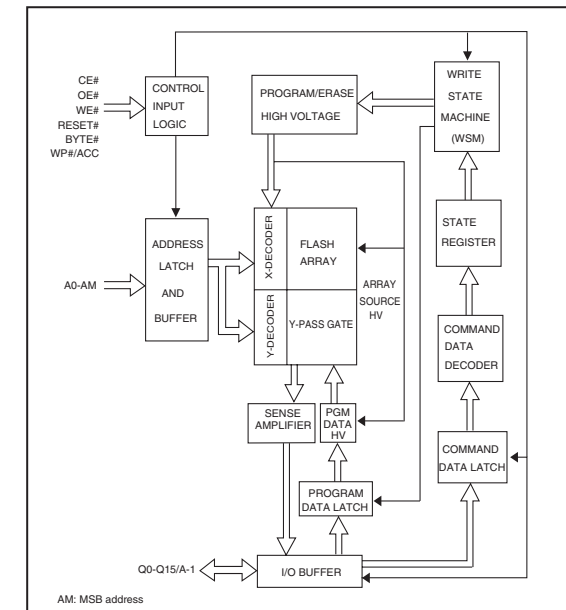

- All voltages are measured with a 10MΩ/V DC electronic voltmeter.
- Components having special characteristics are marked Δ, and must be replaced with parts having specifications equal to those originally installed.
- Schematic diagram is subject to change without notice.
- 電圧は、内部抵抗 10MΩ の電圧計で測定したものです。
- Δ印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
- 本回路図は標準回路図です。改良のため予告なく変更することがあります。

DIGITAL3 : DSP



DIGITAL 5/5


NETWORK MICROPROCESSOR

NETWORK MICROPROCESSOR





NOR FLASH 256Mbit

SDRAM 256Mbit


IC951: DM960A-AQE
Network microprocessor

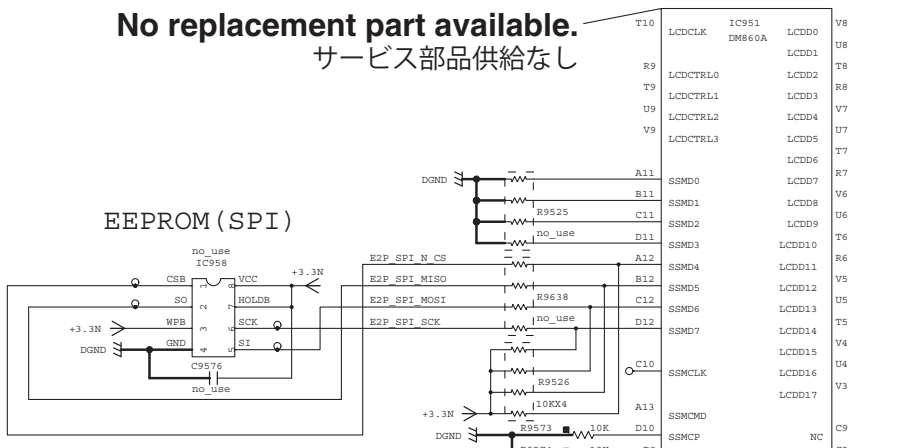


No replacement part available.
サービス部品供給なし

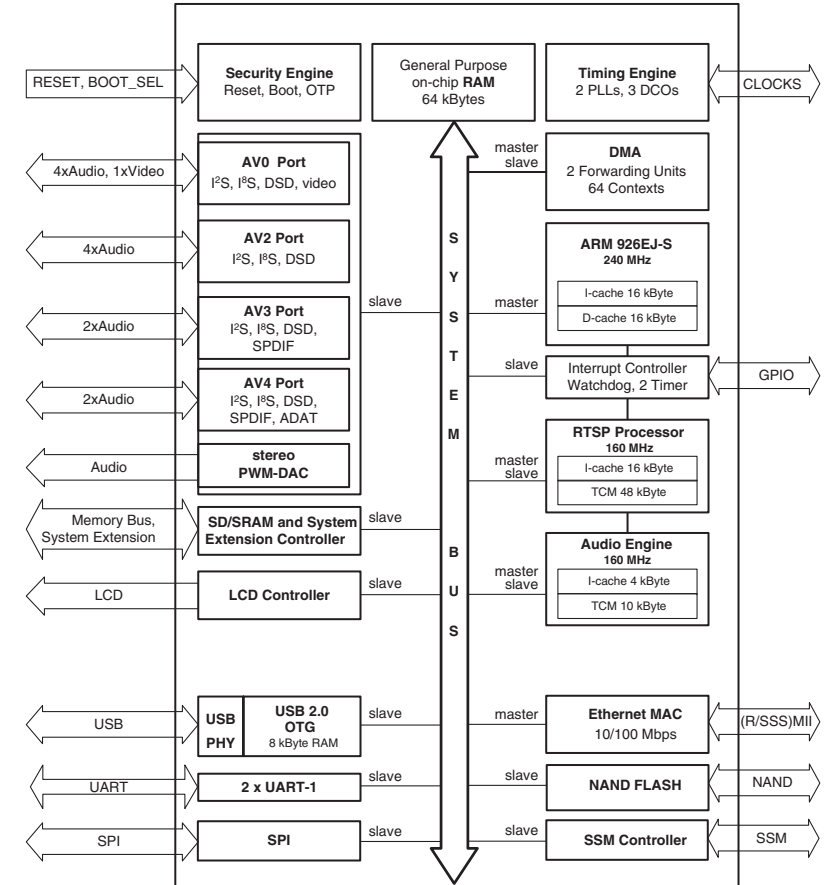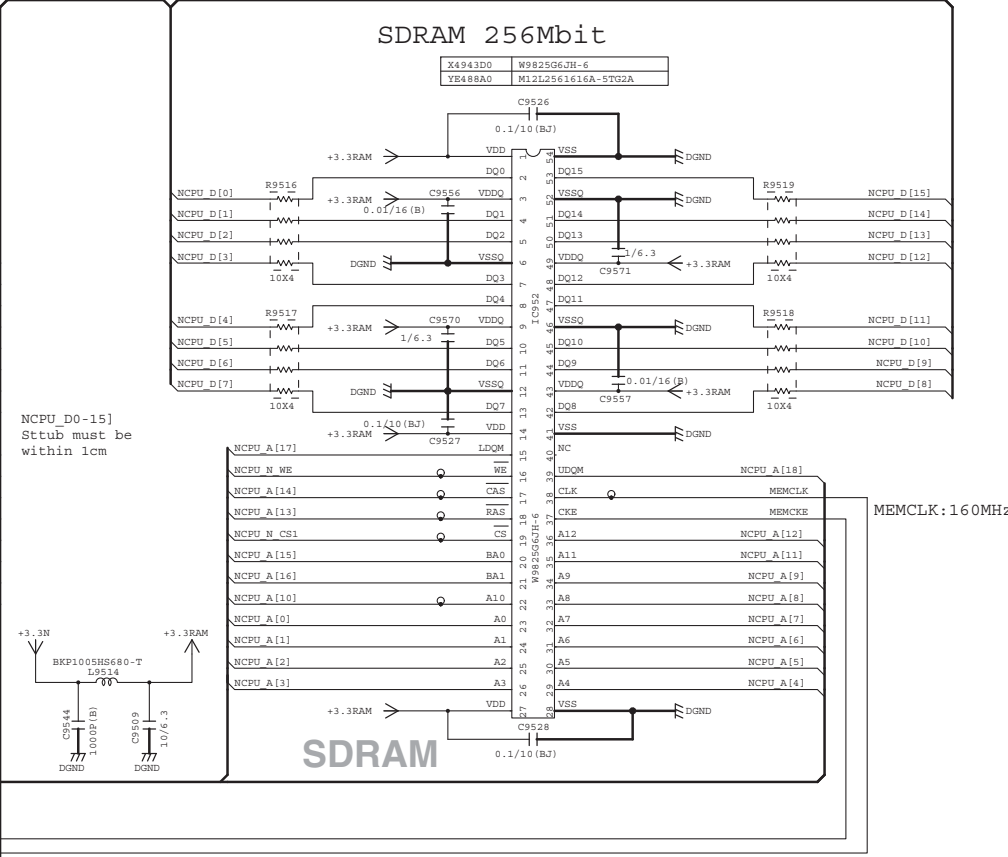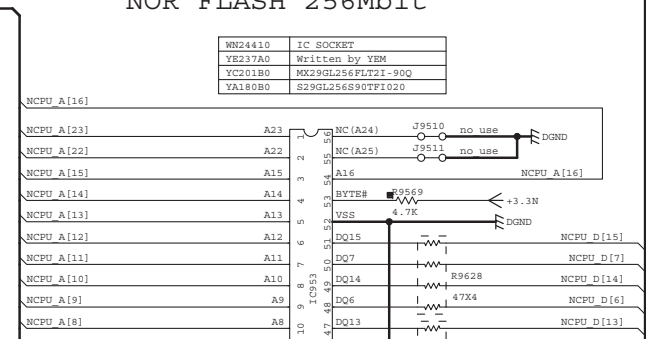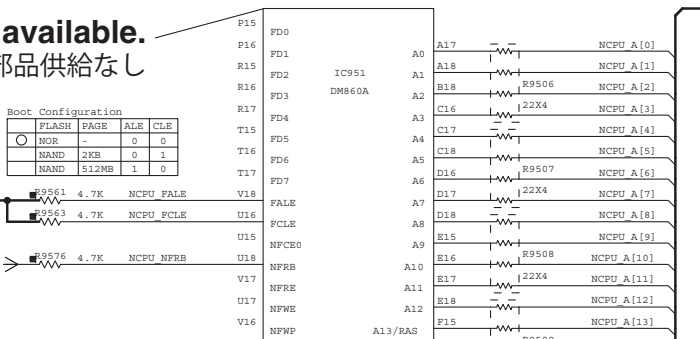

NETWORK MICROPROCESSOR

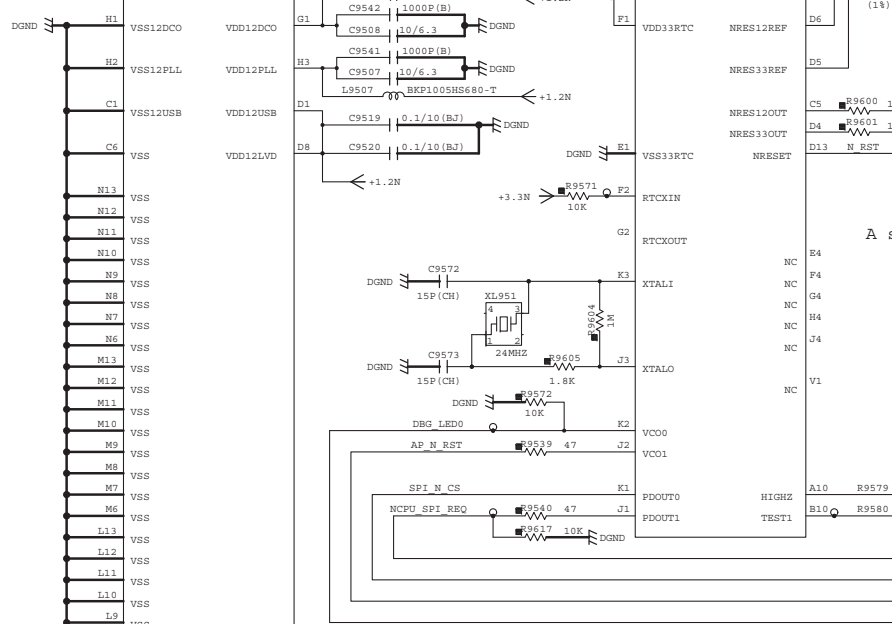

No replacement part available.
サービス部品供給なし

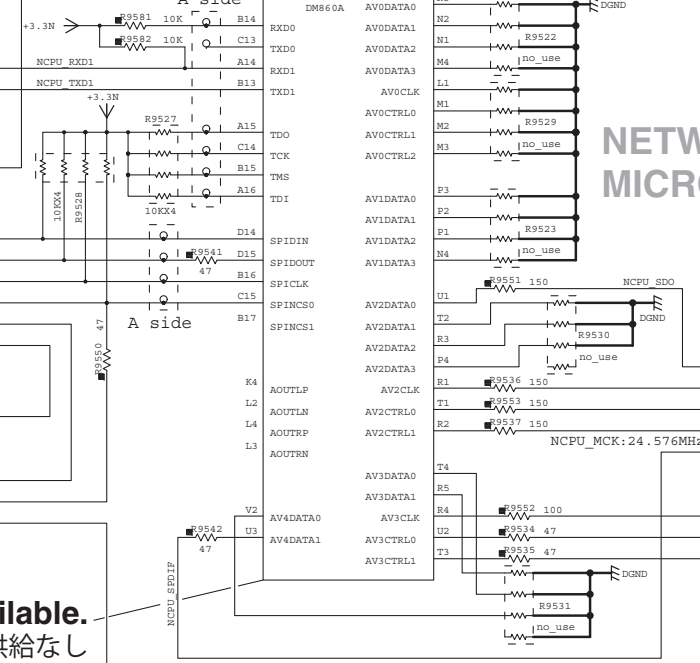


NETWORK MICROPROCESSOR

Apple AUTHENTICATION IC
Apple authentication IC

No replacement part available.
サービス部品供給なし

IC952: W9825G6JH-6
4 M x 4 banks x 16 bits SDRAM

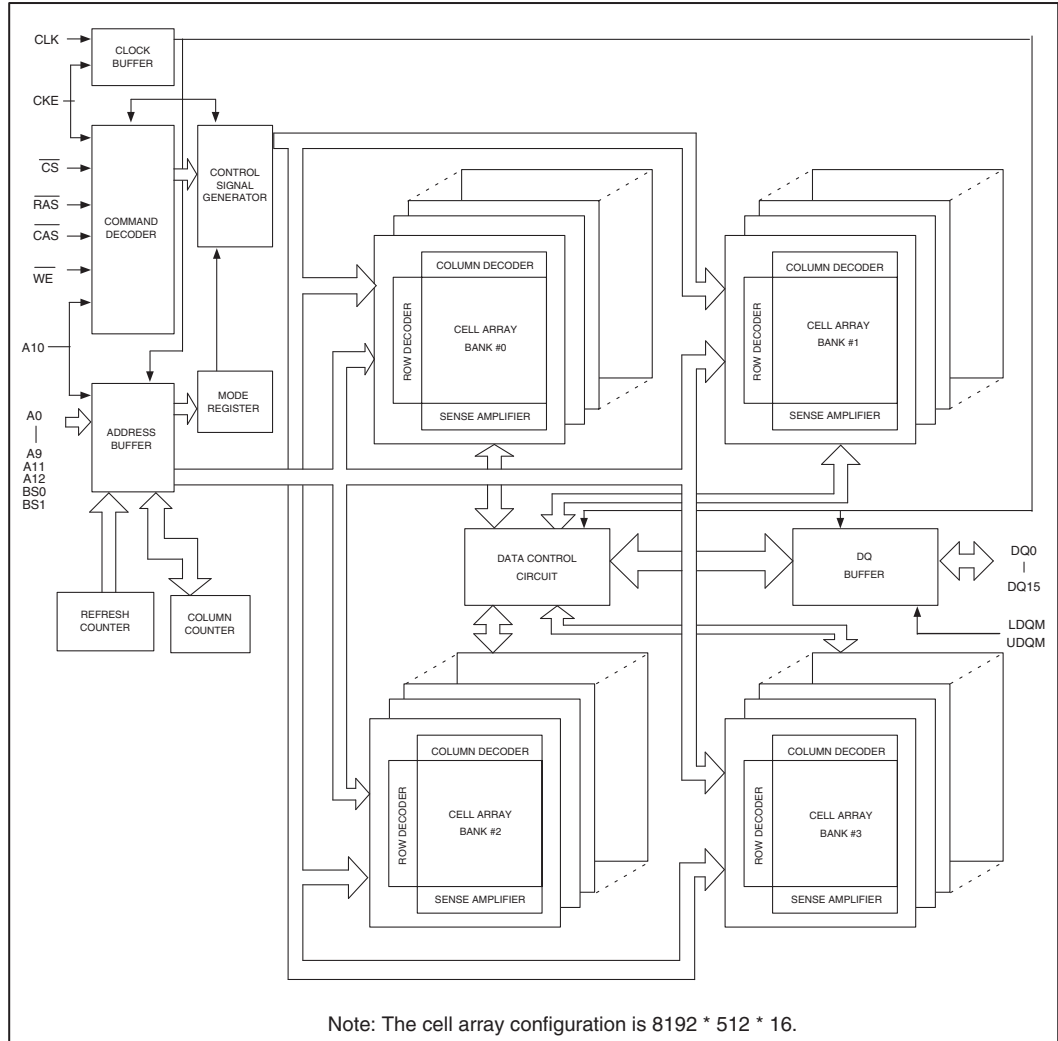

Ethernet NETWORK

No replacement part available.
サービス部品供給なし

NETWORK MICROPROCESSOR

ETHERNET PHY CEIVER

No replacement part available.
サービス部品供給なし


No replacement part available.
サービス部品供給なし

IC/CB/XL:951-999
OTHER :9501-9999


RESISTOR	PARTS	NAME
NO MARK	CARBON FILM	RESISTOR (P-5)
NO MARK	CARBON FILM	RESISTOR (P-10)
NO MARK	METAL OXIDE FILM	RESISTOR
NO MARK	METAL FILM	RESISTOR
NO MARK	METAL PLATE	RESISTOR
NO MARK	FINE PROOF CARBON FILM	RESISTOR
NO MARK	CERMET WOLFRUM	RESISTOR
NO MARK	SEMICONDUCTIVE CERAMIC	RESISTOR
NO MARK	CHIP	RESISTOR

CAPACITOR	PARTS	NAME
NO MARK	ELECTROLYTIC	CAPACITOR
NO MARK	CERAMIC	CAPACITOR
NO MARK	POLYESTER FILM	CAPACITOR
NO MARK	POLYESTER TUBULAR	CAPACITOR
NO MARK	MICA	CAPACITOR
NO MARK	POLYPROPYLENE FILM	CAPACITOR
NO MARK	SPIN COATED CERAMIC	CAPACITOR
NO MARK	POLYPROPYLENE SULFIDE FILM	CAPACITOR


NOTICE (model)
(J) JAPAN
(U) U.S.A
(C) CANADA
(B) GERMANY
(T) CHINA
(K) KOREA
(A) AUSTRALIA
(S) SWITZERLAND
(G) GREECE
(L) LUXEMBOURG
(I) ITALY
(F) FRANCE
(P) PORTUGAL
(E) SPAIN
(N) NETHERLANDS
(R) RUSSIA
(V) VIETNAM
(T) THAILAND

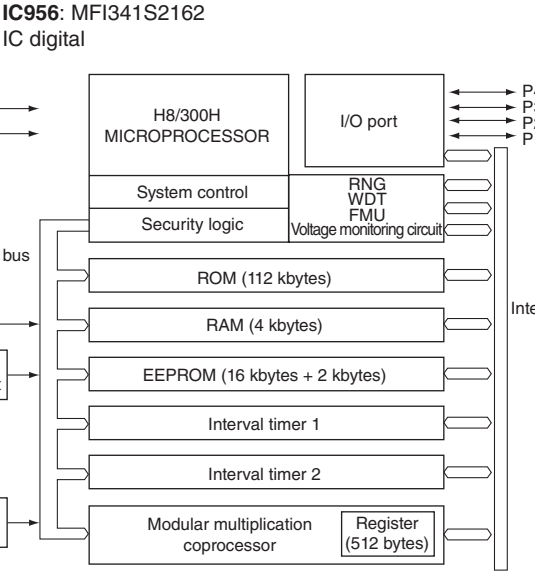

IC955: LAN8700C-AEZG-TR
BD decoder IC

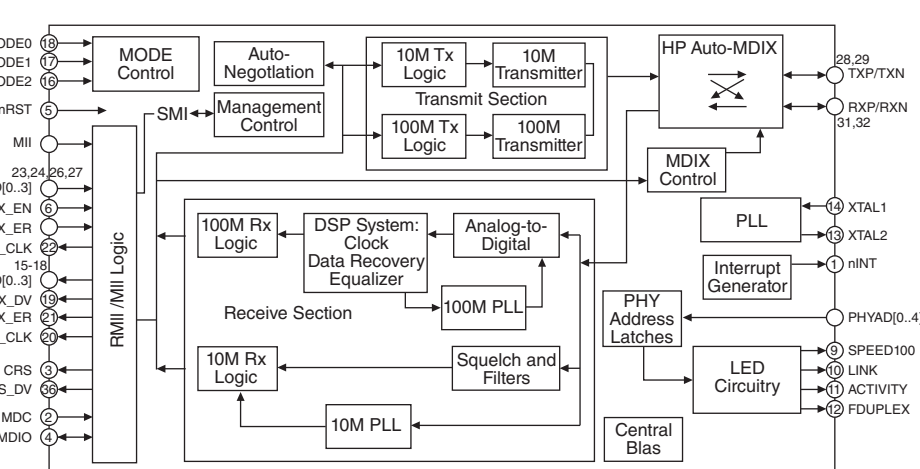

IC953: MX29GL256LT21-90Q
Signal voltage 3 V only flash memory



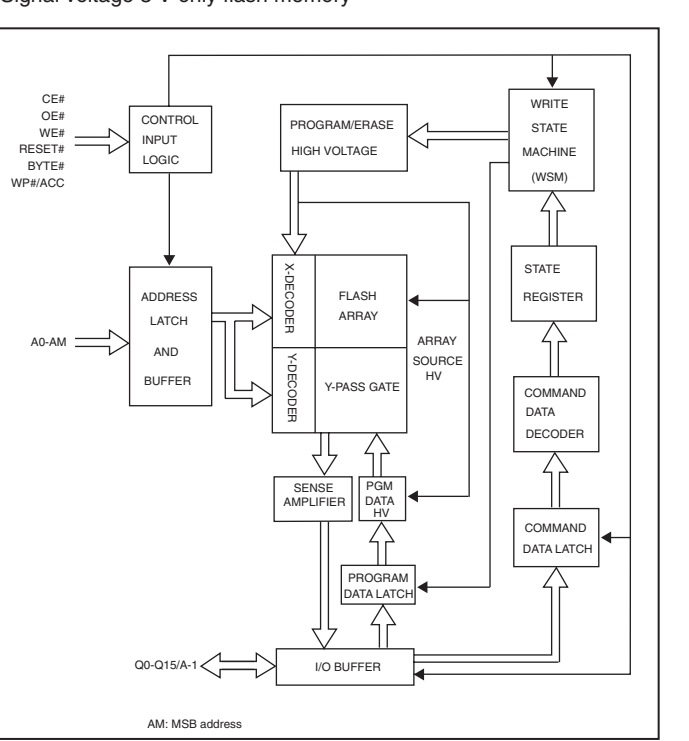


Page 96 L6
to OPERATION (1)_W4006

★ All voltages are measured with a 10MQV DC electronic voltmeter.
★ Components having special characteristics are marked A and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

●電圧は、内部抵抗 10MΩの電圧計で測定したものです。
●△印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
●本回路図は標準回路図です。改良のため予告なく変更することがあります。

OPERATION 1/2

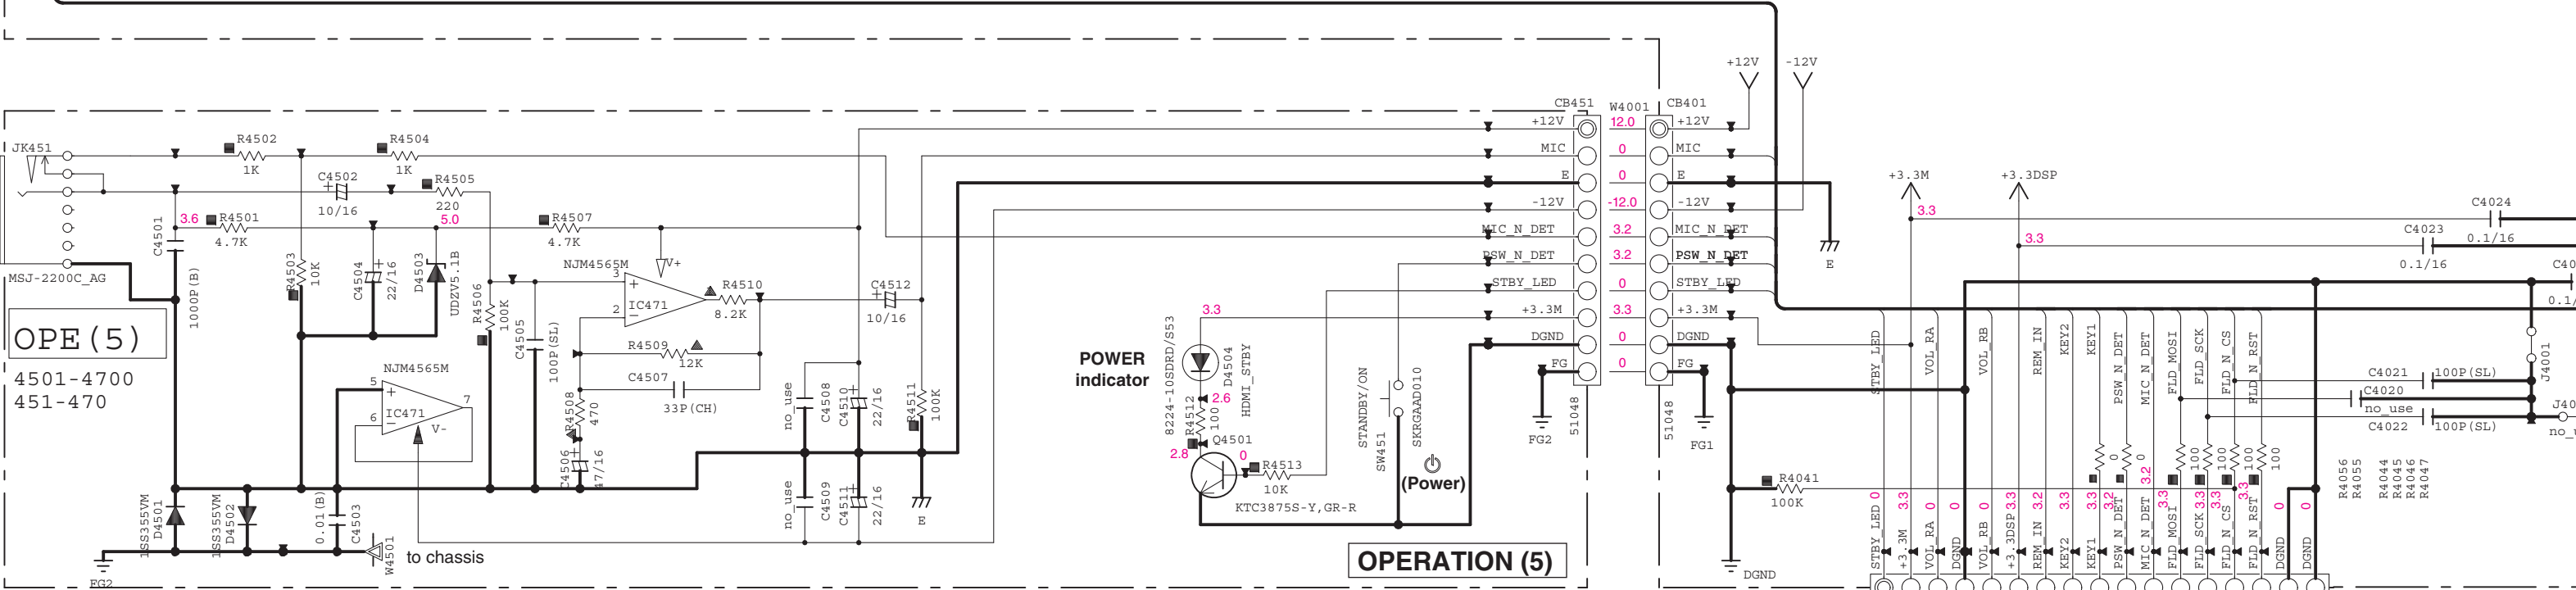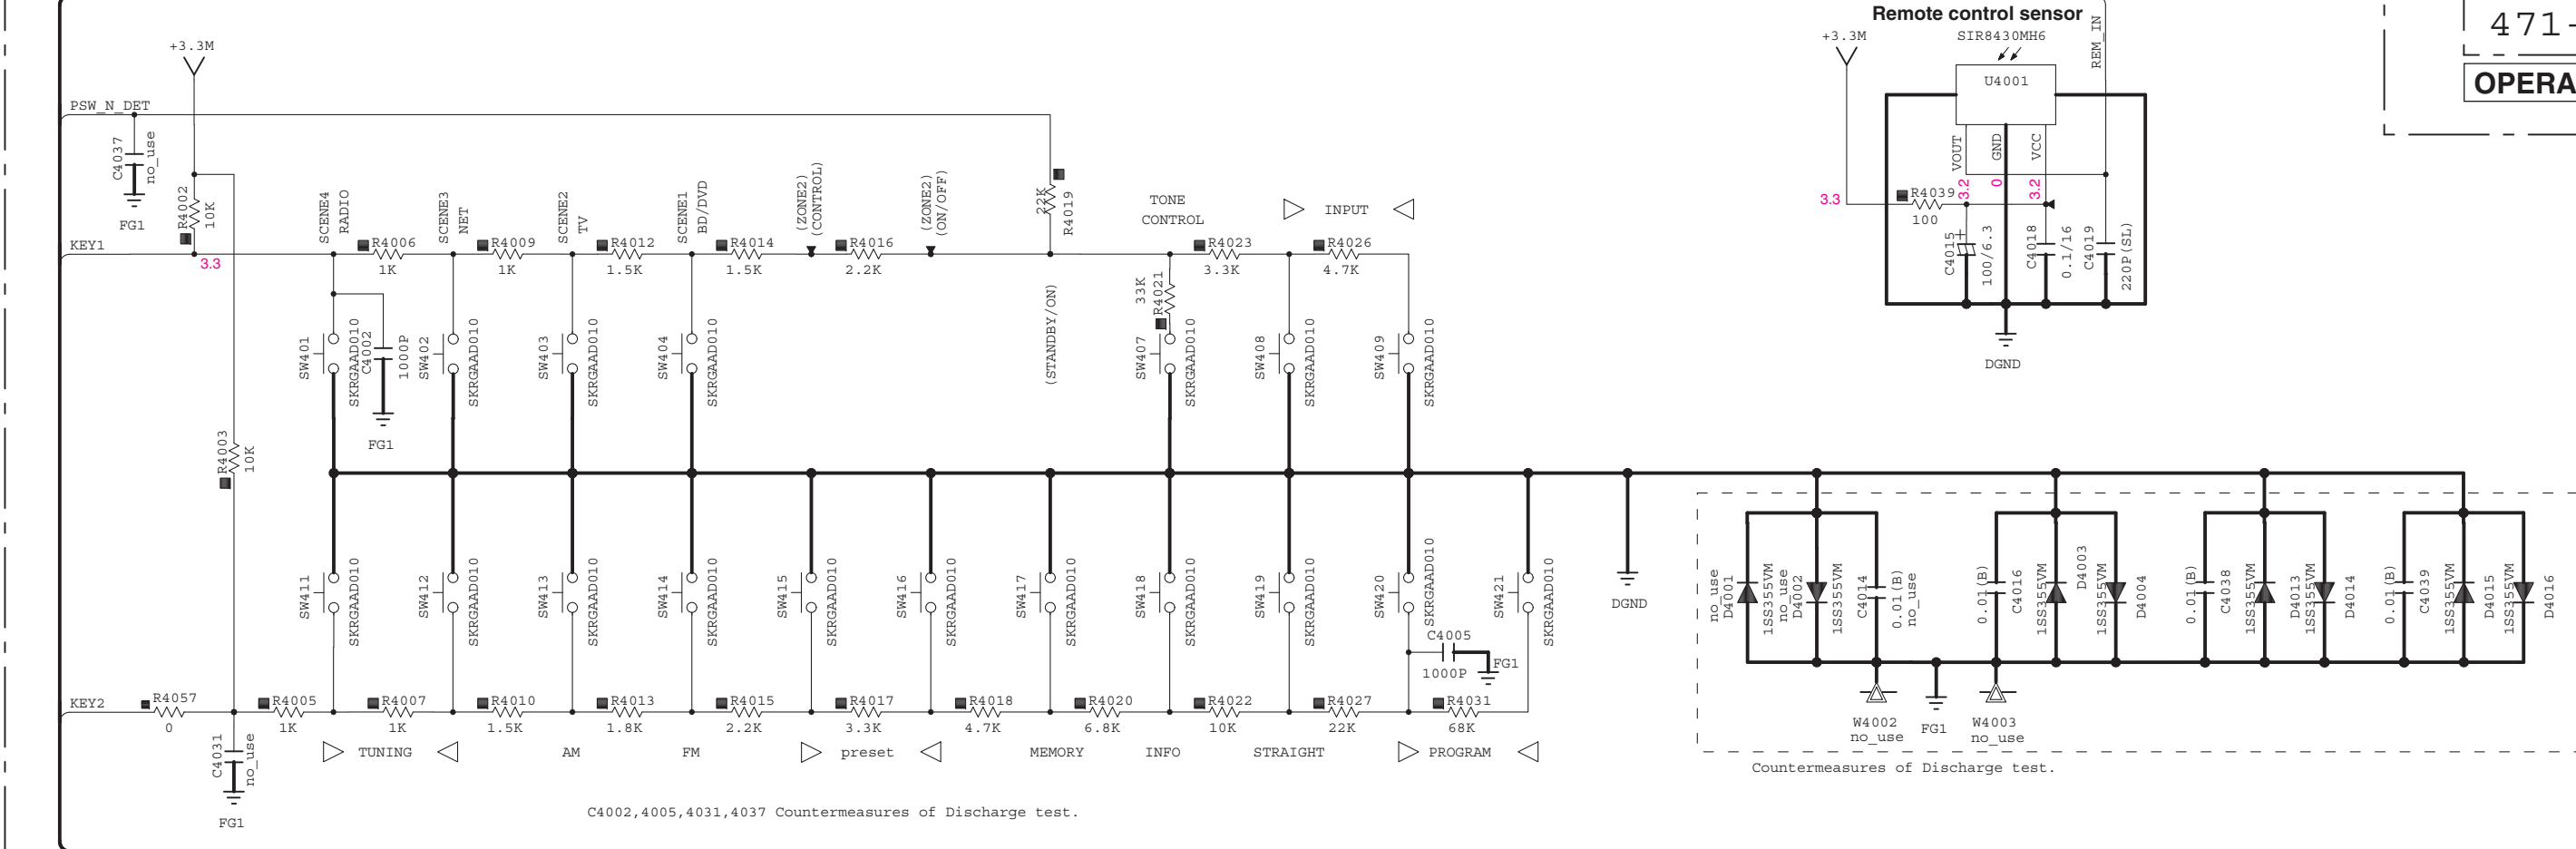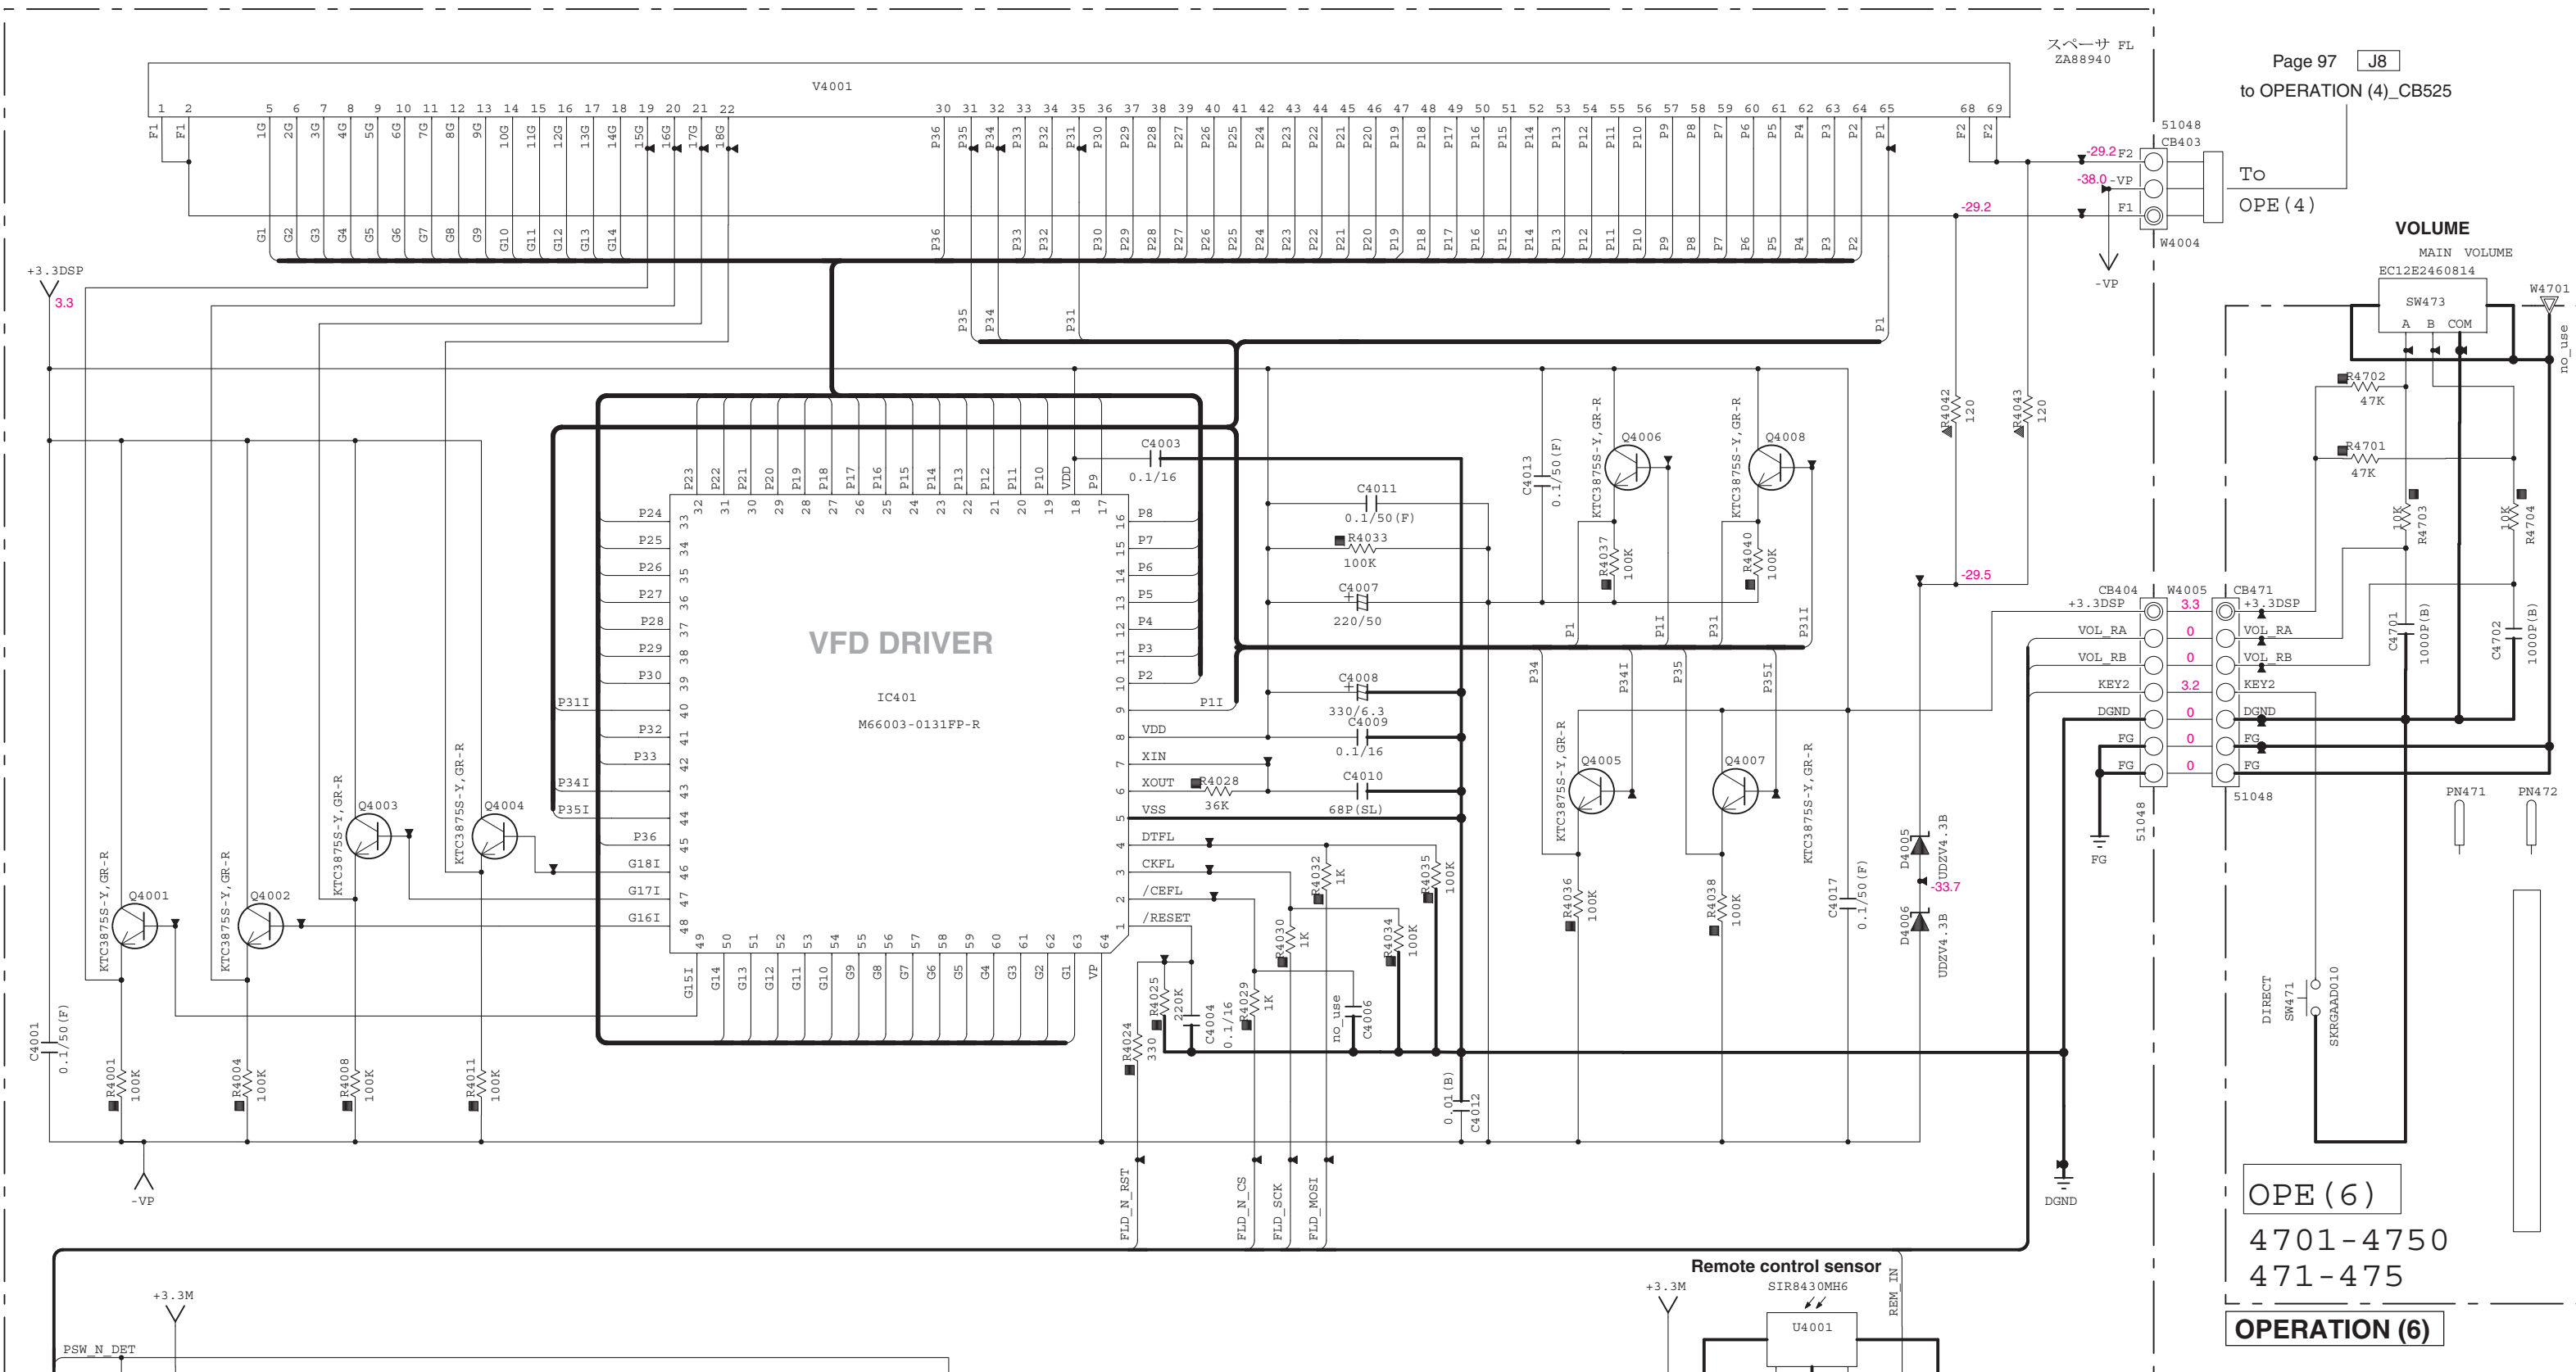

Key detection for A/D port
Key input (A/D) pull-up resistance: 10 k-ohms

	0 Ω	+1.0 kΩ	+1.0 kΩ	+1.5 kΩ	+1.5 kΩ	+2.2 kΩ	+3.3 kΩ	+4.7 kΩ	+13.2 kΩ	+22 kΩ	+33 kΩ
Detected voltage value at 125 pin	0 - 0.15 V	0.15 - 0.425 V	0.425 - 0.703 V	0.703 - 0.978 V	0.978 - 1.241 V	1.241 - 1.536 V	1.536 - 1.84 V	1.84 - 2.102 V	2.102 - 2.299 V	2.336 - 2.55 V	2.55 - 2.971 V
A/D value (3.3 V=255)	0 - 11	12 - 32	33 - 54	55 - 75	76 - 95	96 - 118	119 - 142	143 - 162	163 - 177	198 - 229	198 - 229
KEY1	RADIO (SCENE4)	CD (SCENE3)	TV (SCENE2)	BD/DVD (SCENE1)	-	INPUT >	INPUT <	-	⏻ (power)	⏻ (power)	⏻ (power)


	0 Ω	+1.0 kΩ	+1.0 kΩ	+1.5 kΩ	+1.8 kΩ	+2.2 kΩ	+3.3 kΩ	+4.7 kΩ	+6.8 kΩ	+10 kΩ	+22 kΩ	+68 kΩ
Detected voltage value at 124 pin	0 - 0.15 V	0.15 - 0.425 V	0.425 - 0.703 V	0.703 - 0.999 V	0.999 - 1.279 V	1.279 - 1.564 V	1.564 - 1.86 V	1.86 - 2.142 V	2.142 - 2.399 V	2.399 - 2.653 V	2.653 - 2.919 V	2.916 - 3.175 V
A/D value (3.3 V=255)	0 - 11	12 - 32	33 - 54	55 - 77	78 - 98	99 - 120	121 - 143	144 - 165	166 - 185	186 - 205	206 - 225	226 - 245
KEY2	DIRECT	TUNING >>	TUNING <<	AM	FM	PRESET >	PRESET <	MEMORY	INFO	STRAIGHT	PROGRAM >	PROGRAM <

Page 92 [C1]
to DIGITAL_CB21

Page 100 [D9]
to MAIN (6)_CB371

- ★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
- ★ Components having special characteristics are marked Δ, and must be replaced with parts having specifications equal to those originally installed.
- ★ Schematic diagram is subject to change without notice.
- 電圧は、内部抵抗 10MΩの電圧計で測定したものです。
- Δ印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
- 本回路図は標準回路図です。改良のため予告なく変更することがあります。

MAIN 1/3

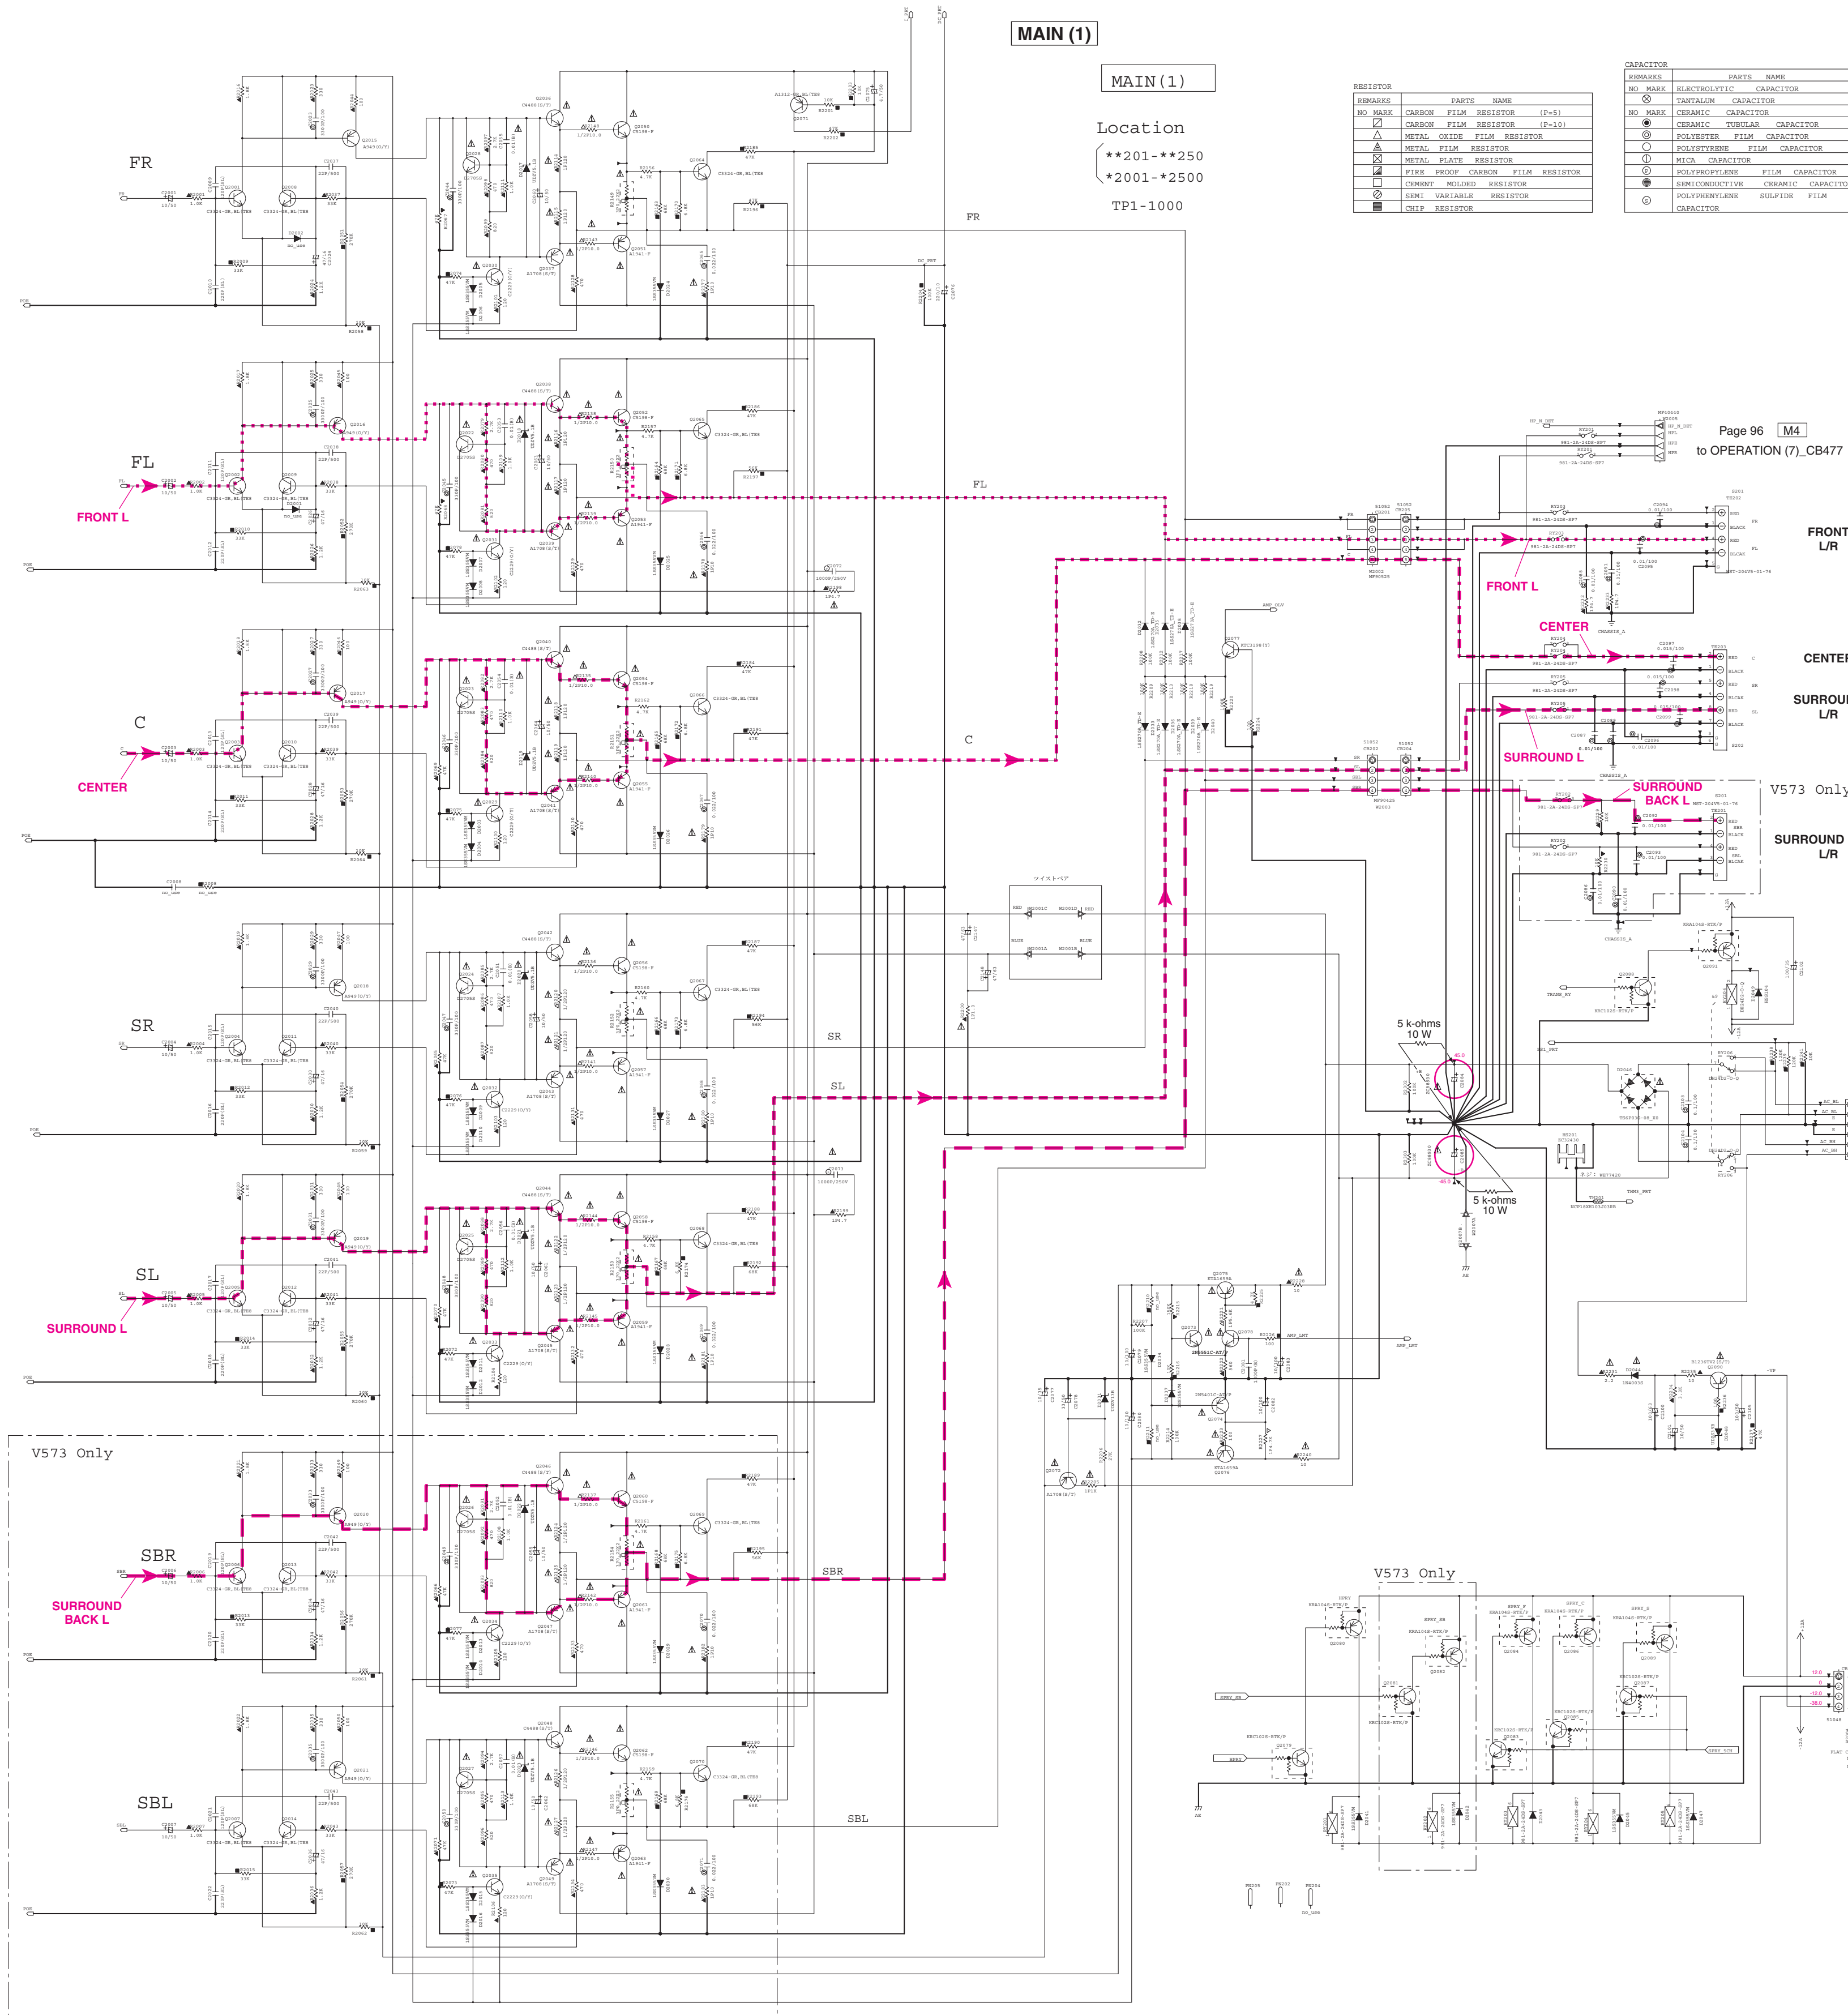

Safety measures

- Some internal parts in this product contain high voltages and are dangerous. Be sure to take safety measures during servicing, such as wearing insulating gloves.
- Note that the capacitors indicated below are dangerous even after the power is turned off because an electric charge remains and a high voltage continues to exist there. Before starting any repair work, connect a discharging resistor (5 k-ohms/10 W) to the terminals of each capacitor indicated below to discharge electricity. The time required for discharging is about 30 seconds per each. C2084, C2085 on MAIN (1) P.C.B.


安全対策

- この製品の内部には高電圧部分があり危険です。修理の際は、絶縁性の手袋を使用などの安全対策を行ってください。
- 下記のコンデンサには電源を OFF にした後も電荷が残り、高電圧が維持されており危険です。修理作業前に放電用抵抗 (5 kΩ/10 W) を下記の各コンデンサの端子間に接続して放電してください。放電所用時間は各々約 30 秒間です。MAIN (1) P.C.B. の C2084, C2085

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked △, and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

●電圧は、内部抵抗 10MΩの電圧計で測定したものです。
●△印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
●本回路図は標準回路図です。改良のため予告なく変更することがあります。

MAIN 2/3

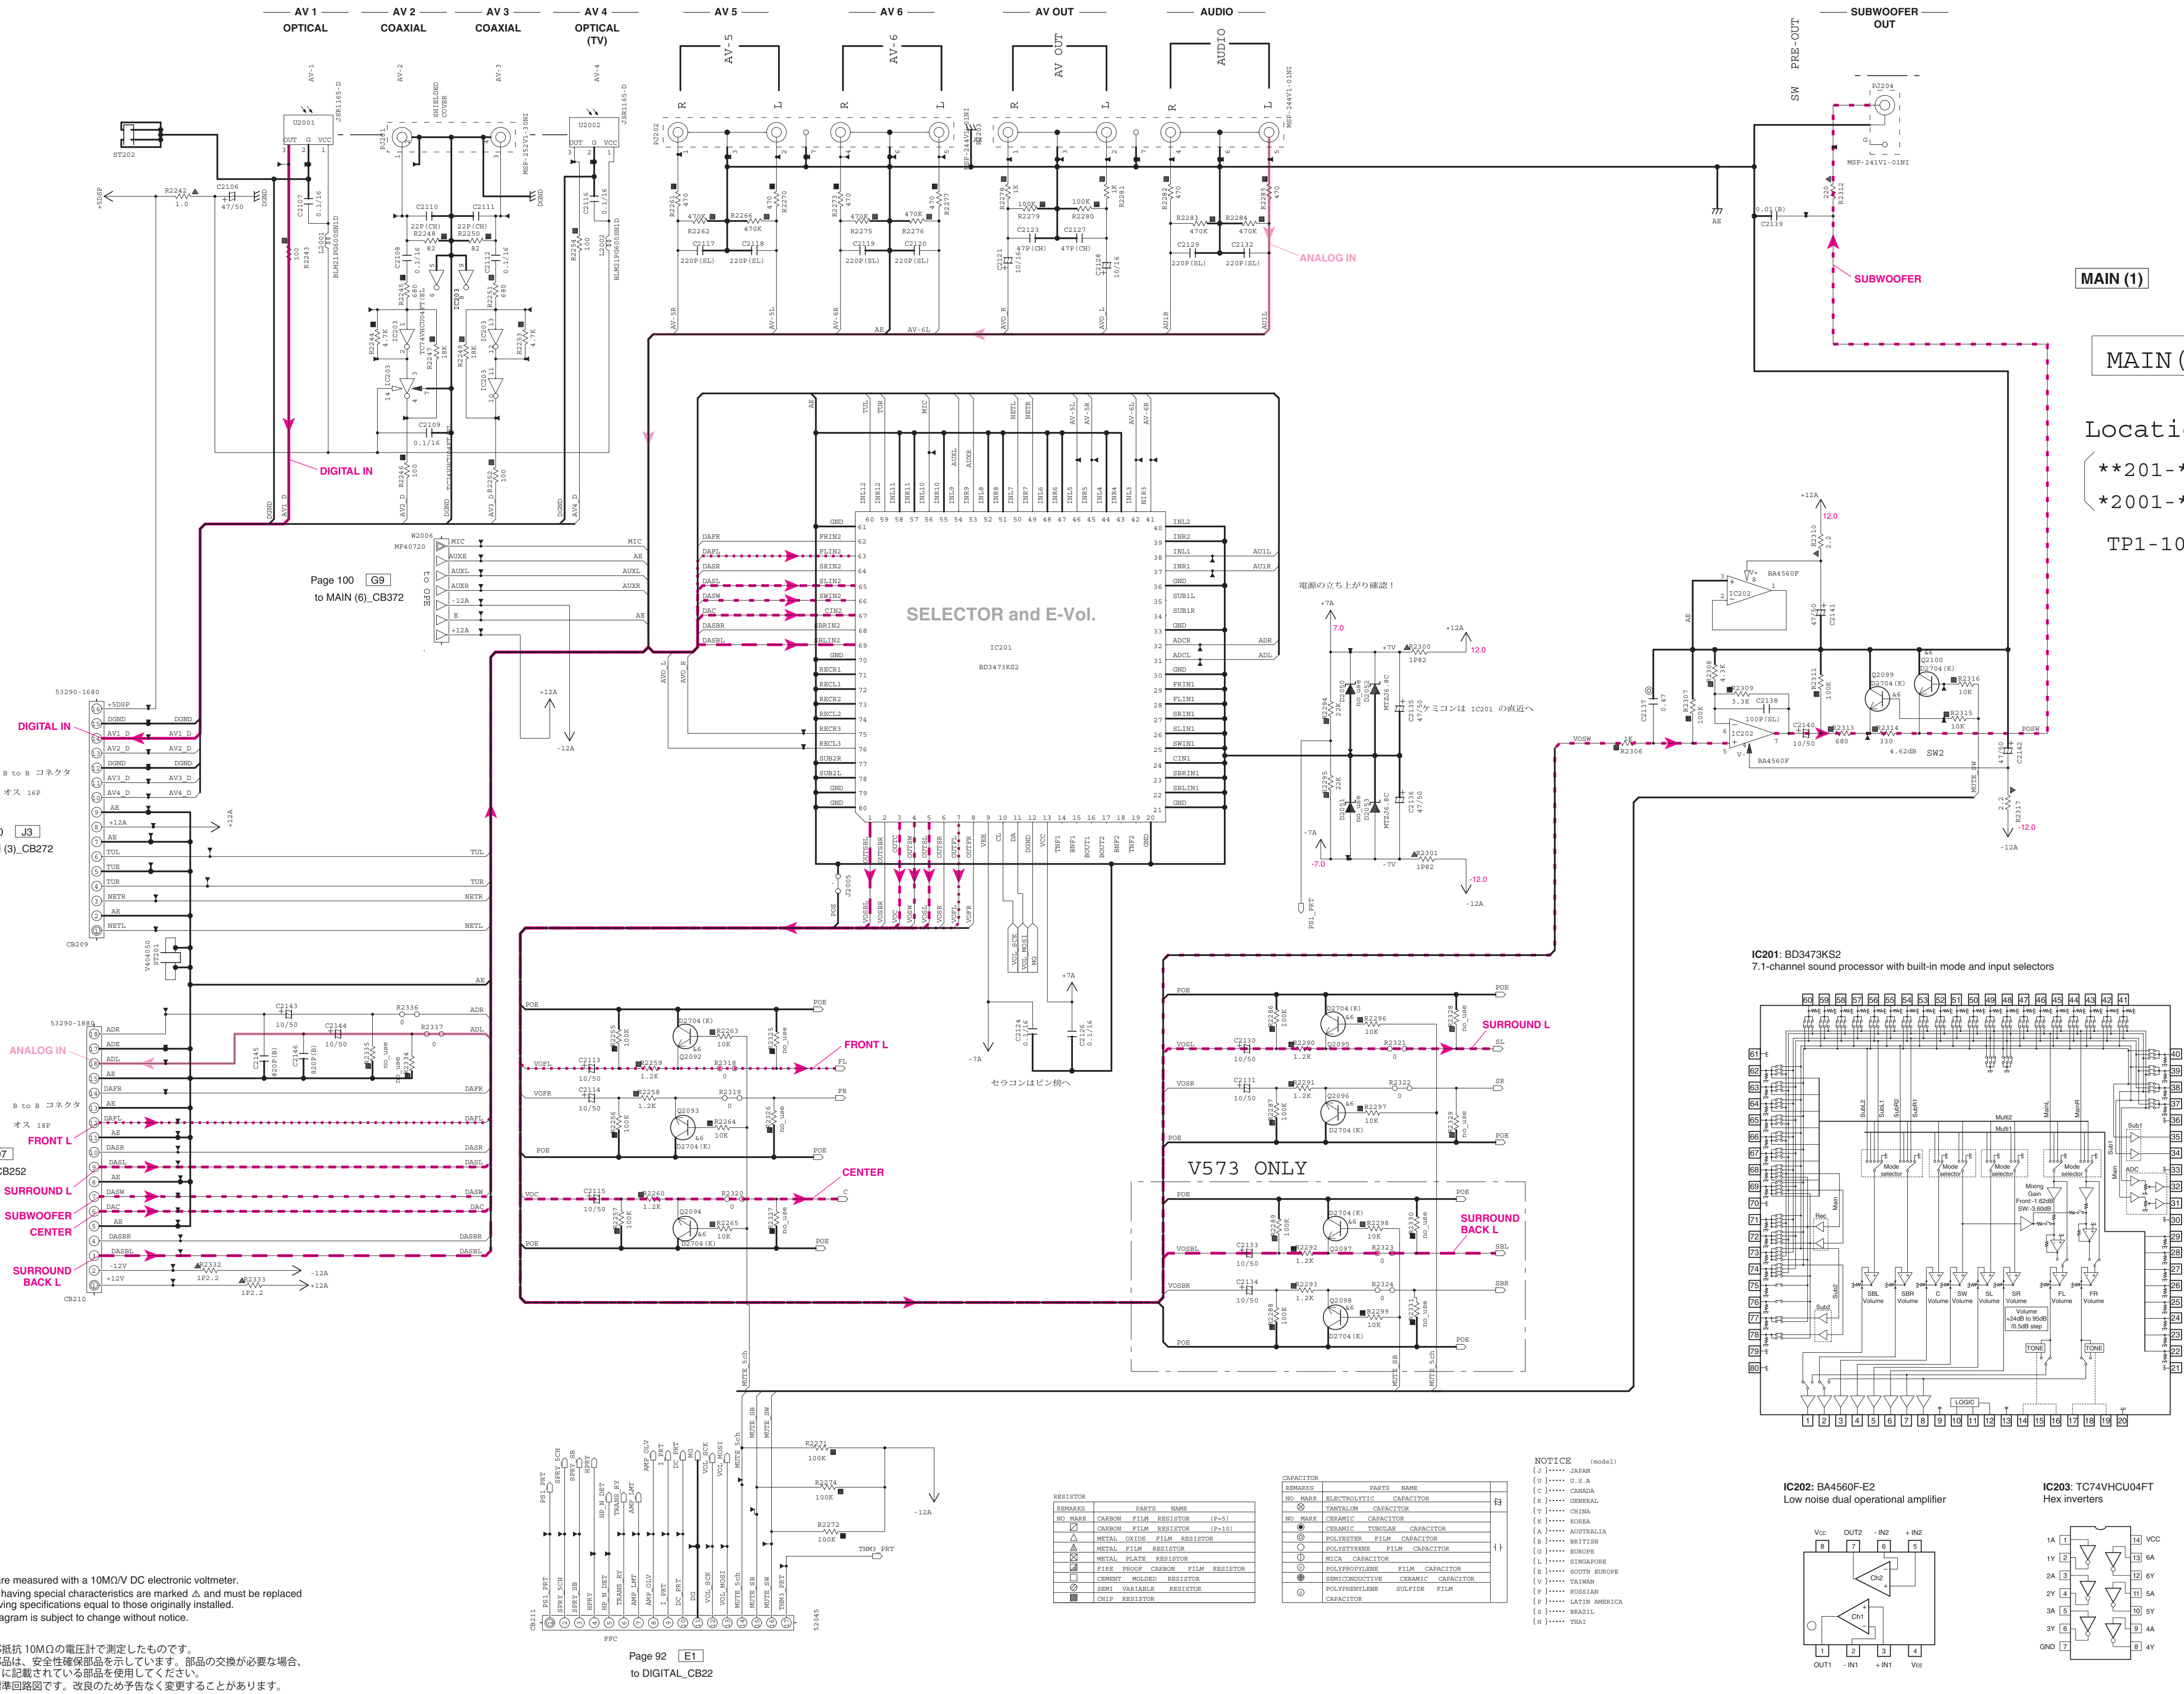

- ★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
 - ★ Components having special characteristics are marked Δ and must be replaced with parts having specifications equal to those originally installed.
 - ★ Schematic diagram is subject to change without notice.
- 電圧は、内部抵抗 10MΩ の電圧計で測定したものです。
● Δ印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがあります。

MAIN 3/3

Page 94 [M5]
to DIGITAL_CB63

to DIGITAL


MAIN (2)

**251 ~ 270
*2501 ~ 2700
TP1001 ~



CONNECT1

MAIN (2)

PN251

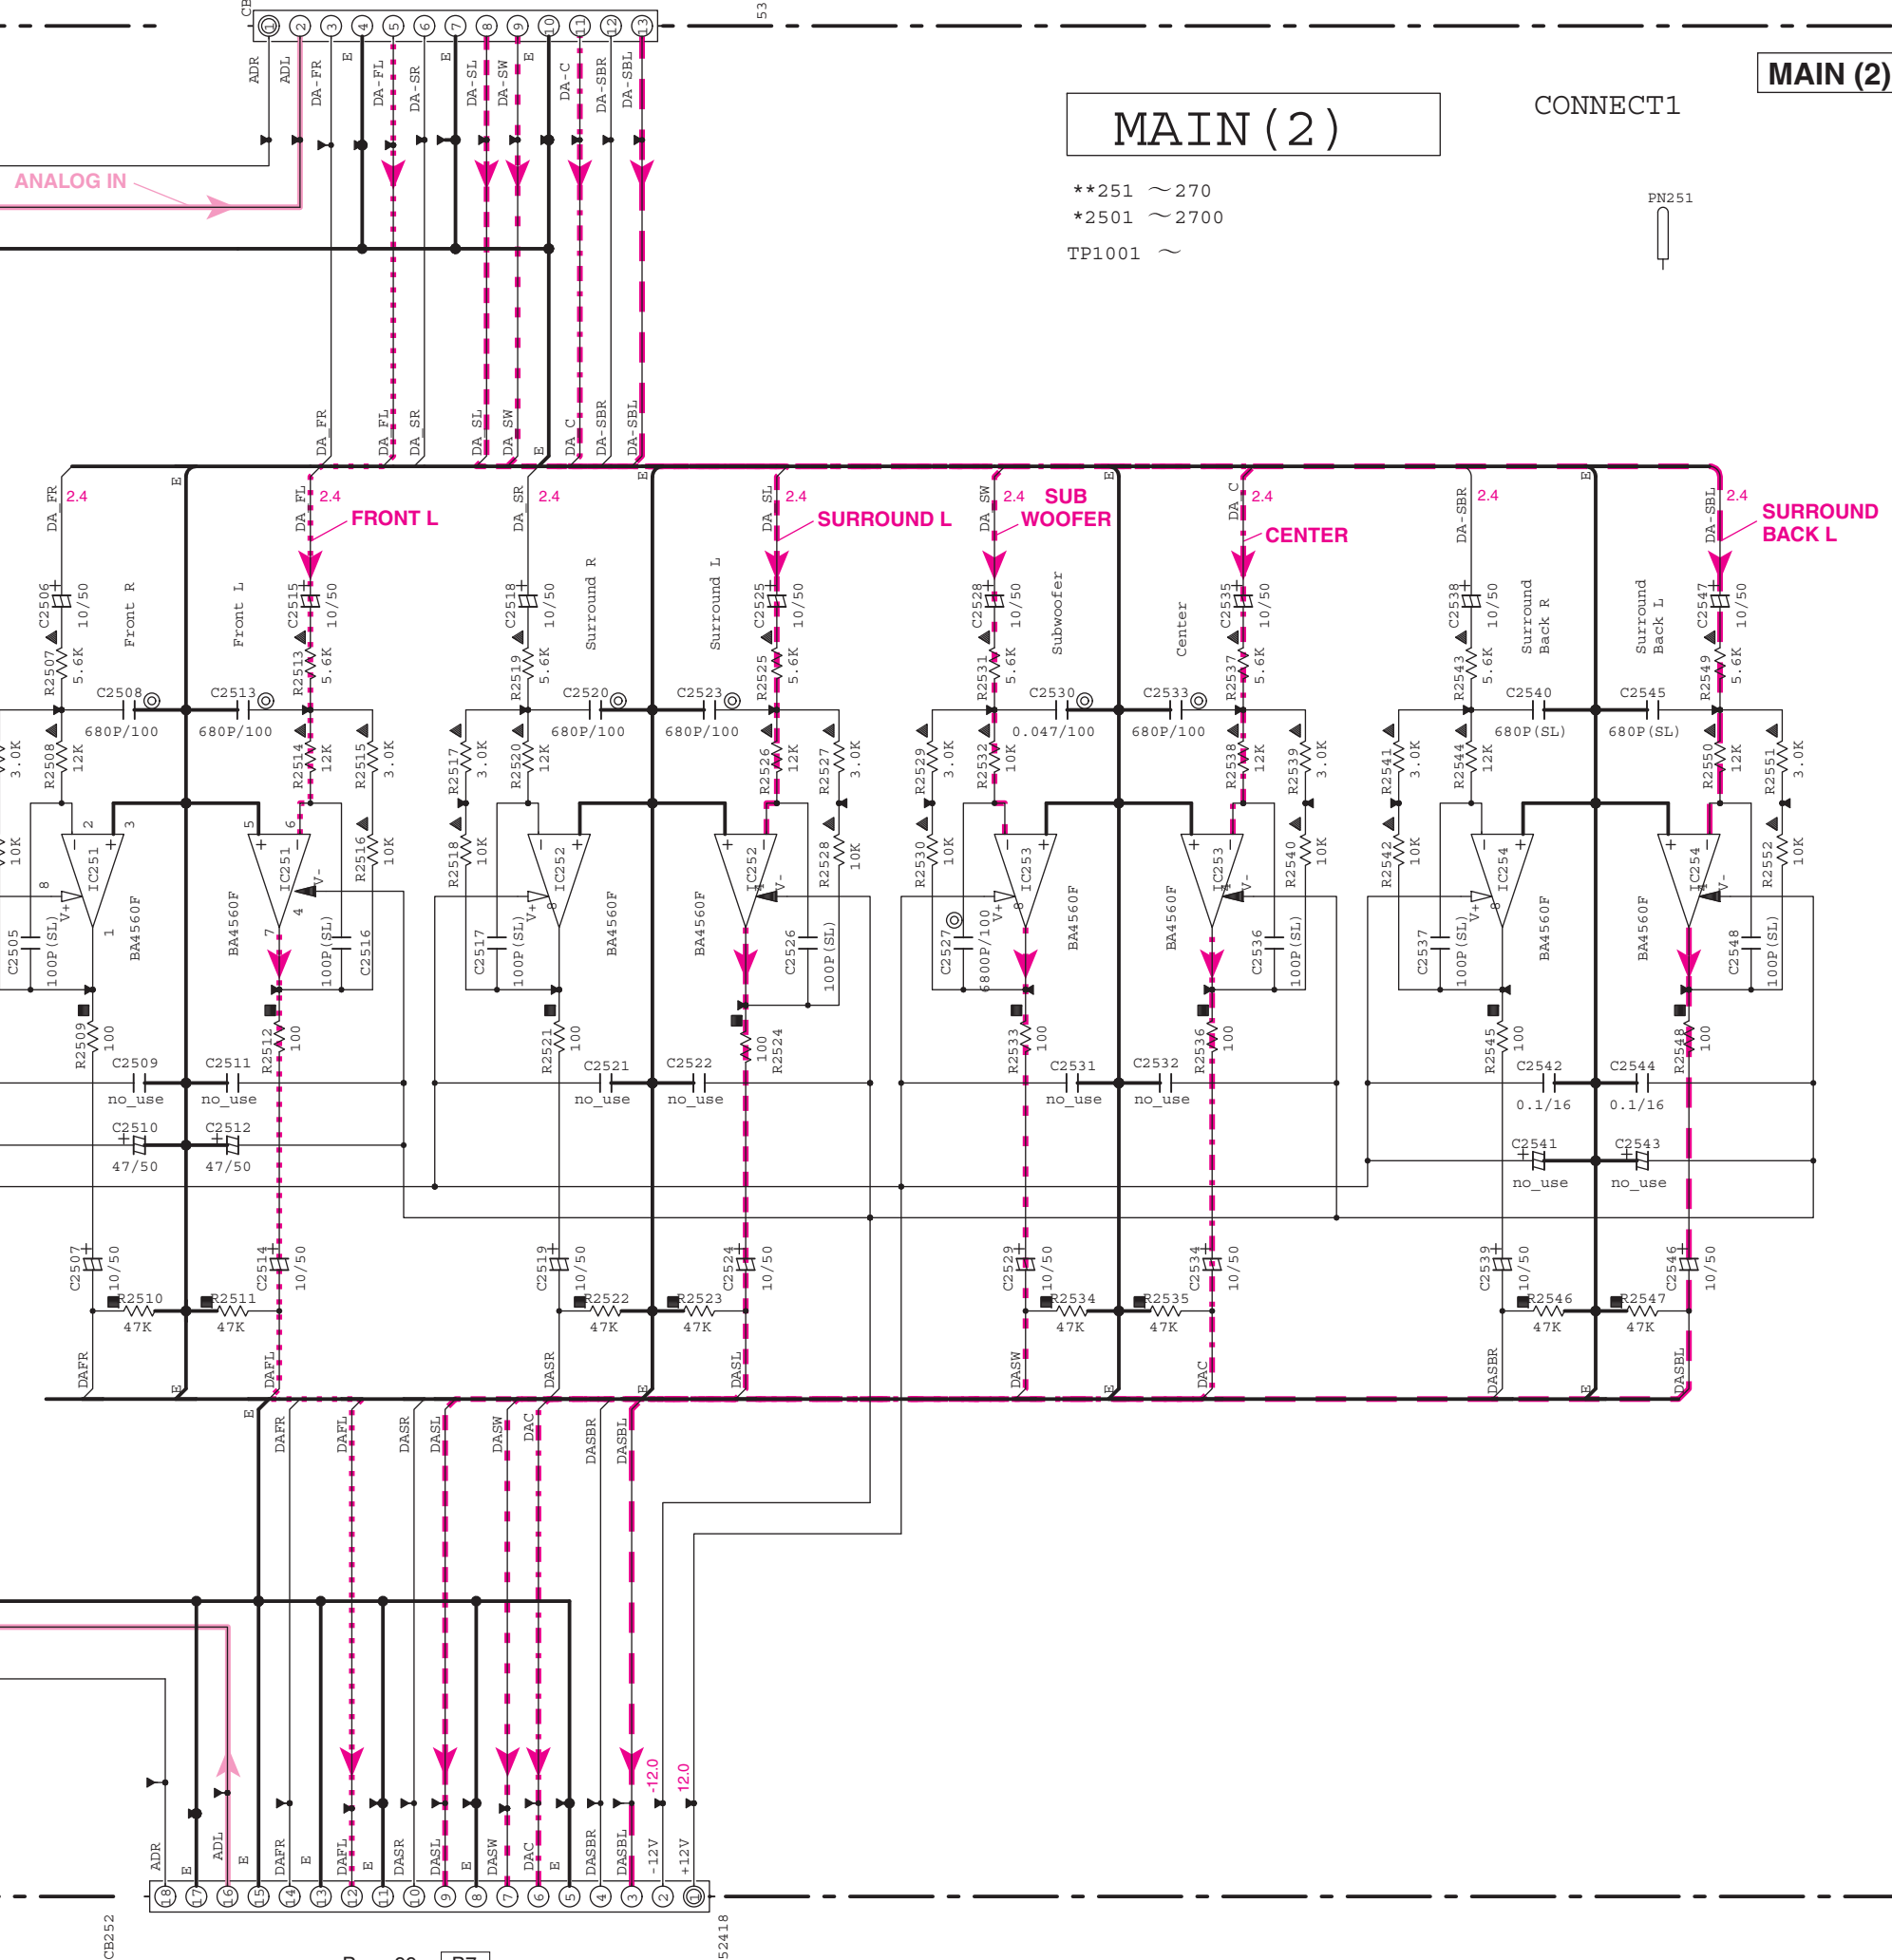


Page 99 [B7]
to MAIN (1)_CB210

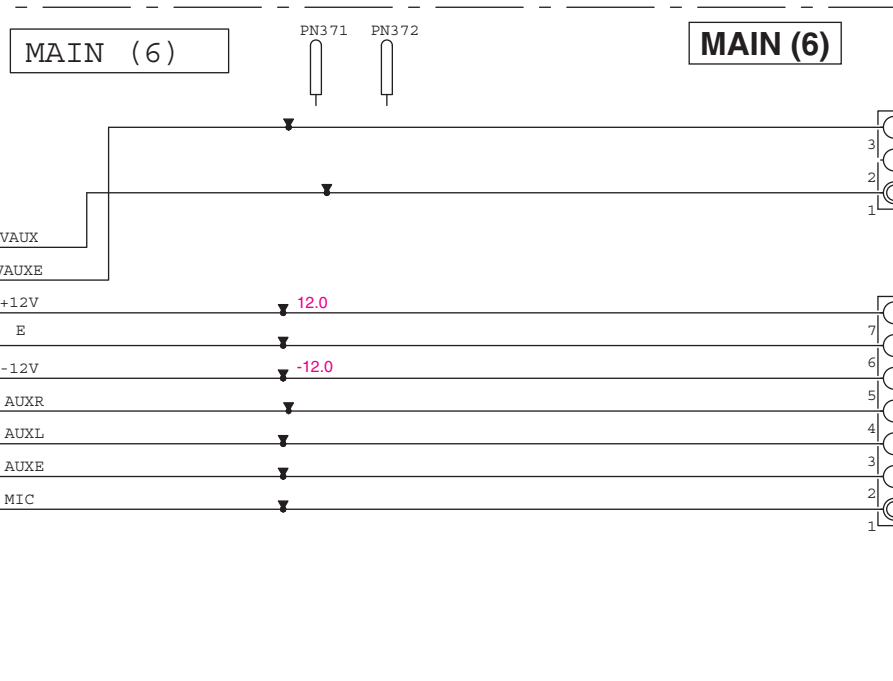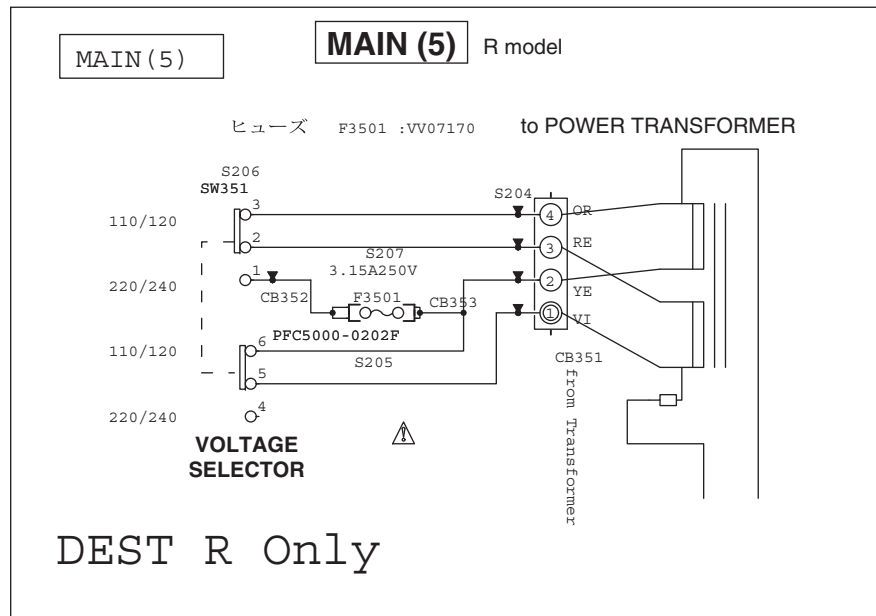

Page 97 [B9]
to OPERATION (3)_W5002

Page 99 [D4]
to MAIN (1)_W2006

Page 94 [M3]
to DIGITAL_CB62

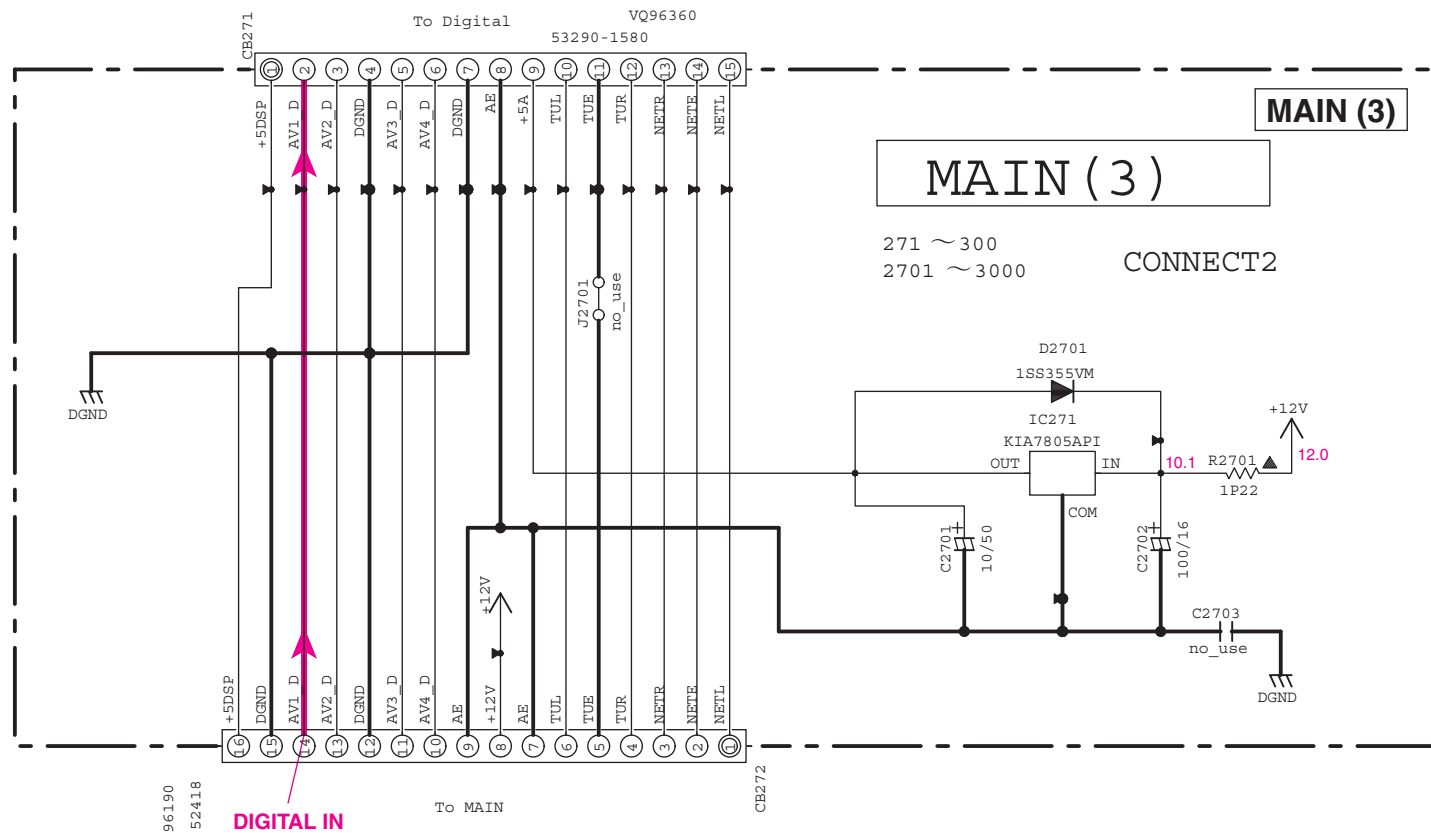


NOTICE (model)

(J)..... JAPAN
(U)..... U.S.A
(C)..... CANADA
(R)..... GENERAL
(T)..... CHINA
(K)..... KOREA
(A)..... AUSTRALIA
(B)..... BRITISH
(G)..... EUROPE
(L)..... SINGAPORE
(E)..... SOUTH EUROPE
(V)..... TAIWAN
(F)..... RUSSIAN
(P)..... LATIN AMERICA
(S)..... BRAZIL
(H)..... THAI


REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)
□	CARBON FILM RESISTOR (P=10)
△	METAL OXIDE FILM RESISTOR
⊠	METAL FILM RESISTOR
⊞	METAL PLATE RESISTOR
▨	FIRE PROOF CARBON FILM RESISTOR
▩	CEMENT WOLED RESISTOR
⊙	SEMI VARIABLE RESISTOR
■	CHIP RESISTOR

REMARKS	PARTS NAME
NO MARK	ELECTROLYTIC CAPACITOR
⊖	TANTALUM CAPACITOR
NO MARK	CERAMIC CAPACITOR
⊙	CERAMIC TUBULAR CAPACITOR
⊗	POLYESTER FILM CAPACITOR
○	POLYSTYRENE FILM CAPACITOR
○	MICA CAPACITOR
○	POLYPROPYLENE FILM CAPACITOR
⊙	SEMICONDUCTIVE CERAMIC CAPACITOR
⊙	POLYPHENYLENE SULFIDE FILM CAPACITOR

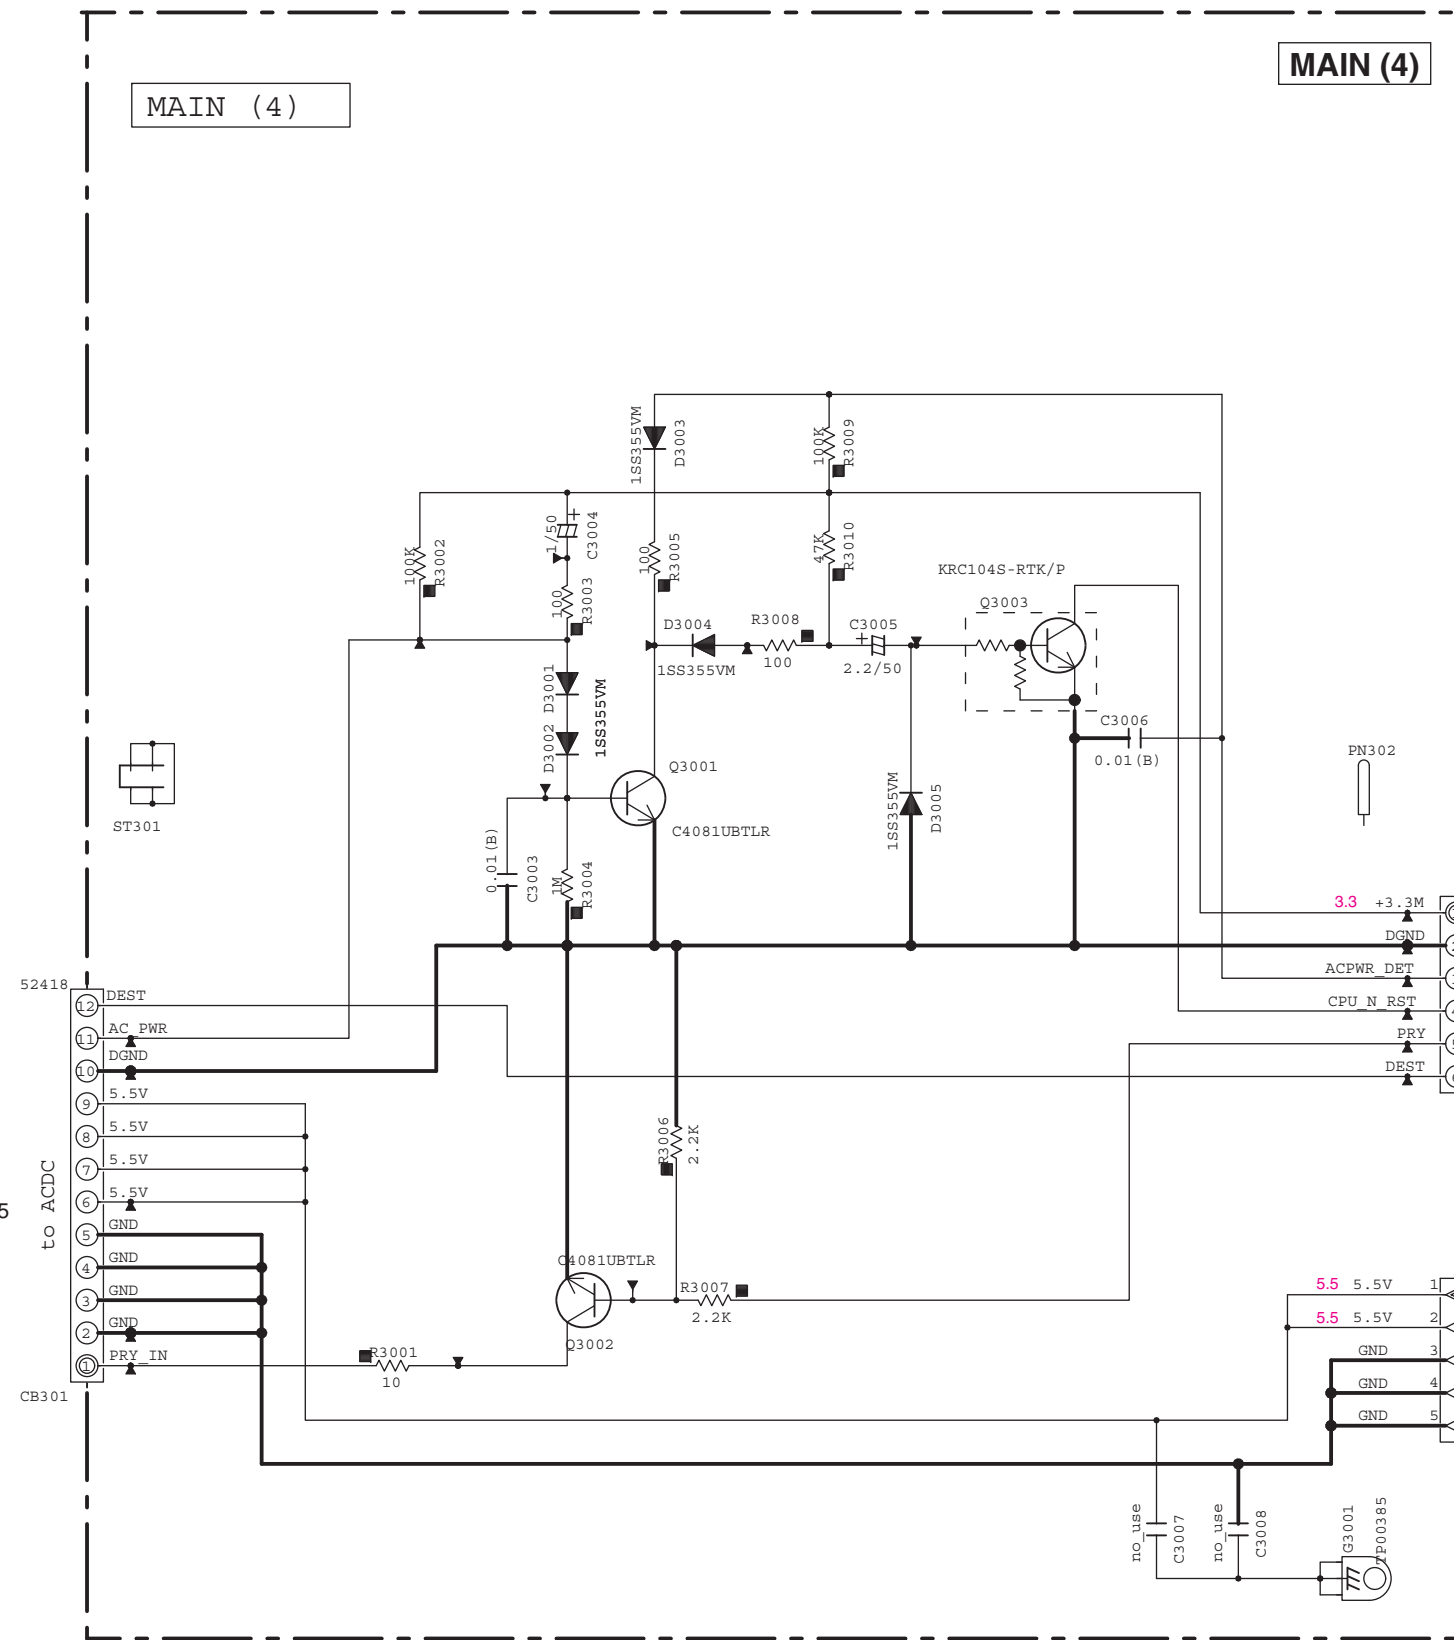


sXX	LOC	JUCTA	R	KBGLP
S201	TE202	WM72890	WM72890	WM72650
		MST-204V5-01-76	MST-204V5-01-76	MST-204V5-01-76
S202	TE203	WM72660	WM72660	WM72880
		MST-207V7-01-76	MST-207V7-01-76	MST-207V7-01-76
S204	CB351	X	V937790	X
			BA978-VH	
S205	CB353	X	WM07770	X
			PFCS000-0202F	
S206	SW351	X	WM38290	X
			SL14	
S207	F3501	X	WM7170	X
			T3.15A/250V	

IC251-254: BA4560F-E2
Low noise dual operational amplifier

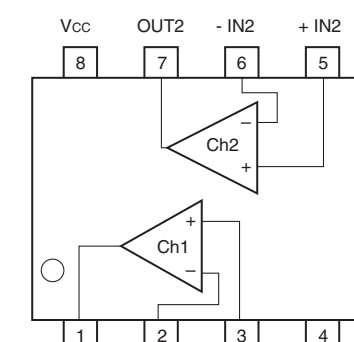

IC271: KIA7805API
Voltage regulator

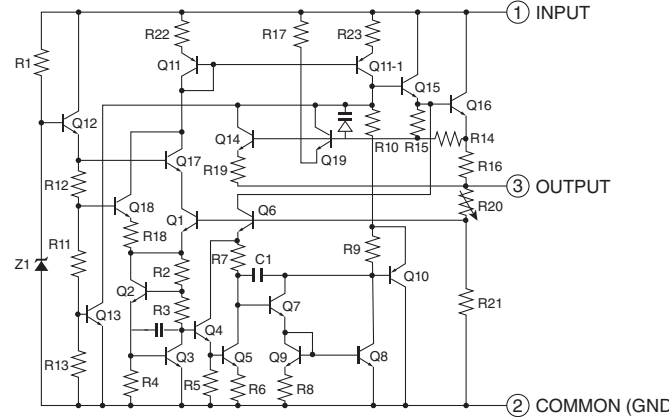

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked Δ and must be replaced with parts having specifications older to those originally installed.
★ Schematic diagram is subject to change without notice.

● 電圧は、内部抵抗 10MΩ の電圧計で測定したものです。
● Δ印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがあります。

■ REPLACEMENT PARTS LIST

● ELECTRICAL COMPONENT PARTS

WARNING

- Components having special characteristics are marked Δ and must be replaced with parts having specifications equal to those originally installed.
- Δ 印のある部分は、安全確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
- 部品価格ランクは、予告なく変更することがあります。

ABBREVIATIONS IN THIS LIST ARE AS FOLLOWS:

C.A.EL.CHP	: CHIP ALUMI.ELECTROLYTIC CAP	LED.CHP	: CHIP LED
C.CE	: CERAMIC CAP	LED.DSPLY	: LED DISPLAY
C.CE.ARRAY	: CERAMIC CAP ARRAY	LED.INFRD	: LED,INFRARED
C.CE.CHP	: CHIP CERAMIC CAP	PHOT.CPL	: PHOTO COUPLER
C.CE.M.CHP	: CHIP MULTILAYER CERAMIC CAP	PHOT.INTR	: PHOTO INTERRUPTER
C.CE.SAFTY	: RECOGNIZED CERAMIC CAP	PHOT.RFLCT	: PHOTO REFLECTOR
C.CE.TUBLR	: CERAMIC TUBULAR CAP	PHOT.TR	: PHOTO TRANSISTOR
C.CE.SMI	: SEMI CONDUCTIVE CERAMIC CAP	PIN.TEST	: PIN,TEST POINT
C.EL	: ELECTROLYTIC CAP	PTC.THERMISTOR	: POSITIVE TEMPERATURE COEFFICIENT THERMISTOR
C.EL.BP	: BIPOLAR ELECTROLYTIC CAP	R.ANTI.SURGE	: FIXED ANTI SURGE RESISTOR
C.EL.CHP	: CHIP ELECTROLYTIC CAP	R.ARRAY	: RESISTOR ARRAY
C.MICA	: MICA CAP	R.CAR.	: CARBON RESISTOR
C.ML.FLM	: MULTILAYER FILM CAP	R.CAR.CHP	: CHIP RESISTOR
C.MP	: METALLIZED POLYESTER FILM CAP	R.CAR.FP	: FLAME PROOF CARBON RESISTOR
C.MYLAR	: MYLAR FILM CAP	R.CEMENT	: CEMENT RESISTOR
C.MYLAR.ML	: MULTILAYER MYLAR FILM CAP	R.CHP	: CHIP RESISTOR
C.NIOB.OXD	: NIOBIUM OXIDE CAP	R.FUS	: FUSIBLE RESISTOR
C.PAPER	: PAPER CAPACITOR	R.MTL.CHP	: CHIP METAL FILM RESISTOR
C.PLS	: POLYSTYRENE FILM CAP	R.MTL.FLM	: METAL FILM RESISTOR
C.POL	: POLYESTER FILM CAP	R.MTL.OXD	: METAL OXIDE FILM RESISTOR
C.PP	: POLYPROPYLENE FILM CAP	R.MTL.PLAT	: METAL PLATE RESISTOR
C.PP.CHP	: CHIP POLYPROPYLENE FILM CAP	RSNR.CE	: CERAMIC RESONATOR
C.TNTL	: TANTALIUM CAP	RSNR.CRYS	: CRYSTAL RESONATOR
C.TNTL.CHP	: CHIP TANTALIUM CAP	SCR.BND.HD	: BIND HEAD B-TIGHT SCREW
C.TRIM	: TRIMMER CAP	SCR.TERM	: SCREW TERMINAL
CN	: CONNECTOR	SCR.TR	: SCREW,TRANSISTOR
CN.BS.PIN	: CONNECTOR,BASE PIN	SURG.PRTCT	: SURGE PROTECTOR
CN.CANNON	: CONNECTOR,CANNON	SUPRT.PCB	: P.C.B. SUPPORT
CN.DIN	: CONNECTOR,DIN	SW.LEVER	: LEVER SWITCH
CN.FLAT	: CONNECTOR,FLAT CABLE	SW.MICRO	: MICRO SWITCH
CN.FFC	: CONNECTOR,FLEXIBLE FLAT CABLE	SW.LEAF	: LEAF SWITCH
CN.HDMI	: HDMI CONNECTOR	SW.PUSH	: PUSH SWITCH
CN.PHOTO.R	: PHOTO FIBER SENSOR,RECEIVED	SW.RT	: ROTARY SWITCH
CN.PHOTO.T	: PHOTO FIBER SENSOR,TRANSMITTED	SW.RT.ENC	: ROTARY ENCODER
DIODE.ARRAY	: DIODE ARRAY	SW.RT.MTR	: ROTARY SWITCH WITH MOTOR
DIODE.BRG	: DIODE BRIDGE	SW.SLIDE	: SLIDE SWITCH
DIODE.CHP	: CHIP DIODE	SW.TACT	: TACT SWITCH
DIODE.VAR	: VARACTOR DIODE	TERM.SP	: SPEAKER TERMINAL
DIODE.ZENR	: ZENER DIODE	TERM.WRAP	: WRAPPING TERMINAL
DIODE.Z.CHP	: CHIP ZENER DIODE	THRMST.CHP	: CHIP THERMISTOR
DIODE.SCHOTTKY	: SCHOTTKY BARRIER DIODE	TR	: TRANSISTOR
DIODE.PHOT	: PHOTO DIODE	TR.CHP	: CHIP TRANSISTOR
FER.BEAD	: FERRITE BEADS	TR.DGT	: DIGITAL TRANSISTOR
FER.CORE	: FERRITE CORE	TR.DGT.CHP	: CHIP DIGITAL TRANSISTOR
FET.CHP	: CHIP FET	TR.PAIR	: PAIR TRANSISTOR
FL.DSPLY	: FLUORESCENT DISPLAY	TRANS	: TRANSFORMER
FLTR.CE	: CERAMIC FILTER	TRANS.PULS	: PULSE TRANSFORMER
FLTR.COMB	: COMB FILTER MODULE	TRANS.PWR	: POWER TRANSFORMER
FLTR.LC.RF	: LC FILTER,EMI	VARISTOR.CHP	: CHIP VARISTOR
FUSE.CHP	: CHIP FUSE	VOLT.SELECT	: VOLTAGE SELECTOR
GND.MTL	: GROUND PLATE	VR	: ROTARY POTENTIOMETER
GND.TERM	: GROUND TERMINAL	VR.MTR	: POTENTIOMETER WITH MOTOR
JUMPER.CN	: JUMPER CONNECTOR	VR.SLIDE	: SLIDE POTENTIOMETER
JUMPER.TST	: JUMPER,TEST POINT	VR.SW	: POTENTIOMETER WITH SWITCH
L.DTCT	: LIGHT DETECTING MODULE	VR.TRIM	: TRIMMER POTENTIOMETER

DIGITAL

Ref No.	Part No.	Description	Remarks	Markets	部 品 名	ランク
*	ZA573400	P. C. B.	DIGITAL		PCB DIGITAL	
CB1-4	WW271700	CN. HDMI	19P HDMI		HDMI コネクター	
CB6	WW271700	CN. HDMI	19P HDMI		HDMI コネクター	
CB21-22	VF982300	CN. BS. PIN	17P		コネクター	01
CB23	VK026300	CN. BS. PIN	4P		コネクター	01
CB24-25	VK026500	CN. BS. PIN	6P		ワイヤートラップ	01
CB26	VQ044400	CN. BS. PIN	9P		コネクター	01
CB27	VQ047200	CN. BS. PIN	9P		コネクター	01
CB29	VB389900	CN. BS. PIN	3P		コネクター	01
CB61	LB919040	CN. BS. PIN	4P		コネクター	01
CB62	VQ961800	CN. BS. PIN	15P		コネクター	01
CB63	VQ961600	HOUSING	13P		ハウジング	01
CB64	LB919050	CN. BS. PIN	5P		コネクター	01
CB91	VQ044100	CN. BS. PIN	5P		コネクター	01
CB951	WY212400	CN. LAN	8P RJSE1AG3870-R		ネットワークコネクター	
CB952	VB858400	CN. BS. PIN	5P		コネクター	01
C1-4	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C5-8	WG888300	C. CE. M. CHP	10uF 6. 3V		チップ積層セラコン	01
C9-16	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C18-19	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C20	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C21	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C22-24	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C26-32	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C33-34	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C35-36	WG888300	C. CE. M. CHP	10uF 6. 3V		チップ積層セラコン	01
C37-42	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C43-44	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C45	US662100	C. CE. CHP	100pF 50V		チップセラコン	
C46-47	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C48	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C49-50	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C51-55	WD758300	C. CE. CHP	10uF 10V		チップセラコン	01
C56	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C57	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C58	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C59	US660800	C. CE. CHP	8pF 50V		チップセラコン	01
C60	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C61	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C62	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C63	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C64	US660800	C. CE. CHP	8pF 50V		チップセラコン	01
C66	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C67-68	WD758300	C. CE. CHP	10uF 10V		チップセラコン	01
C69	WJ932500	C. CE. CHP	1uF 6. 3V		チップセラコン	01
C70	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C72	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C73	WD758300	C. CE. CHP	10uF 10V		チップセラコン	01
C74	WJ344400	C. CE. CHP	22uF 6. 3V		チップセラコン	01
C75	WD758300	C. CE. CHP	10uF 10V		チップセラコン	01
C77	US663390	C. CE. CHP	3900pF 50V		チップセラコン	01
C78	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C79	US634220	C. CE. CHP	0. 022uF 16V		チップセラコン	01
C80	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C81	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C82	US634100	C. CE. CHP	0. 01uF 16V		チップセラコン	01
C83	WD758300	C. CE. CHP	10uF 10V		チップセラコン	01

* New Parts * 新規部品

DIGITAL

Ref No.	Part No.	Description	Remarks	Markets	部 品 名	ランク
C84	US046100	C. CE. CHP	1uF 25V		チップセラコン	01
C86	US046100	C. CE. CHP	1uF 25V		チップセラコン	01
C87	US661220	C. CE. CHP	22pF 50V		チップセラコン	
C89	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C91	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C92	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C93	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C101-102	UF138220	C. EL. CHP	220uF 16V		チップケミコン	01
C214-217	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C218	US634100	C. CE. CHP	0. 01uF 16V		チップセラコン	01
C219	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C220	US634100	C. CE. CHP	0. 01uF 16V		チップセラコン	01
C224-233	US634100	C. CE. CHP	0. 01uF 16V		チップセラコン	01
C245	US126100	C. CE. CHP	1uF 10V		チップセラコン	01
C246-248	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C255	US634100	C. CE. CHP	0. 01uF 16V		チップセラコン	01
C256	US662100	C. CE. CHP	100pF 50V		チップセラコン	
C258-260	US046100	C. CE. CHP	1uF 25V		チップセラコン	01
C261-264	US662100	C. CE. CHP	100pF 50V		チップセラコン	
C266	US046100	C. CE. CHP	1uF 25V		チップセラコン	01
C267	WG251600	C. CE. CHP	4. 7uF 6. 3V		チップセラコン	01
C268	US046100	C. CE. CHP	1uF 25V		チップセラコン	01
C269	WG251600	C. CE. CHP	4. 7uF 6. 3V		チップセラコン	01
C271	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C272	WG888300	C. CE. M. CHP	10uF 6. 3V		チップ積層セラコン	01
C301-302	UF027330	C. EL. CHP	33uF 10V		チップケミコン	01
C401	US662100	C. CE. CHP	100pF 50V		チップセラコン	
C402	WG888300	C. CE. M. CHP	10uF 6. 3V		チップ積層セラコン	01
C403-429	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C430	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C431	WG888300	C. CE. M. CHP	10uF 6. 3V		チップ積層セラコン	01
C432	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C433-434	WG888300	C. CE. M. CHP	10uF 6. 3V		チップ積層セラコン	01
C435-437	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C441-442	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C447-448	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C450	US046100	C. CE. CHP	1uF 25V		チップセラコン	01
C451	WG888300	C. CE. M. CHP	10uF 6. 3V		チップ積層セラコン	01
C452	US046100	C. CE. CHP	1uF 25V		チップセラコン	01
C453	US634100	C. CE. CHP	0. 01uF 16V		チップセラコン	01
C454	WG888300	C. CE. M. CHP	10uF 6. 3V		チップ積層セラコン	01
C455-457	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C601	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C602-603	US634100	C. CE. CHP	0. 01uF 16V		チップセラコン	01
C605	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C606	US662100	C. CE. CHP	100pF 50V		チップセラコン	
C607	WG888300	C. CE. M. CHP	10uF 6. 3V		チップ積層セラコン	01
C608	US126100	C. CE. CHP	1uF 10V		チップセラコン	01
C609	US046100	C. CE. CHP	1uF 25V		チップセラコン	01
C610	WG888300	C. CE. M. CHP	10uF 6. 3V		チップ積層セラコン	01
C611	US634100	C. CE. CHP	0. 01uF 16V		チップセラコン	01
C613	US661120	C. CE. CHP	12pF 50V		チップセラコン	
C614	US661150	C. CE. CHP	15pF 50V		チップセラコン	01
C615	WG251600	C. CE. CHP	4. 7uF 6. 3V		チップセラコン	01
C616	WG888300	C. CE. M. CHP	10uF 6. 3V		チップ積層セラコン	01
C617	US126100	C. CE. CHP	1uF 10V		チップセラコン	01
C618	US634100	C. CE. CHP	0. 01uF 16V		チップセラコン	01

* New Parts * 新規部品

DIGITAL

Ref No.	Part No.	Description	Remarks	Markets	部 品 名	ランク
C619	US126100	C. CE. CHP	1uF 10V		チップセラコン	01
C620	US634100	C. CE. CHP	0. 01uF 16V		チップセラコン	01
C621	UB214680	C. CE. CHP	0. 068uF 25V		チップセラコン	01
C622	US643470	C. CE. CHP	4700pF 25V		チップセラコン	01
C623	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C624	WD758300	C. CE. CHP	10uF 10V		チップセラコン	01
C625	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C626	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C627	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C628	WD758300	C. CE. CHP	10uF 10V		チップセラコン	01
C629	US634100	C. CE. CHP	0. 01uF 16V		チップセラコン	01
C630	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C631	WJ344400	C. CE. CHP	22uF 6. 3V		チップセラコン	01
C632	WD758300	C. CE. CHP	10uF 10V		チップセラコン	01
C633	US634100	C. CE. CHP	0. 01uF 16V		チップセラコン	01
C636	US126100	C. CE. CHP	1uF 10V		チップセラコン	01
C638	US663390	C. CE. CHP	3900pF 50V		チップセラコン	01
C639	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C641	US663330	C. CE. CHP	3300pF 50V		チップセラコン	01
C643	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C644-645	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C650	WD758300	C. CE. CHP	10uF 10V		チップセラコン	01
C651-653	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C654	WJ344400	C. CE. CHP	22uF 6. 3V		チップセラコン	01
C656	US663390	C. CE. CHP	3900pF 50V		チップセラコン	01
C657	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C658	US643680	C. CE. CHP	6800pF 25V		チップセラコン	01
C659	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C660-661	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C662-669	US662100	C. CE. CHP	100pF 50V		チップセラコン	01
C670	WD758300	C. CE. CHP	10uF 10V		チップセラコン	01
C672	US634100	C. CE. CHP	0. 01uF 16V		チップセラコン	01
C673-674	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C676	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C701	UF438100	C. EL. CHP	100uF 16V		チップケミコン	01
C702-703	UF437100	C. EL. CHP	10uF 16V		チップケミコン	01
C704	WH772100	C. EL	1000uF 10V		ケミコン	04
C9501-9502	UF018100	C. EL. CHP	100uF 6. 3V		チップケミコン	01
C9503-9509	WG888300	C. CE. M. CHP	10uF 6. 3V		チップ積層セラコン	01
C9510-9528	US625100	C. CE. CHP	0. 1uF 10V		チップセラコン	01
C9530-9533	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C9535-9545	US663100	C. CE. CHP	1000pF 50V		チップセラコン	01
C9548-9557	US634100	C. CE. CHP	0. 01uF 16V		チップセラコン	01
C9562	US044220	C. CE. CHP	0. 022uF 25V B		チップセラコン	01
C9563-9568	WG251600	C. CE. CHP	4. 7uF 6. 3V		チップセラコン	01
C9570-9571	WJ932500	C. CE. CHP	1uF 6. 3V		チップセラコン	01
C9572-9573	US661150	C. CE. CHP	15pF 50V		チップセラコン	01
C9575	US634100	C. CE. CHP	0. 01uF 16V		チップセラコン	01
C9577	US634100	C. CE. CHP	0. 01uF 16V		チップセラコン	01
D2	V2376600	DIODE. SCHOTTKY	RB500V-40		ショットキーダイオード	01
D24	VV220700	DIODE. SCHOTTKY	RB501V-40		ショットキーダイオード	01
D201-203	WR148500	DIODE	RB521S-30TE61		ダイオード	
D204-205	WW783900	DIODE	1SS355VM		ダイオード	
* IC2	YE243C00	IC. MEMORY	W25Q16CVSSIG	written	メモリ I C	
IC3	YE181A00	IC	TC7MBL3257CFK		ロジック I C	
IC5	YC289A00	IC	RP130Q501D-TR		電源 I C	01
* IC6	YD987A00	IC	R1163N501B-TR-FE		電源 I C	

* New Parts * 新規部品

DIGITAL and OPERATION

Ref No.	Part No.	Description	Remarks	Markets	部 品 名	ランク
IC8	X4063A00	IC	TC7WHU04FU		ロジック I C	
IC9	X7787A00	IC	TC74LCX245FT (EL, K)		ロジック I C	02
* IC22	YE090A00	IC	BR25S640FVT-WE2		メモリ I C	
IC24-25	YC288A00	IC	RP130Q331D-TR-F		電源 I C	01
IC26	X8383A00	IC	TC7WH32FK (TE85L, F)		ロジック I C	
IC27	X4453A00	IC	SN74LVC1G17DCKR		ロジック I C	01
IC42	X9625B00	IC. MEMORY	M12L64164A-5TG		メモリ I C	05
* IC43	YE244B00	IC. MEMORY	MX29LV160DBT1-70G	written	メモリ I C	
IC44	YC289A00	IC	RP130Q501D-TR		電源 I C	01
IC45	X9292A00	IC	R1172H121D-T1-F		電源 I C	01
IC46	XR680A00	IC	TC7SH08FU (TE85L, JF		ロジック I C	01
IC61	YD216A00	IC	PCM9211PTR		I C	
IC62	X9870A00	IC	PCM1681PWPR		I C	07
IC64	YC288A00	IC	RP130Q331D-TR-F		電源 I C	01
IC65	X9292A00	IC	R1172H121D-T1-F		電源 I C	01
* IC66	YE478A00	IC	BD7542F-E2 OPAMP		アンプ I C	
IC952	X4943D00	IC	W9825G6JH-6 SDRAM		メモリ I C	
* IC953	YE237C00	IC. MEMORY	MX29GL256FLT21-90Q	written	メモリ I C	
Q1-2	WZ461800	TR. CHP	2SC4081UBTLR		チップトランジスタ	
Q3	WE834500	FET	UPA672T-T1-A		F E T	01
Q4-9	WZ461800	TR. CHP	2SC4081UBTLR		チップトランジスタ	
Q12	WZ703400	FET	RAL035P01		MOS F E T	
Q13	WW782000	TR. DGT	DTA044EUBTL		デジタルトランジスタ	
Q201-203	WY001400	TR. ARRAY	HN4B01JE		トランジスタアレイ	01
Q204	WZ461800	TR. CHP	2SC4081UBTLR		チップトランジスタ	
Q205-210	WZ461700	TR. CHP	2SA1576UBTLR		チップトランジスタ	
Q401	WZ703400	FET	RAL035P01		MOS F E T	
Q402	WW782000	TR. DGT	DTA044EUBTL		デジタルトランジスタ	
Q601	WW782100	TR. DGT	DTC014EUBTL		デジタルトランジスタ	
Q602	WW782000	TR. DGT	DTA044EUBTL		デジタルトランジスタ	
Q604	WW782000	TR. DGT	DTA044EUBTL		デジタルトランジスタ	
Q605-607	WZ703400	FET	RAL035P01		MOS F E T	
Q902	WE834500	FET	UPA672T-T1-A		F E T	01
* R615	WZ713400	R. CHP	0. 027 Ω 1/3W		チップ抵抗	
* R9501-4	WZ748900	R. CHP	49. 9 Ω 1/16W		チップ抵抗	
* R9505	WZ749000	R. CHP	12. 4K Ω 1/16W		チップ抵抗	
XL1	ZA692800	RSNR. CRYs	27MHz DSX321G		水晶振動子	
XL21	WA782500	RSNR. CE	8MHz		セラミック振動子	01
XL61	WS190000	RSNR. CRYs	24. 576MHZ DSX321G		水晶振動子	02
XL951	WJ081300	RSNR. CRYs	24MHz DSX321G		水晶振動子	
* ZA572300	P. C. B.	OPERATION		J	PCB OPERATION	
* ZA572400	P. C. B.	OPERATION		U	PCB OPERATION	
* ZA572500	P. C. B.	OPERATION		C	PCB OPERATION	
* ZA572600	P. C. B.	OPERATION		R	PCB OPERATION	
* ZA572700	P. C. B.	OPERATION		T	PCB OPERATION	
* ZA572800	P. C. B.	OPERATION		K	PCB OPERATION	
* ZA572900	P. C. B.	OPERATION		A	PCB OPERATION	
* ZA573000	P. C. B.	OPERATION		BGF	PCB OPERATION	
* ZA573100	P. C. B.	OPERATION		L	PCB OPERATION	
CB402	VF982300	CN. BS. PIN	17P		コネクタ	01
CB405	VQ047200	CN. BS. PIN	9P		コネクタ	01
CB407	WQ680200	CN. USB	4P TE AAPVA004C0		USBコネクタ	02
CB477	VB858300	CN. BS. PIN	4P		コネクタ	01
CB502	WD398400	CN. DIN	14P YKF45-3011	J	D I Nコネクタ	05

* New Parts * 新規部品

OPERATION

Ref No.	Part No.	Description	Remarks	Markets	部 品 名	ランク
CB504	VQ046900	CN. BS. PIN	5P		コネクタ	01
CB505	VK024700	CN. BS. PIN	3P		コネクタ	01
CB522	VK026300	CN. BS. PIN	4P		コネクタ	01
CB524	LB919080	CN. BS. PIN	8P		コネクタ	02
CB525	VK024700	CN. BS. PIN	3P		コネクタ	01
△ CB541	VG879900	CN. BS. PIN	2P		コネクタ	01
CB542-543	WN103000	CLIP. FUSE	TP00351-31		ヒューズクリップ	01
△ CB544	VG879900	CN. BS. PIN	2P		コネクタ	01
CB545	VQ963300	CN. BS. PIN	12P		コネクタ	01
C4001	US065100	C. CE. CHP	0.1uF 50V B		チップセラコン	01
C4002	US163100	C. CE. CHP	1000pF 50V		チップセラコン	01
C4003-4004	US135100	C. CE. CHP	0.1uF 16V		チップセラコン	01
C4005	US163100	C. CE. CHP	1000pF 50V		チップセラコン	01
C4007	UR268220	C. EL	220uF 50V		ケミコン	01
C4008	UM388330	C. EL	330uF 6.3V		ケミコン	01
C4009	US135100	C. CE. CHP	0.1uF 16V		チップセラコン	01
C4010	US061680	C. CE. CHP	68pF 50V B		チップセラコン	01
C4011	US065100	C. CE. CHP	0.1uF 50V B		チップセラコン	01
C4012	US064100	C. CE. CHP	0.01uF 50V B		チップセラコン	01
C4013	US065100	C. CE. CHP	0.1uF 50V B		チップセラコン	01
C4015	UM388100	C. EL	100uF 6.3V		ケミコン	01
C4016	US064100	C. CE. CHP	0.01uF 50V B		チップセラコン	01
C4017	US065100	C. CE. CHP	0.1uF 50V B		チップセラコン	01
C4018	US135100	C. CE. CHP	0.1uF 16V		チップセラコン	01
C4019	US062220	C. CE. CHP	220pF 50V B		チップセラコン	01
C4021-4022	US062100	C. CE. CHP	100pF 50V B		チップセラコン	01
C4023-4027	US135100	C. CE. CHP	0.1uF 16V		チップセラコン	01
C4028-4029	US063680	C. CE. CHP	6800pF 50V B		チップセラコン	01
C4030	UR239100	C. EL	1000uF 16V		ケミコン	
C4033	WD758300	C. CE. CHP	10uF 10V		チップセラコン	01
C4034	US063100	C. CE. CHP	1000pF 50V B		チップセラコン	01
C4038-4039	US064100	C. CE. CHP	0.01uF 50V B		チップセラコン	01
C4501	US063100	C. CE. CHP	1000pF 50V B		チップセラコン	01
C4502	UM397100	C. EL	10uF 16V		ケミコン	01
C4503	US064100	C. CE. CHP	0.01uF 50V B		チップセラコン	01
C4504	WV360900	C. EL	22uF 16V		ケミコン	01
C4505	US062100	C. CE. CHP	100pF 50V B		チップセラコン	01
C4506	UM397470	C. EL	47uF 16V		ケミコン	01
C4507	US061330	C. CE. CHP	33pF 50V B		チップセラコン	01
C4510-4511	WV360900	C. EL	22uF 16V		ケミコン	01
C4512	UM397100	C. EL	10uF 16V		ケミコン	01
C4701-4702	US063100	C. CE. CHP	1000pF 50V B		チップセラコン	01
C4761-4762	WJ609500	C. MYLAR	3300pF 100V		マイラーコン	01
C4763	US064100	C. CE. CHP	0.01uF 50V B		チップセラコン	01
C4764	US063100	C. CE. CHP	1000pF 50V B		チップセラコン	01
C5003-5004	US062100	C. CE. CHP	100pF 50V B		チップセラコン	01
C5005-5007	US060800	C. CE. CHP	8pF 50V B		チップセラコン	01
C5008	US135100	C. CE. CHP	0.1uF 16V		チップセラコン	01
C5009-5012	UR237100	C. EL	10uF 16V		ケミコン	
C5013-5018	WD758300	C. CE. CHP	10uF 10V		チップセラコン	01
C5019-5020	WG251600	C. CE. CHP	4.7uF 6.3V		チップセラコン	01
C5021	US135100	C. CE. CHP	0.1uF 16V		チップセラコン	01
C5022	UR237100	C. EL	10uF 16V		ケミコン	
C5023	UR837220	C. EL	22uF 16V		ケミコン	01
C5024-5035	US135100	C. CE. CHP	0.1uF 16V		チップセラコン	01
C5036-5037	UR238100	C. EL	100uF 16V		ケミコン	
C5038-5042	US135100	C. CE. CHP	0.1uF 16V		チップセラコン	01

* New Parts * 新規部品

OPERATION

	Ref No.	Part No.	Description	Remarks	Markets	部 品 名	ランク
	C5043	WD758300	C. CE. CHP	10uF 10V		チップセラコン	01
	C5045-5048	US135100	C. CE. CHP	0. 1uF 16V		チップセラコン	01
	C5201	UR237330	C. EL	33uF 16V		ケミコン	
	C5202	UR237470	C. EL	47uF 16V		ケミコン	01
	C5203	UR237330	C. EL	33uF 16V		ケミコン	
	C5204	UR237470	C. EL	47uF 16V		ケミコン	01
△	C5205-5207	UR266100	C. EL	1uF 50V		ケミコン	01
	C5209-5210	UR266100	C. EL	1uF 50V		ケミコン	01
	C5212	UR266100	C. EL	1uF 50V		ケミコン	01
	C5213-5214	UR239220	C. EL	2200uF 16V		ケミコン	02
	C5215	UR249470	C. EL	4700uF 25V		ケミコン	04
	C5216	UR249220	C. EL	2200uF 25V		ケミコン	02
	C5217-5220	WJ611400	C. MYLAR	0. 1uF 100V J		マイラーコン	01
	C5221	WJ610200	C. MYLAR	0. 01uF 100V		マイラーコン	01
	C5301	US135100	C. CE. CHP	0. 1uF 16V		チップセラコン	01
△	C5401	WJ361200	C. POL. MTL	0. 047uF 400V	JUC	メタライズドポリコン	
△	C5401	WJ361800	C. POL. MTL	0. 022uF 630V	RTKABGFL	メタライズドポリコン	
△	C5402-5403	WQ902300	C. CE. SAFTY	1000pF 250V		規格認定コンデンサ	01
△	C5404	V5877700	C. MYLAR	0. 22uF 250V		マイラーコン	03
△	C5405	WQ939400	C. CE. SAFTY	0. 01uF 250V		規格認定コンデンサ	01
△	C5406	WJ610400	C. MYLAR	0. 015uF 100V		マイラーコン	
△	C5407	WW766000	C. EL	220uF 220V	JUC	ケミコン	
△	C5407	WW766100	C. EL	150uF 400V	R	ケミコン	
△	C5407	WQ852500	C. EL	68uF 400V	TKABGFL	ケミコン	
△	C5408	UR867220	C. EL	22uF 50V		ケミコン	01
△	C5410	WR246900	C. CE. CHP	3300pF 250V		チップセラコン	
△	C5411	WY685500	C. CE. SAFTY	3300pF 250V	JUC	規格認定コンデンサ	01
△	C5411	WQ902200	C. CE. SAFTY	2200pF 250V	RTKABGFL	規格認定コンデンサ	01
△	C5412	WJ361200	C. POL. MTL	0. 047uF 400V	JUC	メタライズドポリコン	
△	C5412	WJ361800	C. POL. MTL	0. 022uF 630V	RTKABGFL	メタライズドポリコン	
	C5413	WJ322300	C. CE. M. CHP	1000pF 630V		チップ積層セラコン	01
	C5414-5415	WH776400	C. EL	2200uF 25V		ケミコン	03
	C5416	US034470	C. CE. CHP	0. 047uF 16V B		チップセラコン	01
	C5418	WH771600	C. EL	220uF 10V		ケミコン	
	C5419	WJ608900	C. MYLAR	1000pF 100V		マイラーコン	01
	D4003-4004	WW783900	DIODE	1SS355VM		ダイオード	
	D4005-4006	WY163000	DIODE. ZENR	UDZV4. 3B		ツェナーダイオード	
	D4007-4008	WW783900	DIODE	1SS355VM		ダイオード	
	D4013-4016	WW783900	DIODE	1SS355VM		ダイオード	
	D4501-4502	WW783900	DIODE	1SS355VM		ダイオード	
	D4503	WY163200	DIODE. ZENR	UDZV5. 1B		ツェナーダイオード	01
	D4504	WR095700	LED	8224-10SDRD/S530A3		LED	01
	D4761-4762	WW783900	DIODE	1SS355VM		ダイオード	
	D5201	WW783900	DIODE	1SS355VM		ダイオード	
△	D5202	WS694500	DIODE. ZENR	HZU5. 6B3 TRF-E		ツェナーダイオード	
△	D5204	WA653100	DIODE. BRG	KBP103G 1A 200V	R	ブリッジダイオード	02
△	D5205	WY164100	DIODE. ZENR	UDZV12B		ツェナーダイオード	
△	D5206	WH487300	DIODE. BRG	RS203M 2. 0A 200V		ブリッジダイオード	02
△	D5207-5208	WW783900	DIODE	1SS355VM		ダイオード	
△	D5401	WW872000	DIODE. BRG	DBL155G 1. 5A 600		ブリッジダイオード	
△	D5402	WE665600	DIODE	RF101L2STE25		ダイオード	
△	D5403	WW170700	DIODE	SARS05		ダイオード	
△	D5404	WW745500	DIODE. SCHOTTKY	RB215T-90 20A 90V		ショットキーダイオード	
△	D5405-5409	WW783900	DIODE	1SS355VM		ダイオード	
△	F5401	WR944000	FUSE	2A 250V	JUCR	ヒューズ	
△	F5402	WB221200	FUSE	T6A 125V		ヒューズ	01
△	F5402	VV071700	FUSE	3. 15A 250V	TKABGFL	ヒューズ	01

* New Parts * 新規部品

OPERATION

Ref No.	Part No.	Description	Remarks	Markets	部 品 名	ランク
	IC401	X6386A00 IC	M66003-0131FP		I C	07
	IC471	X7378A00 IC	NJM4565M (TE1)		アンプ I C	01
*	IC501	YE018A00 IC	NJM41033V		アンプ I C	
*	IC502	YD948A00 IC	NJW1329FH2		I C	
	IC521	X6248A00 IC	NJM2388F33		電源 I C	04
△	IC522	X4153A00 IC	KIA7812API		電源 I C	02
△	IC523	X4154A00 IC	KIA7912PI		電源 I C	03
	IC531	YA381A00 IC	LM19C1Z/LF THERMAL		電源 I C	04
	IC532	YA381A00 IC	LM19C1Z/LF THERMAL	UC	電源 I C	04
△	IC541	YD188A00 IC	STR2A153		電源 I C	05
△	IC542	WP388200 PHOT. CPL	TLP781 (D4-GR, F)		フォトカプラ	01
△	IC543	YA276A00 IC	TL431AC 2. 5-36V		電源 I C	02
△	IC544	WP388200 PHOT. CPL	TLP781 (D4-GR, F)		フォトカプラ	01
	JK401	ZA305700 JACK. MINI	MSJ-035-05A-B-RF		ステレオミニジャック	
	JK451	WJ117300 JACK. MINI	MSJ-2200C AG		ミニジャック	02
	JK476	WZ975700 JACK. PHONE	MSJ-064-05B-B-RF		PHONES ジャック	
	PJ401	WZ631700 JACK. PIN	1P MTJ-032-21B-NI		ピンジャック	
	PJ501	WH381400 JACK. PIN	3P JACK G, B, R		ピンジャック	03
	PJ502-504	V7190000 JACK. PIN	2P		ピンジャック	
	PJ505	WG505100 JACK. PIN	6P		ピンジャック	04
	Q4001-4008	WC529400 TR	KTC3875S Y GR RTK		トランジスタ	01
	Q4501	WC529400 TR	KTC3875S Y GR RTK		トランジスタ	01
	Q5001	WC529500 TR	KTA1504S Y GR RTK		トランジスタ	
	Q5201	VP872700 TR	2SC4488 S, T		トランジスタ	
	Q5202	VJ927100 TR	2SC2712-Y (TE85R, F)		トランジスタ	01
	Q5203	VJ927200 TR	2SA1162-Y (TE85R, F)		トランジスタ	01
	Q5204	ZA348800 TR	KTA1046-Y-U/PFY		トランジスタ	01
	Q5205	VJ927200 TR	2SA1162-Y (TE85R, F)		トランジスタ	01
	R4042-4043	WW969500 R. MTL. OXD	120Ω 1/4W		酸化金属被膜抵抗	
	R4763-4764	V8071300 R. MTL. FLM	470Ω 1W		金属被膜抵抗	01
	R5028	WW965300 R. MTL. OXD	2. 2Ω 1/4W		酸化金属被膜抵抗	
	R5207-5208	WW972900 R. MTL. OXD	3. 3KΩ 1/4W		酸化金属被膜抵抗	
△	R5212	WW967500 R. MTL. OXD	18Ω 1/4W		酸化金属被膜抵抗	
	R5220	WW972500 R. MTL. OXD	2. 2KΩ 1/4W	R	酸化金属被膜抵抗	
	R5224	V8070000 R. MTL. FLM	1Ω 1W		金属被膜抵抗	01
	R5227	V8070000 R. MTL. FLM	1Ω 1W		金属被膜抵抗	01
*	R5401-5402	WR033300 R. CHP	4. 7KΩ 1/4W		チップ抵抗	
△	R5403	WU547900 R. ANTI. SURGE	3MΩ 1/2W		耐サージ固定抵抗	
*	R5404	WY078600 R. CHP	0. 75Ω 1W		チップ抵抗	
*	R5406	WW745400 R. CHP	150KΩ 1/2W		チップ抵抗	
*	R5407	VF167800 R. CHP	47Ω 1W		チップ抵抗	
△	RY541	WQ804100 RELAY	DC DLS5D1-0 (M) 0. 25		リレー	04
	SW401-404	WD483100 SW. TACT	SKRGAAD010		タクトスイッチ	01
	SW407-409	WD483100 SW. TACT	SKRGAAD010		タクトスイッチ	01
	SW411-421	WD483100 SW. TACT	SKRGAAD010		タクトスイッチ	01
	SW451	WD483100 SW. TACT	SKRGAAD010		タクトスイッチ	01
	SW471	WD483100 SW. TACT	SKRGAAD010		タクトスイッチ	01
	SW473	V9597100 SW. RT. ENC	EC12E2460802		ロータリーエンコーダ	04
△	T5401	YD325A00 TRANS. SUB			サブトランス	
△	TH541	WF544600 PTC. THERMISTOR	NTPAD5R1LDNB0 5. 1		P T Cサーミスタ	03
	U4001	WQ600700 L. DTCT	SM3385VMH6		リモコン受光ユニット	03
	V4001	WW890900 FL. DSPLY	18-MT-11GNK		蛍光表示管	
*		ZA889400 SPACER	4. 3x8x30		スペーサー	
		WE774200 SCR. BND. HD	3x10 MFZN2W3		バインドBタイトネジ	01

* New Parts * 新規部品

MAIN

	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
* * *		ZA570800	P. C. B.	MAIN		JUCTA	P C B M A I N	
		ZA570900	P. C. B.	MAIN		R	P C B M A I N	
		ZA571000	P. C. B.	MAIN		KBGFL	P C B M A I N	
	CB208	LB932060	CN. BS. PIN	6P			コネクター	01
	CB209	VQ963700	CN. BS. PIN	16P			コネクター	02
	CB210	VQ963900	CN. BS. PIN	18P			コネクター	03
	CB211	VM973500	CN. BS. PIN	17P			コネクター	01
	CB251	VQ963400	CN. BS. PIN	13P			コネクター	01
	CB252	VQ962100	CN. BS. PIN	18P			コネクター	03
	CB271	VQ963600	CN. BS. PIN	15P			コネクター	01
	CB272	VQ961900	HOUSING	16P			ハウジング	03
	CB301	VQ961500	CN. BS. PIN	12P			コネクター	01
	CB351	V9377900	CN. BS. PIN	4P		R	コネクター	
	CB352-353	WN077700	CLIP. FUSE	CLIP PFC5000-0202F		R	ヒューズクリップ	
	CB371	VQ044400	CN. BS. PIN	9P			コネクター	01
	CB372	VB858600	CN. BS. PIN	7P			コネクター	01
	CB373	VB858200	CN. BS. PIN	3P			コネクター	01
	G2001-2003	UU267100	C. EL	10uF 50V			ケミコン	01
	G2004-2007	WY270200	C. EL	10uF 50V			ケミコン	
	G2009	US062120	C. CE. CHP	120pF 50V B			チップセラコン	01
	G2010	US062220	C. CE. CHP	220pF 50V B			チップセラコン	01
	G2011	US062120	C. CE. CHP	120pF 50V B			チップセラコン	01
	G2012	US062220	C. CE. CHP	220pF 50V B			チップセラコン	01
	G2013	US062120	C. CE. CHP	120pF 50V B			チップセラコン	01
	G2014	US062220	C. CE. CHP	220pF 50V B			チップセラコン	01
	G2015	US062120	C. CE. CHP	120pF 50V B			チップセラコン	01
	G2016	US062220	C. CE. CHP	220pF 50V B			チップセラコン	01
	G2017	US062120	C. CE. CHP	120pF 50V B			チップセラコン	01
	G2018	US062220	C. CE. CHP	220pF 50V B			チップセラコン	01
	G2019	US062120	C. CE. CHP	120pF 50V B			チップセラコン	01
	G2020	US062220	C. CE. CHP	220pF 50V B			チップセラコン	01
	G2021	US062120	C. CE. CHP	120pF 50V B			チップセラコン	01
	G2022	US062220	C. CE. CHP	220pF 50V B			チップセラコン	01
	G2023	WJ609500	C. MYLAR	3300pF 100V			マイラーコン	01
	G2024	UR237470	C. EL	47uF 16V			ケミコン	01
	G2025	WJ609500	C. MYLAR	3300pF 100V			マイラーコン	01
	G2026	UR237470	C. EL	47uF 16V			ケミコン	01
	G2027	WJ609500	C. MYLAR	3300pF 100V			マイラーコン	01
	G2028	UR237470	C. EL	47uF 16V			ケミコン	01
	G2029	WJ609500	C. MYLAR	3300pF 100V			マイラーコン	01
	G2030	UR237470	C. EL	47uF 16V			ケミコン	01
	G2031	WJ609500	C. MYLAR	3300pF 100V			マイラーコン	01
	G2032	UR237470	C. EL	47uF 16V			ケミコン	01
	G2033	WJ609500	C. MYLAR	3300pF 100V			マイラーコン	01
	G2034	UR237470	C. EL	47uF 16V			ケミコン	01
	G2035	WJ609500	C. MYLAR	3300pF 100V			マイラーコン	01
	G2036	UR237470	C. EL	47uF 16V			ケミコン	01
	G2037-2043	WQ627600	C. CE	22pF 500V			セラコン	01
	G2044-2050	WJ608400	C. MYLAR	330pF 100V			マイラーコン	
△	G2051-2057	US064100	C. CE. CHP	0. 01uF 50V B			チップセラコン	01
	G2058-2064	UR267100	C. EL	10uF 50V			ケミコン	
	G2065-2071	WJ610600	C. MYLAR	0. 022uF 100V			マイラーコン	01
△	G2072-2073	WN156000	C. PP	1000pF 250V			P Pコン	01
	G2075	UR866470	C. EL	4. 7uF 50V			ケミコン	01
	G2076	UR828220	C. EL	220uF 10V			ケミコン	01
	G2077	UR257100	C. EL	10uF 35V			ケミコン	01
	G2078	UR267330	C. EL	33uF 50V			ケミコン	01

* New Parts * 新規部品

MAIN

Ref No.	Part No.	Description	Remarks	Markets	部 品 名	ランク
C2079-2080	UR297100	C. EL	10uF 100V		ケミコン	
C2081	US063100	C. CE. CHP	1000pF 50V B		チップセラコン	01
C2082-2083	UR297100	C. EL	10uF 100V		ケミコン	
△ * C2084-2085	ZC889300	C. EL	6800uF 63V		ケミコン	
C2086-2096	WJ610200	C. MYLAR	0. 01uF 100V		マイラーコン	01
C2097-2099	WJ610400	C. MYLAR	0. 015uF 100V		マイラーコン	
C2100	UR278100	C. EL	100uF 63V		ケミコン	01
C2101	UR267100	C. EL	10uF 50V		ケミコン	
C2102	UR258100	C. EL	100uF 35V		ケミコン	01
C2103-2104	WJ611400	C. MYLAR	0. 1uF 100V J		マイラーコン	01
C2105	UR268100	C. EL	100uF 50V		ケミコン	
C2106	UR267470	C. EL	47uF 50V		ケミコン	01
C2107-2109	US035100	C. CE. CHP	0. 1uF 16V B		チップセラコン	01
C2110-2111	US061220	C. CE. CHP	22pF 50V B		チップセラコン	01
C2112	US035100	C. CE. CHP	0. 1uF 16V B		チップセラコン	01
C2113-2115	WY270200	C. EL	10uF 50V		ケミコン	
C2116	US035100	C. CE. CHP	0. 1uF 16V B		チップセラコン	01
C2117-2120	US062220	C. CE. CHP	220pF 50V B		チップセラコン	01
C2121	UR837100	C. EL	10uF 16V		ケミコン	01
C2123	US061470	C. CE. CHP	47pF 50V B		チップセラコン	01
C2124	US035100	C. CE. CHP	0. 1uF 16V B		チップセラコン	01
C2126	US035100	C. CE. CHP	0. 1uF 16V B		チップセラコン	01
C2127	US061470	C. CE. CHP	47pF 50V B		チップセラコン	01
C2128	UR837100	C. EL	10uF 16V		ケミコン	01
C2129	US062220	C. CE. CHP	220pF 50V B		チップセラコン	01
C2130-2131	WY270200	C. EL	10uF 50V		ケミコン	
C2132	US062220	C. CE. CHP	220pF 50V B		チップセラコン	01
C2133-2134	WY270200	C. EL	10uF 50V		ケミコン	
C2135-2136	UR067470	C. EL	47uF 50V		ケミコン	01
C2137	VR169200	C. MYLAR	0. 47uF 50V		マイラーコン	01
C2138	US062100	C. CE. CHP	100pF 50V B		チップセラコン	01
C2139	US064100	C. CE. CHP	0. 01uF 50V B		チップセラコン	01
C2140	WY270200	C. EL	10uF 50V		ケミコン	
C2141-2142	UR267470	C. EL	47uF 50V		ケミコン	01
C2143-2144	WY270200	C. EL	10uF 50V		ケミコン	
C2145-2146	US062820	C. CE. CHP	820pF 50V B		チップセラコン	01
C2147-2148	UR277470	C. EL	47uF 63V		ケミコン	01
C2505	US062100	C. CE. CHP	100pF 50V B		チップセラコン	01
C2506-2507	WY270200	C. EL	10uF 50V		ケミコン	
C2508	WJ608700	C. MYLAR	680pF 100V		マイラーコン	
C2510	UR267470	C. EL	47uF 50V		ケミコン	01
C2512	UR267470	C. EL	47uF 50V		ケミコン	01
C2513	WJ608700	C. MYLAR	680pF 100V		マイラーコン	
C2514-2515	WY270200	C. EL	10uF 50V		ケミコン	
C2516-2517	US062100	C. CE. CHP	100pF 50V B		チップセラコン	01
C2518-2519	WY270200	C. EL	10uF 50V		ケミコン	
C2520	WJ608700	C. MYLAR	680pF 100V		マイラーコン	
C2523	WJ608700	C. MYLAR	680pF 100V		マイラーコン	
C2524-2525	WY270200	C. EL	10uF 50V		ケミコン	
C2526	US062100	C. CE. CHP	100pF 50V B		チップセラコン	01
C2527	WJ609900	C. MYLAR	6800pF 100V		マイラーコン	01
C2528-2529	WY270200	C. EL	10uF 50V		ケミコン	
C2530	WJ611000	C. MYLAR	0. 047uF 100V		マイラーコン	
C2533	WJ608700	C. MYLAR	680pF 100V		マイラーコン	
C2534-2535	WY270200	C. EL	10uF 50V		ケミコン	
C2536-2537	US062100	C. CE. CHP	100pF 50V B		チップセラコン	01
C2538-2539	WY270200	C. EL	10uF 50V		ケミコン	

* New Parts * 新規部品

MAIN

Ref No.	Part No.	Description	Remarks	Markets	部 品 名	ランク
	C2540	US062680 C. CE. CHP	680pF 50V B		チップセラコン	01
	C2542	US035100 C. CE. CHP	0. 1uF 16V B		チップセラコン	01
	C2544	US035100 C. CE. CHP	0. 1uF 16V B		チップセラコン	01
	C2545	US062680 C. CE. CHP	680pF 50V B		チップセラコン	01
	C2546-2547	WY270200 C. EL	10uF 50V		ケミコン	
	C2548	US062100 C. CE. CHP	100pF 50V B		チップセラコン	01
	C2701	UR067100 C. EL	10uF 50V		ケミコン	01
	C2702	UU238100 C. EL	100uF 16V		ケミコン	01
	C3003	US064100 C. CE. CHP	0. 01uF 50V B		チップセラコン	01
*	C3004	WY269800 C. EL	1uF 50V RX		ケミコン	
*	C3005	WY269900 C. EL	2. 2uF 50V RX		ケミコン	
	C3006	US064100 C. CE. CHP	0. 01uF 50V B		チップセラコン	01
	D2003-2016	WW783900 DIODE	1SS355VM		ダイオード	
△	D2017-2023	WY163200 DIODE. ZENR	UDZV5. 1B		ツェナーダイオード	01
	D2024-2030	WW783900 DIODE	1SS355VM		ダイオード	
	D2031	WY164200 DIODE. ZENR	UDZV13B		ツェナーダイオード	
	D2032-2033	VN008700 DIODE	1SS270A		ダイオード	01
	D2034	WW783900 DIODE	1SS355VM		ダイオード	
	D2035-2036	VN008700 DIODE	1SS270A		ダイオード	01
	D2037	WW783900 DIODE	1SS355VM		ダイオード	
	D2038-2040	VN008700 DIODE	1SS270A		ダイオード	01
	D2041-2043	WW783900 DIODE	1SS355VM		ダイオード	
△	D2044	WU201600 DIODE	1N4003S TP		ダイオード	01
	D2045	WW783900 DIODE	1SS355VM		ダイオード	
△	D2046	WA653200 DIODE. BRG	TS6P03G 6A 200V		ブリッジダイオード	04
	D2047	WW783900 DIODE	1SS355VM		ダイオード	
*	D2048	ZC567600 DIODE. ZENR	UDZS39B TE-17 39V		ツェナーダイオード	
	D2049	VD631600 DIODE	1SS133, 176		ダイオード	01
	D2052-2053	VG438400 DIODE. ZENR	MTZJ6. 8C 6. 8V		ツェナーダイオード	01
	D2701	WW783900 DIODE	1SS355VM		ダイオード	
	D3001-3005	WW783900 DIODE	1SS355VM		ダイオード	
	F3501	VV071700 FUSE	3. 15A 250V	R	ヒューズ	01
*	IC201	YD953A00 IC	BD3473KS2		I C	
*	IC202	YD779A00 IC	BA4560F OP AMP		アンプ I C	
	IC203	XZ509A00 IC	TC74VHC04FT INVER		ロジック I C	01
*	IC251-254	YD779A00 IC	BA4560F OP AMP		アンプ I C	
	IC271	X4928A00 IC	KIA7805AP1 5V		電源 I C	02
	PJ201	V9420700 JACK. PIN	2P MSP-252V1-30NI		ピンジャック	
	PJ202-203	V7046700 JACK. PIN	4P MSP-244V1-01NI		ピンジャック	03
	PJ204	V7189700 JACK. PIN	1P		ピンジャック	01
	Q2001-2014	V7421700 TR. CHP	2SC3324-GR, BL		チップトランジスタ	01
	Q2015-2021	V3966800 TR	2SA949 O, Y		トランジスタ	02
△	Q2022-2028	WT676000 TR	2SD2705S		トランジスタ	13
△	Q2029-2035	VR325600 TR	2SC2229 O, Y		トランジスタ	01
△	Q2036	VP872700 TR	2SC4488 S, T		トランジスタ	01
△	Q2037	VP872600 TR	2SA1708 S, T		トランジスタ	01
△	Q2038	VP872700 TR	2SC4488 S, T		トランジスタ	01
△	Q2039	VP872600 TR	2SA1708 S, T		トランジスタ	01
△	Q2040	VP872700 TR	2SC4488 S, T		トランジスタ	01
△	Q2041	VP872600 TR	2SA1708 S, T		トランジスタ	01
△	Q2042	VP872700 TR	2SC4488 S, T		トランジスタ	01
△	Q2043	VP872600 TR	2SA1708 S, T		トランジスタ	01
△	Q2044	VP872700 TR	2SC4488 S, T		トランジスタ	01
△	Q2045	VP872600 TR	2SA1708 S, T		トランジスタ	01
	Q2046	VP872700 TR	2SC4488 S, T		トランジスタ	01
	Q2047	VP872600 TR	2SA1708 S, T		トランジスタ	01
	Q2048	VP872700 TR	2SC4488 S, T		トランジスタ	01

* New Parts * 新規部品

MAIN

	Ref No.	Part No.	Description	Remarks	Markets	部 品 名	ランク
	Q2049	VP872600	TR	2SA1708 S, T		トランジスタ	01
△ *	Q2050	ZA891500	TR	2SC5198 ST		トランジスタ	
△ *	Q2051	ZA894200	TR	2SA1941 ST		トランジスタ	
△ *	Q2052	ZA891500	TR	2SC5198 ST		トランジスタ	
△ *	Q2053	ZA894200	TR	2SA1941 ST		トランジスタ	
△ *	Q2054	ZA891500	TR	2SC5198 ST		トランジスタ	
△ *	Q2055	ZA894200	TR	2SA1941 ST		トランジスタ	
△ *	Q2056	ZA891500	TR	2SC5198 ST		トランジスタ	
△ *	Q2057	ZA894200	TR	2SA1941 ST		トランジスタ	
△ *	Q2058	ZA891500	TR	2SC5198 ST		トランジスタ	
△ *	Q2059	ZA894200	TR	2SA1941 ST		トランジスタ	
*	Q2060	ZA891500	TR	2SC5198 ST		トランジスタ	
*	Q2061	ZA894200	TR	2SA1941 ST		トランジスタ	
*	Q2062	ZA891500	TR	2SC5198 ST		トランジスタ	
*	Q2063	ZA894200	TR	2SA1941 ST		トランジスタ	
	Q2064-2070	V7421700	TR. CHP	2SC3324-GR, BL		チップトランジスタ	01
	Q2071	V7421800	TR	2SA1312-GR, BL		トランジスタ	01
△	Q2072	VP872600	TR	2SA1708 S, T		トランジスタ	01
△	Q2073	WC398400	TR	2N5551C-AT		トランジスタ	01
△	Q2074	WC397700	TR	2N5401C-AT		トランジスタ	01
△	Q2075-2076	WW510000	TR	KTA1659A-Y-U/PF		トランジスタ	01
	Q2077	WB228800	TR	KTC3198 Y AT		トランジスタ	01
△	Q2078	WC398400	TR	2N5551C-AT		トランジスタ	01
	Q2079	WC435000	TR. DGT	KRC102S-RTK		デジタルトランジスタ	01
	Q2080	WC434900	TR. DGT	KRA104S-RTK		デジタルトランジスタ	01
	Q2081	WC435000	TR. DGT	KRC102S-RTK		デジタルトランジスタ	01
	Q2082	WC434900	TR. DGT	KRA104S-RTK		デジタルトランジスタ	01
	Q2083	WC435000	TR. DGT	KRC102S-RTK		デジタルトランジスタ	01
	Q2084	WC434900	TR. DGT	KRA104S-RTK		デジタルトランジスタ	01
	Q2085	WC435000	TR. DGT	KRC102S-RTK		デジタルトランジスタ	01
	Q2086	WC434900	TR. DGT	KRA104S-RTK		デジタルトランジスタ	01
	Q2087-2088	WC435000	TR. DGT	KRC102S-RTK		デジタルトランジスタ	01
	Q2089	WC434900	TR. DGT	KRA104S-RTK		デジタルトランジスタ	01
△	Q2090	VP872600	TR	2SA1708 S, T		トランジスタ	
	Q2091	WC434900	TR. DGT	KRA104S-RTK		デジタルトランジスタ	01
	Q2092-2100	WC883400	TR	2SD2704 K		トランジスタ	
	Q3001-3002	WZ461800	TR. CHP	2SC4081UBTLR		チップトランジスタ	
	Q3003	WC435100	TR. DGT	KRC104S-RTK		デジタルトランジスタ	01
△	R2114-2119	WC862200	R. MTL. FLM	120 Ω 1W		金属被膜抵抗	01
△	R2120-2127	HL005120	R. MTL. OXD	120 Ω 1/2W		酸化金属被膜抵抗	01
△	R2135-2148	HL004100	R. MTL. OXD	10 Ω 1/2W		酸化金属被膜抵抗	
△	R2149-2155	WP839400	R. CEMENT	0. 22+0. 22 3W		セメント抵抗	01
△	R2177-2183	V8070300	R. MTL. FLM	10 Ω 1W		金属被膜抵抗	01
△	R2198-2199	V8070200	R. MTL. FLM	4. 7 Ω 1W		金属被膜抵抗	
△	R2200	V8070000	R. MTL. FLM	1 Ω 1W		金属被膜抵抗	01
△	R2205	V8071600	R. MTL. FLM	1K Ω 1W		金属被膜抵抗	01
	R2221	V8072100	R. MTL. OXD	5. 6K Ω 1W		酸化金属被膜抵抗	
	R2222	WW971100	R. MTL. OXD	560 Ω 1/4W		酸化金属被膜抵抗	
	R2227	V8072000	R. MTL. OXD	4. 7K Ω 1W		酸化金属被膜抵抗	
	R2228	WW966900	R. MTL. OXD	10 Ω 1/4W		酸化金属被膜抵抗	
	R2229-2230	WW974100	R. MTL. OXD	10K Ω 1/4W		酸化金属被膜抵抗	
△	R2231	WW965300	R. MTL. OXD	2. 2 Ω 1/4W		酸化金属被膜抵抗	
	R2232-2233	V8070200	R. MTL. FLM	4. 7 Ω 1W		金属被膜抵抗	
	R2234	WW972900	R. MTL. OXD	3. 3K Ω 1/4W		酸化金属被膜抵抗	
	R2235	WW966900	R. MTL. OXD	10 Ω 1/4W		酸化金属被膜抵抗	
	R2240	WW966900	R. MTL. OXD	10 Ω 1/4W		酸化金属被膜抵抗	
	R2242	WW964500	R. MTL. OXD	1 Ω 1/4W		酸化金属被膜抵抗	


* New Parts * 新規部品

Carbon Resistors

Ref No.	Part No.	Description	Remarks	Markets	部 品 名	ランク
R2300-2301	WA621400	R. MTL. OXD	82Ω 1W J		酸化金属被膜抵抗	01
R2310	WW965300	R. MTL. OXD	2.2Ω 1/4W		酸化金属被膜抵抗	
R2312	WW970100	R. MTL. OXD	220Ω 1/4W		酸化金属被膜抵抗	
R2317	WW965300	R. MTL. OXD	2.2Ω 1/4W		酸化金属被膜抵抗	
R2332-2333	V8070100	R. MTL. FLM	2.2Ω 1W		金属被膜抵抗	01
R2701	V8070500	R. MTL. FLM	22Ω 1W		金属被膜抵抗	01
RY201-205	WJ122400	RELAY	981-2A-24DS-SP7		リレー 24V	04
RY206	WE648700	RELAY	DC DH24D2-0-Q		リレー 24V	06
ST201	V4040500	SCR. TERM	M3		スクリューターミナル	01
SW351	WV382900	SW. SLIDE	SL14	R	スライドスイッチ	
TE201	WW728900	TERM. SP	4P	JUCRTA	スピーカー端子	
TE201	WW726500	TERM. SP	4P	KBGFL	スピーカー端子	
TE202	WW728900	TERM. SP	4P	JUCRTA	スピーカー端子	
TE202	WW726500	TERM. SP	4P	KBGFL	スピーカー端子	
TE203	WW726600	TERM. SP	6P	JUCRTA	スピーカー端子	
TE203	WW728800	TERM. SP	6P	KBGFL	スピーカー端子	
TH201	V9760200	THRMST. CHP	NCP18XH103J03RB		チップサーミスタ	01
U2001-2002	WU204200	CN. PHOTO. R	1P JSR1165-D		光ファイバー受信器	
	WE774200	SCR. BND. HD	3x10 MFZN2W3		バインドBタイトネジ	01


* New Parts * 新規部品

Value	1/4W Type Part No.	1/6W Type Part No.	Value	1/4W Type Part No.	1/6W Type Part No.
1.0 Ω	HJ35 3100	HF85 3100	11 kΩ	HF45 7110	HF45 7110
1.8 Ω	HJ35 3180	※	12 kΩ	HJ35 7120	HF85 7120
2.2 Ω	HJ35 3220	HF85 3220	13 kΩ	HF45 7130	HF45 7130
3.3 Ω	HJ35 3330	HF85 3330	15 kΩ	HF45 7150	HF45 7150
4.7 Ω	HJ35 3470	HF85 3470	18 kΩ	HF45 7180	HF45 7180
5.6 Ω	HJ35 3560	HF85 3560	22 kΩ	HF45 7220	HF45 7220
10 Ω	HF45 4100	HF45 4100	24 kΩ	HF45 7240	HF45 7240
15 Ω	HJ35 4150	HF85 4150	27 kΩ	HJ35 7270	HF85 7270
22 Ω	HF45 4220	HF45 4220	30 kΩ	HF45 7300	HF45 7300
27 Ω	HJ35 4270	HF85 4270	33 kΩ	HF45 7330	HF45 7330
33 Ω	HF45 4330	HF45 4330	36 kΩ	HF45 7360	HF45 7360
39 Ω	HJ35 4470	HF85 4390	39 kΩ	HF45 7390	HF45 7390
47 Ω	HF45 4470	HF45 4470	47 kΩ	HF45 7470	HF45 7470
56 Ω	HF45 4560	HF45 4560	51 kΩ	HF45 7510	HF45 7510
68 Ω	HF45 4680	HF45 4680	56 kΩ	HF45 7560	HF45 7560
75 Ω	HF45 4750	HF45 4750	62 kΩ	HF45 7620	HF45 7620
82 Ω	HF45 4820	HF45 4820	68 kΩ	HF45 7680	HF45 7680
91 Ω	HF45 4910	HF45 4910	82 kΩ	HF45 7820	HF45 7820
100 Ω	HF45 5100	HF45 5100	91 kΩ	HF45 7910	HF45 7910
110 Ω	HJ35 5110	HF85 5110	100 kΩ	HF45 8100	HF45 8100
120 Ω	HF45 5120	HF45 5120	110 kΩ	HF45 8110	HF45 8110
150 Ω	HF45 5150	HF45 5150	120 kΩ	HF45 8120	HF45 8120
160 Ω	HJ35 5160	※	130 kΩ	HF45 8130	※
180 Ω	HF45 5180	HF45 5180	150 kΩ	HF45 8150	HF45 8150
200 Ω	HF45 5200	HF45 5200	180 kΩ	HF45 8180	HF45 8180
220 Ω	HF45 5220	HF45 5220	220 kΩ	HJ35 8220	HF85 8220
270 Ω	HF45 5270	HF45 5270	270 kΩ	HF45 8270	HF45 8270
330 Ω	HF45 5330	HF45 5330	300 kΩ	HF45 8300	HF45 8300
390 Ω	HF45 5390	HF45 5390	330 kΩ	HF45 8330	HF45 8330
430 Ω	HF45 5430	HF45 5430	390 kΩ	HJ35 8390	HF85 8390
470 Ω	HF45 5470	HF45 5470	470 kΩ	HF45 8470	HF45 8470
510 Ω	HF45 5510	HF45 5510	560 kΩ	HJ35 8560	HF85 8560
560 Ω	HF45 5560	HF45 5560	680 kΩ	HJ35 8680	HF85 8680
680 Ω	HF45 5680	HF45 5680	820 kΩ	HJ35 8820	HF85 8820
820 Ω	HF45 5820	HF45 5820	1.0 MΩ	HF45 9100	HF45 9100
910 Ω	HF45 5910	HF45 5910	1.2 MΩ	HJ35 9120	※
1.0 kΩ	HF45 6100	HF45 6100	1.5 MΩ	HJ35 9150	HF85 9150
1.2 kΩ	HF45 6120	HF45 6120	1.8 MΩ	HJ35 9180	HF85 9180
1.5 kΩ	HF45 6150	HF45 6150	2.2 MΩ	HJ35 9220	HF85 9220
1.8 kΩ	HF45 6180	HF45 6180	3.3 MΩ	HJ35 9330	HF85 9330
2.0 kΩ	HJ35 6200	HF85 6200	3.9 MΩ	HJ35 9390	※
2.2 kΩ	HF45 6220	HF45 6220	4.7 MΩ	HJ35 9470	HF85 9470
2.4 kΩ	HJ35 6240	HF85 6240			
2.7 kΩ	HF45 6270	HF45 6270			
3.0 kΩ	HF45 6300	HF45 6300			
3.3 kΩ	HF45 6330	HF45 6330			
3.6 kΩ	HJ35 6360	HF85 6360			
3.9 kΩ	HF45 6390	HF45 6390			
4.7 kΩ	HF45 6470	HF45 6470			
5.1 kΩ	HF45 6510	HF45 6510			
5.6 kΩ	HF45 6560	HF45 6560			
6.8 kΩ	HF45 6680	HF45 6680			
8.2 kΩ	HF45 6820	HF45 6820			
9.1 kΩ	HF45 6910	HF45 6910			
10 kΩ	HF45 7100	HF45 7100			

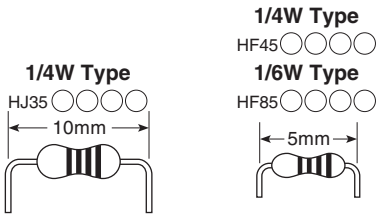

※ : Not available

• OVERALL ASSEMBLY

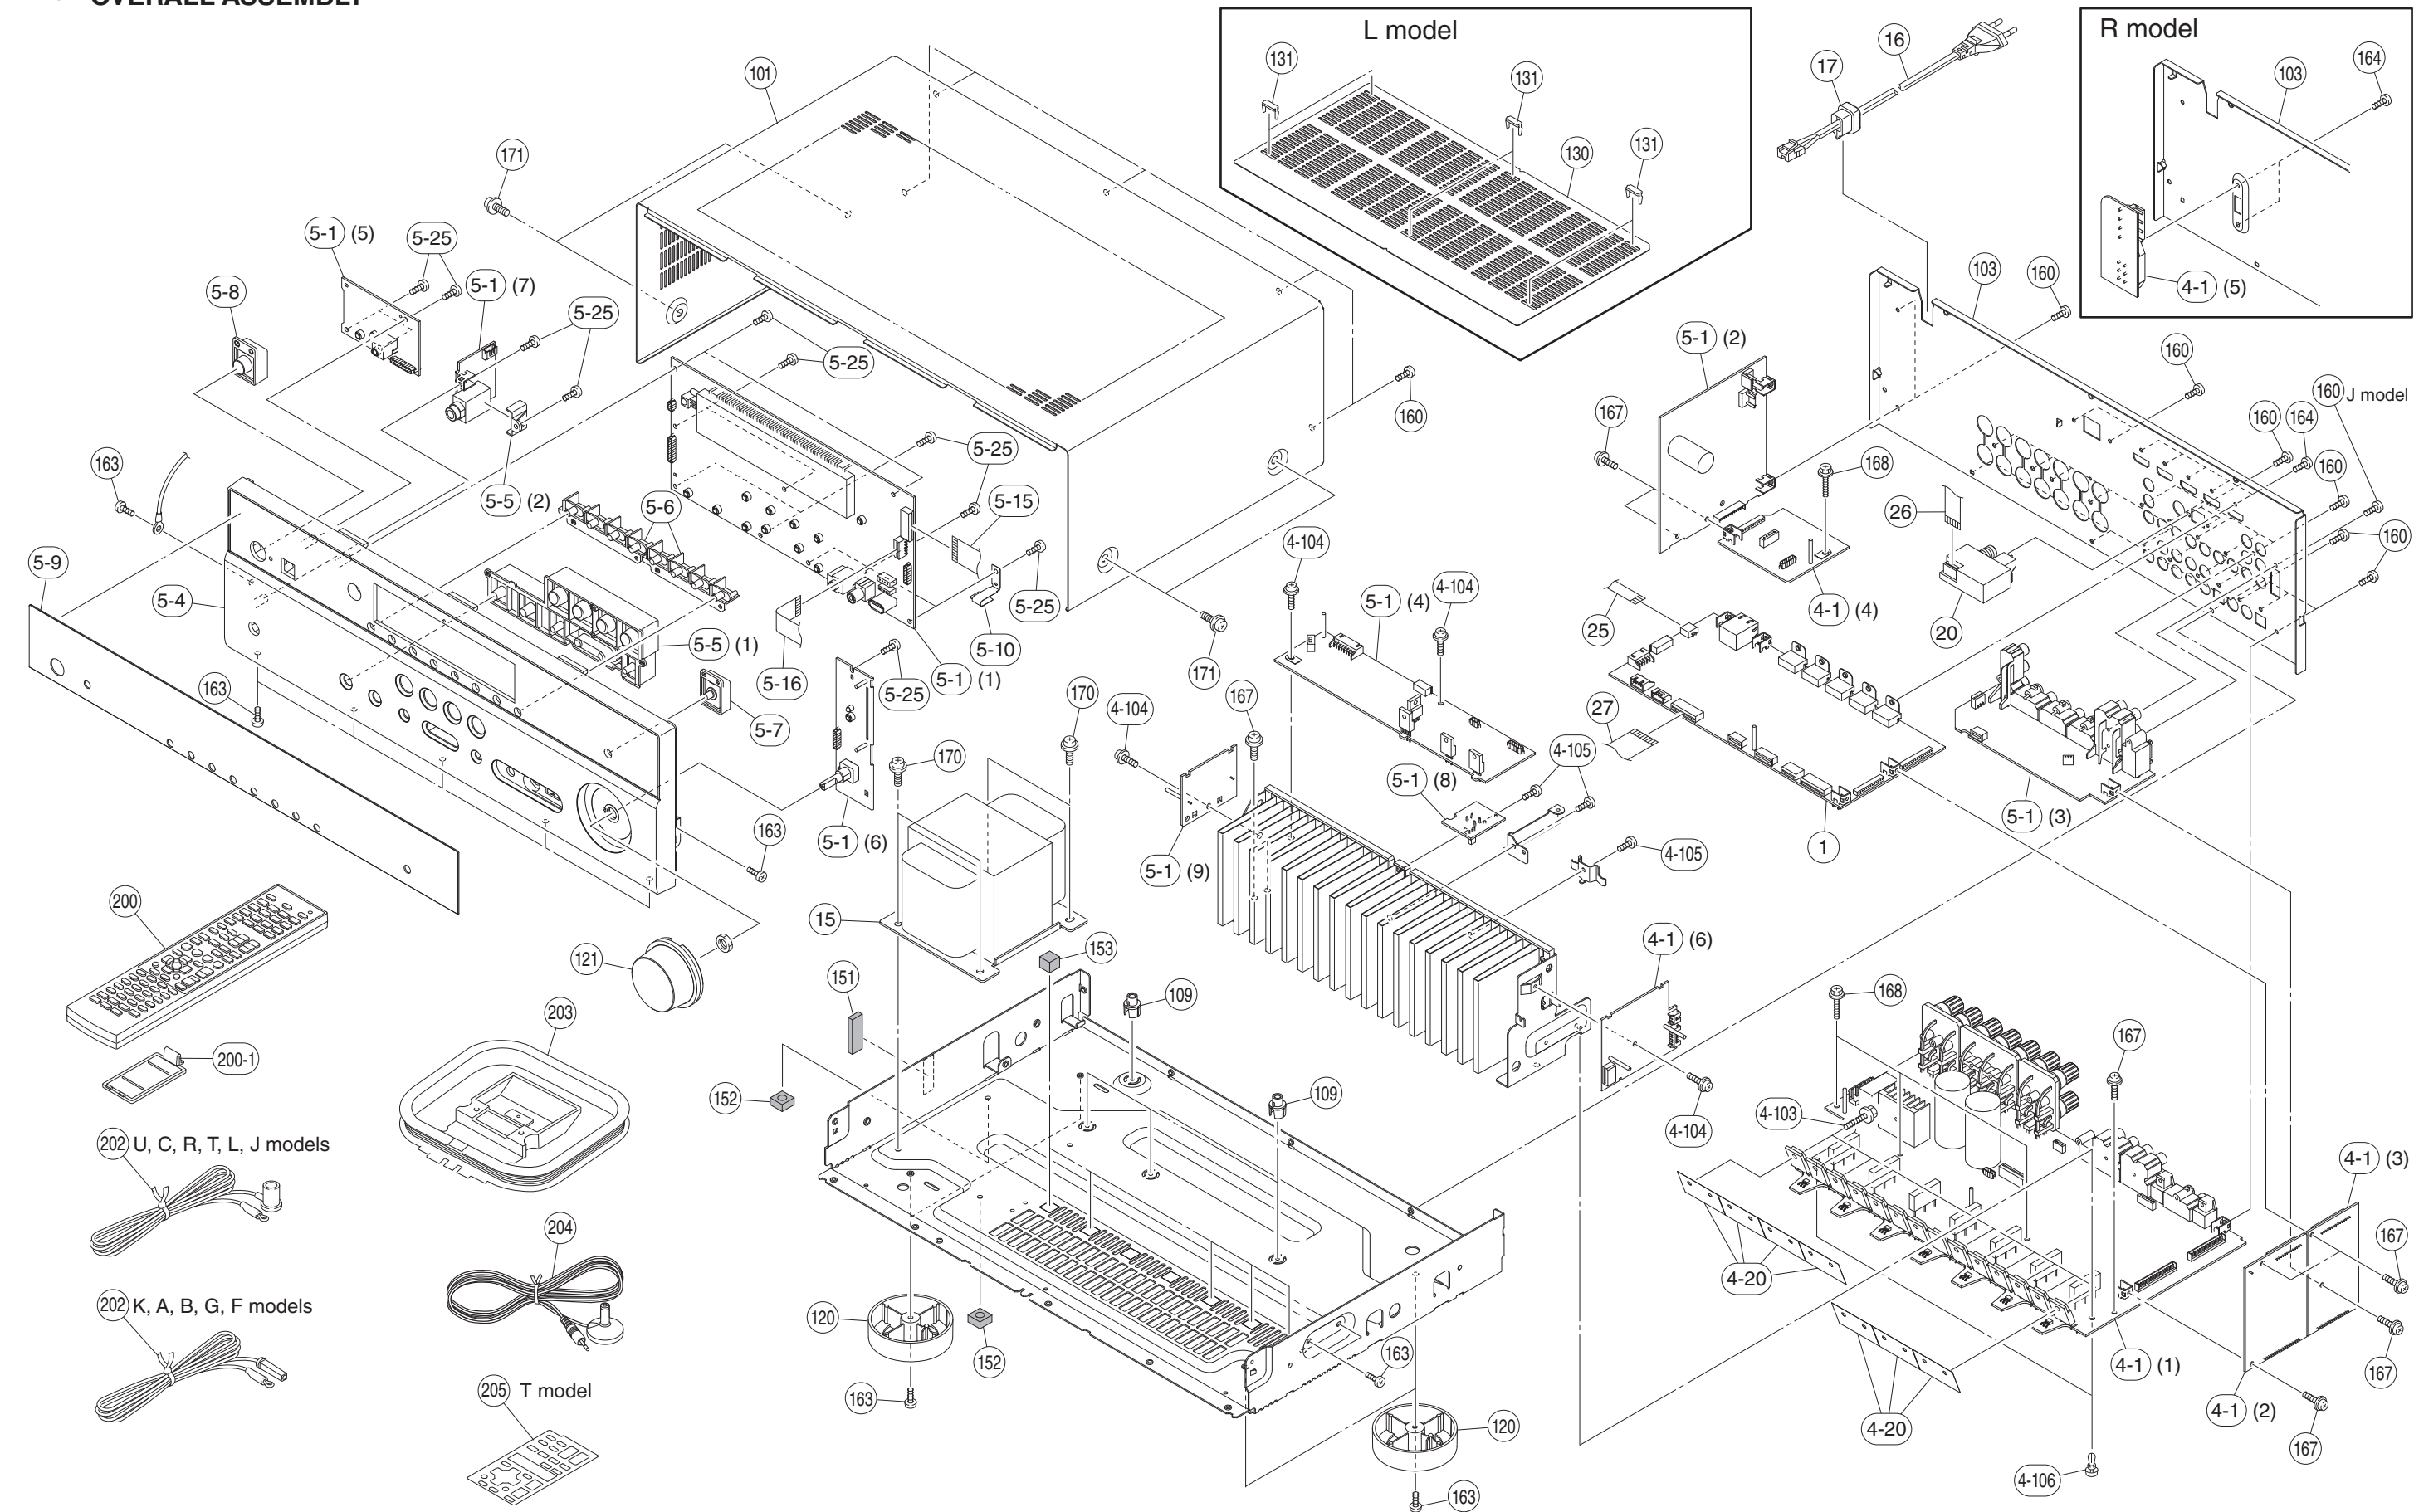

	Ref No.	Part No.	Description	Remarks	Markets	部 品 名	ランク
*	1	ZA573400	P. C. B. ASSEMBLY			P C B D I G I T A L	
*	4-1	ZA570800	P. C. B. ASSEMBLY		JUCTA	P C B M A I N	
*	4-1	ZA570900	P. C. B. ASSEMBLY		R	P C B M A I N	
*	4-1	ZA571000	P. C. B. ASSEMBLY		KBGFL	P C B M A I N	
	4-20	WQ753200	RADIATION SHEET			放熱シート	01
	4-103	WM220800	HEXAGONAL HEAD B-TIGHT SCREW			六角Bタイトネジ	01
	4-104	WF002600	PW HEAD B-TIGHT SCREW			PWヘッドBタイトネジ	01
	4-105	WE774300	BIND HEAD B-TIGHT SCREW			バインドBタイトネジ	01
	4-106	VQ368600	PUSH RIVET			プッシュリベット	01
*	5-1	ZA572300	P. C. B. ASSEMBLY		J	P C B O P E R A T I O N	
*	5-1	ZA572400	P. C. B. ASSEMBLY		U	P C B O P E R A T I O N	
*	5-1	ZA572500	P. C. B. ASSEMBLY		C	P C B O P E R A T I O N	
*	5-1	ZA572600	P. C. B. ASSEMBLY		R	P C B O P E R A T I O N	
*	5-1	ZA572700	P. C. B. ASSEMBLY		T	P C B O P E R A T I O N	
*	5-1	ZA572800	P. C. B. ASSEMBLY		K	P C B O P E R A T I O N	
*	5-1	ZA572900	P. C. B. ASSEMBLY		A	P C B O P E R A T I O N	
*	5-1	ZA573000	P. C. B. ASSEMBLY		BGF	P C B O P E R A T I O N	
*	5-1	ZA573100	P. C. B. ASSEMBLY		L	P C B O P E R A T I O N	
*	5-4	ZA756600	FRONT PANEL	GD (Gold)		フロントパネル	
*	5-4	ZA756300	FRONT PANEL	BL (Black)	J	フロントパネル	
*	5-4	ZA756400	FRONT PANEL	BL (Black)	UCRTKABGFL	フロントパネル	
*	5-4	ZA756500	FRONT PANEL	TI (Titanium)		フロントパネル	
*	5-5	ZA281500	BUTTON	SCENE	GD (Gold)	ボタン	
*	5-5	ZA281300	BUTTON	SCENE	BL (Black)	ボタン	
*	5-5	ZA281400	BUTTON	SCENE	TI (Titanium)	ボタン	
	5-6	WT823800	BUTTON	TUNER		ボタン	01
	5-7	WT843700	BUTTON	DIRECT		ボタン	01
	5-8	WT843800	BUTTON	POWER		ボタン	02
*	5-9	ZA169200	WINDOW SHEET		RX-V573	ウインドウシート	
*	5-9	ZA169300	WINDOW SHEET		HTR-5065	ウインドウシート	
	5-10	WY031500	EARTH PLATE	OPERATION		アースプレート	
	5-15	MF117250	FLEXIBLE FLAT CABLE			カード電線	04
	5-16	MF109140	FLEXIBLE FLAT CABLE			カード電線	01
	5-25	WE774800	BIND HEAD P-TIGHT SCREW			バインドPタイトネジ	01
△	*	YE068A00	POWER TRANSFORMER		J	電源トランス	
△	*	YE069A00	POWER TRANSFORMER		UC	電源トランス	
△	*	YE070A00	POWER TRANSFORMER		R	電源トランス	
△	*	YE071A00	POWER TRANSFORMER		TK	電源トランス	
△	*	YE072A00	POWER TRANSFORMER		AL	電源トランス	
△	*	YE073A00	POWER TRANSFORMER		BGF	電源トランス	
△	16	WZ527200	POWER CABLE		J	電源コード	07
△	16	WY040900	POWER CABLE		UC	電源コード	
△	16	WY042600	POWER CABLE		T	電源コード	
△	16	WY042500	POWER CABLE		R	電源コード	
△	16	WY042400	POWER CABLE		K	電源コード	
△	16	WY042100	POWER CABLE		A	電源コード	
△	16	WY041100	POWER CABLE		B	電源コード	
△	16	WY041700	POWER CABLE		GFL	電源コード	
	17	V2438700	CORD STOPPER			コードストッパー	02
	20	WW891000	AM/FM TUNER		JUCRTL	AM／FMチューナー	09
	20	WW891100	AM/FM TUNER		KABGF	AM／FMチューナー	
	25	MF105140	FLEXIBLE FLAT CABLE			カード電線	
	26	MF109180	FLEXIBLE FLAT CABLE			カード電線	04

* New Parts * 新規部品

	Ref No.	Part No.	Description	Remarks	Markets	部 品 名	ランク
	27	MF117120	FLEXIBLE FLAT CABLE			17P 120mm P=1. 25	
*	101	ZA165500	TOP COVER	GD (Gold)		トップカバー	02
*	101	ZA165300	TOP COVER	BL (Black)		トップカバー	
*	101	ZA165400	TOP COVER	TI (Titanium)		トップカバー	
*	103	ZA167200	REAR PANEL		J	リアパネル	
*	103	ZA167300	REAR PANEL	RX-V573	UC	リアパネル	
*	103	ZA168000	REAR PANEL	HTR-5065	U	リアパネル	
*	103	ZA167400	REAR PANEL		R	リアパネル	
*	103	ZA167500	REAR PANEL		T	リアパネル	
*	103	ZA167600	REAR PANEL		K	リアパネル	
*	103	ZA167700	REAR PANEL		A	リアパネル	
*	103	ZA167800	REAR PANEL	RX-V573	BGF	リアパネル	
*	103	ZA168100	REAR PANEL	HTR-5065	F	リアパネル	
*	103	ZA167900	REAR PANEL		L	リアパネル	
	109	WQ664500	SUPPORT			サポート	01
*	120	ZC181810	LEG			レッグ	
*	121	ZA168900	KNOB	GD (Gold)		ノブ	
*	121	ZA168700	KNOB	BL (Black)		ノブ	
*	121	ZA168800	KNOB	TI (Titanium)		ノブ	
	130	WR306100	SHEET			シート	
	131	WJ053800	RIVET		L	リベット	
	151	V5881100	CUSHION			クッション	
	152	WC879000	DAMPER			ダンパー	
*	153	ZA169400	DAMPER			ダンパー	
	160	WE774100	BIND HEAD BONDING B-T. SCREW			ボンディングBタイトネジ	01
	163	WE774300	BIND HEAD B-TIGHT SCREW			バインドBタイトネジ	01
	164	WE877900	BIND HEAD S-TIGHT SCREW			バインドSタイトネジ	01
	167	WF002600	PW HEAD B-TIGHT SCREW			PWヘッドBタイトネジ	01
	168	WE774600	HEXAGONAL HEAD B-TIGHT SCREW			六角Bタイトネジ	01
	170	WU048900	BIND HEAD S-TIGHT SCREW			バインドSタイトネジ	01
	171	VD069600	PW HEAD S-TIGHT SCREW			PWヘッドSタイトネジ	01
				GD (Gold), TI (Titanium)			
	171	VH313200	PW HEAD S-TIGHT SCREW		BL (Black)	PWヘッドSタイトネジ	01
			ACCESSORIES			付属品	
*	200	ZA113700	REMOTE CONTROL	RAV465	000-213270020	リモコン	
	200-1	AAX82380	BATTERY COVER	Black	CG-2209	電池蓋	03
	202	V6267000	FM ANTENNA	1. 4m 1pc		F Mアンテナ	03
	202	VQ147100	FM ANTENNA	1. 4m 1pc	JUCRTL KABGF	F Mアンテナ	02
	203	VR248500	AM ANTENNA	1m 1pc		A Mアンテナ	03
	204	WN649600	YPAO MICROPHONE	6m 1pc	EM6022L-HN1700	Y P A Oマイク	08
*	205	ZC559800	REMOTE CONTROL SHEET			リモコンシート	
			BATTERY			単4乾電池	
						R03, AAA, UM-4 2pcs	

* New Parts * 新規部品



CODE SET

SOURCE | RECEIVER

HDMI

1 2 3 4

AV

1 2 3 4

5 6 AUDIO A

V-AUX USB NET B ZONE

TUNER

FM AM

INFO MEMORY

PRESET TUNING

MOVIE MUSIC

SUR. DECODE STRAIGHT

SLEEP ENHANCER DIRECT

SCENE

BD DVD TV NET RADIO

SETUP OPTION

ENTER

RETURN DISPLAY

VOLUME

TOP MENU POP-UP MENU MUTE

MODE

TV VOL TV CH


MUTE

RAV485 Z411870

YAMAHA



KEY NO. LAYOUT

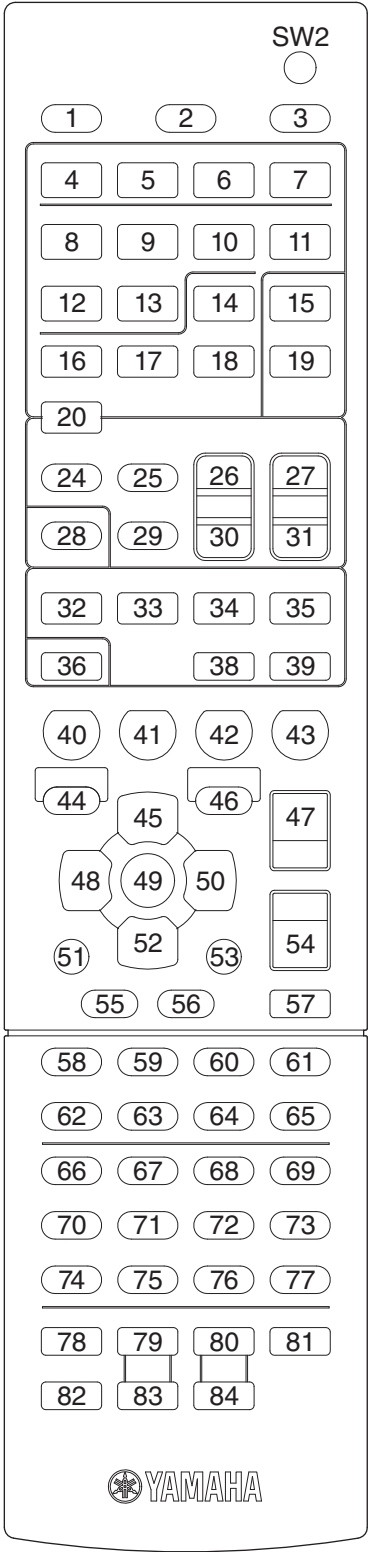


KEY CODE
RECEIVER MODE

	Key No.	FUNCTION		ID-1 (5019)		ID-2 (5020)	
		(U, C, R, T, K, A, B, G, F, L, J models)	Remote control sheet (T model)	MAIN	ZONE2	MAIN	ZONE2
	SW2	CODE SET		[CODE SET]	[CODE SET]	[CODE SET]	[CODE SET]
"RECEIVER" (mode fixed)	K2	SOURCE / RECEIVER		* select RCU mode "SOURCE" or "RECEIVER"			
	K3	RECEIVER 		7E-2A	7A-453A	7E-2AD4	7A-453B
	K4	HDMI-1		7A-4738	7A-4837	7A-4739	7A-4836
	K5	HDMI-2		7A-4A35	7A-4B34	7A-4A34	7A-4B35
	K6	HDMI-3		7A-4D32	7A-4E31	7A-4D33	7A-4E30
	K7	HDMI-4		7A-502F	7A-512E	7A-502E	7A-512F
	K8	AV-1		7A-532C	7A-542B	7A-532D	7A-542A
	K9	AV-2		7A-5629	7A-5728	7A-5628	7A-5729
	K10	AV-3		7A-5926	7A-5A25	7A-5927	7A-5A24
	K11	AV-4		7A-5C23	7A-5D22	7A-5C22	7A-5D23
	K12	AV-5		7A-5F20	7A-601F	7A-5F21	7A-601E
	K13	AV-6		7A-621D	7A-631C	7A-621C	7A-631D
	K14	AUDIO		7A-651A	7A-6619	7A-651B	7A-6618
	K15	ZONE A		7A-9A	–	7A-9A64	–
	K16	V-AUX		7A-55	7A-D8	7A-55AB	7A-D826
	K17	USB		7F01-720D	7F01-730C	7F01-720C	7F01-730D
	K18	NET		7F01-3F	7F01-40	7F01-3FC1	7F01-40BE
	K19	ZONE B		7A-9B	–	7A-9B65	–
	K20	TUNER		7A-16	7A-D2	7A-16E8	7A-D22C
	K24	FM		7F01-5827	7F01-5926	7F01-5826	7F01-5927
	K25	AM		7F01-552A	7F01-5629	7F01-552B	7F01-5628
	K26	PRESET 	预设	7F01-5B24	7F01-5C23	7F01-5B25	7F01-5C22
	K27	TUNING 	调频	7F01-611E	7F01-621D	7F01-611F	7F01-621C
	K28	INFO	信息	7A-2758	7A-2857	7A-2759	7A-2856
	K29	MEMORY	记忆	7F01-6718	7F01-6817	7F01-6719	7F01-6816
	K30	PRESET 	预设	7F01-5E21	7F01-5F20	7F01-5E20	7F01-5F21
	K31	TUNING 	调频	7F01-641B	7F01-651A	7F01-641A	7F01-651B
	K32	MOVIE	电影	7A-88	–	7A-8876	–
	K33	MUSIC	音乐	7A-89	–	7A-8977	–
	K34	SUR. DECODE	环绕	7A-8D	–	7A-8D73	–
	K35	STRAIGHT	直接立体声	7A-56	–	7A-56A8	–
	K36	SLEEP	睡眠	7A-30	7A-31	7A-30CE	7A-31CF
	K38	ENHANCER	强化	7A-94	–	7A-946A	–
	K39	DIRECT	直通	7A-DD	–	7A-DD23	–
	K40	BD/DVD (SCENE)		7A-007F	7A-017E	7A-007E	7A-017F
	K41	TV (SCENE)		7A-037C	7A-047B	7A-037D	7A-047A
	K42	NET (SCENE)		7A-0679	7A-0778	7A-0678	7A-0779
	K43	RADIO (SCENE)		7A-0976	7A-0A75	7A-0977	7A-0A74
	K44	SETUP	设置	7A-84	–	7A-847A	–
	K46	OPTION	选项	7A-6B14	–	7A-6B15	–
	K47	VOLUME (+)	音量	7A-1A	7A-DA	7A-1AE4	7A-DA24
	K54	VOLUME (-)		7A-1B	7A-DB	7A-1BE5	7A-DB25
	K57	MUTE	静音	7A-1C	7A-DC	7A-1CE2	7A-DC22

K48  (LEFT)] + K40 [SCENE -BD/DVD]	ID-1		
K48  (LEFT)] + K41 [SCENE -TV]		ID-2	

K50  (RIGHT)] + K40 [SCENE -BD/DVD]	MAIN		MAIN
K50  (RIGHT)] + K41 [SCENE -TV]		ZONE2	ZONE2

SOURCE MODE

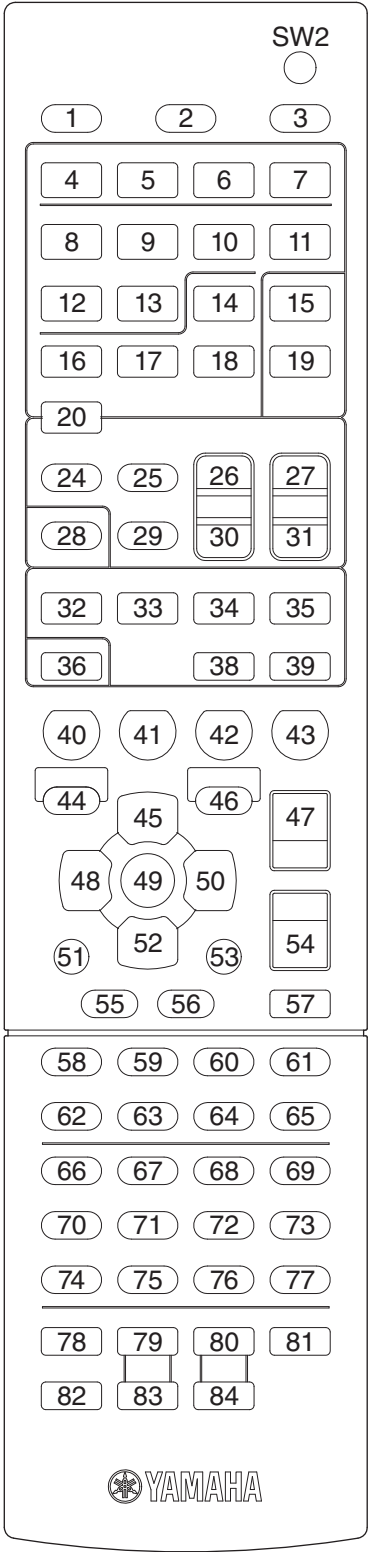


	Key No.	FUNCTION		IR code in "RECEIVER" mode				IR code in "SOURCE" mode																K20	K19	K18	K17	K16	K15	K14	K13	K12	K11	K10	K9	K8	K7	K6	K5	K4
		(U, C, R, T, K, A, B, G, F, L, J models)	Remote control sheet (T model)	ID-1		ID-2		ID-1 / ID-2		[TUNER]	[ZONE B]	[NET]	[USB]	[V-AUX]	[ZONE A]	[AUDIO]	[AV-6]	[AV-5]	[AV-4]	[AV-3]	[AV-2]	[AV-1]	[HDMI-4]	[HDMI-3]	[HDMI-2]	[HDMI-1]														
				MAIN	ZONE2	MAIN	ZONE2	MAIN / ZONE2																																
"SOURCE/RCVR"	K1	SOURCE		7F01-50	7F01-70	7F01-50AE	7F01-708E	* SOURCE *		* RECEIVER *																														
	K45			7A-9D	7A-2B54	7A-9D63	7A-2B55	* SOURCE *		* RECEIVER *																														
	K48			7A-9F	7A-2D52	7A-9F61	7A-2D53																																	
	K49	ENTER		7A-DE	7A-2F50	7A-DE20	7A-2F51																																	
	K50			7A-9E	7A-2E51	7A-9E60	7A-2E50																																	
	K51	RETURN	返回	7A-AA	7A-3C43	7A-AA54	7A-3C42																																	
	K52			7A-9C	7A-2C53	7A-9C62	7A-2C52																																	
	K53	DISPLAY	显示	7F01-60	7F01-80	7F01-609E	7F01-807E	* SOURCE *		* RECEIVER *																														
	K55	TOP MENU	主菜单	7A-A0DF	7A-A1DE	7A-A0DE	7A-A1DF																																	
	K56	POP-UP MENU	快捷菜单	7A-A4DB	7A-A5DA	7A-A4DA	7A-A5DB	* SOURCE *		* RECEIVER *																														
	* transmit "RECEIVER" code then switch RCU to "SOURCE" mode																																							
	K58	MODE		7F01-66	7F01-86	7F01-6698	7F01-8678	* empty *																																
	K59			7F01-69	7F01-89	7F01-6997	7F01-8977	* SOURCE *																																
	K60			7F01-67	7F01-87	7F01-6799	7F01-8779																																	
	K61			7F01-68	7F01-88	7F01-6896	7F01-8876																																	
	K62			7F01-6A	7F01-8A	7F01-6A94	7F01-8A74																																	
	K63			7F01-6B	7F01-8B	7F01-6B95	7F01-8B75																																	
	K64			7F01-6C	7F01-8C	7F01-6C92	7F01-8C72																																	
	K65			7F01-6D	7F01-8D	7F01-6D93	7F01-8D73	* SOURCE *																					* RECEIVER *											
	K66	1		7F01-51	7F01-71	7F01-51AF	7F01-718F																																	
	K67	2		7F01-52	7F01-72	7F01-52AC	7F01-728C																																	
	K68	3		7F01-53	7F01-73	7F01-53AD	7F01-738D																																	
	K69	4		7F01-54	7F01-74	7F01-54AA	7F01-748A																																	
	K70	5		7F01-55	7F01-75	7F01-55AB	7F01-758B																																	
	K71	6		7F01-56	7F01-76	7F01-56A8	7F01-7688																																	
	K72	7		7F01-57	7F01-77	7F01-57A9	7F01-7789																																	
	K73	8		7F01-58	7F01-78	7F01-58A6	7F01-7886																																	
K74	9		7F01-59	7F01-79	7F01-59A7	7F01-7987																																		
K75	0		7F01-5A	7F01-7A	7F01-5AA4	7F01-7A84																																		
K76	+10		7F01-5B	7F01-7B	7F01-5BA5	7F01-7B85																																		
K77	ENT		7F01-5C	7F01-7C	7F01-5CA2	7F01-7C82																																		
"SOURCE" (mode fixed)	K78	TV -INPUT		* SOURCE (TV) *				* TV -INPUT																																
	K79	TV -VOL (+)						* TV -VOL (+)																																
	K80	TV -CH (+)						* TV -CH (+)																																
	K81	TV -						* TV -																																
	K82	TV -MUTE						* TV -MUTE																																
	K83	TV -VOL (-)						* TV -VOL (-)																																
	K84	TV -CH (-)						* TV -CH (-)																																

■ CONFIGURING THE SYSTEM SETTINGS

Configure the system settings of the unit while viewing the front display.

- 1

Set the unit to standby mode.
- 2

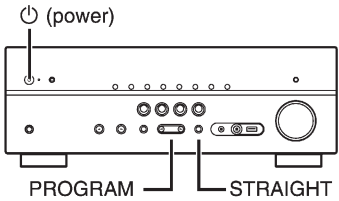While holding down **STRAIGHT** on the front panel, press  (**power**).
- 
- 3

Press **PROGRAM** to select an item.
- 4

Press **STRAIGHT** to select a setting.
- 5

Press  (**power**) to set the unit to standby mode and turn it on again.

The new settings take effect.

ADVANCED SETUP menu items

Item	Function
SP IMP. (U, C models)	Changes the speaker impedance setting.
REMOTE ID	Selects the unit's remote control ID.
TU (R, T, K, L models)	Changes the FM/AM tuning frequency setting.
TV FORMAT	Switches the video signal type of HDMI output.
INIT	Restores the default settings.
UPDATE	Updates the firmware.
VERSION	Checks the version of firmware currently installed on the unit.

Changing the speaker impedance setting (SP IMP.)

(U, C models)



Change the unit's speaker impedance settings depending on the impedance of the speakers connected.

Settings	
6 Ω MIN	Select this option when you connect 6-ohm speakers to the unit. You can also use 4-ohm speakers as the front speakers.
8 Ω MIN (default)	Select this option when you connect 8-ohm or higher speakers to the unit.

Selecting the remote control ID (REMOTE ID)



Change the unit's remote control ID so that it matches the remote control's ID (default ID1). When using multiple Yamaha AV receivers, you can set each remote control with unique remote control ID for its corresponding receiver.

Settings	
ID1 (default), ID2	

■ Changing the remote control ID of the remote control

Perform each of the following steps within 1 minute. Otherwise, the setting will be automatically canceled.

- 1

Press **CODE SET** on the remote control using a pointed object, such as the tip of ballpoint pen.
- 2

Press **SOURCE/RECEIVER**.
- 3

Use the numeric keys to enter “5019” (ID1) or “5020” (ID2).

Once the remote control ID is registered successfully, SOURCE/RECEIVER blinks twice. If it blinks six times, registration failed. Repeat from Step 1.



- The registered remote control codes are not cleared even if you change the remote control ID.

Changing the FM/AM tuning frequency setting (TU)


(R, T, K, L models)



Change the FM/AM tuning frequency setting of the unit depending on your country or region.

Settings	
FM100/AM10	Select this when you want to adjust the FM frequency by 100-kHz steps and AM by 10-kHz steps.
FM50/AM9 (default)	Select this when you want to adjust the FM frequency by 50-kHz steps and AM by 9-kHz steps.

 Switching the video signal type (TV FORMAT)



Switch the video signal type of HDMI output so that it matches to the format of your TV. Since the unit automatically selects the video signal type so that it matches to the TV, it is unnecessary to change the setting normally. Change the setting only when images on the TV screen do not appear correctly.

Settings	
NTSC, PAL	
Default	
U, C, R, K models: NTSC	
T, A, B, G, F, L models: PAL	


Restoring the default settings (INIT)



Restores the default settings for the unit.

Choices	
ALL	Restores the default settings for the unit.
CANCEL	Does not perform an initialization.

 Updating the firmware (UPDATE)



New firmware that provides additional features or product improvements will be released as needed. Updates can be downloaded from our website. If the unit is connected to the Internet, you can download the firmware via the network. For details, refer to the information supplied with updates.

■ Firmware update procedure

Do not perform this procedure unless firmware update is necessary. Also, make sure you read the information supplied with updates before updating the firmware.

- 1

Press **STRAIGHT** repeatedly to select “USB” or “NETWORK” and press **INFO** to start firmware update.
- Choices

USB	Update the firmware using a USB memory device.
NETWORK	Update the firmware via the network.



- If the unit detects newer firmware over the network, the envelope icon (✉) will appear in the “Network Update” screen. In this case, you can also update the unit's firmware by following the procedure in “Updating the unit's firmware”.

Checking the firmware version (VERSION)



Check the version of firmware currently installed on the unit.




- You can also check the firmware version in “Network Update” in the “Setup” menu.

■ システム設定を変更する

前面ディスプレイを見ながら、本機のシステム設定を変更します。

- 1
- 本機の電源が入っている場合は、電源をスタンバイにする。
- 2
- 前面の STRAIGHT キーを押しながら ㊦（電源）キーを押す。

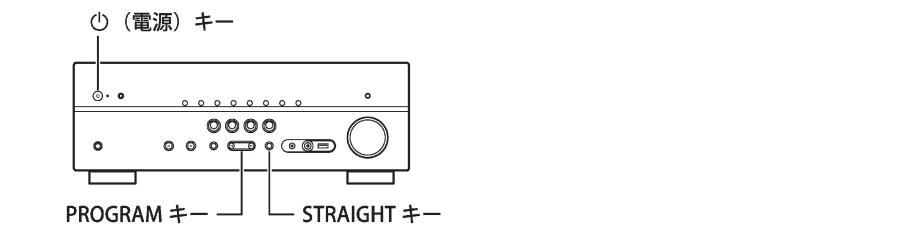

- 3
- PROGRAM キーで設定項目を選ぶ。
- 4
- STRAIGHT キーで設定値を選ぶ。
- 5
- ㊦（電源）キーで、電源をスタンバイにしてから再度電源を入れる。
設定変更が反映されます。

アドバンスドセットアップメニューでできること

項目	説明
REMOTE ID	本体側のリモコン ID を変更します。
TV FORMAT	ビデオ信号方式を切り替えます。
INIT	各種設定を初期化します。
UPDATE	ファームウェアを更新します。
VERSION	本機にインストールされているファームウェアのバージョンを表示します。

リモコン ID の変更（REMOTE ID）

REMOTE ID・・・ID1

リモコン側のリモコン ID（初期値：ID1）と一致するよう、本体側のリモコン ID を変更します。

複数のヤマハ製 AV レシーバーをお使いの場合、それぞれのリモコンで各レシーバーを操作するために、リモコン ID が重ならないように設定します。

設定値
ID1（初期値）、ID2

■ リモコン側のリモコン ID 設定

各手順を 1 分以内に操作してください。前の手順から 1 分経過すると設定が中止されます。

- 1
- ボールペンなどの先の細長いもので、リモコンの CODE SET ボタンを押す。
- 2
- SOURCE/RECEIVER キーを押す。
- 3
- 数字キーで「5019」（ID1 に設定）または「5020」（ID2 に設定）を入力する。

設定が完了すると、SOURCE/RECEIVER キーが 2 回点滅します。
6 回点滅した場合は設定失敗です。手順 1 からやり直してください。

ビデオ信号方式の変更（TV FORMAT）

TV FORMAT・NTSC

お使いのテレビに合わせて、本機のHDMI OUT端子から出力されるビデオ信号方式を切り替えます。

通常は本機がお使いのテレビに合ったビデオ信号方式で出力しますので、設定を変更する必要はありません。テレビの映像が乱れる場合のみ設定を変更してください。

設定値
NTSC（初期値）、PAL

設定の初期化（INIT）

INIT・・・CANCEL

本機の各種設定を初期化します。

選択項目	
ALL	すべての設定を初期化する。
CANCEL	初期化しない。

ファームウェアの更新（UPDATE）

UPDATE・・・・・・USB

機能の追加や不具合の改善に応じて、ファームウェアが更新されることがあります。ファームウェアは弊社ウェブサイトからダウンロードできます。詳しくは、ファームウェア更新時に提供される情報をご確認ください。

■ ファームウェアの更新手順

ファームウェア更新時以外は実行しないでください。また実行前に、更新時に提供される情報を必ずご確認ください。

- 1
- 前面の STRAIGHT キーを繰り返し押して「USB」または「NETWORK」を選び、INFO キーを押して更新を実行する。

選択項目	
USB	USB 機器を使ってファームウェアを更新します。
NETWORK	ネットワーク経由でファームウェアを更新します。

- 
- ・ネットワーク上に新しいファームウェアがある場合は、Network Update 画面に封筒アイコン（)が表示されます。この状態からファームウェアを更新することも可能です

- 2
- 前面ディスプレイに「UPDATE SUCCESS PLEASE POWER OFF!」と表示されたら、前面の ㊦（電源）キーを押す

ファームウェアバージョンの確認（VERSION）

VERSION・・・XX.XX

本機にインストールされているファームウェアのバージョンを表示します。

- 
- ・セットアップメニューの「Network Update」画面でファームウェアのバージョンを確認することもできます。

RX-V573

HTR-5065

FIRMWARE UPDATING PROCEDURE

IMPORTANT NOTICE

Do not attempt to update your Yamaha receiver using any other data file except those provided directly from the Yamaha website or through your network connection.

Follow the instructions carefully and do not attempt any other procedures not specified in the instructions provided by Yamaha.

Improperly updated products may cause improper operation, and any parts or service required to restore proper operation will not be covered under the Yamaha Limited Warranty.

Choose from the following 2 methods to update to the latest firmware.

Click here for [Firmware Update Through the Internet](#)

(Connection to the Internet is required)

Click here for [Firmware Update by USB](#)

(A USB thumb drive is required)

In case of error, see the [Troubleshooting](#) section

Firmware Update Through the Internet

Requirement: Internet connection

Your receiver is connected to the Internet if you can receive Internet radio stations.
(See owner's manual for details)

1 Power off the receiver (Standby mode)

2 Enter the ADVANCED SETUP mode

While pressing the **STRAIGHT** key, press the **⏻ (Power)** key and keep **STRAIGHT** key pressed until "ADVANCED SETUP" appears on the front panel display.

* "ADVANCED SETUP" is displayed only for a few seconds.

ADVANCED SETUP

3 Select "FIRM UPDATE" from the menu

- Press the **PROGRAM** key until "UPDATE: USB" is displayed.
- Then, press **STRAIGHT** key until "NETWORK" is displayed.

UPDATE: USB



UPDATE: NETWORK

4 Start firmware update

- Press **INFO** key to start the update.
(Update process may take up to 15 minutes)
- * If "UPDATE SUCCESS" appears, this means your receiver is already up-to-date. In this case, power off to exit from Advanced Setup. Your AV receiver is ready for normal use.

Firmware update in progress

NETWORK UPDATE



VERIFYING...



Sx-x:xx%

! Caution


DO NOT interrupt power during the update.

In case the power is accidentally cut off resulting in a condition where you can't recover normal operation, refer to the troubleshooting method (**Troubleshooting CASE 2**) on the last page.

- When completed, "UPDATE SUCCESS" appears on the display.


UPDATE SUCCESS

- Turn off the power of the receiver by pressing the **⏻ (Power)** key.

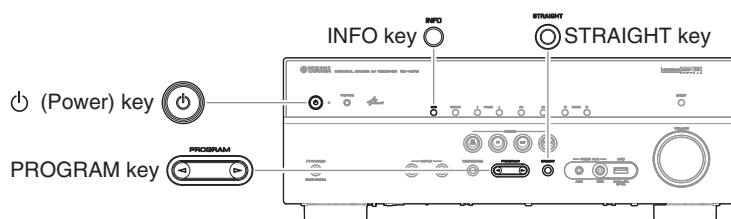

5 Check the updated firmware version

- Power on the AV receiver and press the **SETUP** key on the remote control.
- Select "Network" > "Network Update".
- Confirm that the firmware version is updated to the latest version.

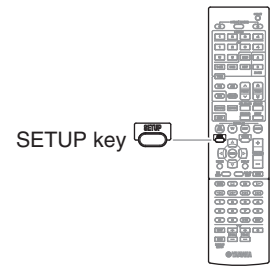

Congratulations!

You have completed the firmware update. Your AV receiver is ready for normal use.


Firmware Update by USB

Requirement: USB thumb drive, with enough free space to store over 25MB.
(File system with FAT16 or FAT32 format)

Firmware file provided by YAMAHA, "R0305-xxxx.bin".

1 Prepare USB thumb drive for the update

Download the firmware, unzip and copy "R0305-xxxx.bin" into the root directory of the USB thumb drive.

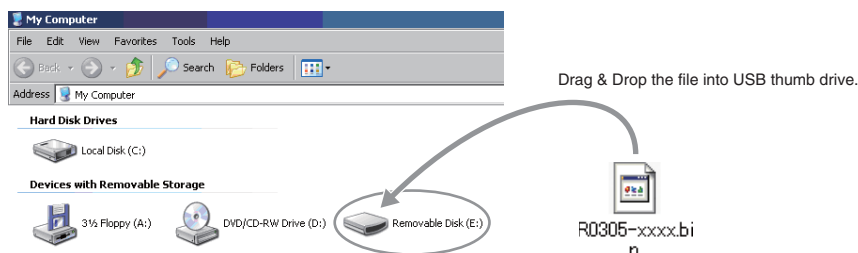

2 Power off the receiver (Standby mode)

3 Insert the USB thumb drive

USB port is located at the lower left corner of the front panel.

4 Enter the ADVANCED SETUP mode


While pressing the **STRAIGHT** key, press the **⏻ (Power)** key and keep **STRAIGHT** key pressed until "ADVANCED SETUP" appears on the front panel display.

ADVANCED SETUP

5 Select firmware update from the menu

Press the **PROGRAM** key until "UPDATE: * * * * USB" is displayed.

UPDATE: * * * * USB

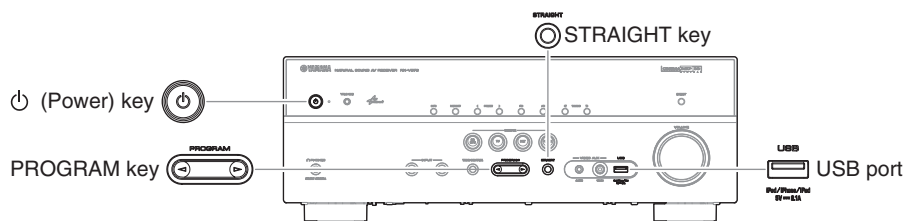


6 Start firmware update

- a. Press **INFO** key to start the update.

(Update process may take up to 10 minutes)

 - * If "UPDATE SUCCESS" appears, this means your receiver is already up-to-date. In this case, power off to exit from Advanced Setup. Your AV receiver is ready for normal use.



! Caution


DO NOT interrupt power during the update.

In case the power is accidentally cut off resulting in a condition where you can't recover normal operation, refer to the troubleshooting method (**Troubleshooting CASE 2**) on the last page.

- b. When completed, "UPDATE SUCCESS" appears on the display.


UPDATE SUCCESS

- c. Turn off the power of the receiver by pressing the **(Power)** key.

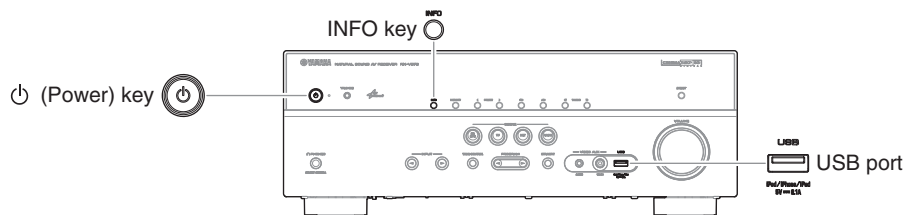

7 Check the updated firmware version

- a. Power on the AV receiver and press the **SETUP** key on the remote control.
- b. Select "Network" > "Network Update".
- c. Confirm that the firmware version is updated to the latest version.

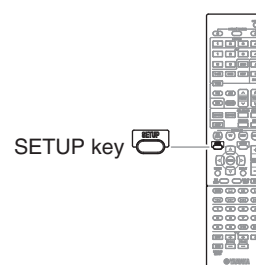

Congratulations!

You have completed the firmware update. Your AV receiver is ready for normal use.

Troubleshooting

CASE 1 Error message appeared during the update

Cause: For some reason, the receiver can't read the firmware data.

Method: For your solution, check the following

[Update through Internet]

- ☐ Check Internet connection.
Your Internet connection is working by playing an Internet radio station.
(See owner's manual for details)

[Update by USB thumb drive]


- ☐ USB thumb drive is connected properly to the receiver.
- ☐ USB thumb drive is not password protected.
(AV receiver cannot read data from a security protected USB thumb drive)
- ☐ Make sure the USB thumb drive is inserted before the receiver is powered on for the update.
- ☐ The firmware data, R0305-xxxx.bin is stored in the root directory of the USB thumb drive.
- ☐ There is no other data except the firmware data in the USB thumb drive.
- ☐ No folders are created in the USB thumb drive.
Else, retry the update by USB using another USB thumb drive.

CASE 2 Firmware update doesn't start for other reasons

- Receiver doesn't power up after the update.
- Or, error message appeared when confirming the firmware version.

Recovery method using USB method:

1. Unplug the AC power cable from wall outlet.
2. Insert the USB thumb drive which has the firmware data stored inside, into the USB port located on the front panel.
3. Press and hold the **INFO** key and keep it pressed while you plug the AC power cable back into the wall outlet again.
"USB UPDATE" will appear on the front display. Then, release the **INFO** key.
4. The update will start automatically.
5. When "UPDATE SUCCESS" appears on the display, firmware update is completed.
Power off the receiver and remove the USB thumb drive.
6. Confirm updated firmware version.

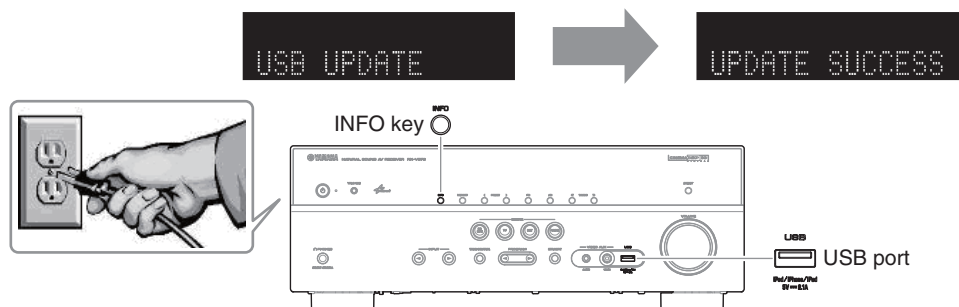

ファームウェア更新手順

! 重要

当社がネットワーク経由またはホームページ上などでご提供する正式なアップデートデータ以外の使用や、当社からお知らせする方法以外でのアップデートは行わないでください。不正な状態で本体機能の更新を行った場合、動作保証を行わないだけでなく、アフターサービスおよび保証の対象外となります。

次のいずれかの方法で AV アンプのファームウェアを更新してください。

AV アンプがインターネットに **接続されている場合** [こちらをクリックしてください。](#)

(インターネットラジオが使用できる環境)

AV アンプがインターネットに **接続されていない場合** [こちらをクリックしてください。](#)

(USB メモリーをご用意ください)

更新中にエラーが発生したときの **対処方法** [こちらをクリックしてください。](#)

ネットワーク経由でファームウェアを更新する

必要環境： 本機がインターネットに接続されている必要があります。

本機の「インターネットラジオ」機能が使用できる環境であることをご確認ください。
(インターネット接続に関しては、取扱説明書を参照してください)

1 AV アンプの電源を切る (スタンバイモード)

2 ADVANCED SETUP モードで本機を立ち上げる

本機の **STRAIGHT** キー を押したまま **⏻ (電源)** キー を押します。

※ “ADVANCED SETUP” が本体に表示されるまで **STRAIGHT** キー を押し続けてください。
数秒後、表示が “SP IMP. ** 80MIN” に切り替わります。



3 FIRM UPDATE を選択する

- “UPDATE ***** USB” が表示されるまで **PROGRAM** キー を何度か押します。
- 次に **STRAIGHT** キー を押し、“NETWORK” を選択します。



4 ファームウェア更新を開始する

- 本機の **INFO** キー を押すと更新を開始します。
(完了まで 15 分ほどかかる場合があります)

※ “UPDATE SUCCESS” が表示された場合は、すでに本機のファームウェアが最新である可能性があります。
その場合 **ファームウェア更新は不要** です。



！ ご注意


更新中は **電源を絶対に切らない** ください。

本機が立ち上がらなくなってしまった場合は、最終ページに記載されているリカバリー方法（「**エラーが発生した時の対処方法**」）で復帰してください。

- “UPDATE SUCCESS” が本機に表示されましたら更新完了です。


UPDATE SUCCESS

- 本機の **⏻ (電源)** キー を押し、電源を切ってください。

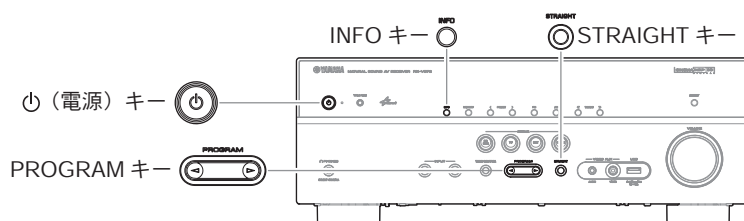

5 ファームウェア更新後のバージョンを確認します

- AV アンプの電源を入れ、リモコンの **SETUP** キーを押します。
- “Network” 中の “Network Update” を選択します。
- 現在のファームウェアバージョンが最新になっていることを確認します。

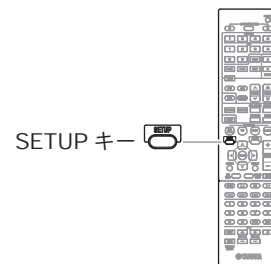

以上でファームウェア更新作業は終了です。

USB メモリーを使ってファームウェアを更新する


ご用意いただくもの： USB メモリー（25 MB 以上の容量が必要です）
FAT16 または FAT32 フォーマット
ヤマハホームページからダウンロードしたファームウェアデータ
“R0305-xxxx.zip”

1 パソコン上で USB メモリー内のデータを消去し、空の状態にします

2 USB メモリーにファームウェアをコピーします

パソコン上でファームウェアデータ（R0305-xxxx.zip）を展開し、ファームウェア “R0305-xxxx.bin” を USB メモリーに入れてください。

（フォルダ等の階層は作成しないでください）

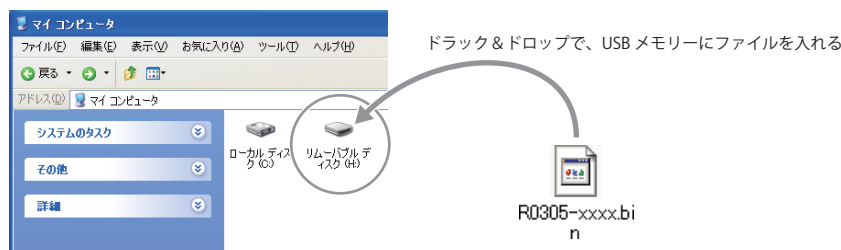

3 電源ケーブルがコンセントに正しく挿入されていて、電源が切れていること（スタンバイ状態）を確認します

4 USB メモリーを差込みます

フロントパネル内の USB 端子に、USB メモリーを挿入してください。

5 ADVANCED SETUP モードで本機を立ち上げます

本機の **STRAIGHT** キーを押したまま **⏻**（電源）キーを押します。

※ “ADVANCED SETUP” が本体に表示されるまで **STRAIGHT** キー を押し続けてください。
数秒後、表示が “SP IMP. ** 80MIN” に切り替わります。

ADVANCED SETUP




SP IMP. ** 80MIN

6 FIRM UPDATE USB を選択する

“UPDATE. USB” が表示されるまで **PROGRAM** キー を何度か押します。

UPDATE. USB

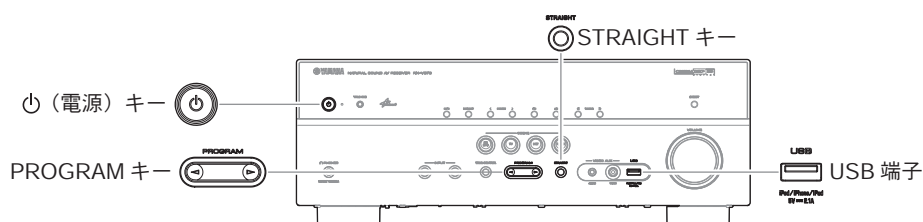

7 ファームウェア更新を開始する

- a. 本機の **INFO キー** を押すと更新を開始します。
(完了まで 10 分ほどかかる場合があります)

※ “UPDATE SUCCESS” が表示された場合は、すでに本機のファームウェアが最新である可能性があります。
その場合 **ファームウェア更新は不要** です。



！ ご注意


更新中は **電源を絶対に切らない** てください。

本機が立ち上がらなくなってしまった場合は、最終ページに記載されているリカバリー方法（「**エラーが発生した時の対処方法**」）で復帰してください。

- b. “UPDATE SUCCESS” が本機に表示されましたら更新完了です。


UPDATE SUCCESS

- c. 本機の **⏻（電源）キー** を押し、電源を切ってください。
d. USB メモリーを本機から抜いてください。

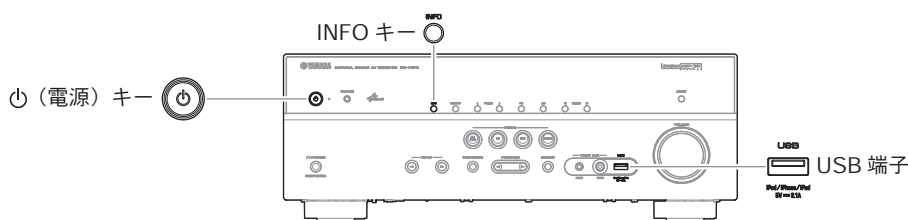

8 ファームウェア更新後のバージョンを確認します

- a. AV アンプの電源を入れ、リモコンの **SETUP キー** を押します。
b. “Network” 中の “Network Update” を選択します。
c. 現在のファームウェアバージョンが最新になっていることを確認します。

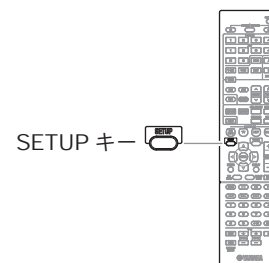

以上でファームウェア更新作業は終了です。

エラーが発生した時の対処方法

ケース 1 更新中にエラーメッセージが表示された

推定原因： 何らかの理由でファームウェアデータが読めない。

対処法： 以下の項目を確認してください。

[ネットワーク経由の更新の場合]

- インターネット接続設定を確認してください。
本機の「インターネットラジオ」機能が使用できる環境であることを確認してください。
(インターネット接続に関しては取扱説明書を参照してください。)


[USB メモリーを使う更新の場合]

- USB メモリーが本機に正しく差し込まれていることを確認してください。
- USB メモリーがパスワード等で保護されていないことを確認してください。
(セキュリティー保護された USB メモリーは読み込めません。)
- 更新用の USB メモリーは電源を入れる前に AV アンプに差し込んでください。
- ファームウェアデータ (R0305-xxxx.bin) が何らかのフォルダの中に入っていないことを確認してください。
(ルートにファイルがあること)
- USB メモリー内にフォルダが作られていないことを確認してください。
それでも更新できない場合は、他の USB メモリーを使い再度更新をおこなってください。

ケース 2 その他の理由で更新がうまくいかない

- 〇 (電源) キー を押しても本機が起動しなくなった。
- 更新後、ファームウェアバージョンを確認すると、本機でエラーメッセージが表示された。

- 復帰方法：**
1. 電源ケーブルをコンセントから抜きます。
 2. ファームウェアの入った USB メモリーを本機に差し込みます。
 3. 本機の **INFO キー** を押したまま電源ケーブルをコンセントに差し込みます。
“USB UPDATE” が本機に表示されたら **INFO キー** を離してください。
 4. 更新が自動的に始まります。
 5. 本機で “UPDATE SUCCESS” が表示されたら更新完了です。
電源を切り USB メモリーを抜いてください。
 6. 更新されたファームウェアバージョンを確認してください。

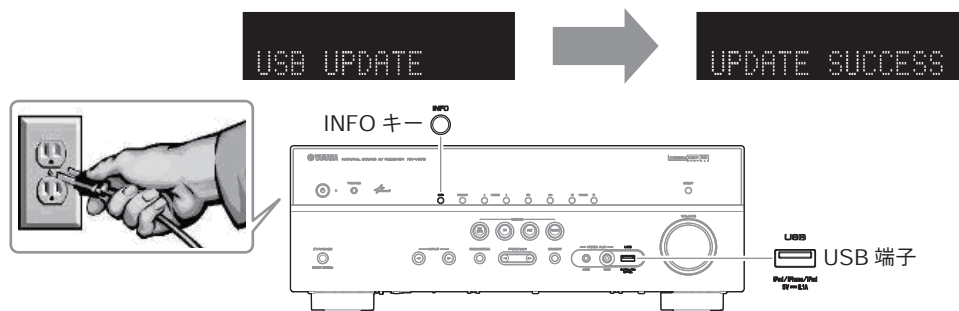

ケース 3 リモコンが効かなくなりました

推定原因： Advanced Setup の設定を変えてしまった。

対処法： 以下の Advanced Setup 項目を確認してください。

- リモコン ID の設定が “ID1” になっていることを確認してください。

MEMO

RX-V573/HTR-5065



YAMAHA
